








Monitor Dell Pro 27



E2726DS/E2726HS



Guida di avvio rapida




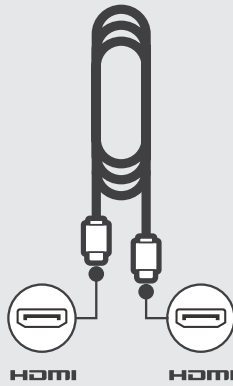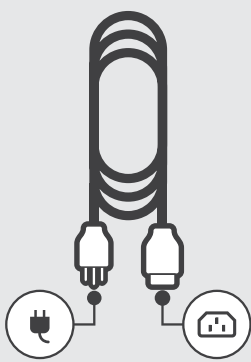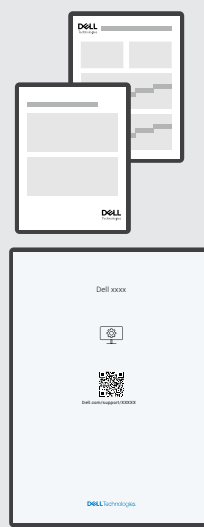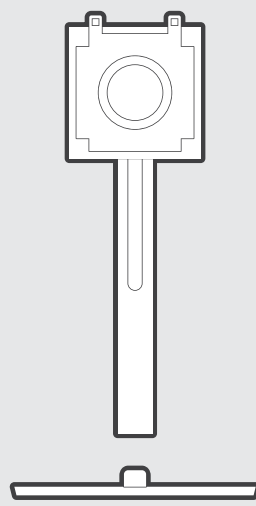


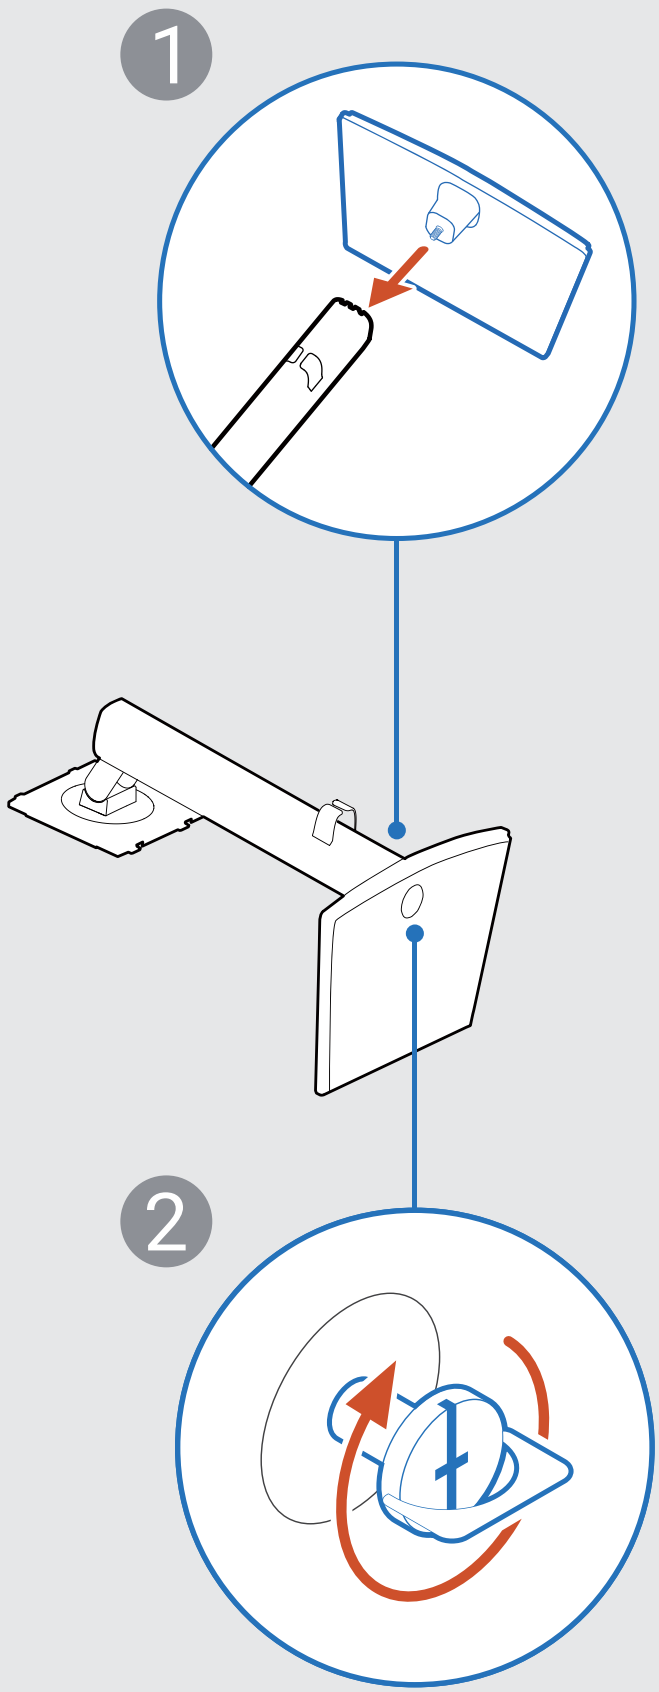



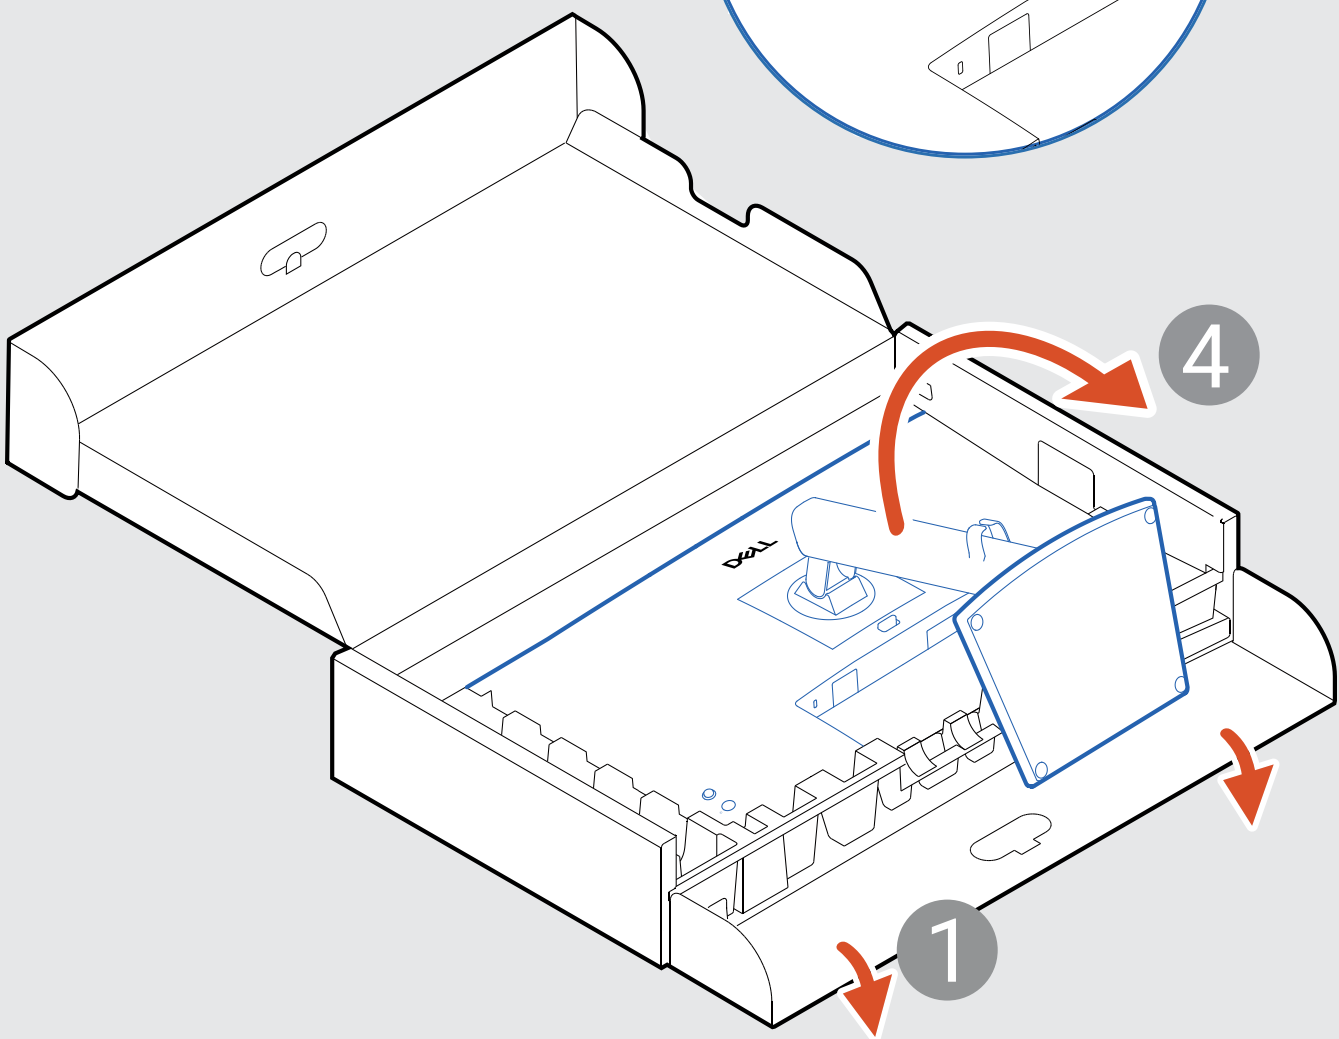
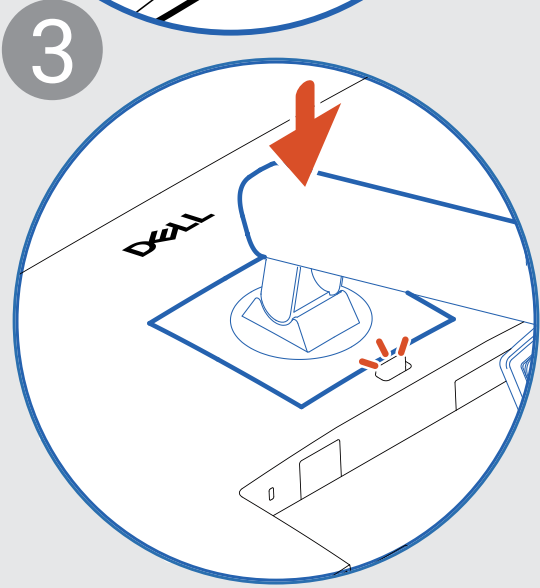


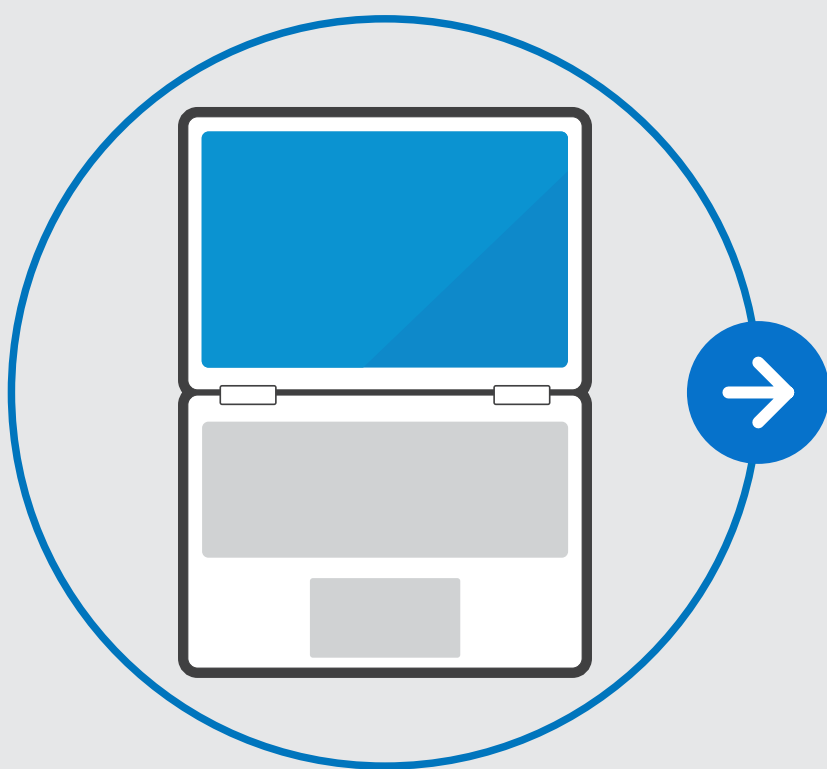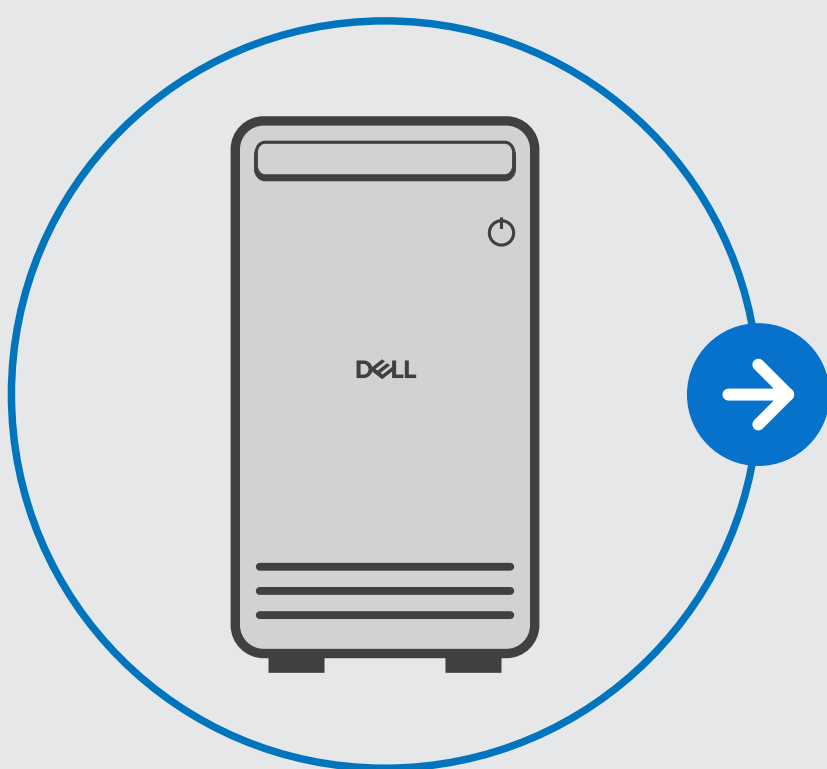


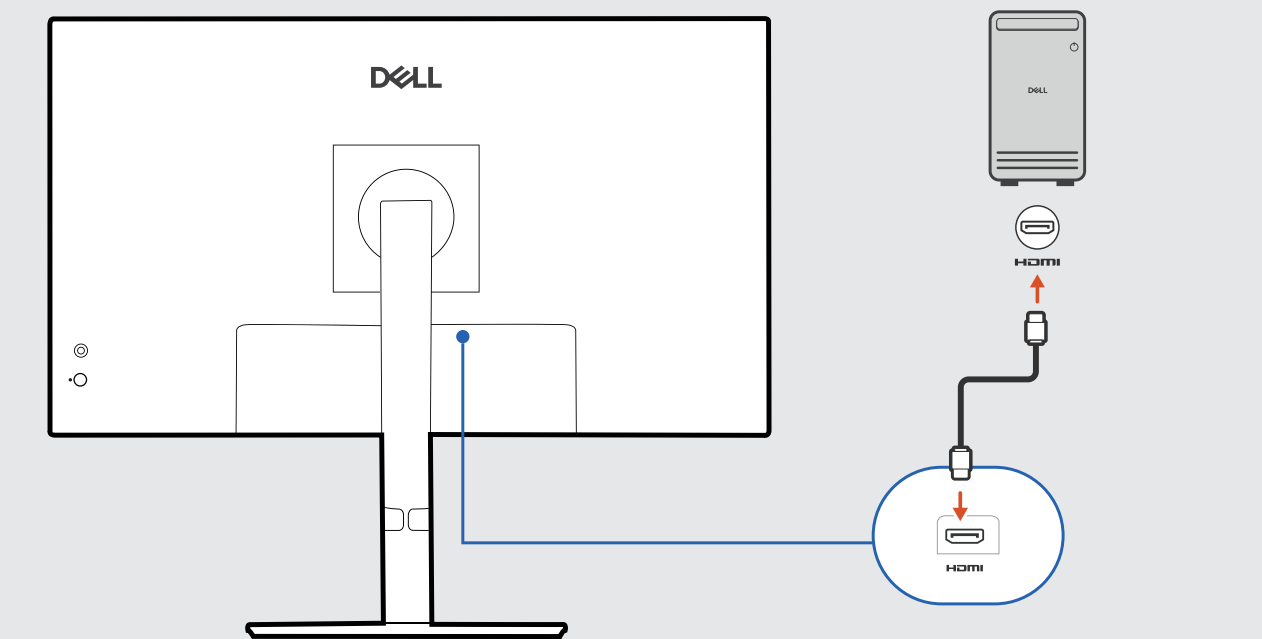

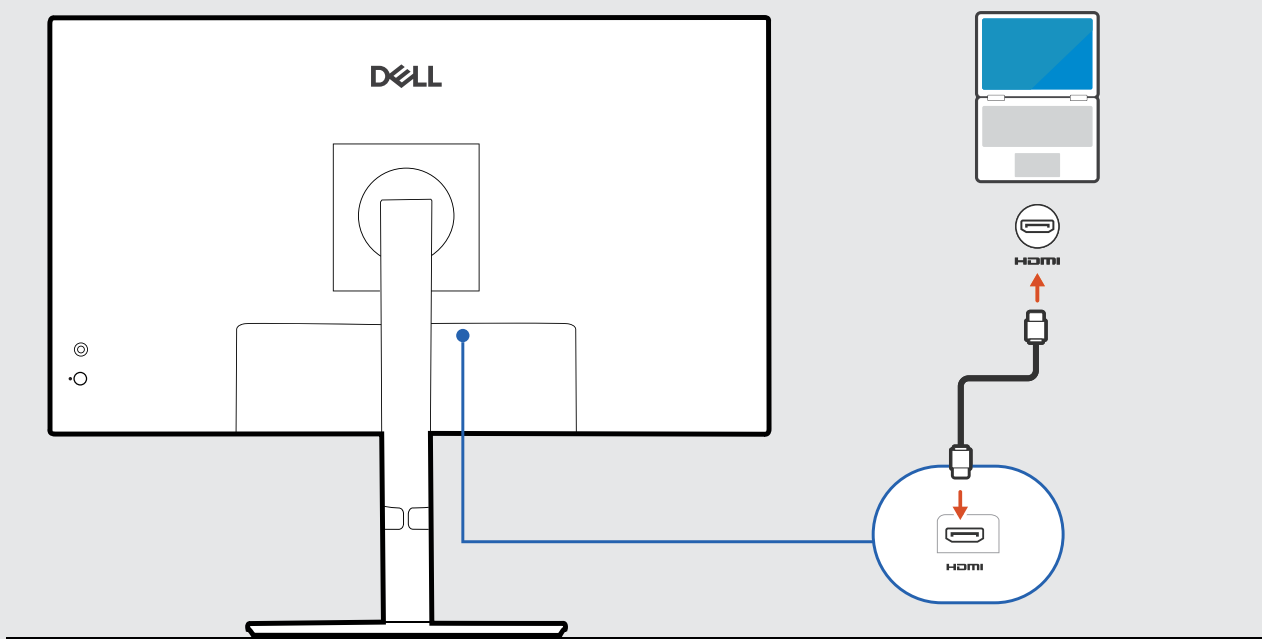


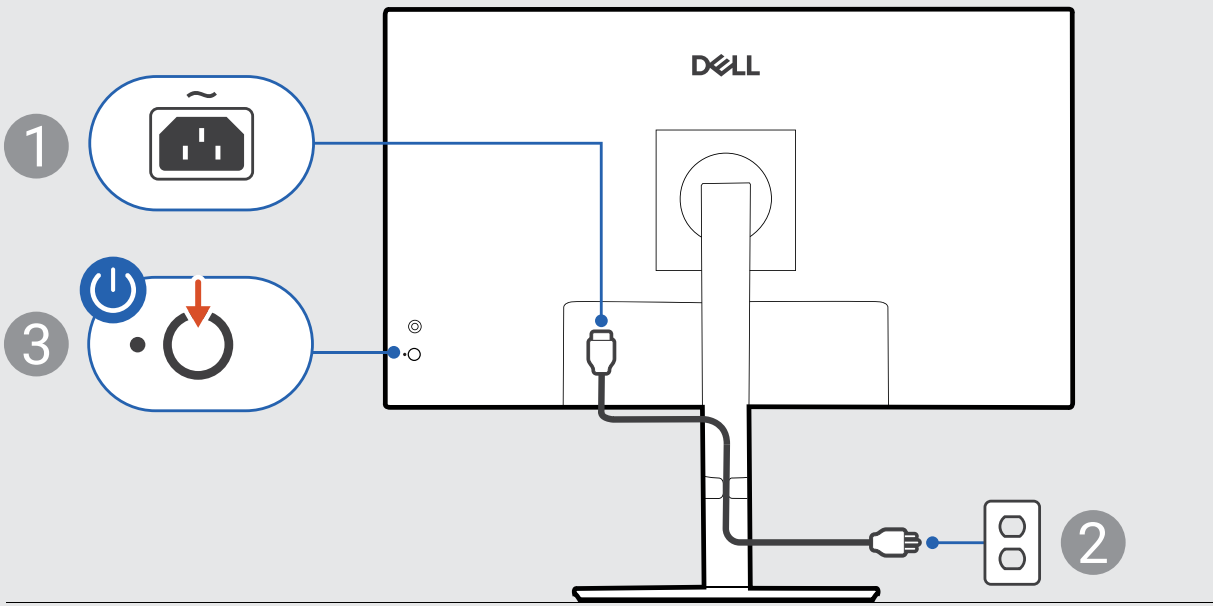

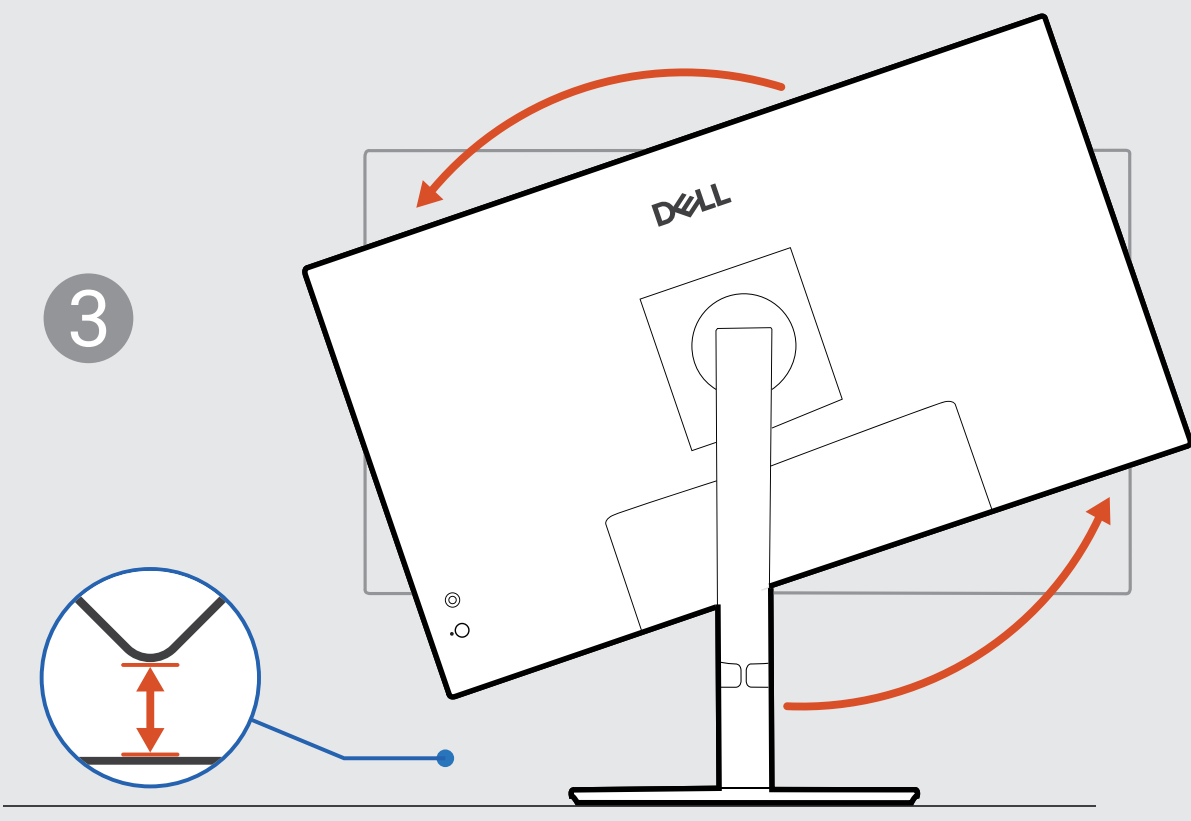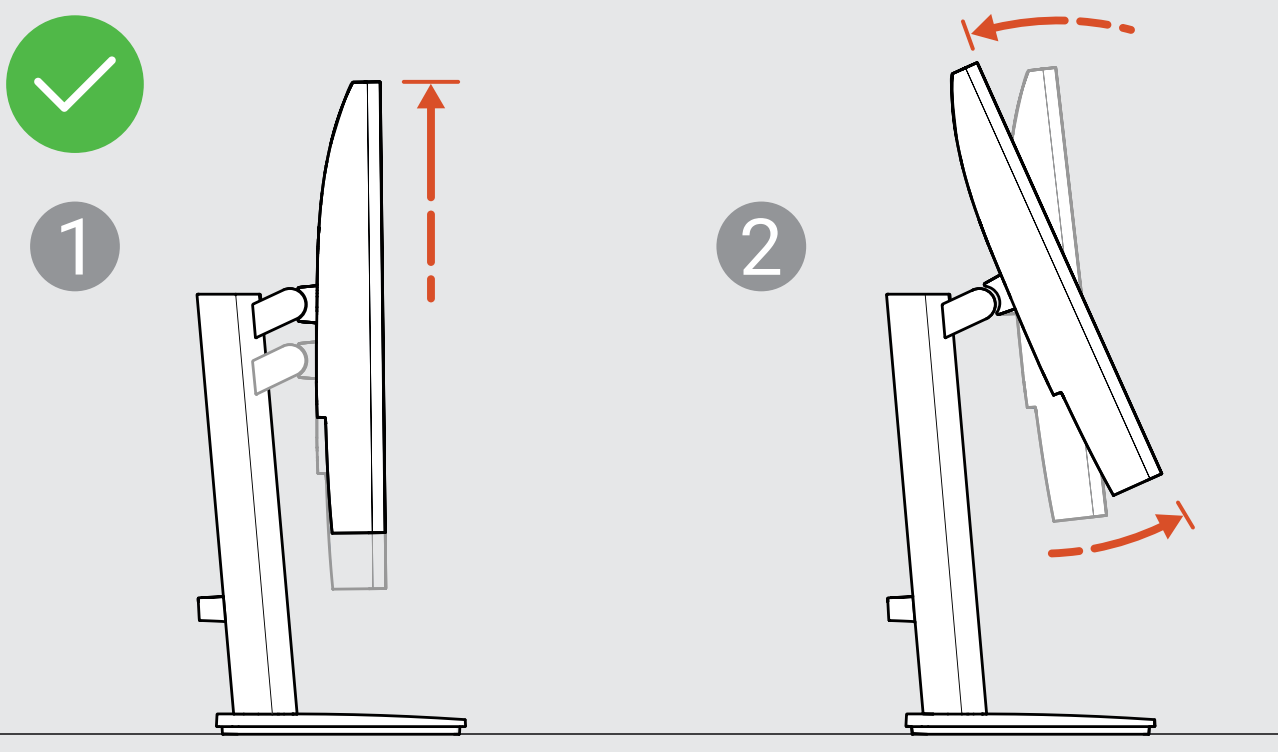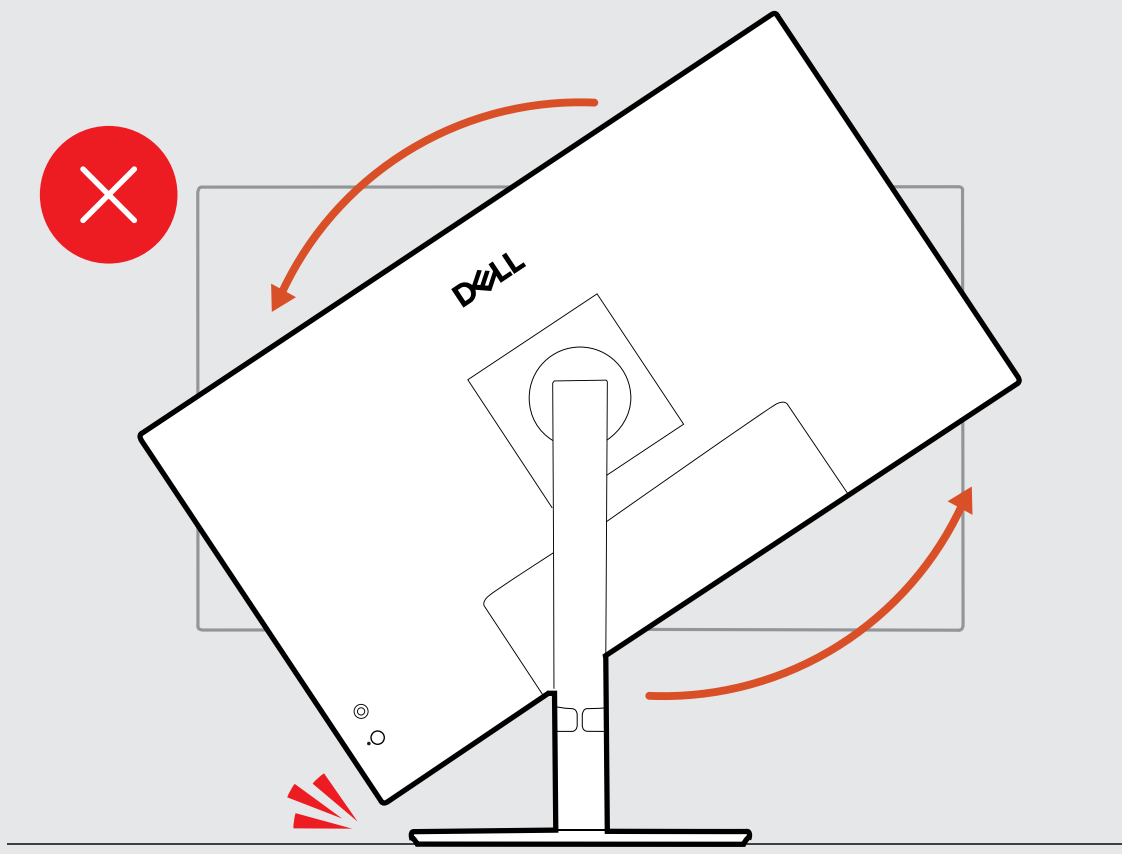

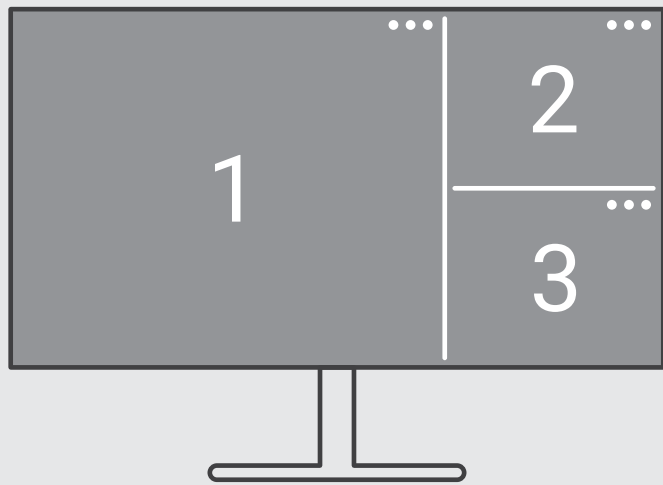

Gestore display e periferiche Dell  
[Dell.com/support/ddpm](https://Dell.com/support/ddpm)

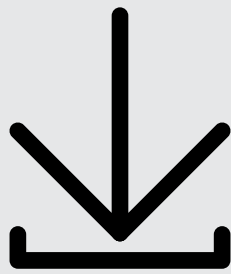

[Dell.com/support/E2726DS](https://Dell.com/support/E2726DS)  
[Dell.com/support/E2726HS](https://Dell.com/support/E2726HS)