



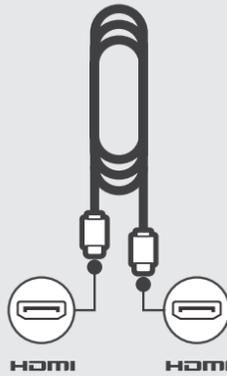




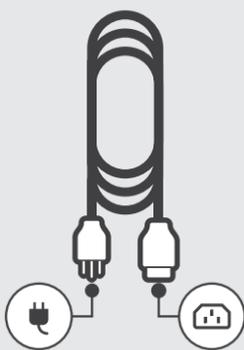




Dell Pro 27 -skärm
E2726DS/E2726HS
Snabbstartsguide

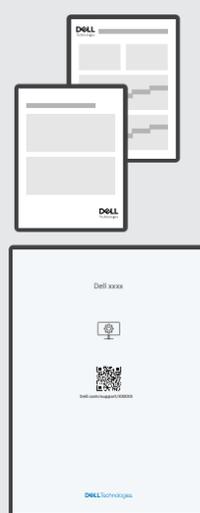


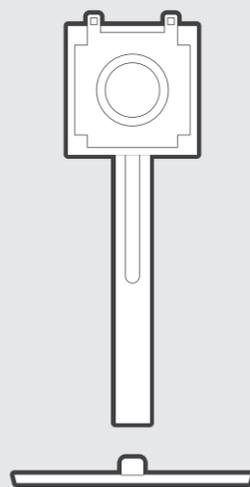


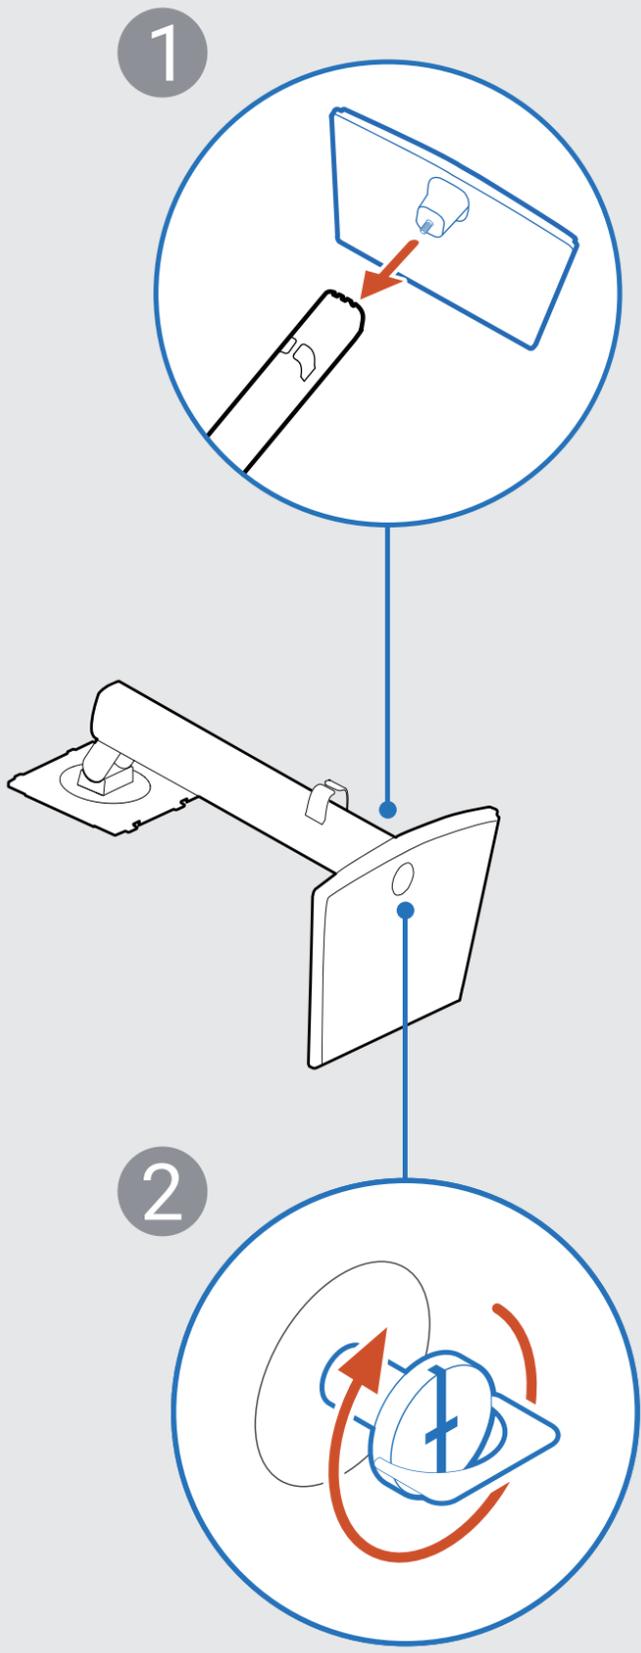


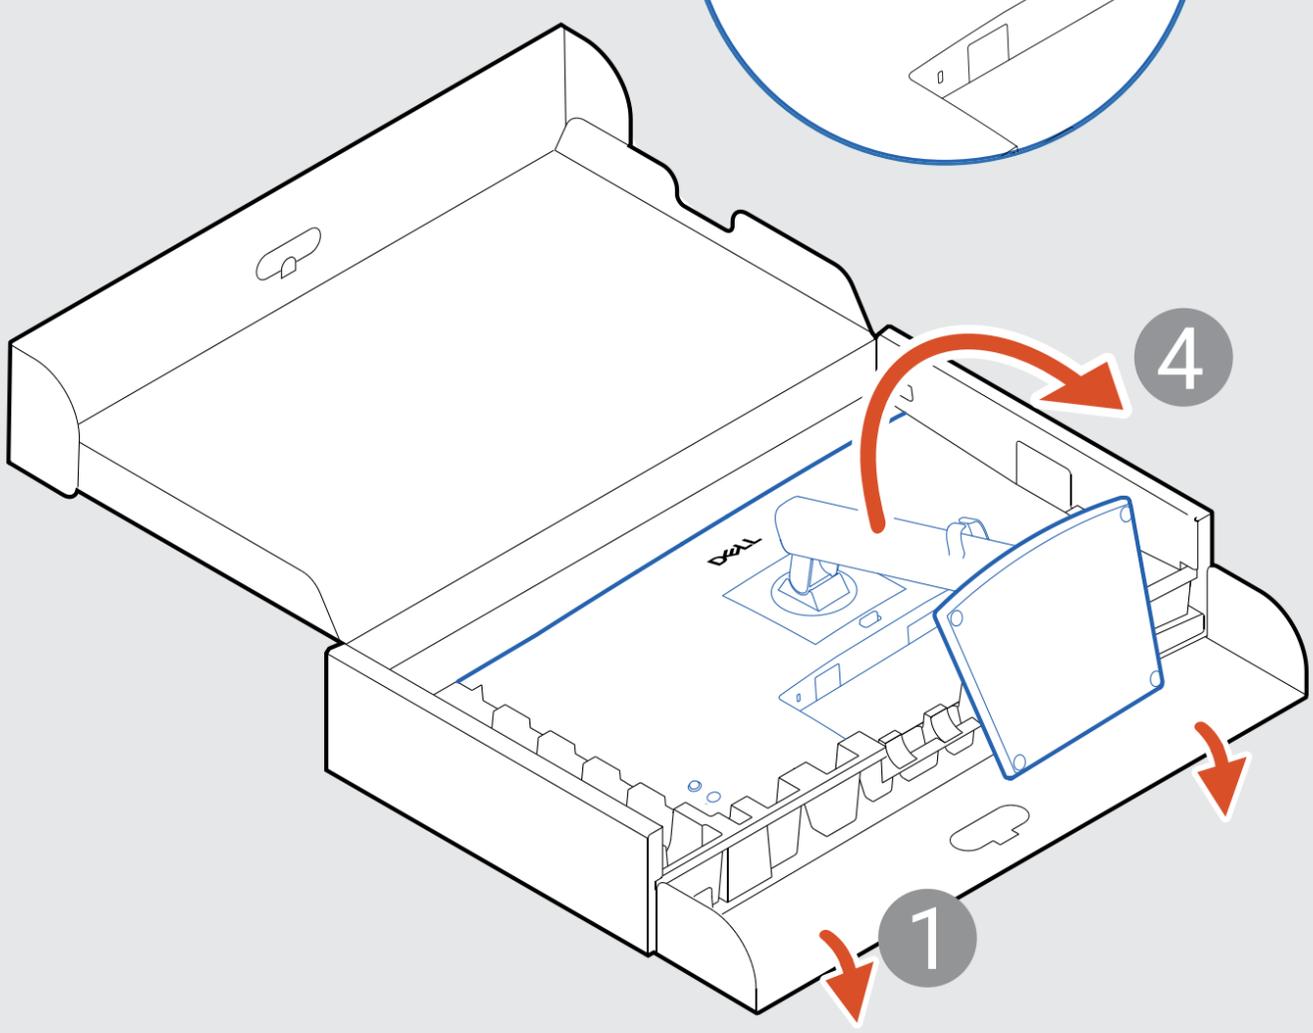
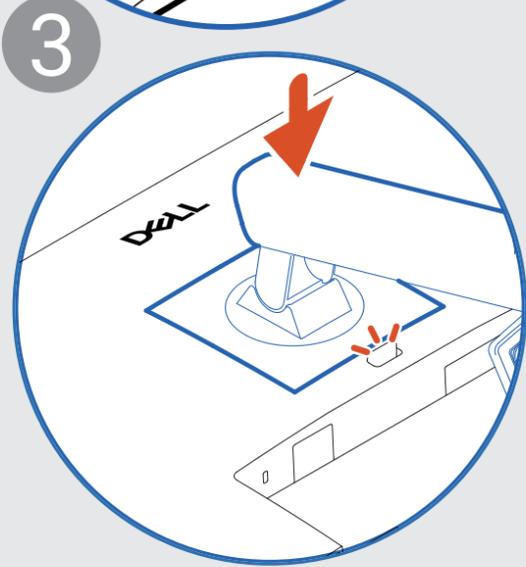
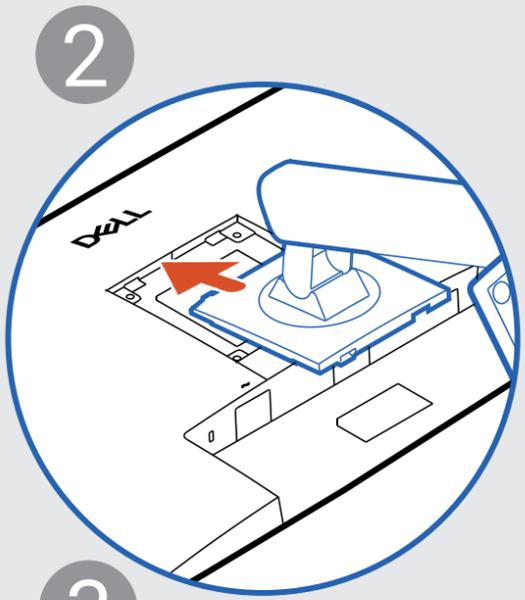


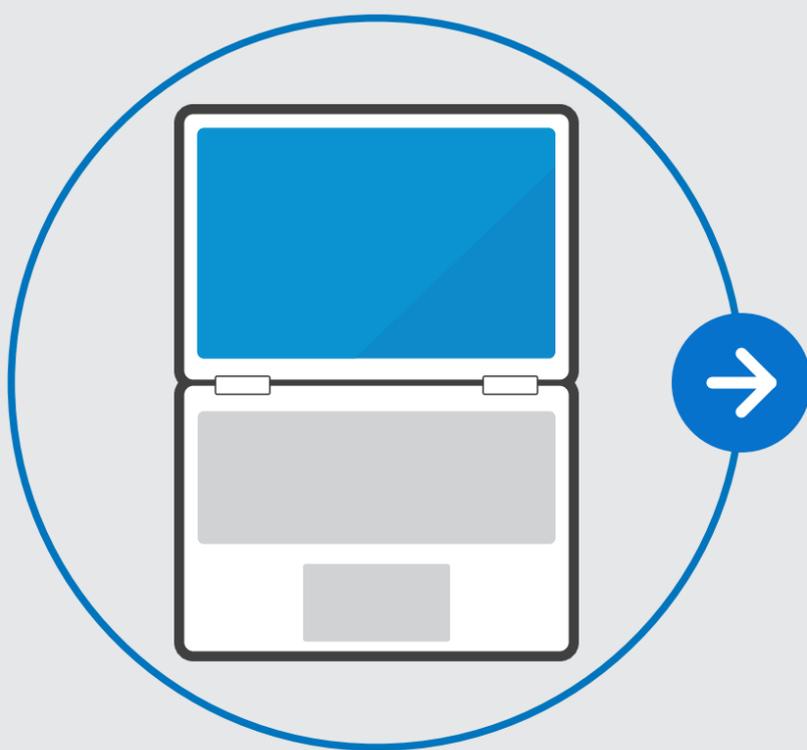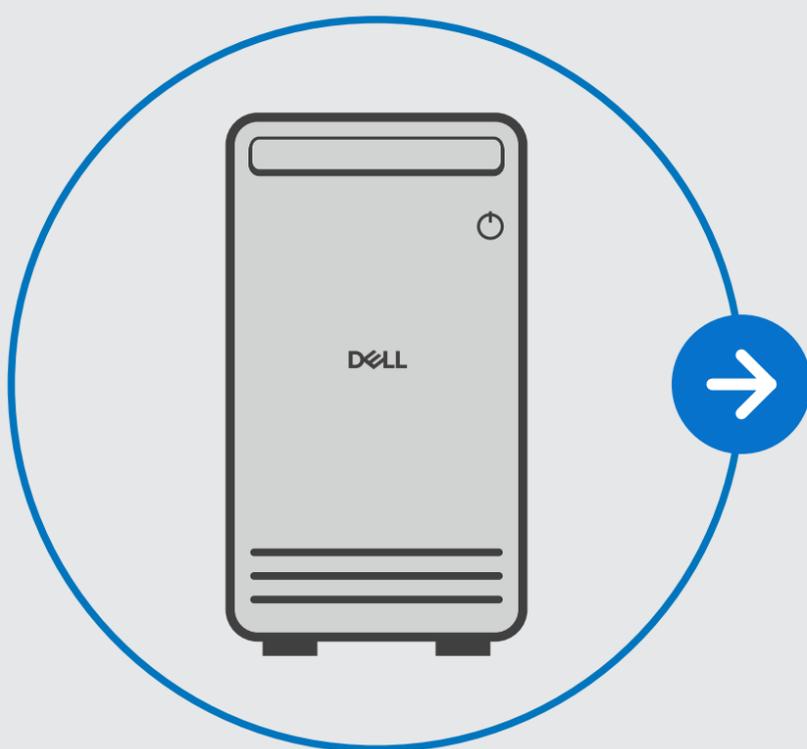


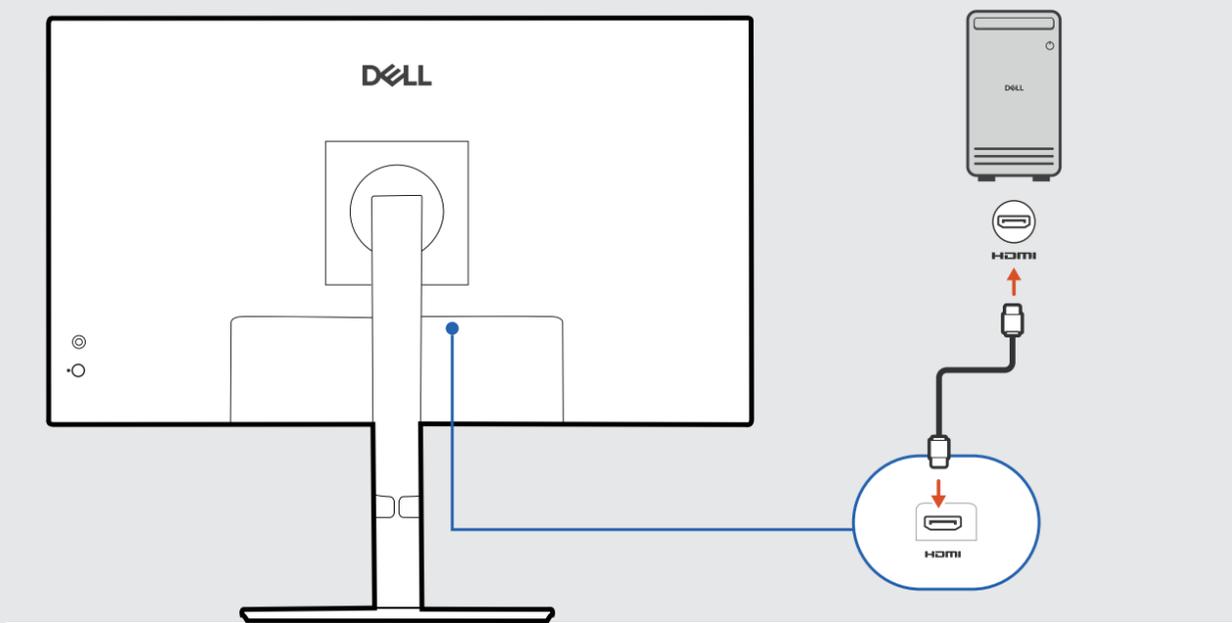

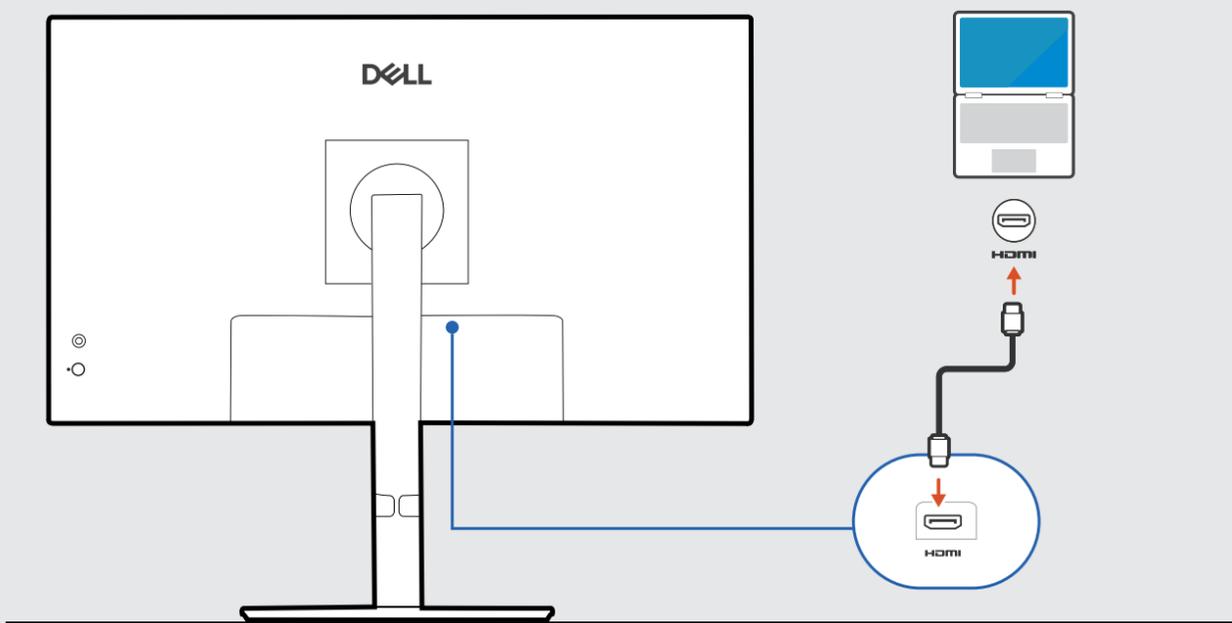


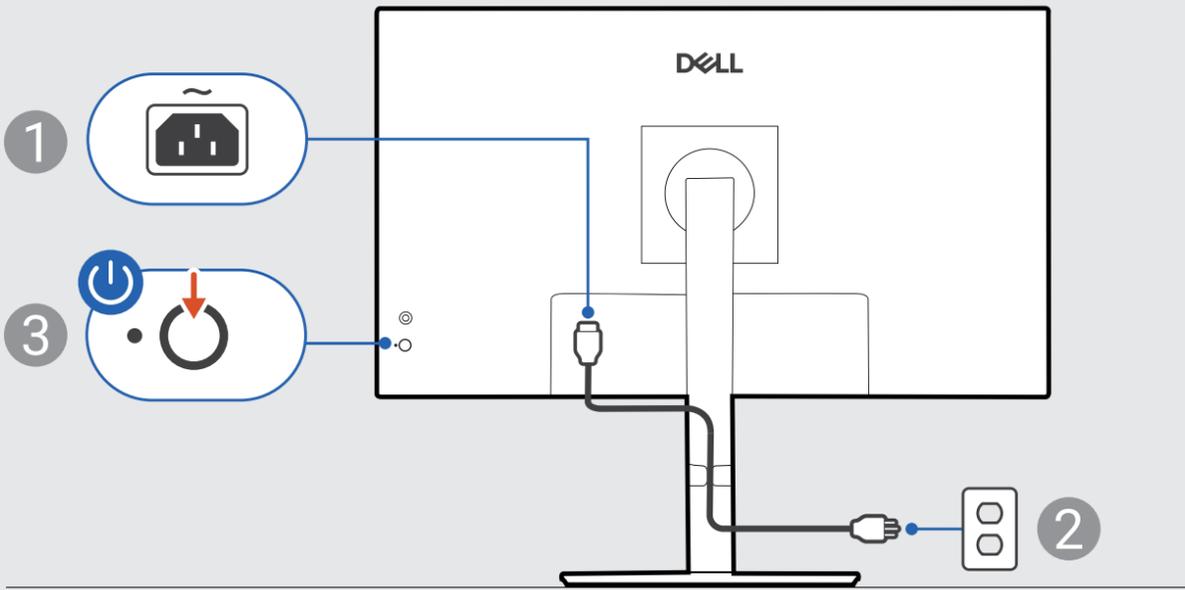

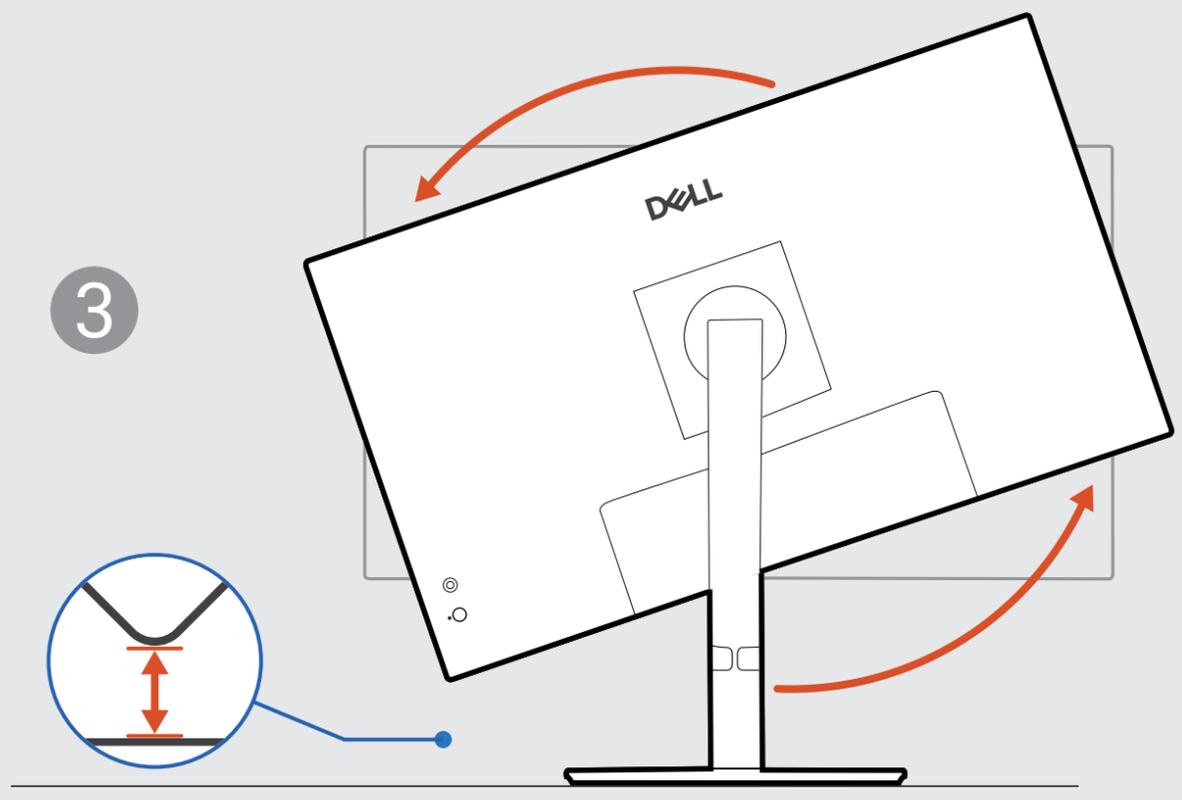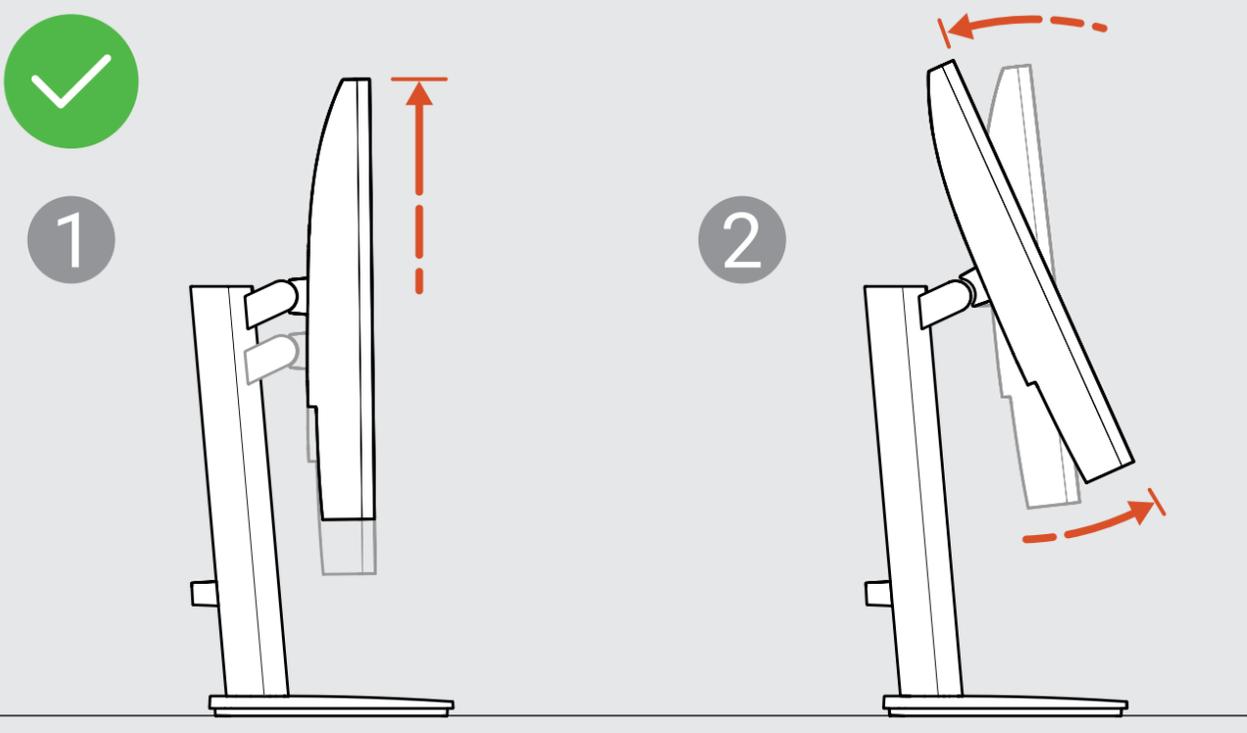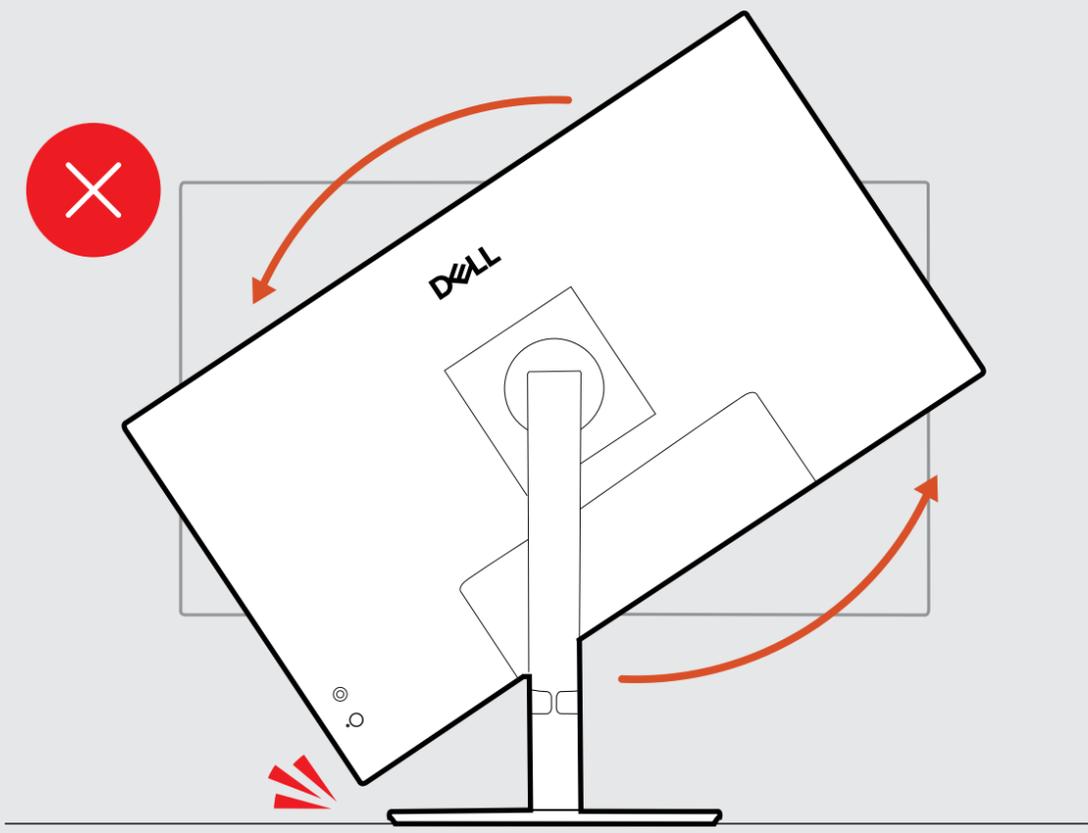

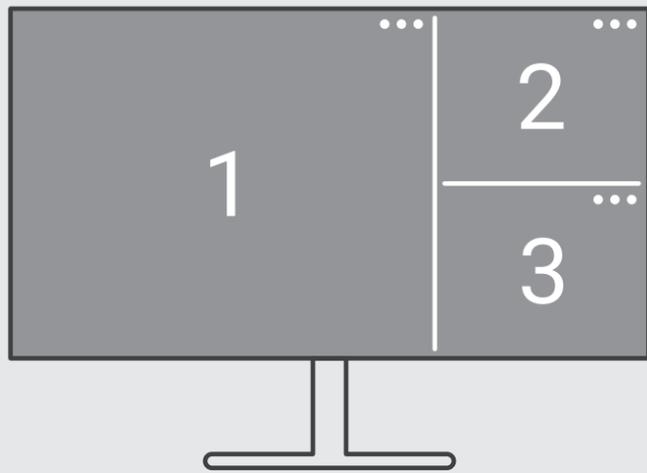

Dell Display and Peripheral Manager
Dell.com/support/ddpm

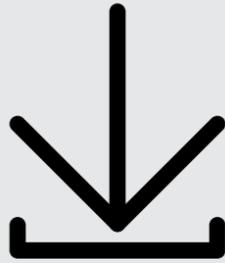

Dell.com/support/E2726DS
Dell.com/support/E2726HS