



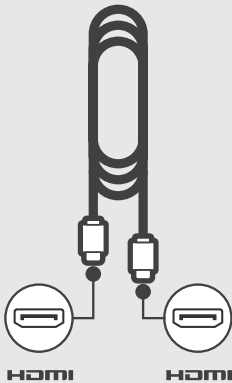


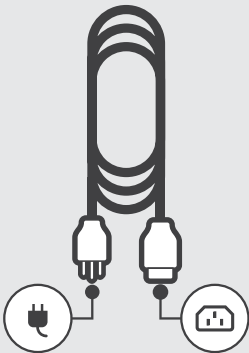




Dell Pro 27 -monitor
E2726DS/E2726HS
Snelstartgids

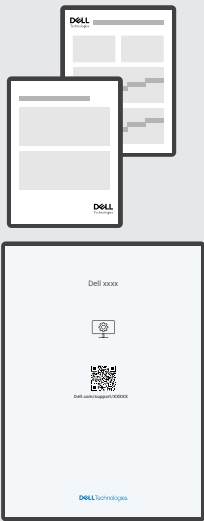


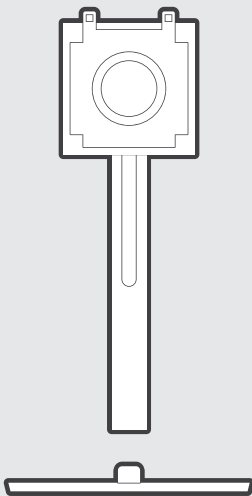


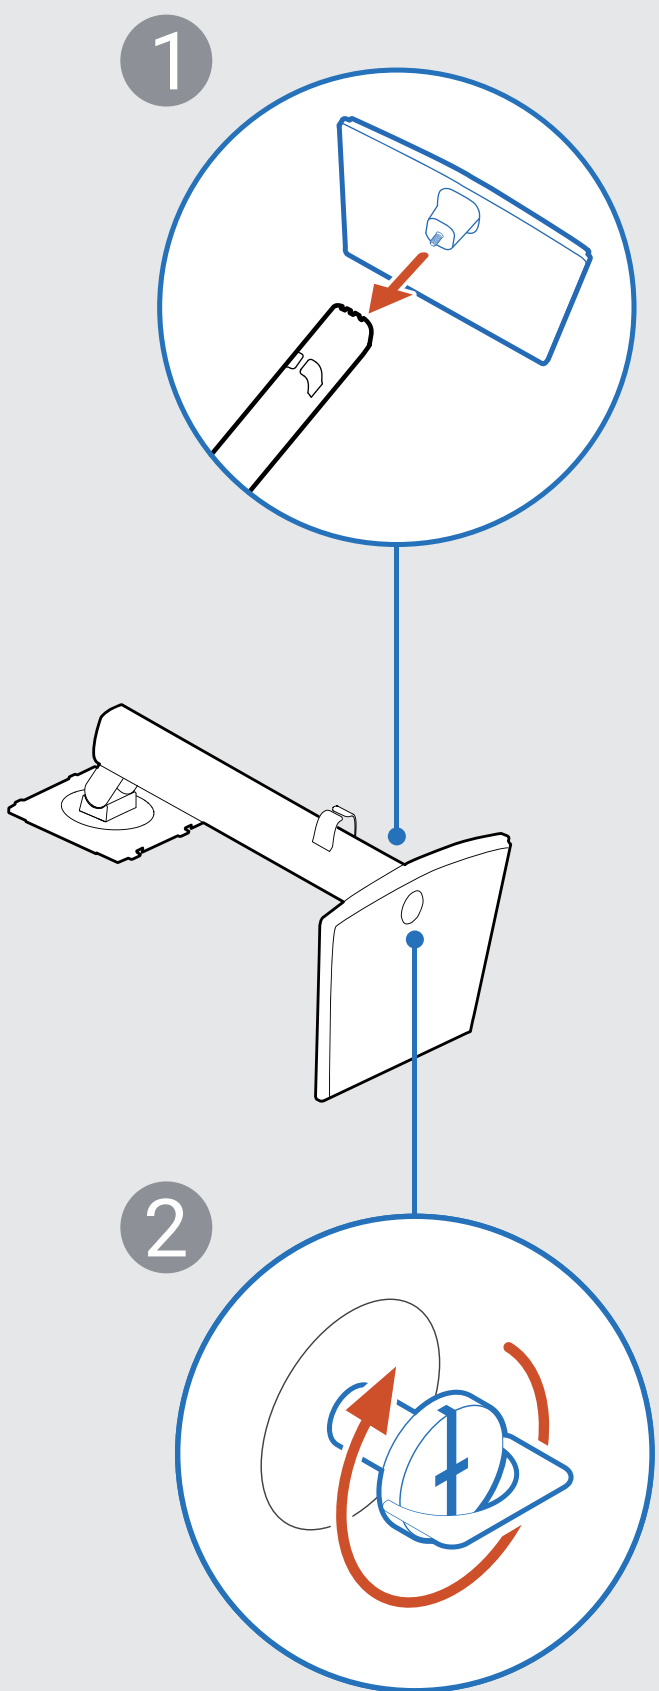


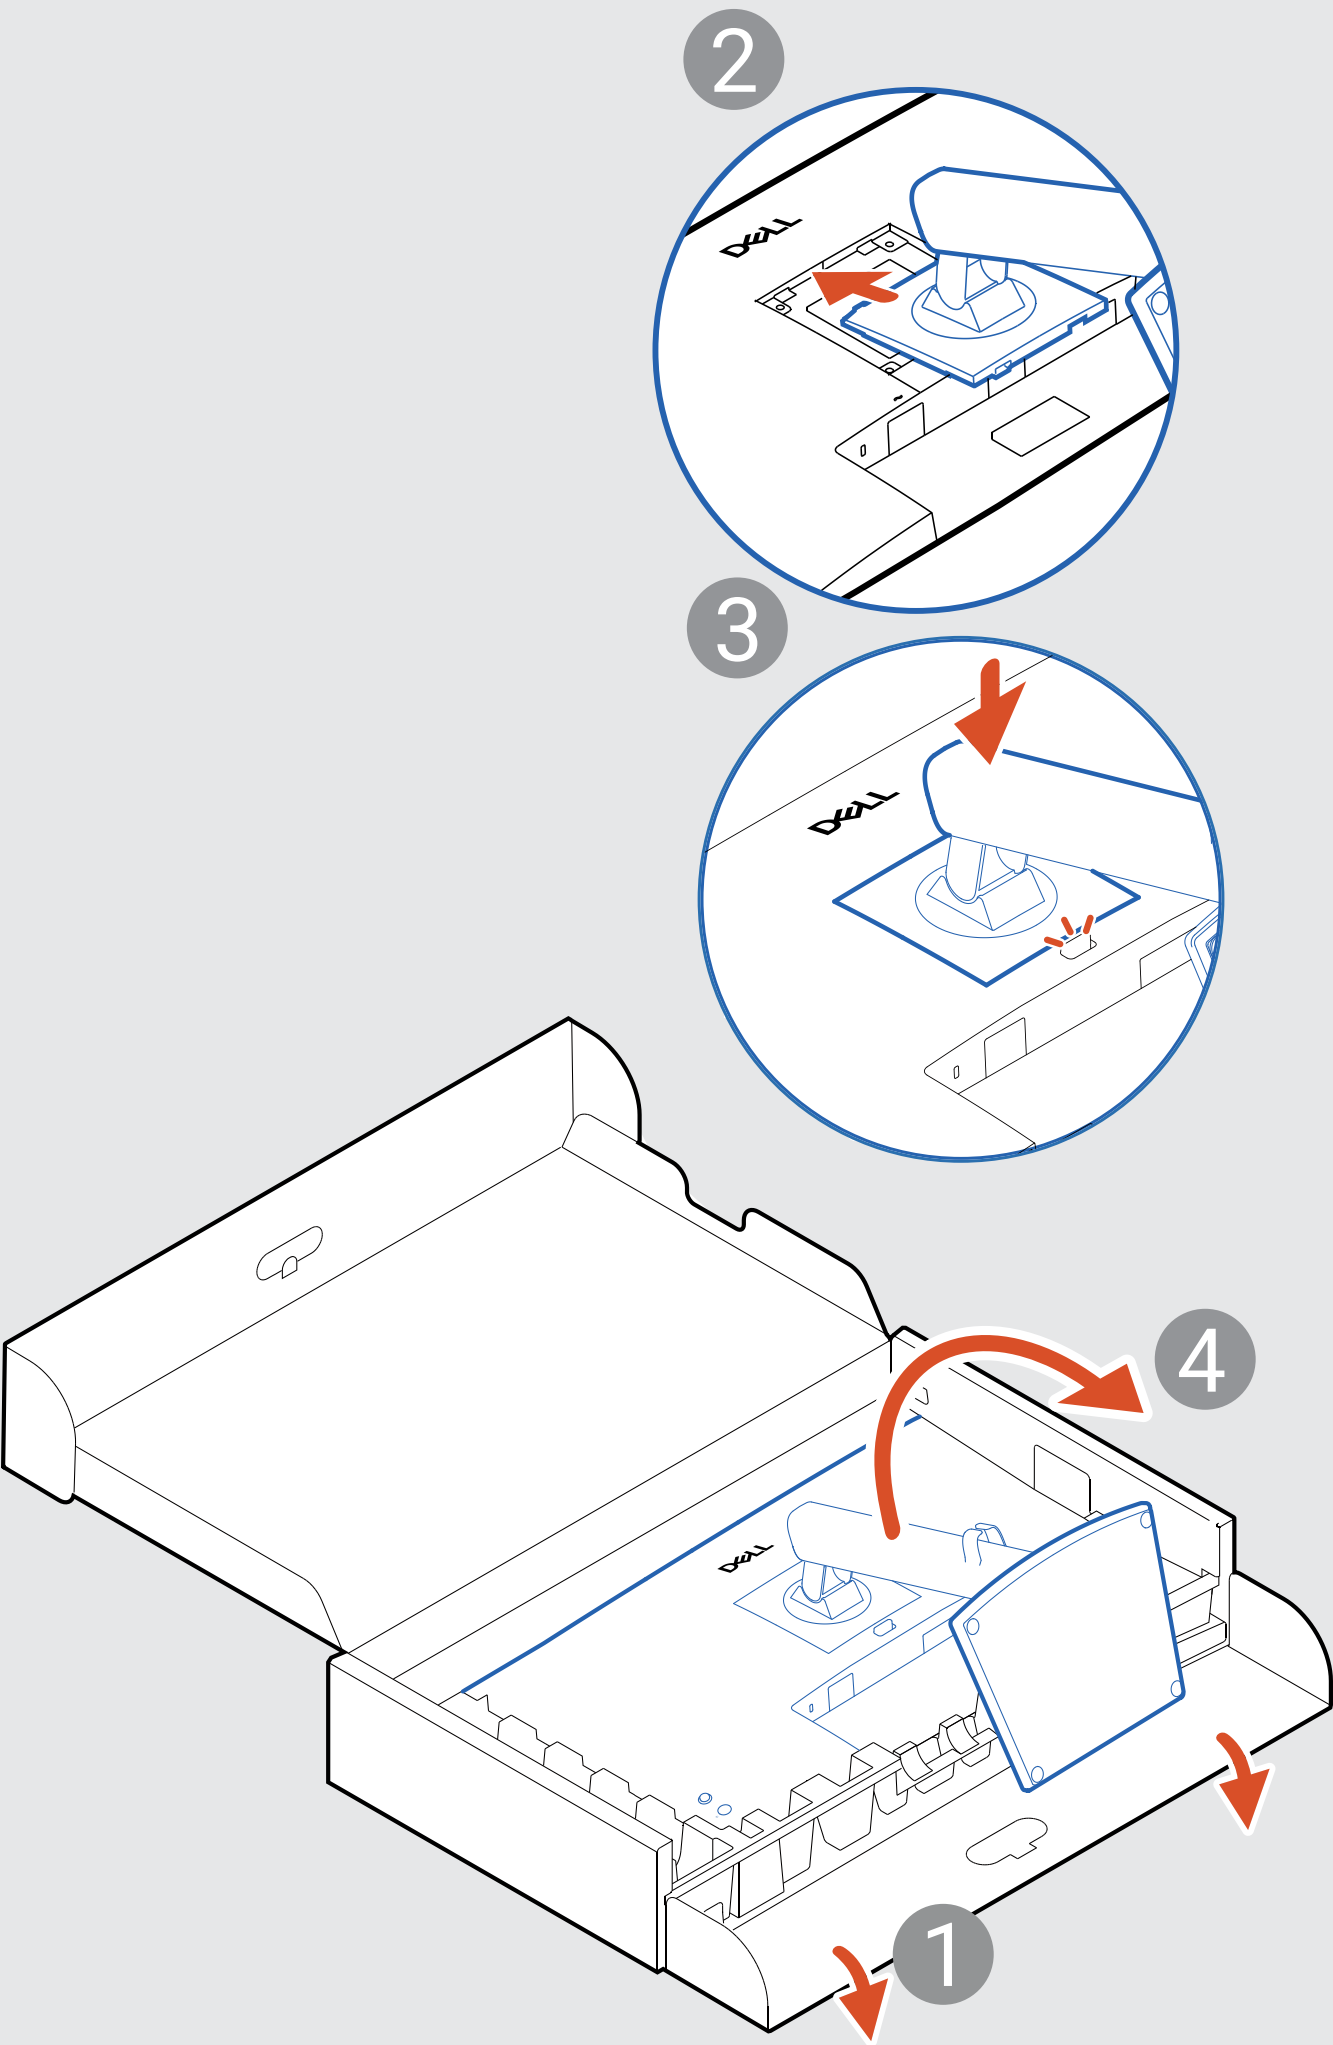


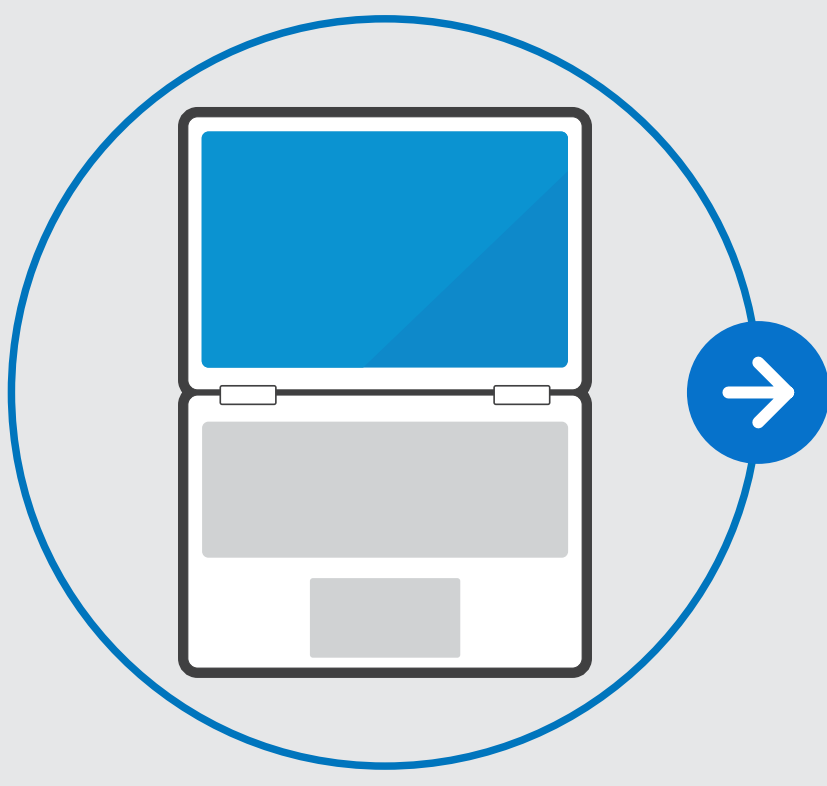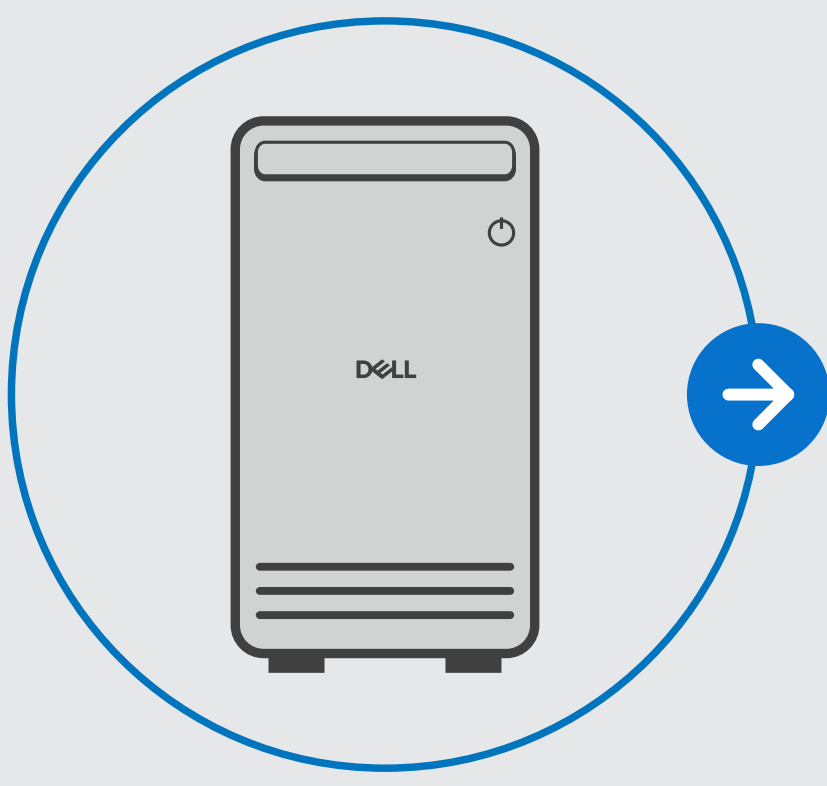

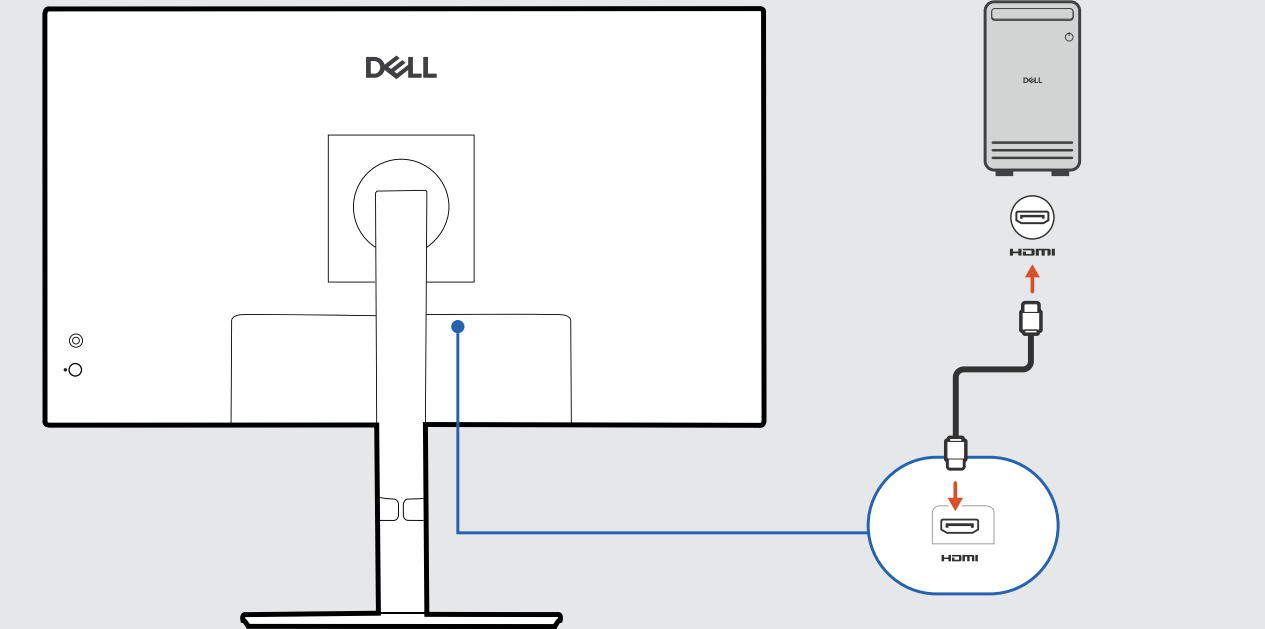


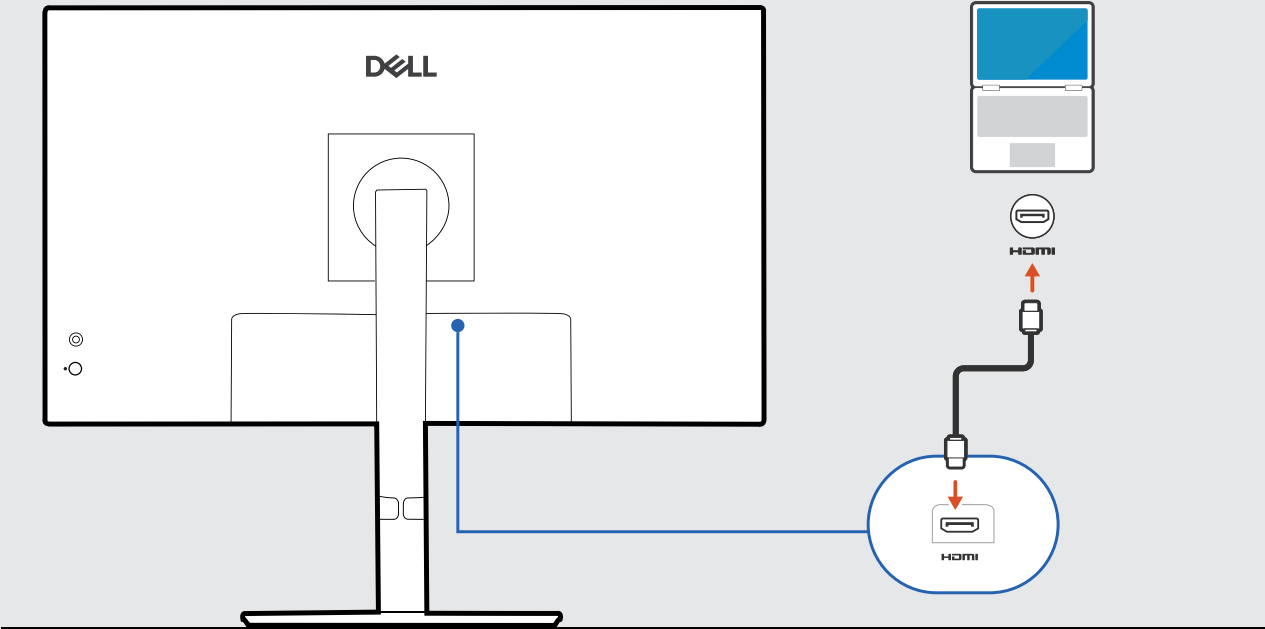

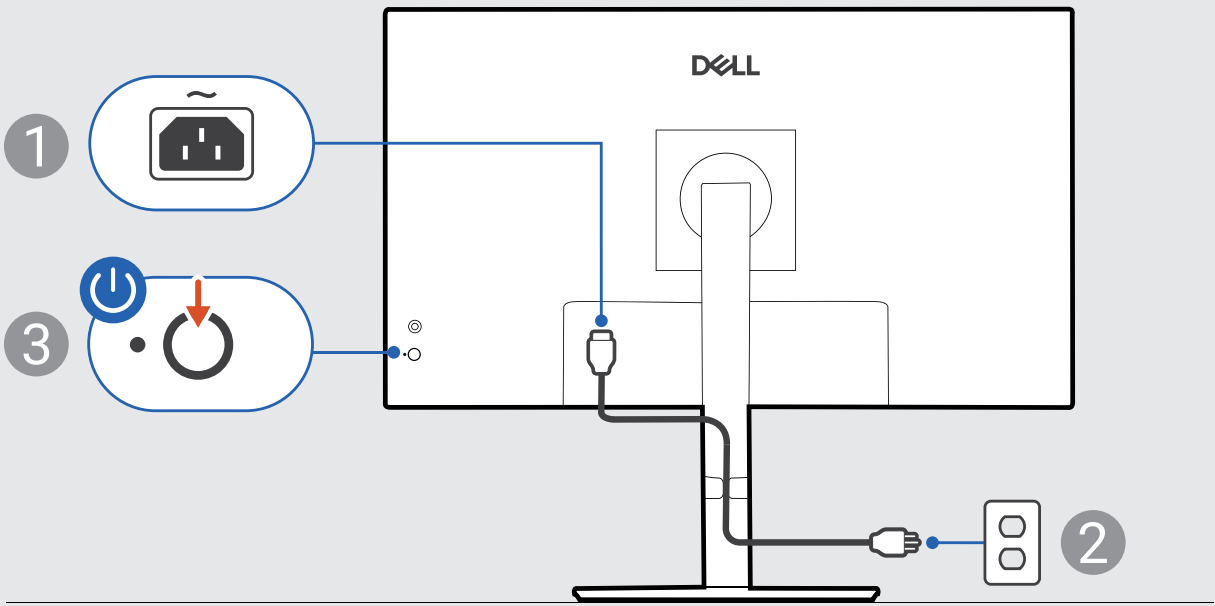


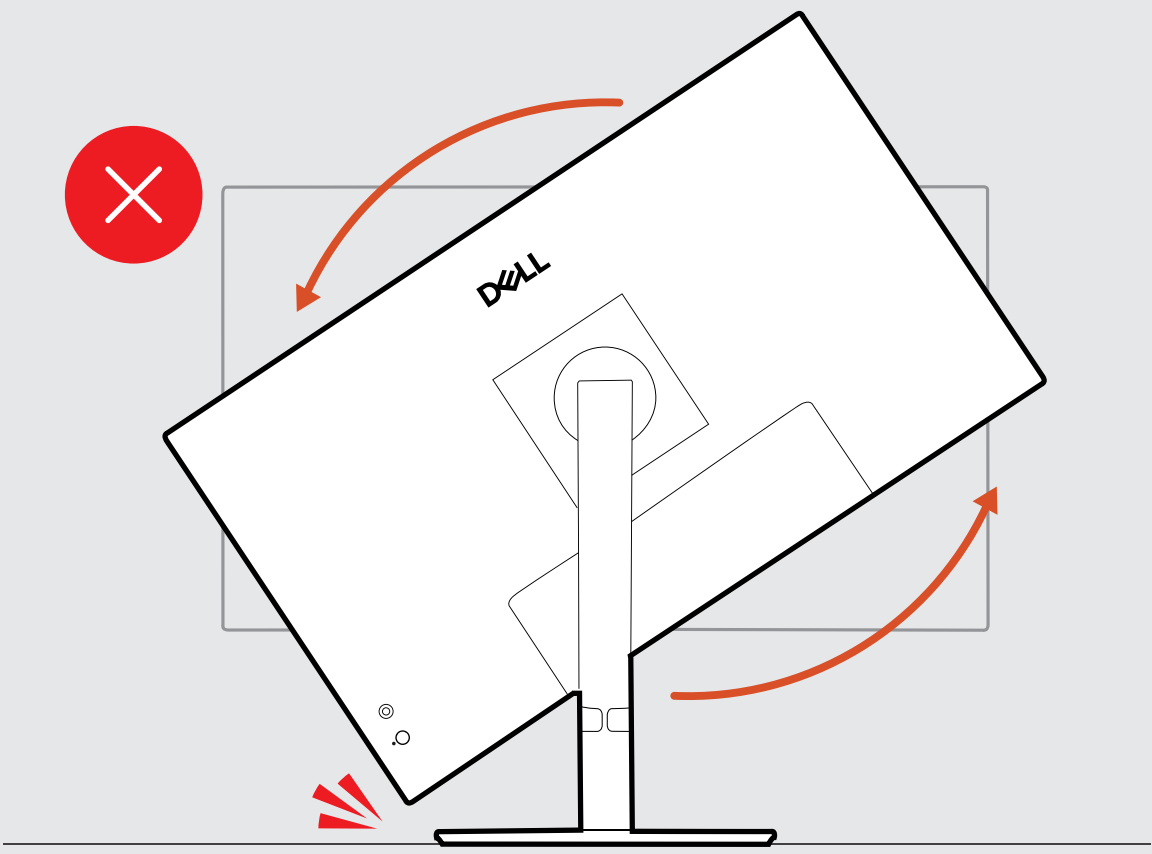



1

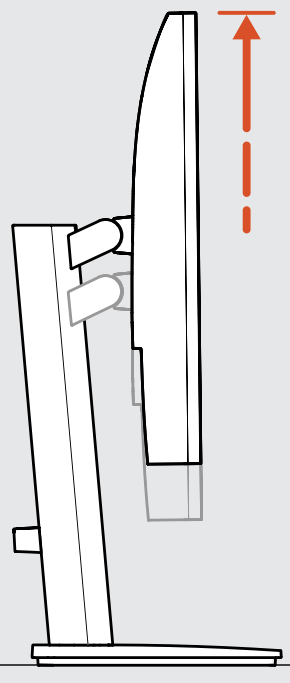


2

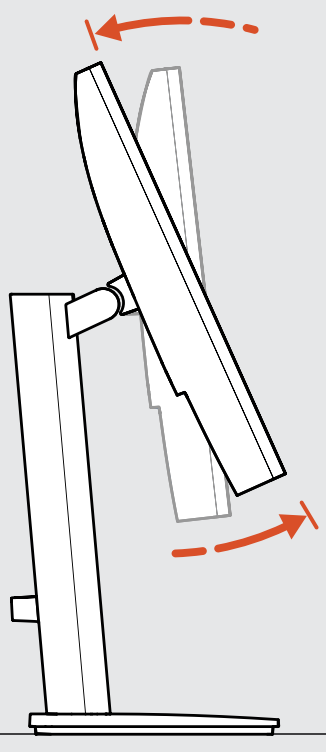


3

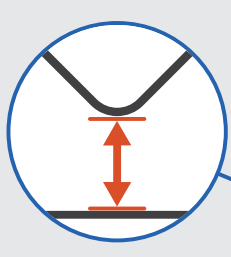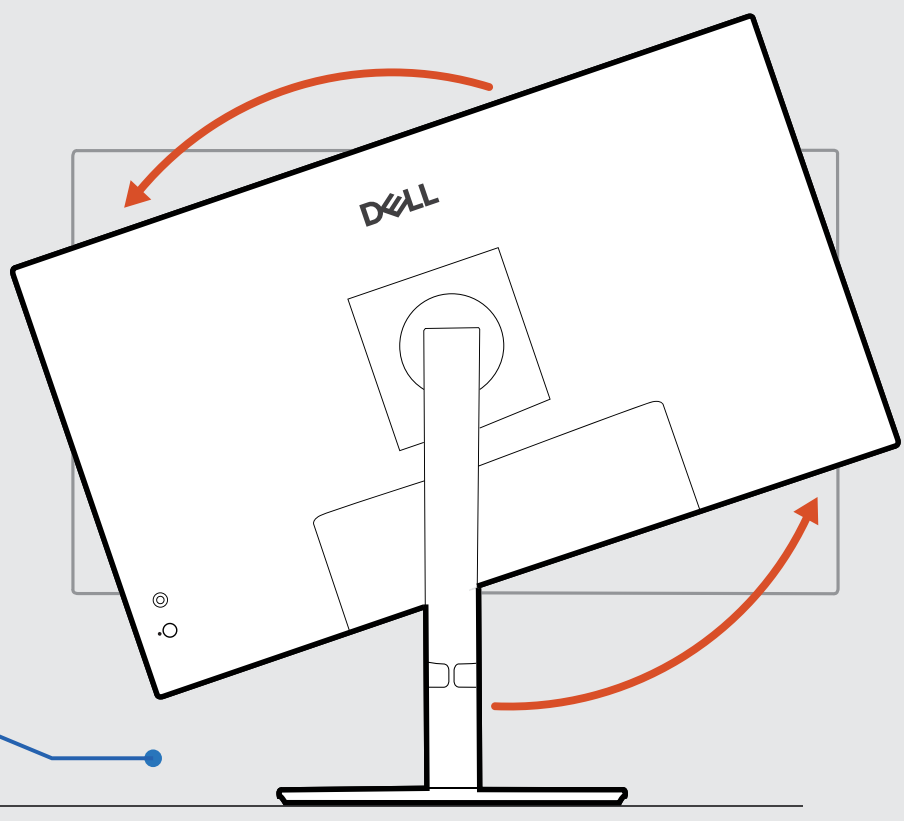

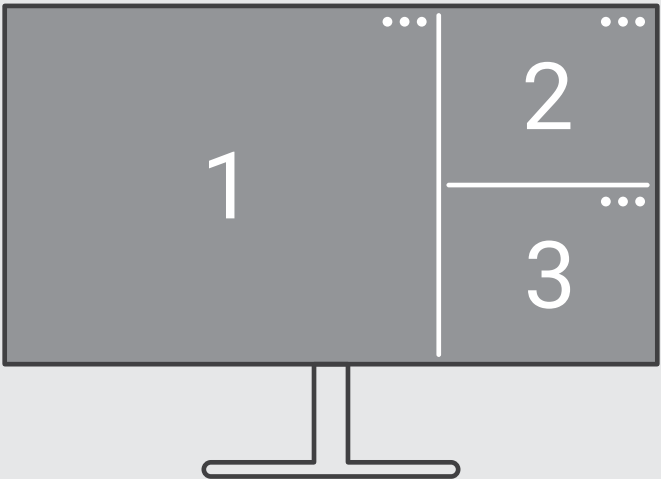

Beeldscherm- en randapparatuurbeheer Dell
Dell.com/support/ddpm

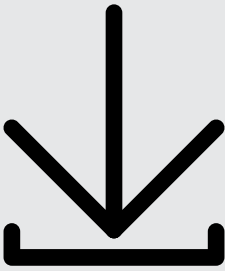

Dell.com/support/E2726DS
Dell.com/support/E2726HS