





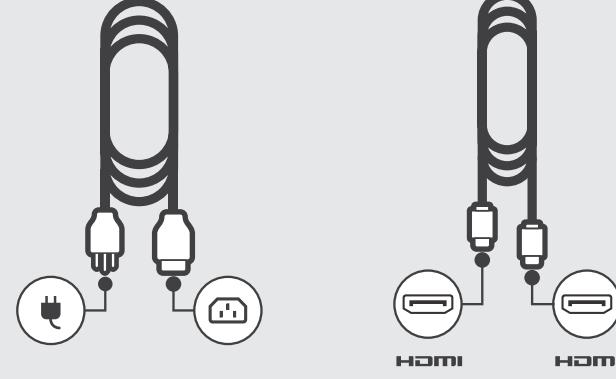


Dell Pro 27 Monitor  
E2726DS/E2726HS  
Quick Start Guide

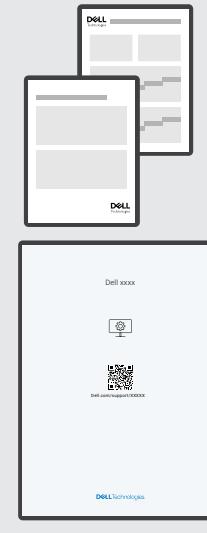


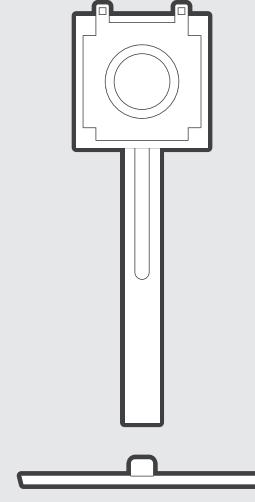





1

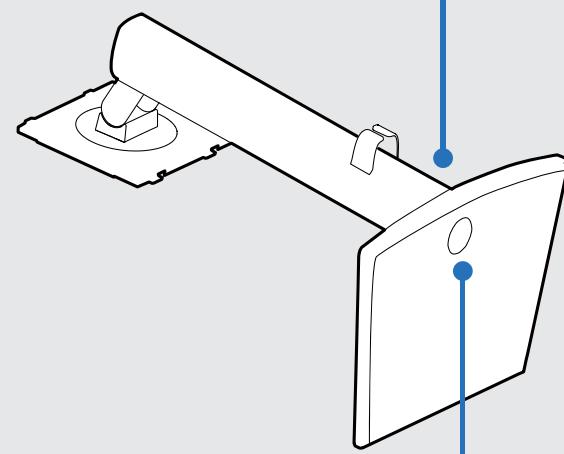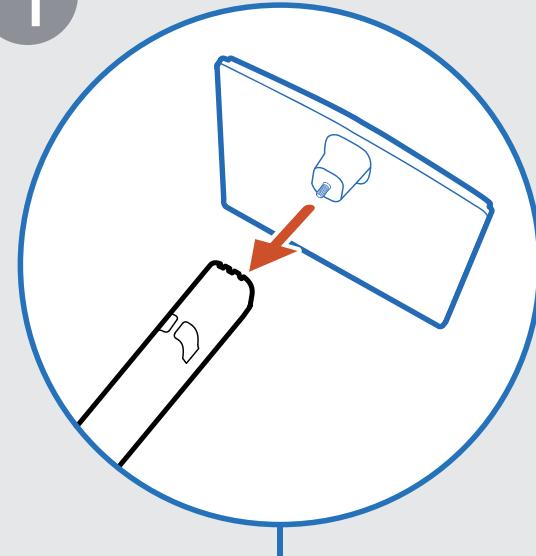



2

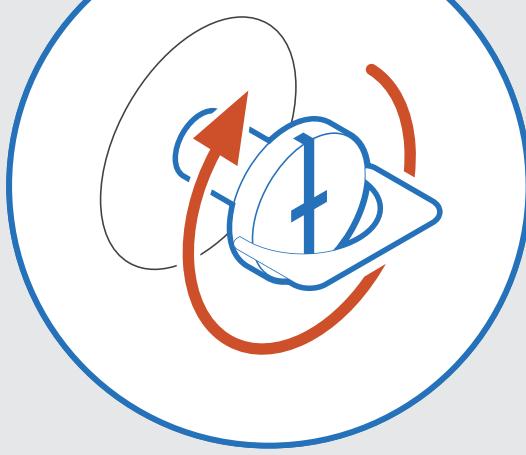




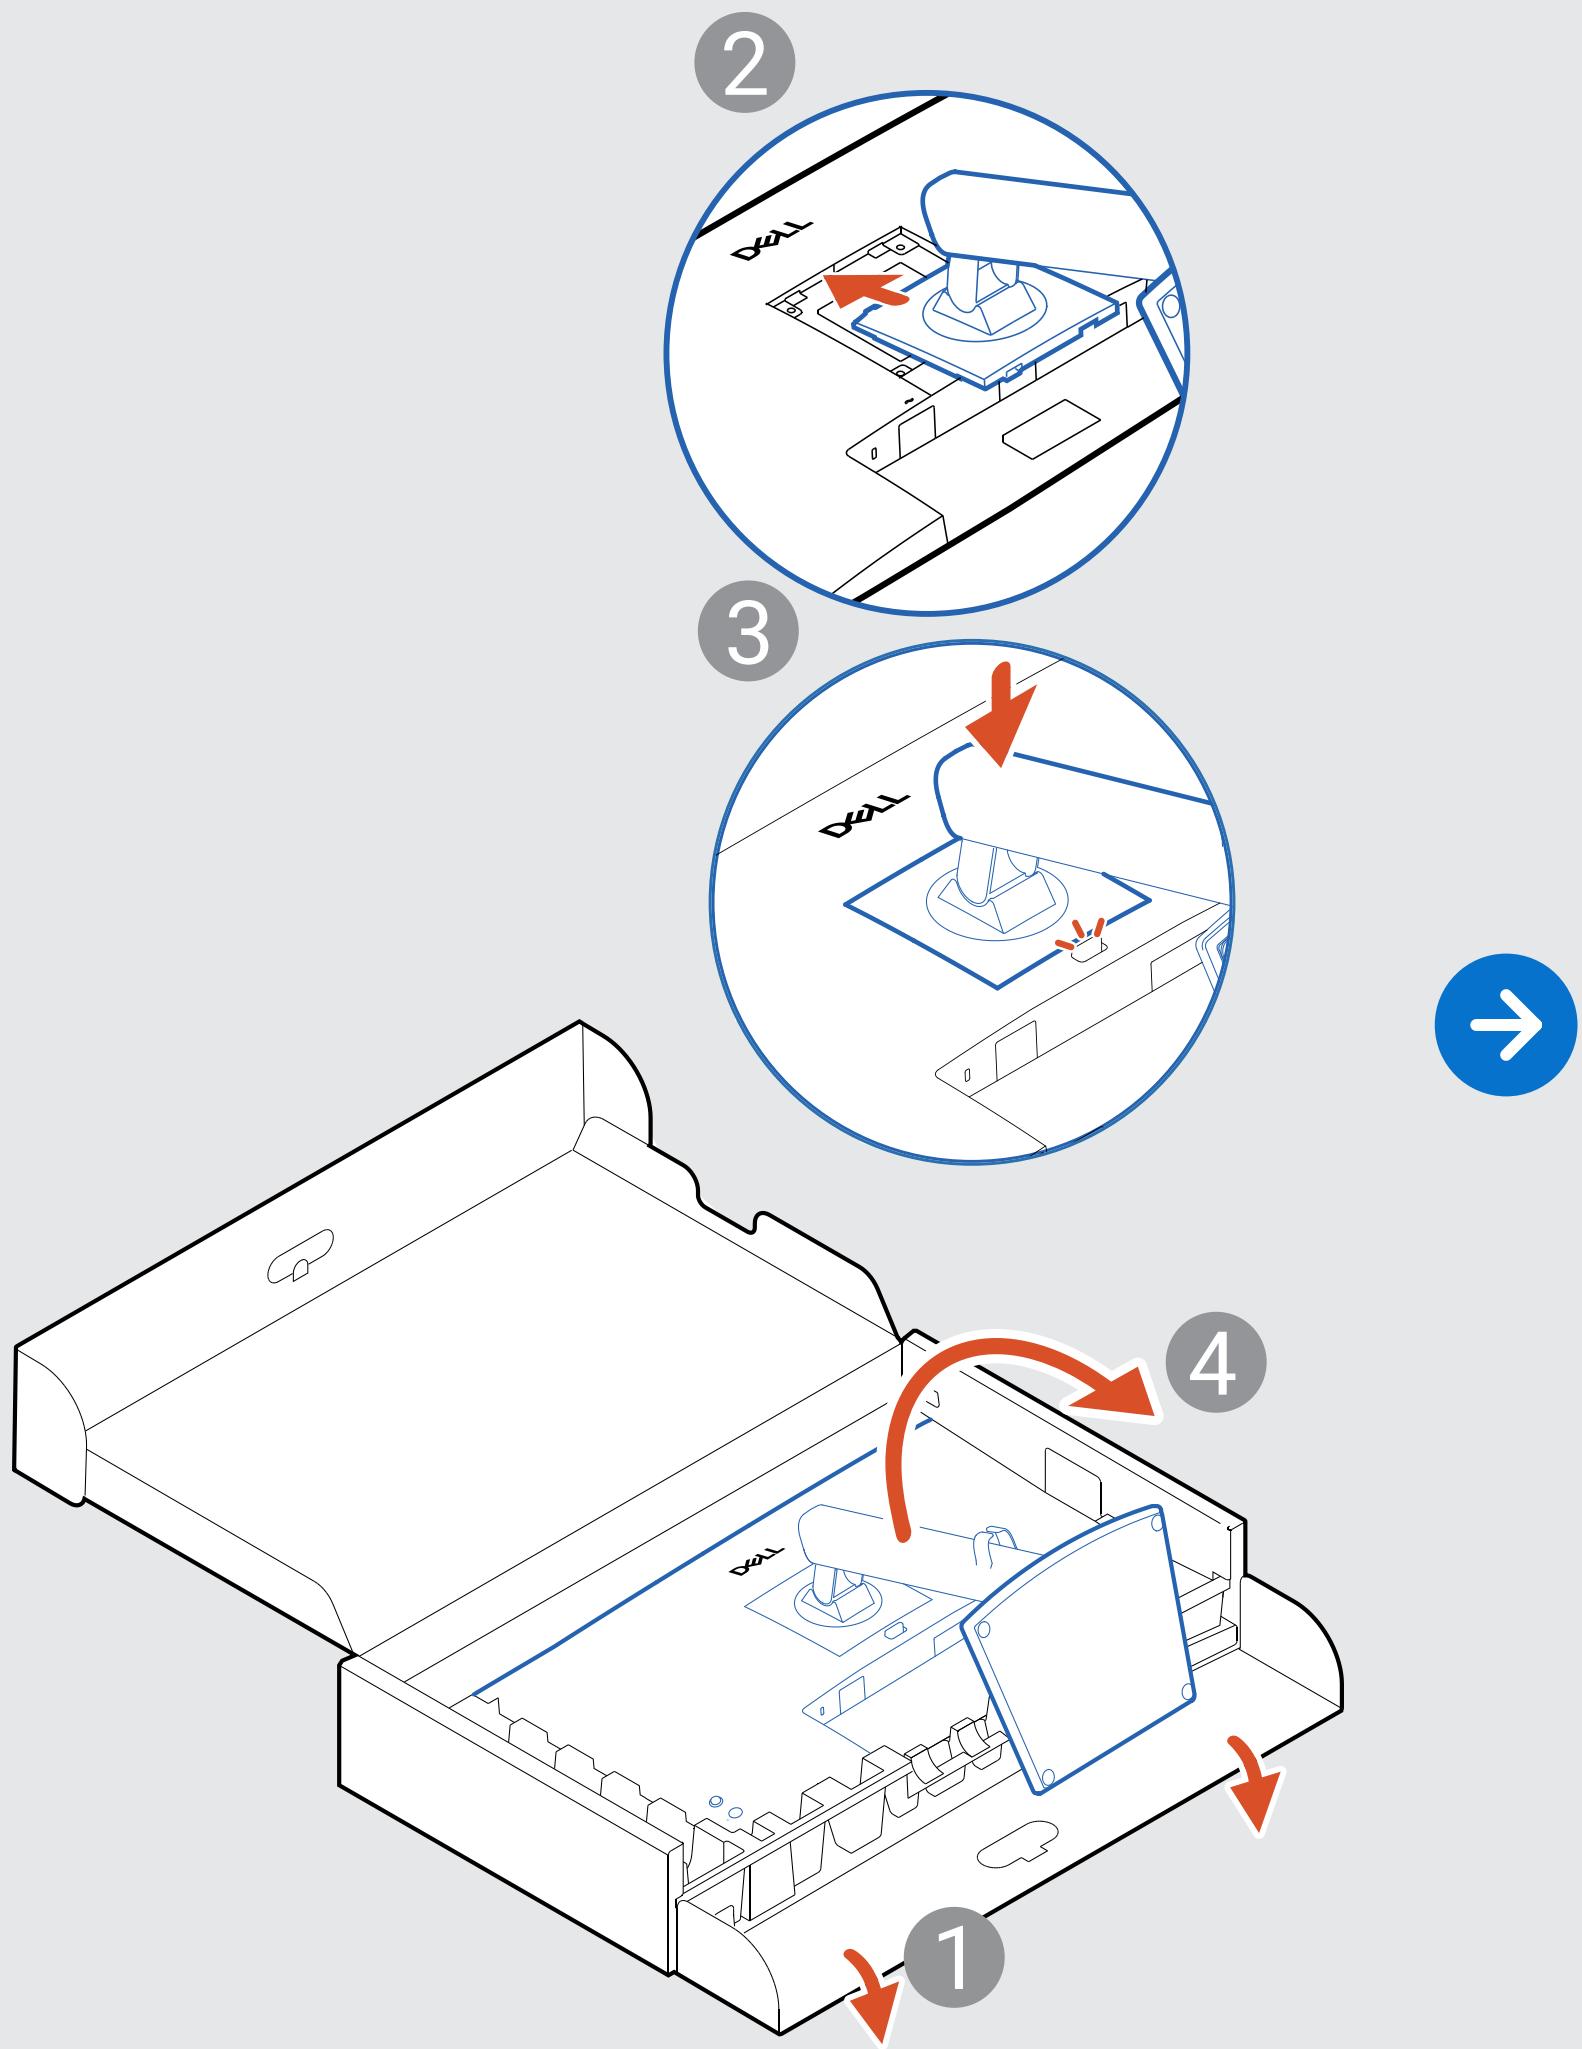


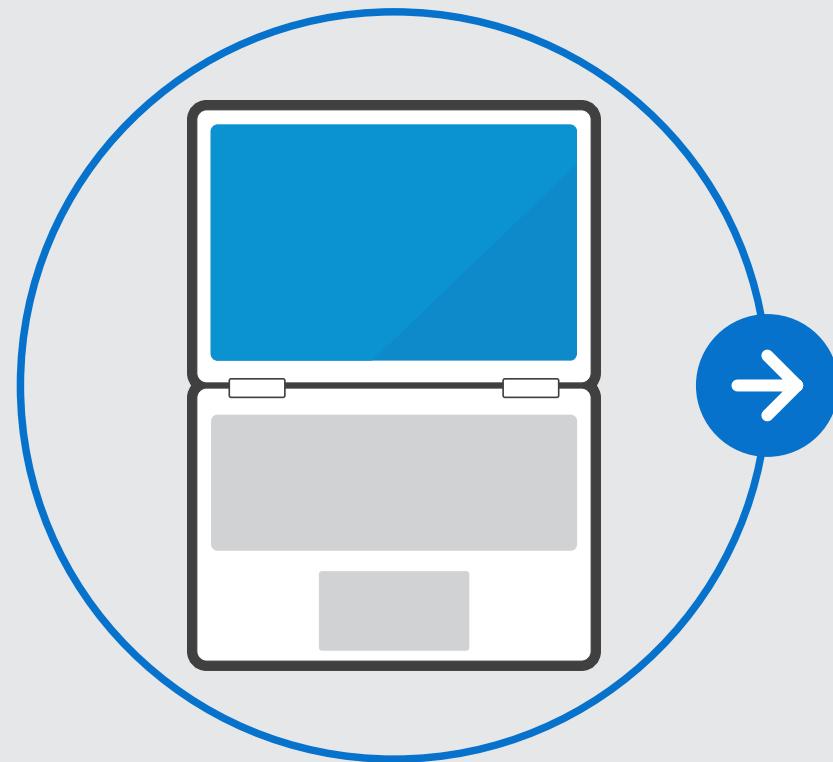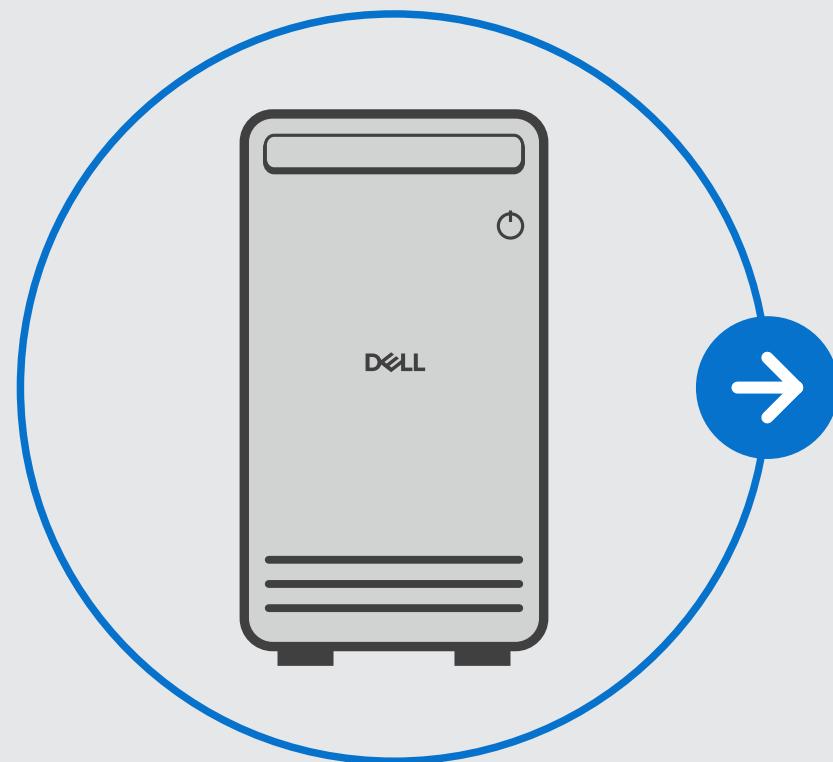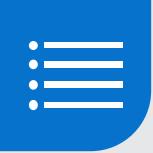


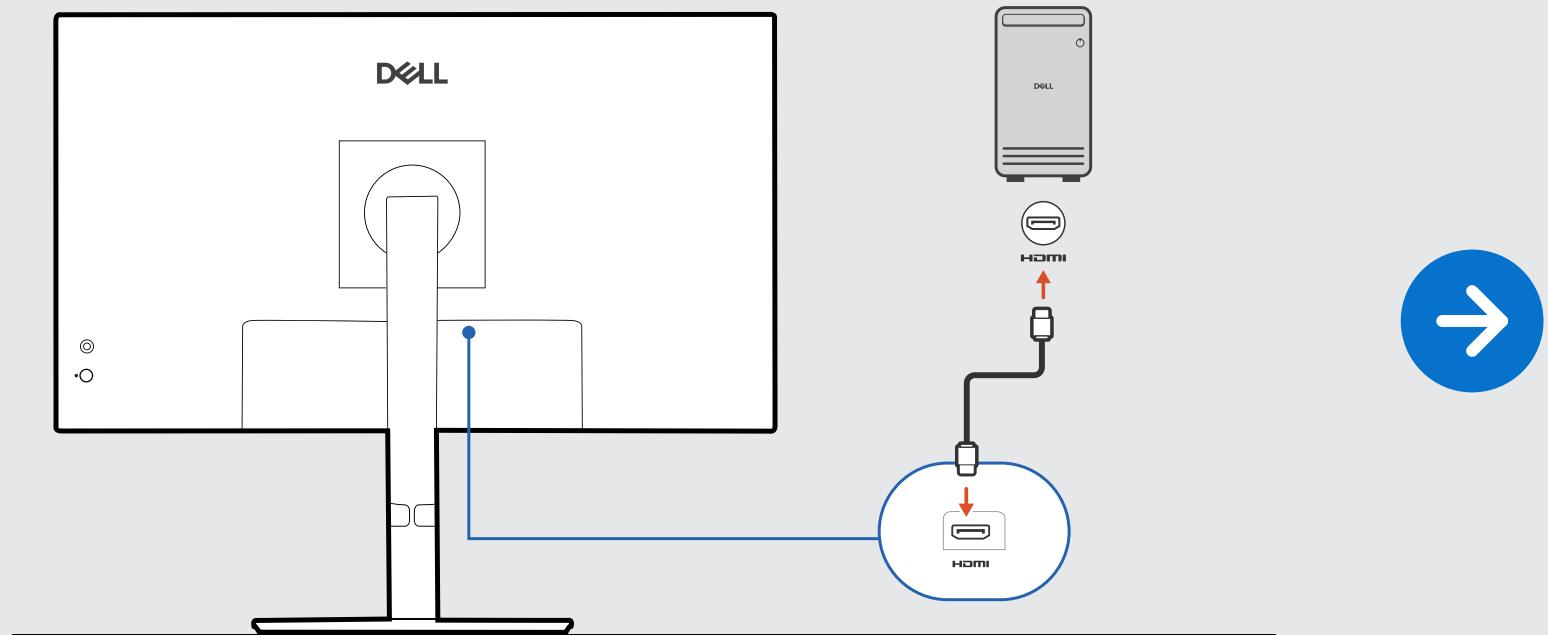

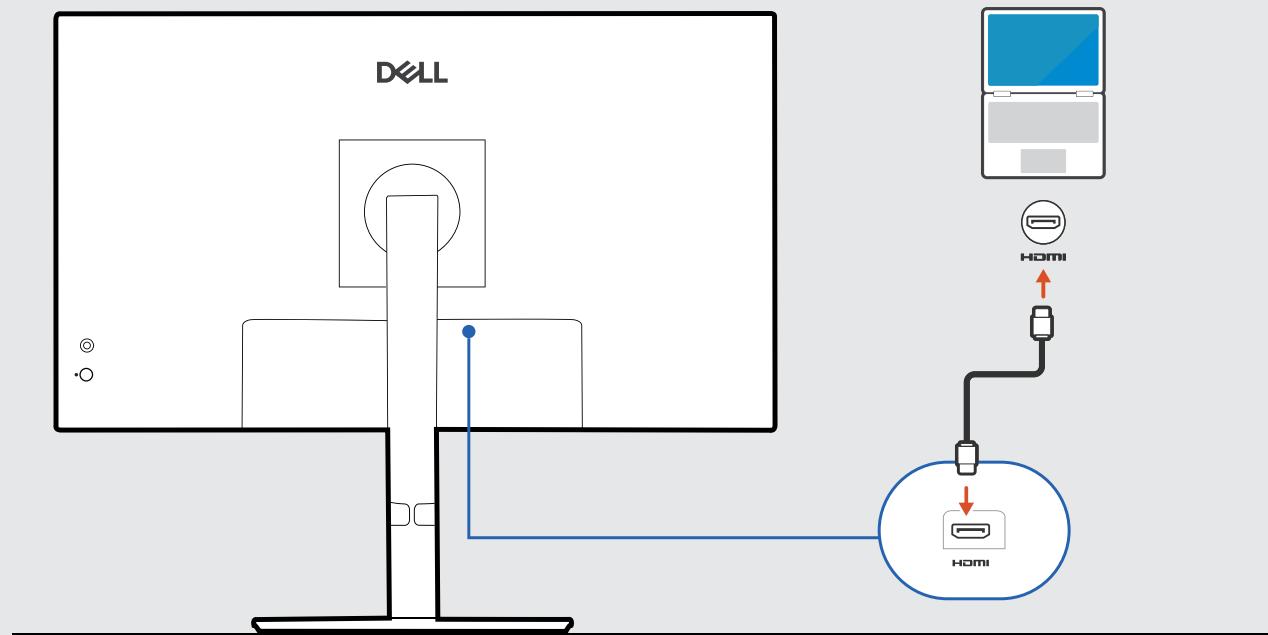


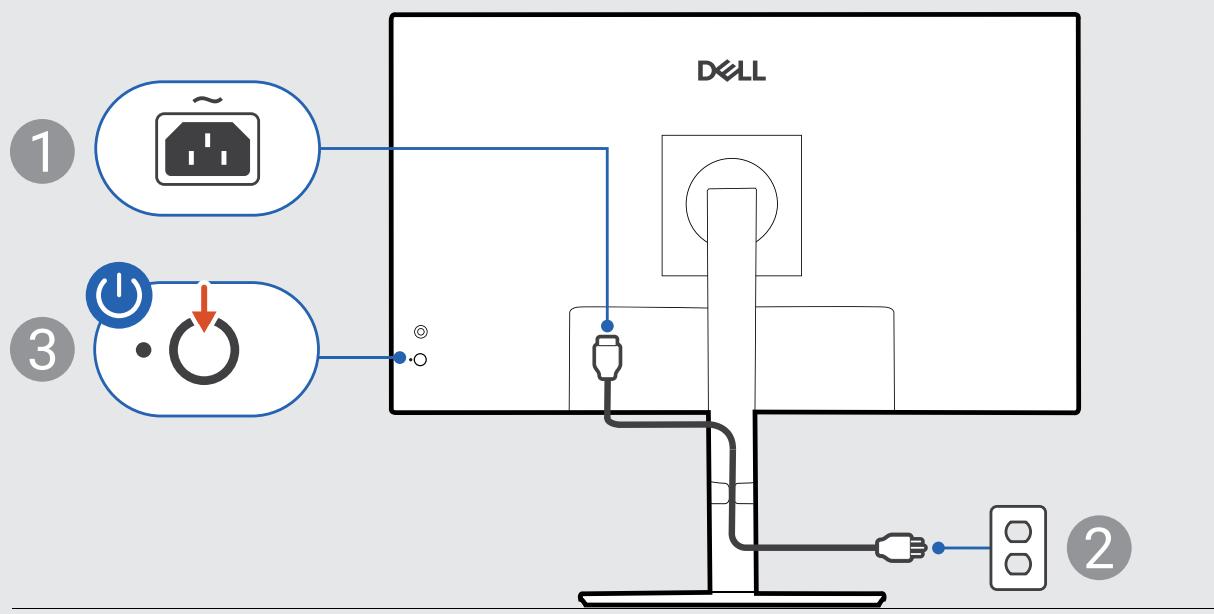

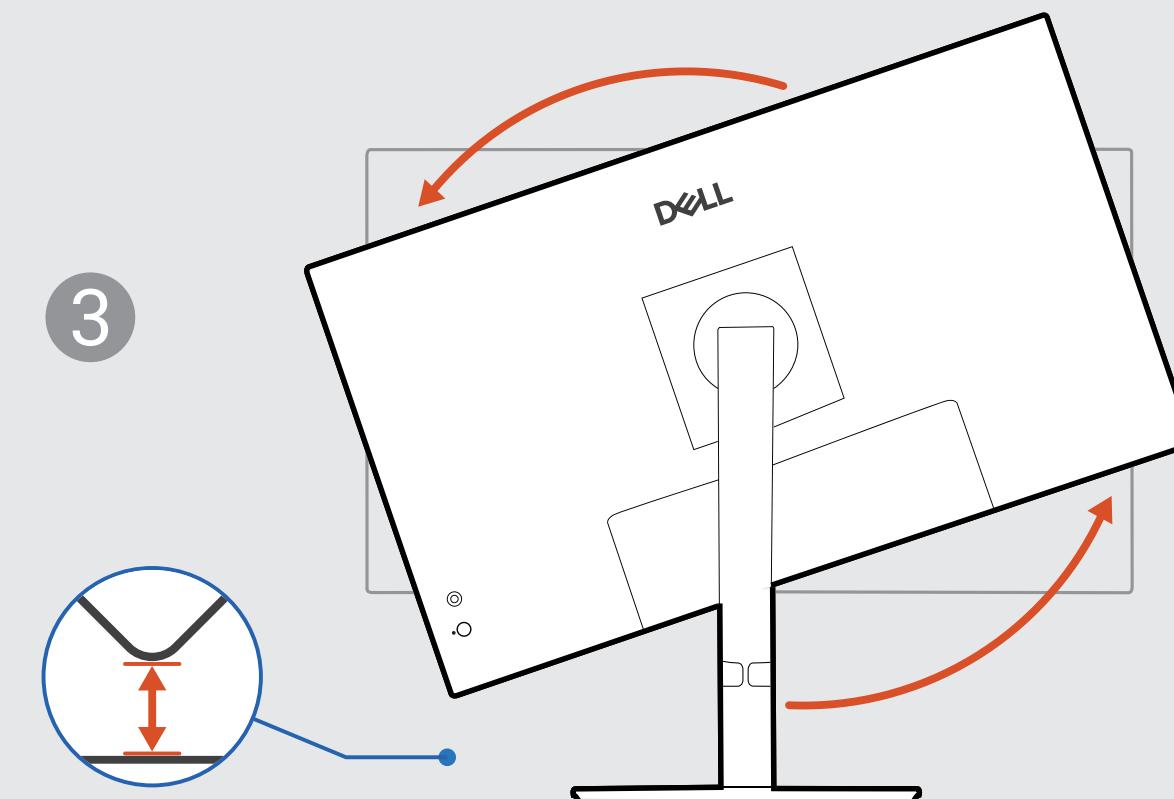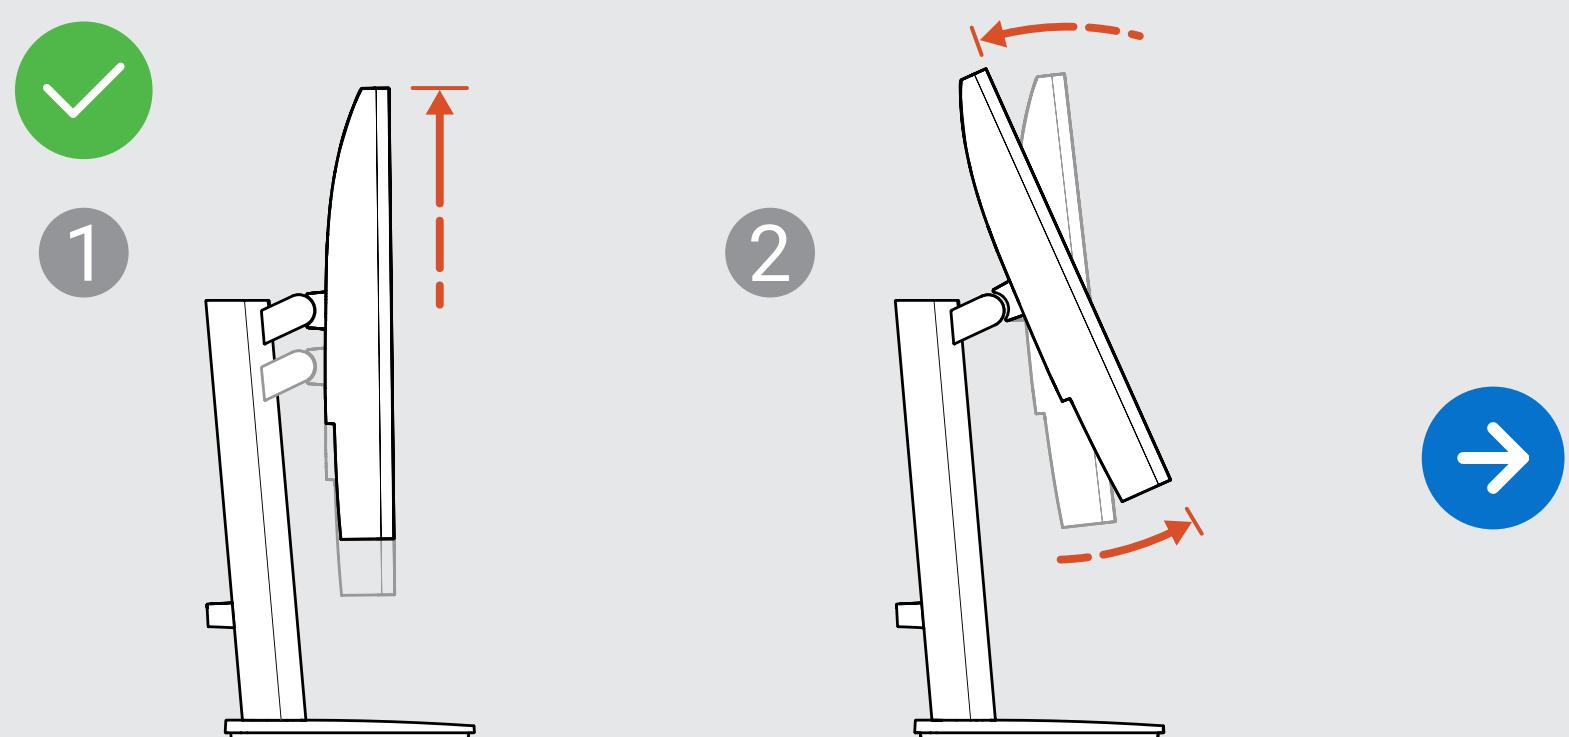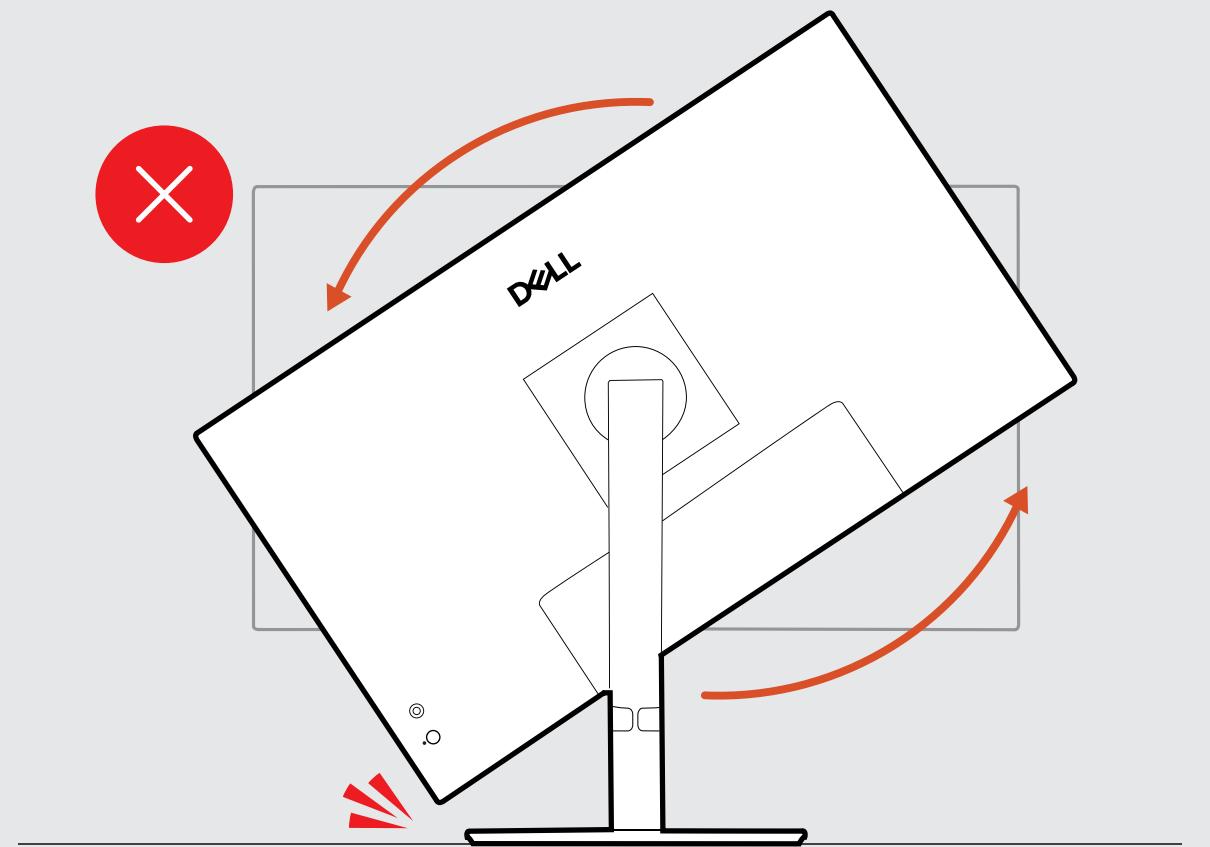

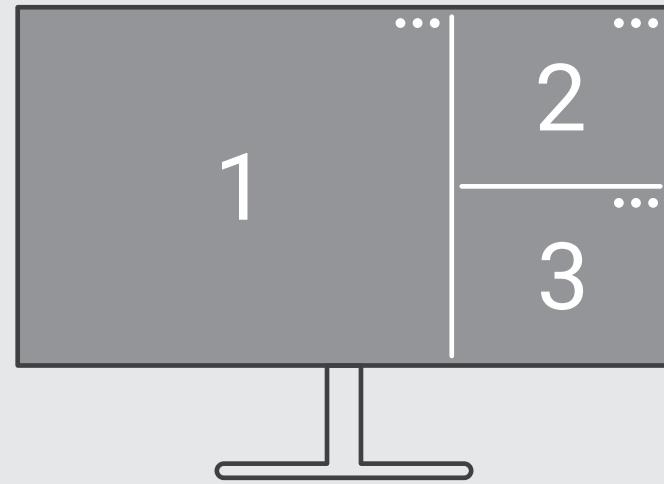

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](http://Dell.com/support/ddpm)

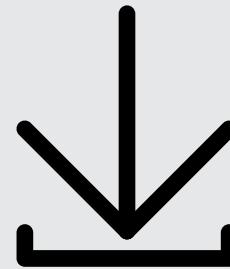

[Dell.com/support/E2726DS](http://Dell.com/support/E2726DS)  
[Dell.com/support/E2726HS](http://Dell.com/support/E2726HS)