









Dell Pro P 24 USB-C Hub Webcam-monitor




P2426HEV



Snelstartgids




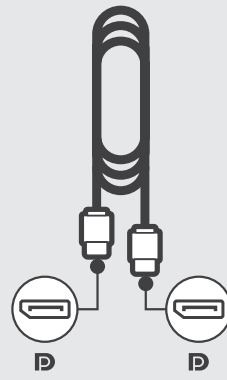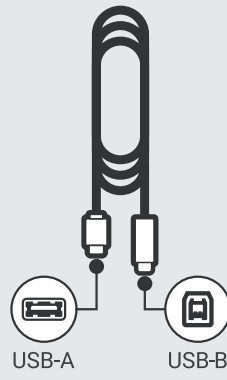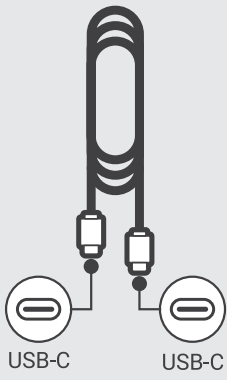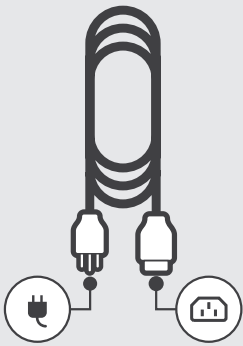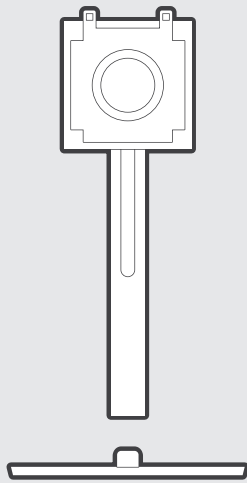


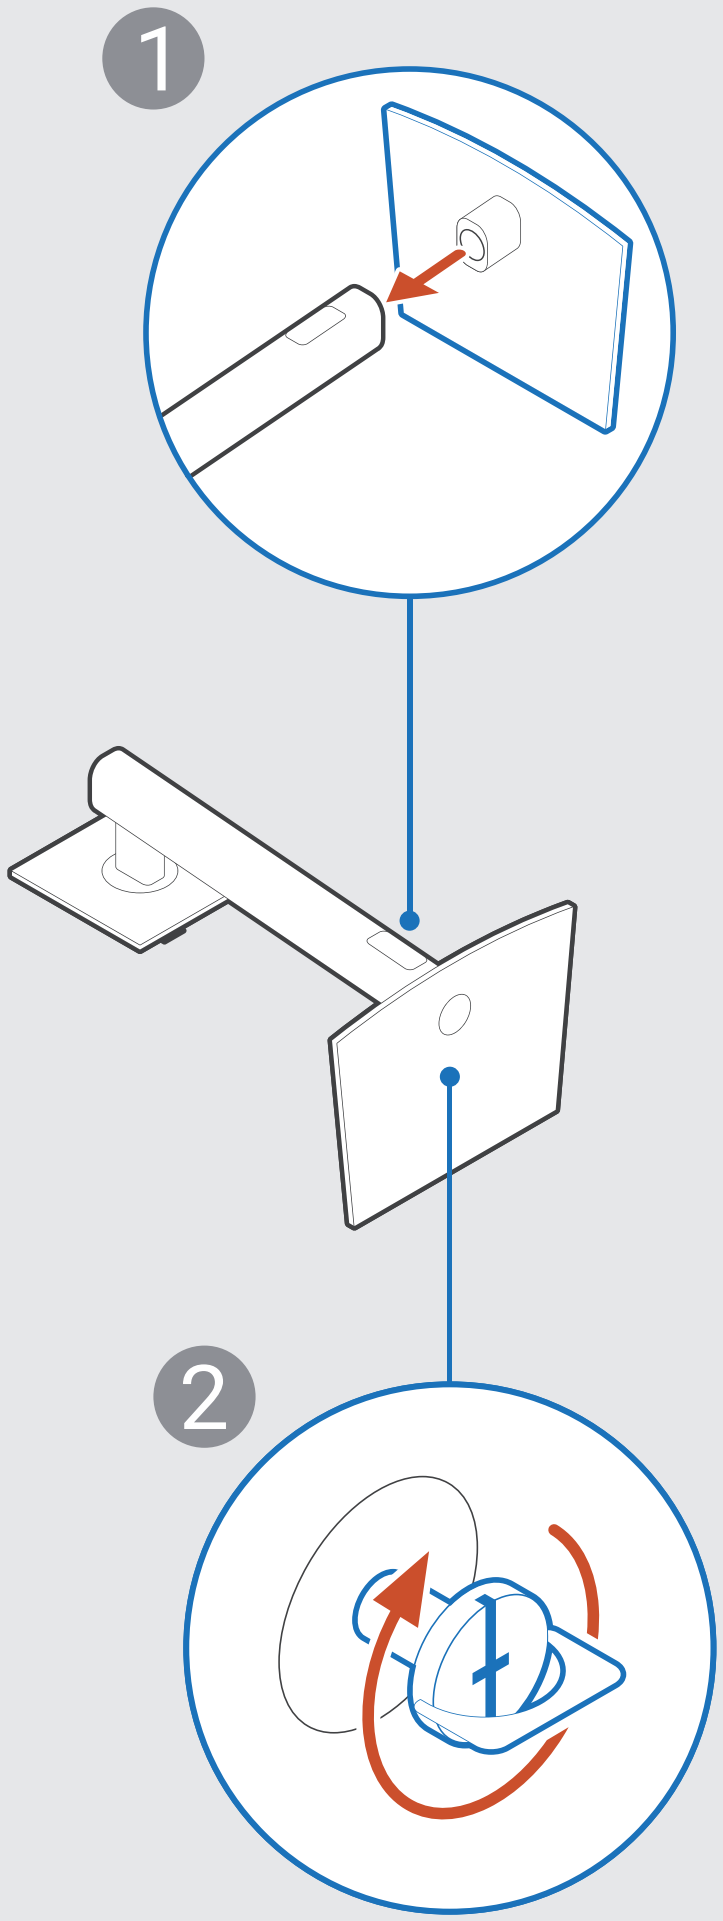


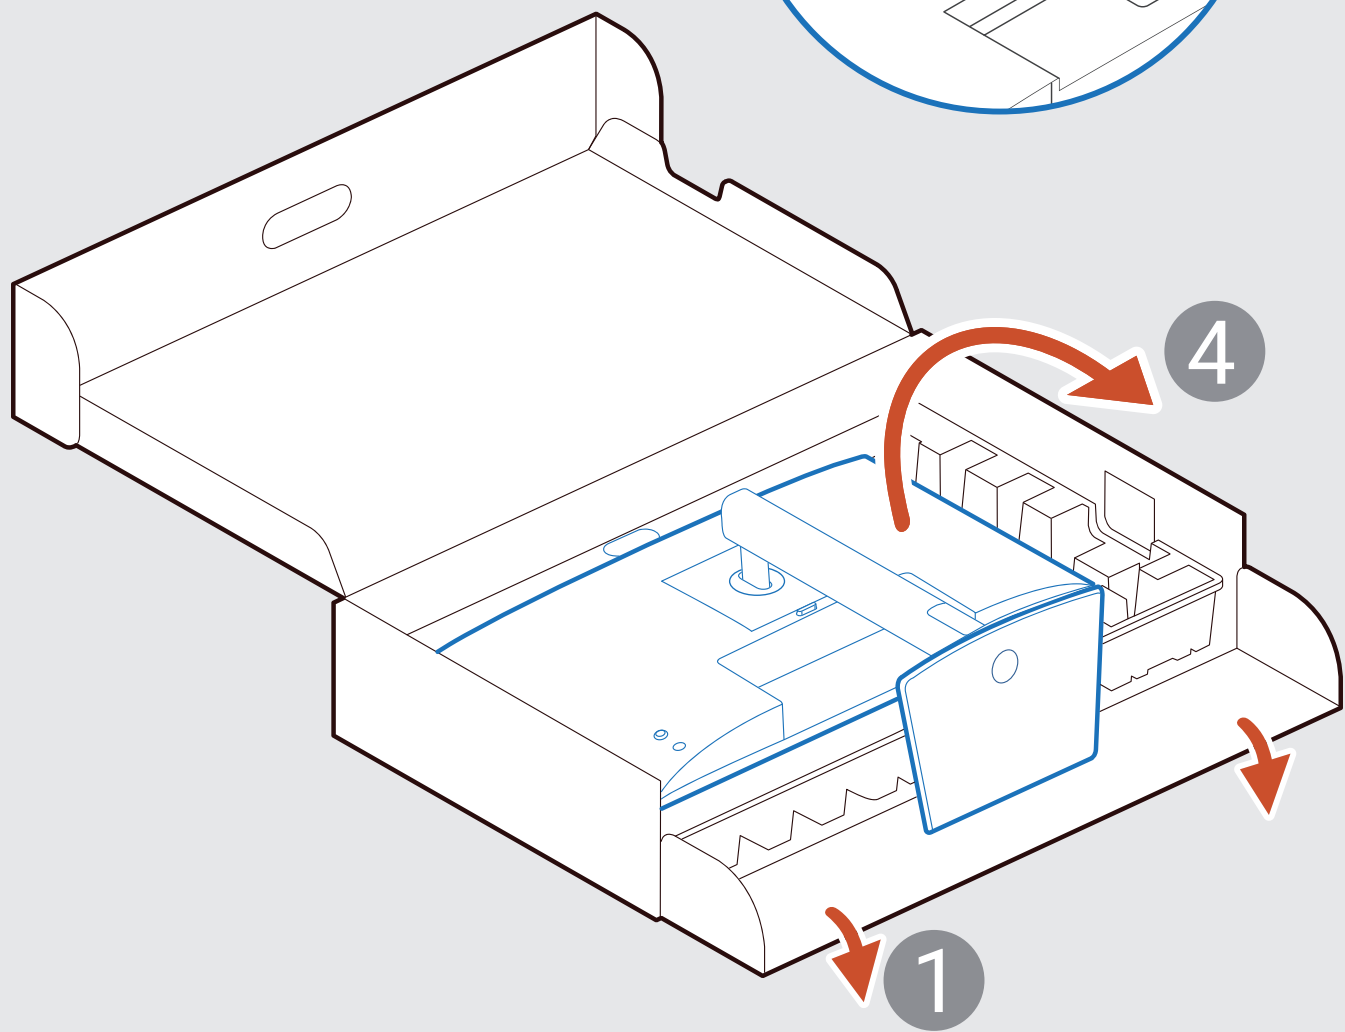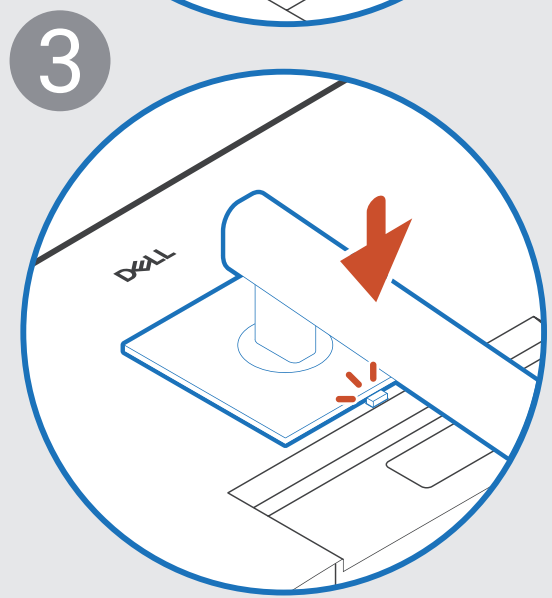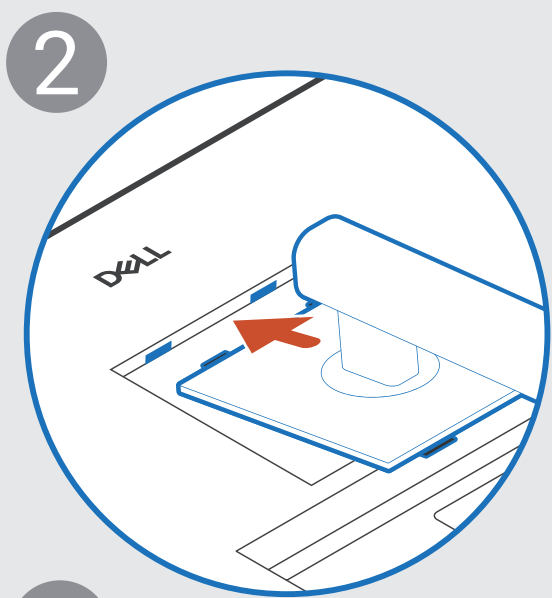


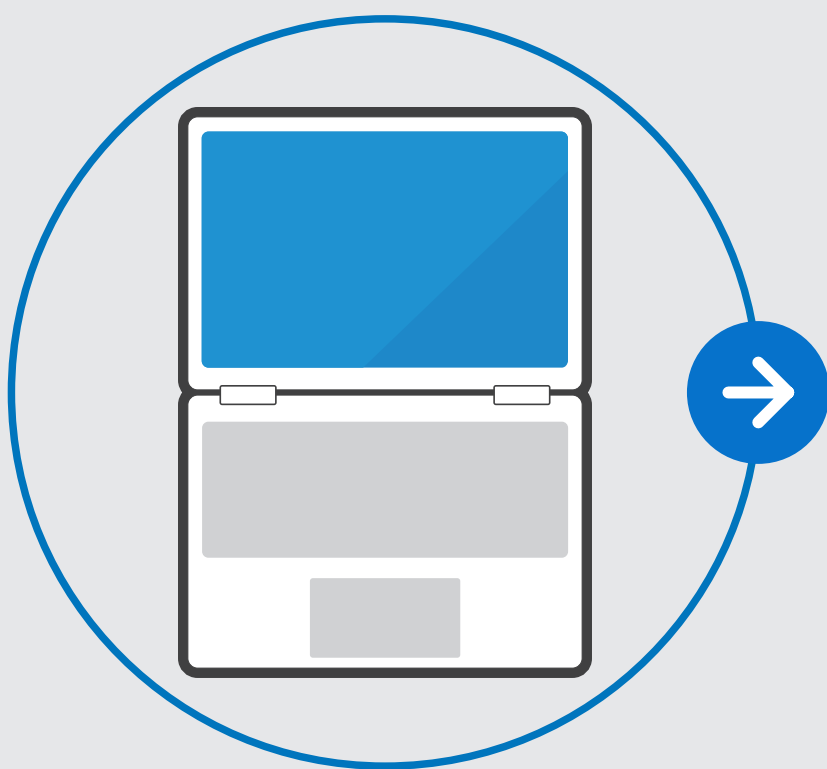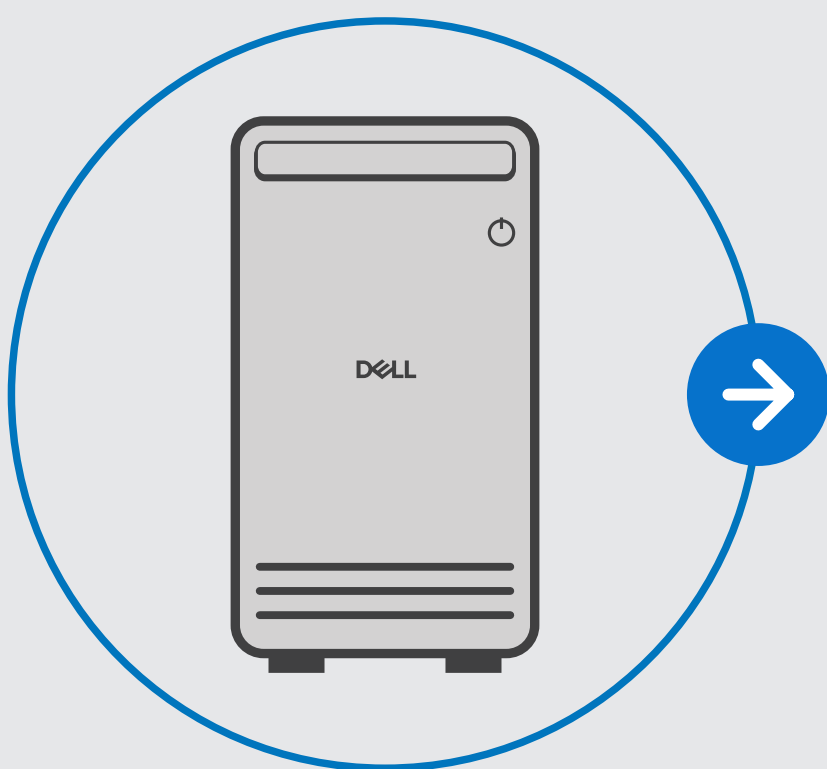

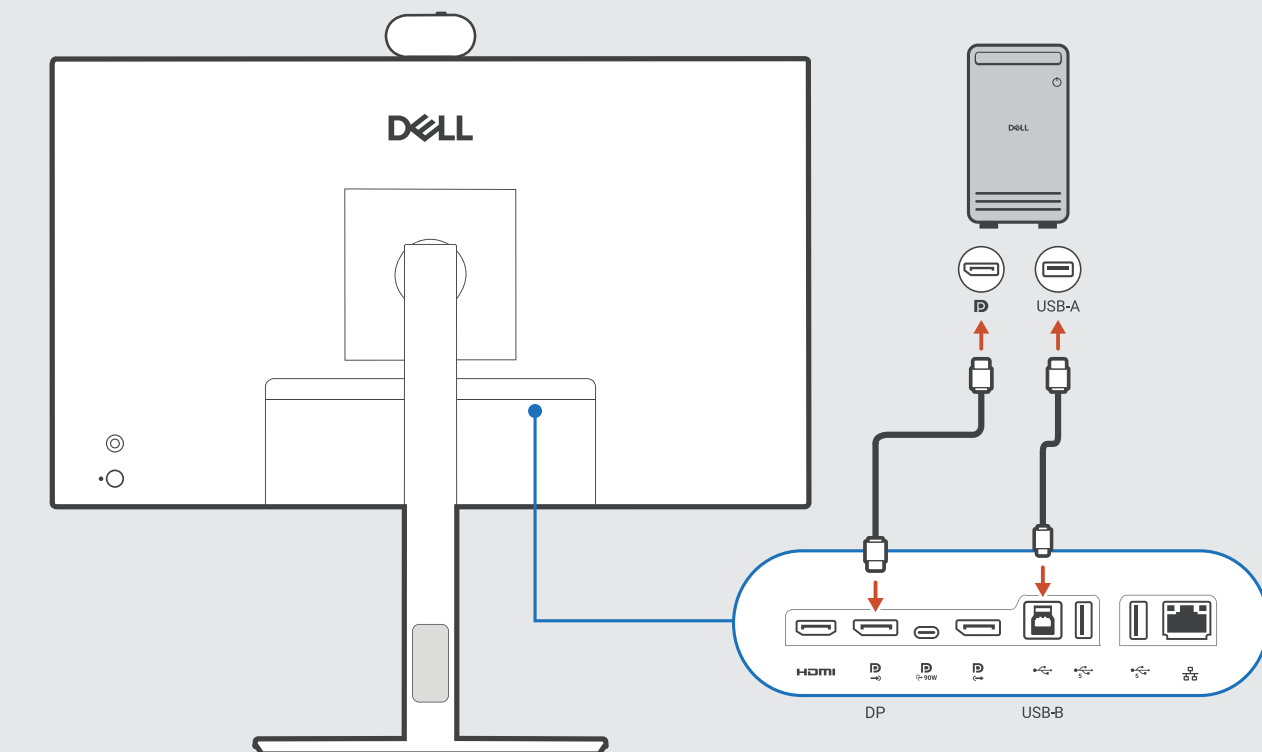


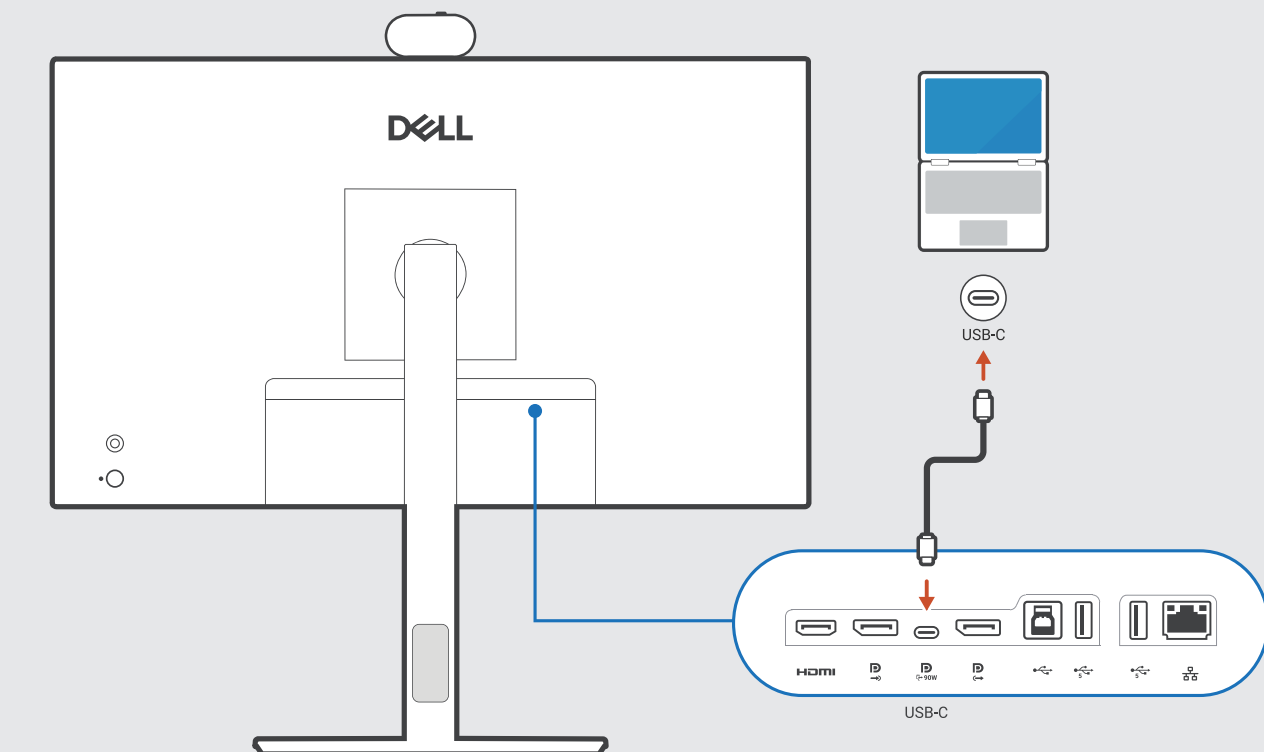

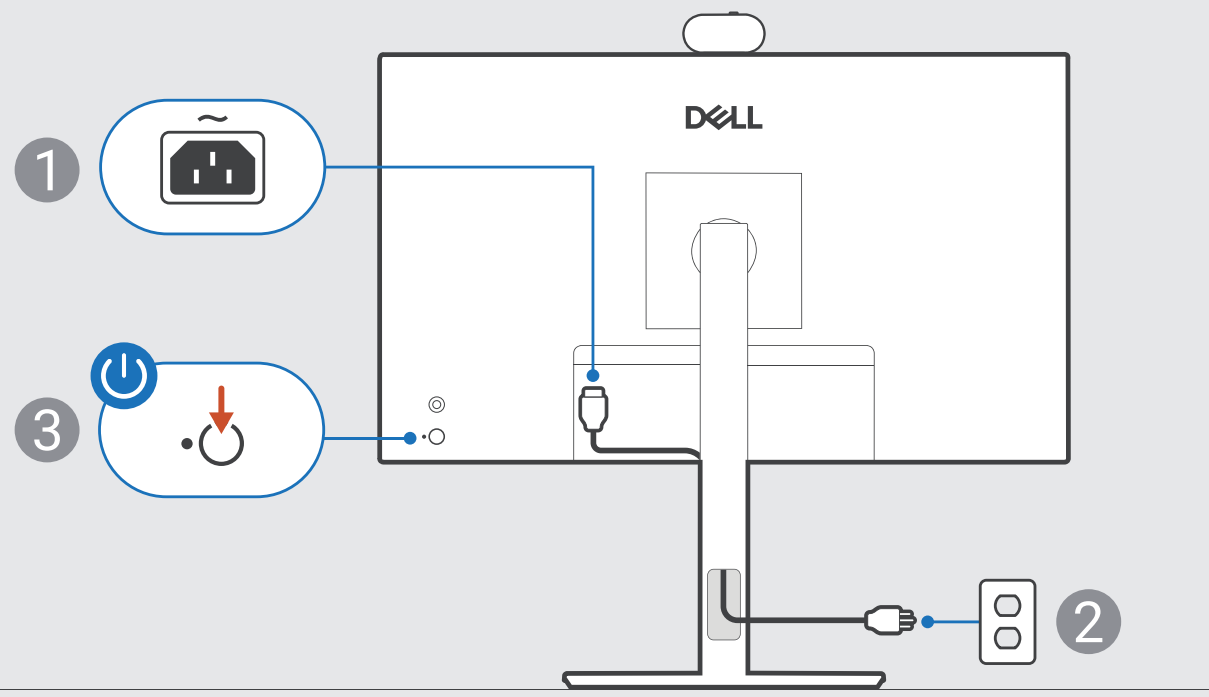


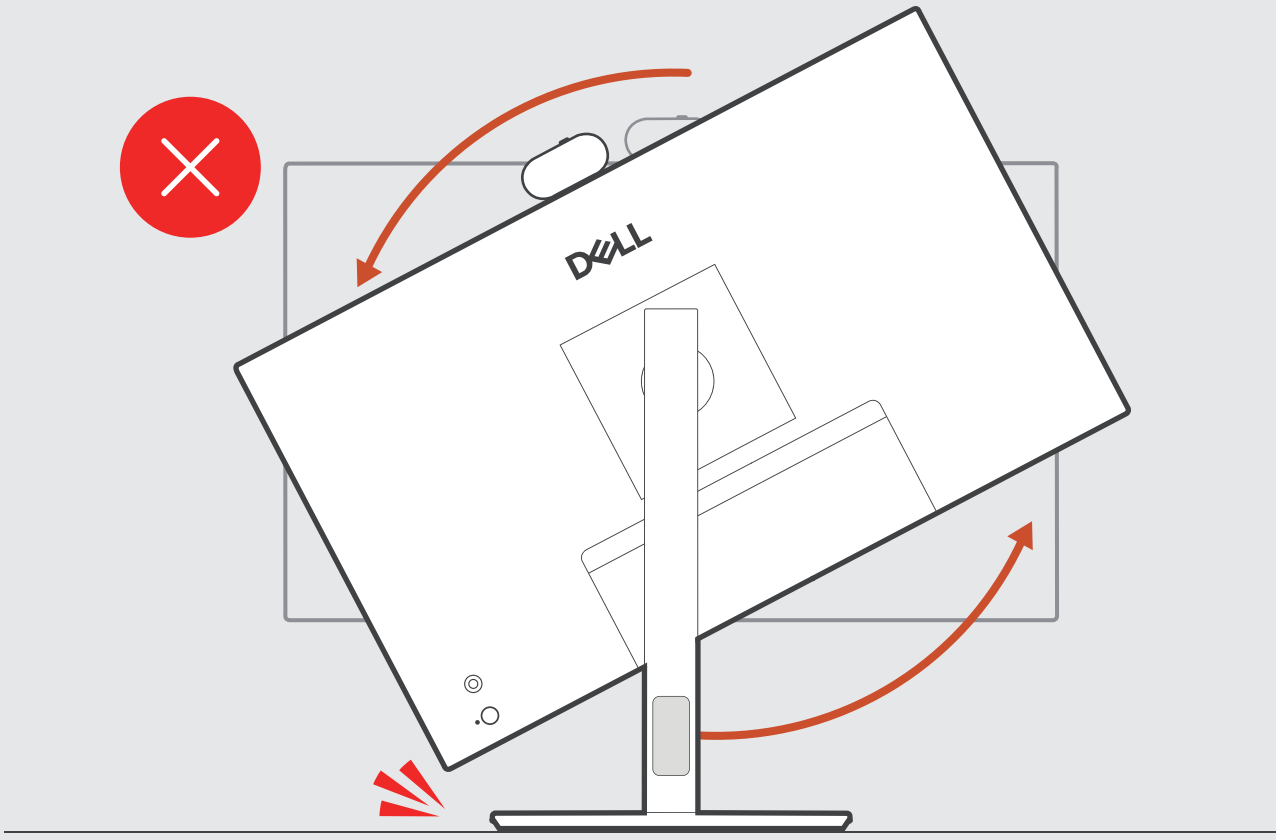


1


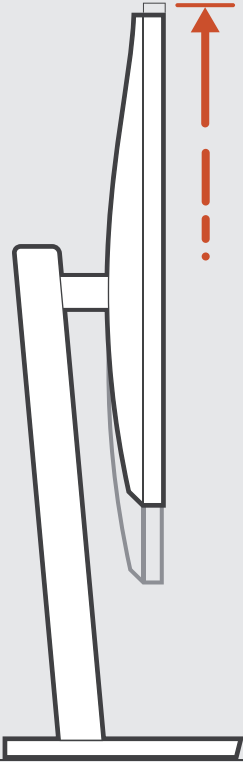



2

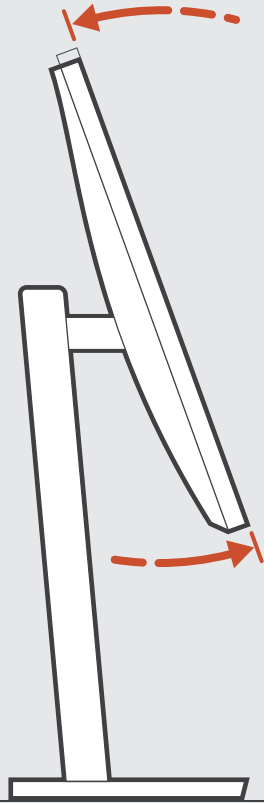


3

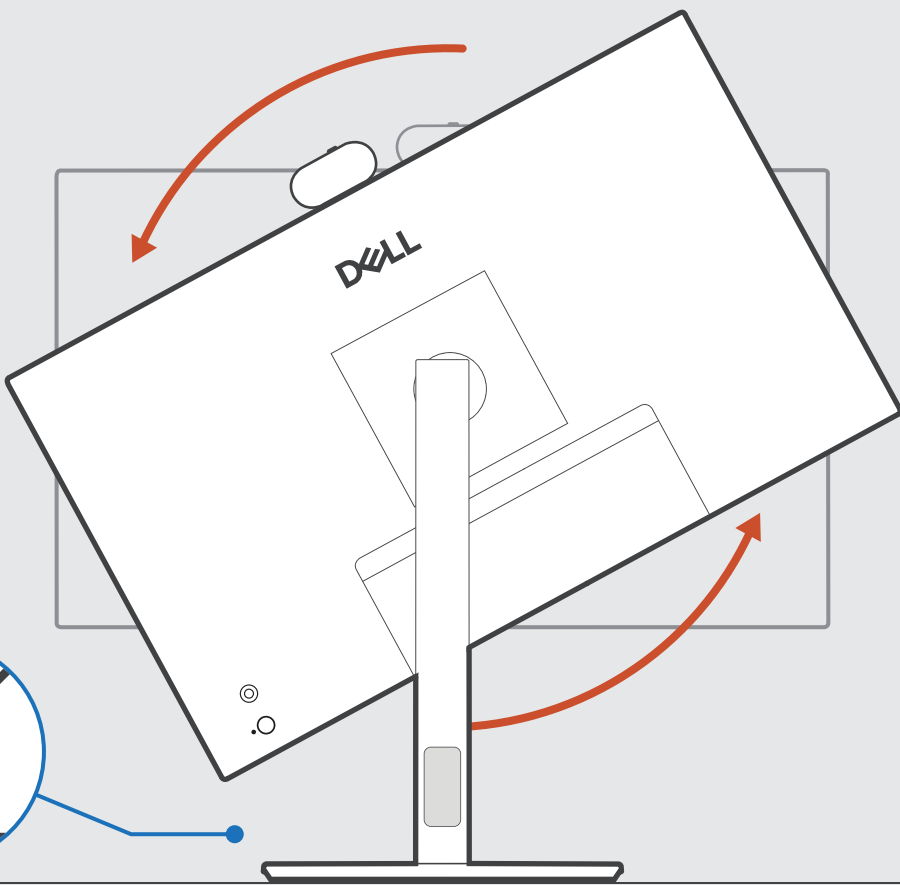


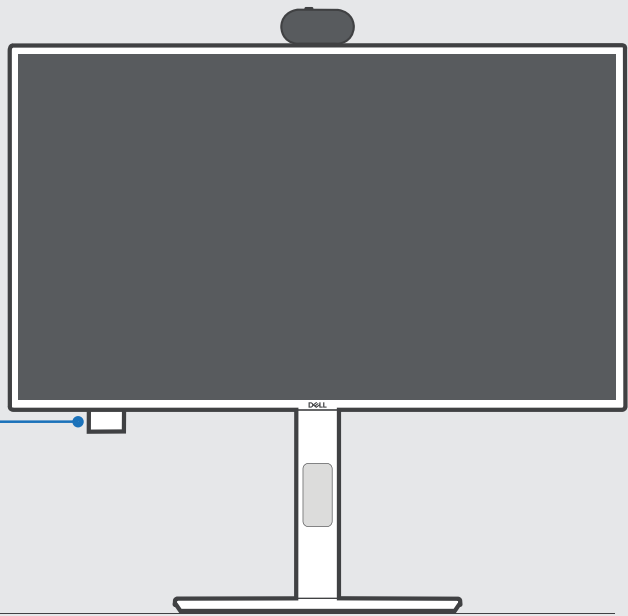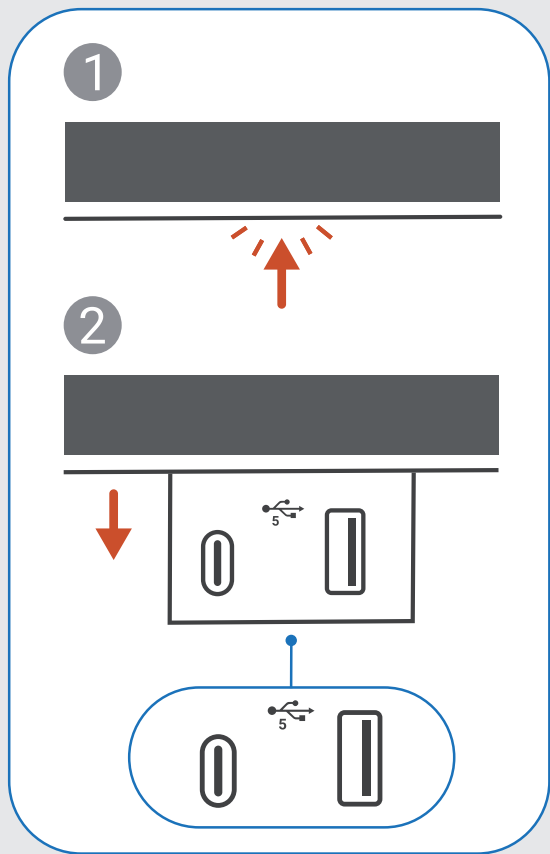

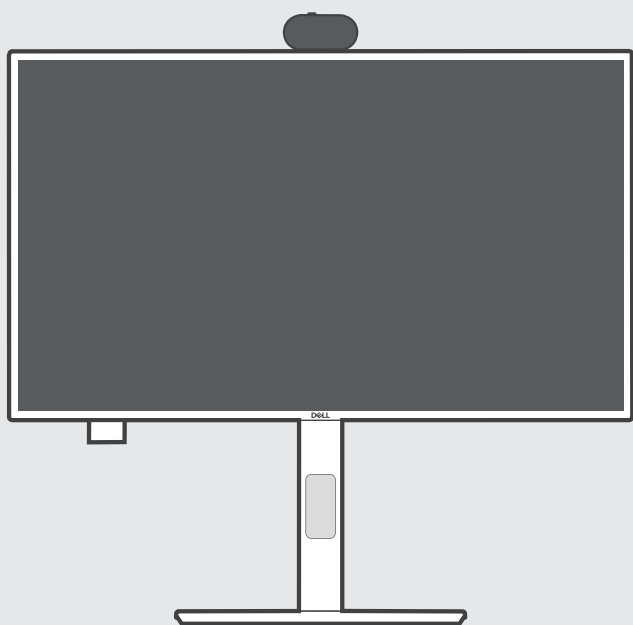


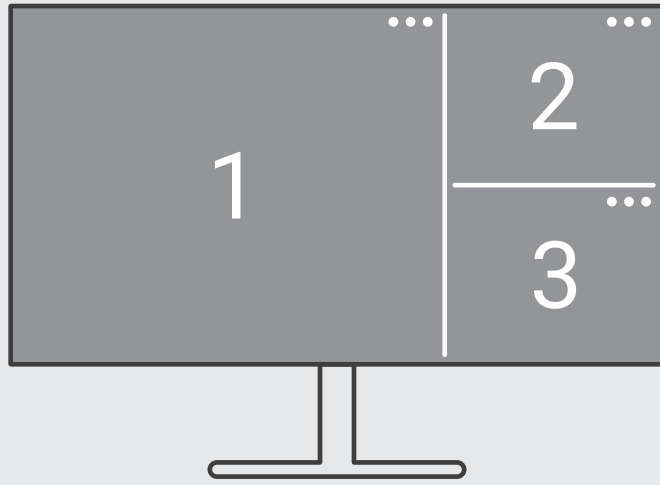


Dell Display and Peripheral Manager
Dell.com/support/ddpm

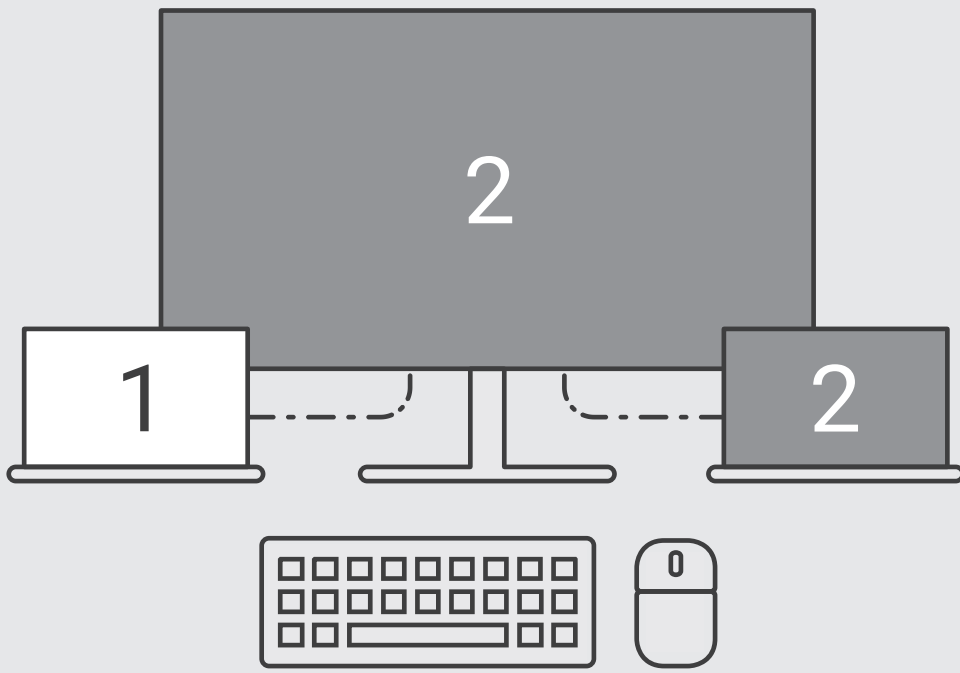

KVM

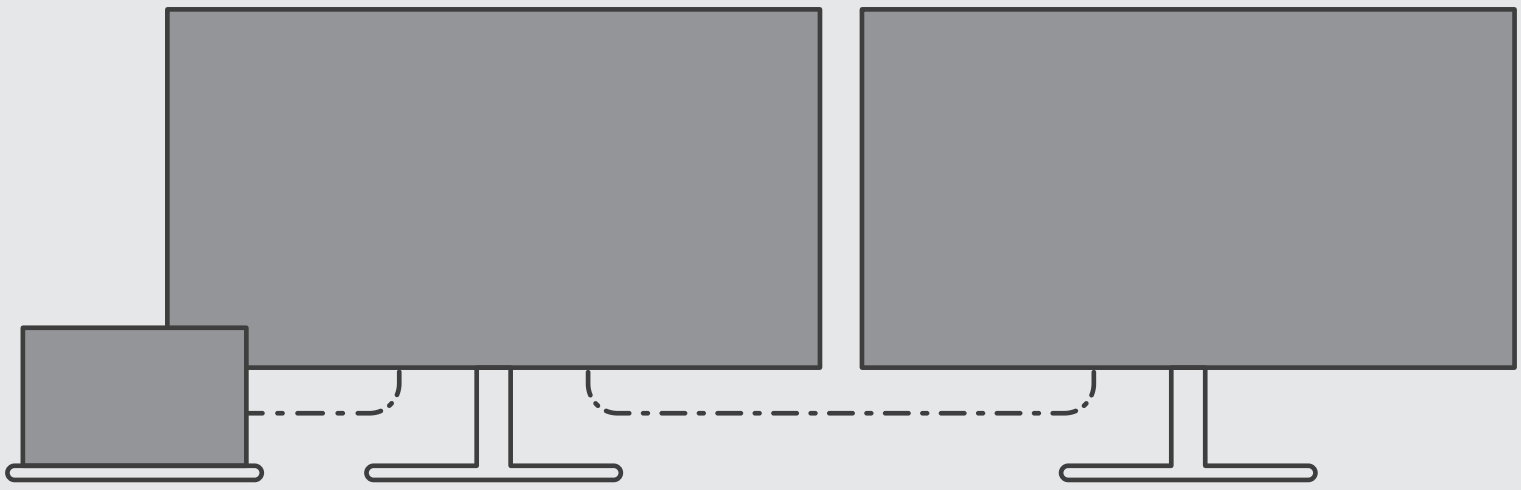

Daisy chain

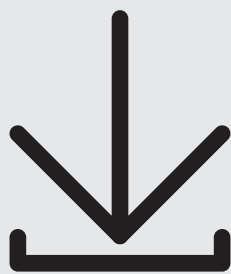

Dell.com/support/P2426HEV