










Dell Pro P 24 USB-C Hub Webcam Monitor

P2426HEV

Quick Start Guide



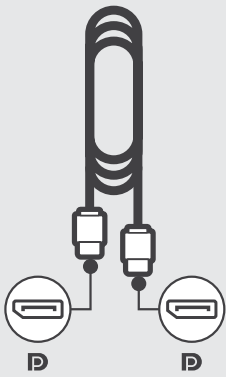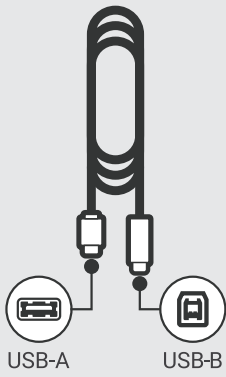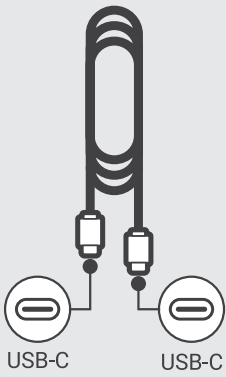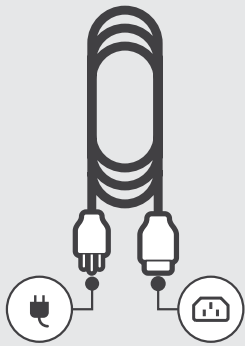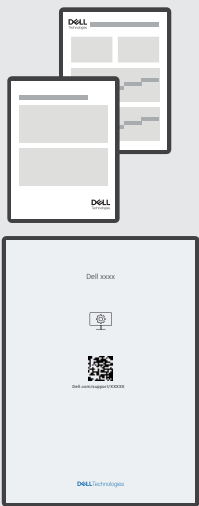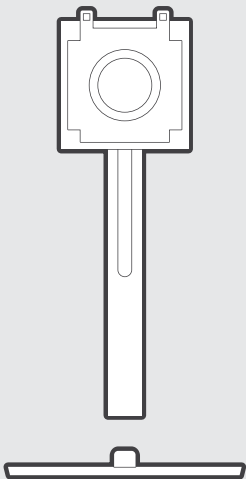


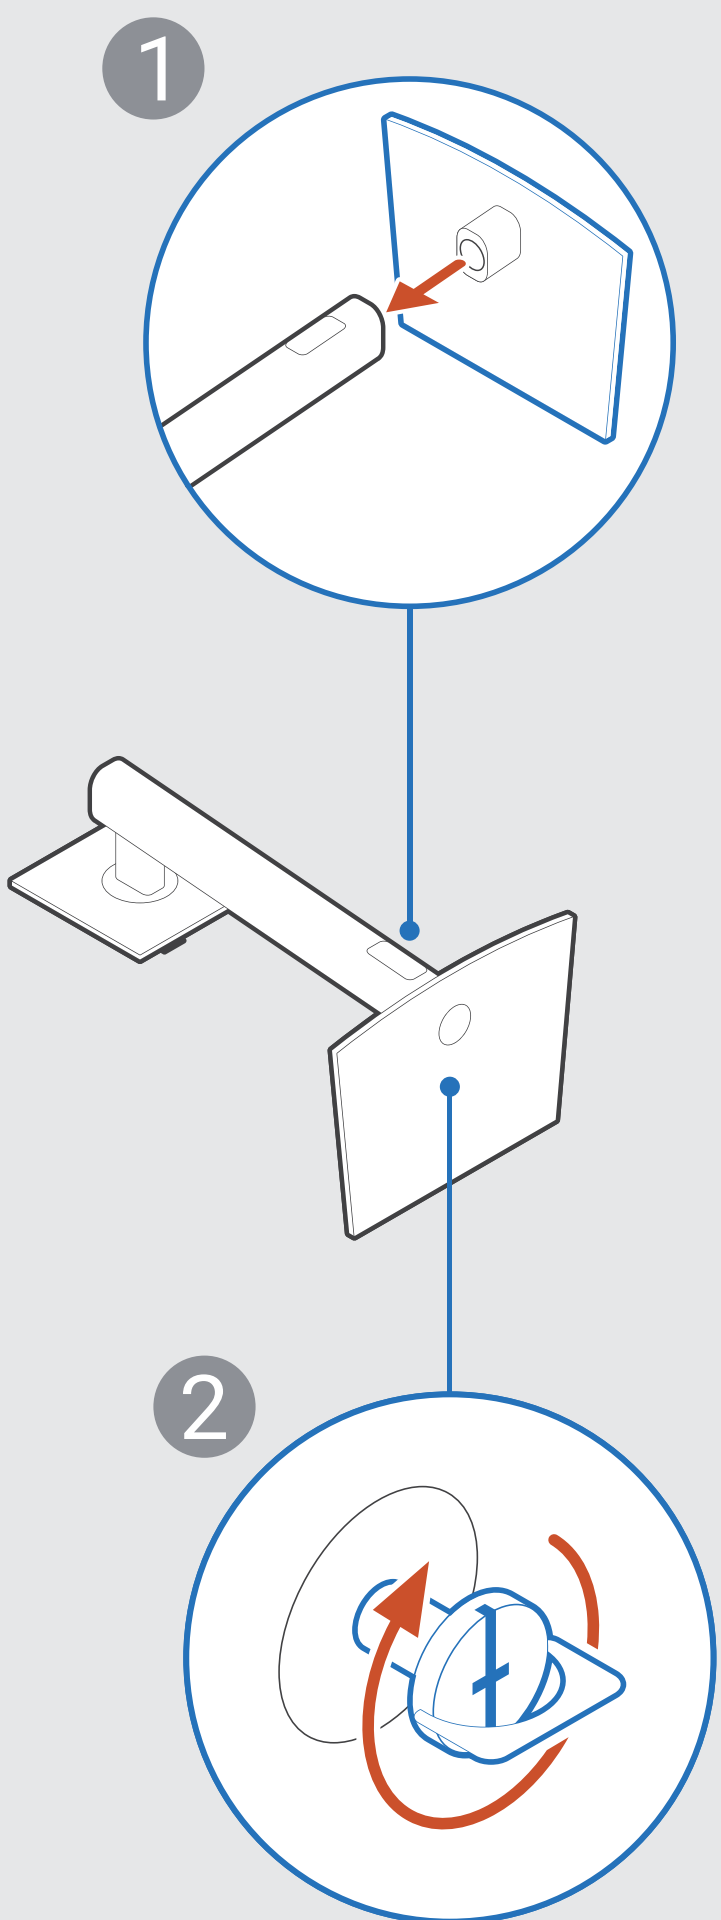


2




3


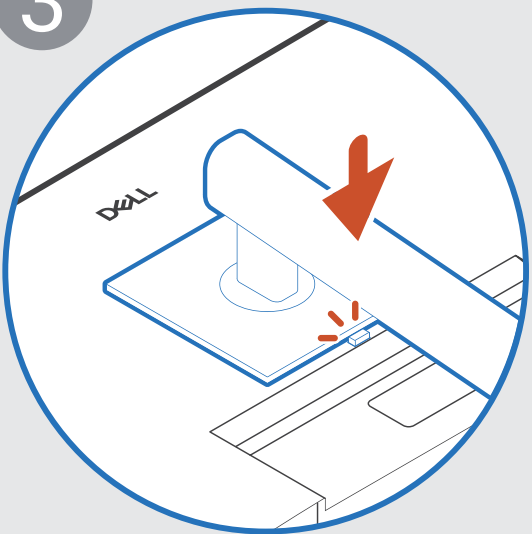



4

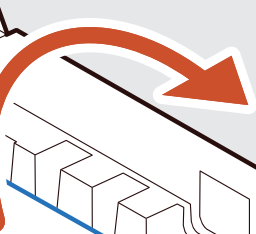


1

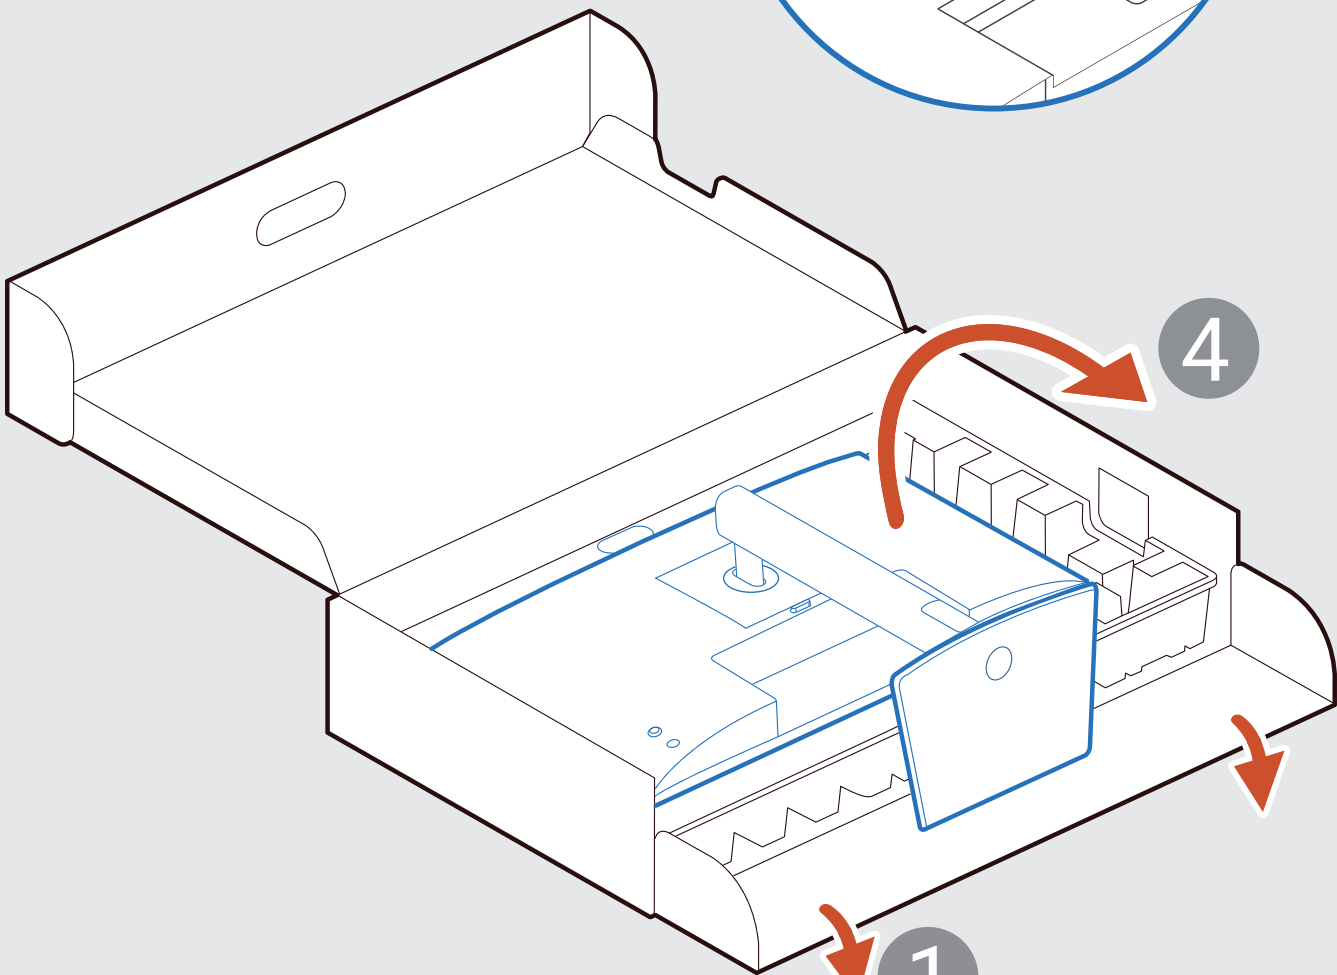


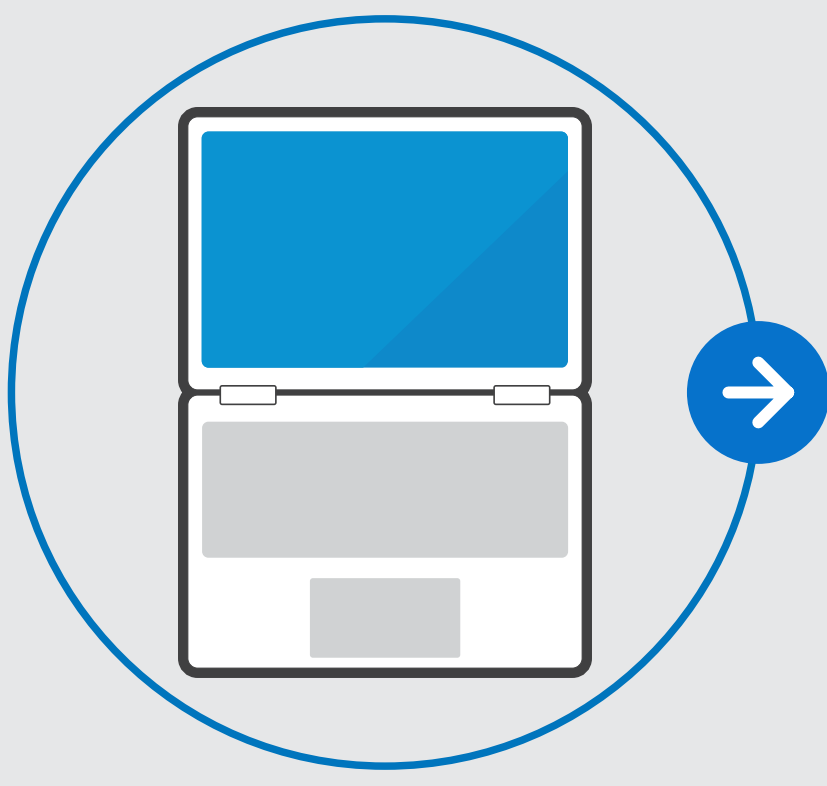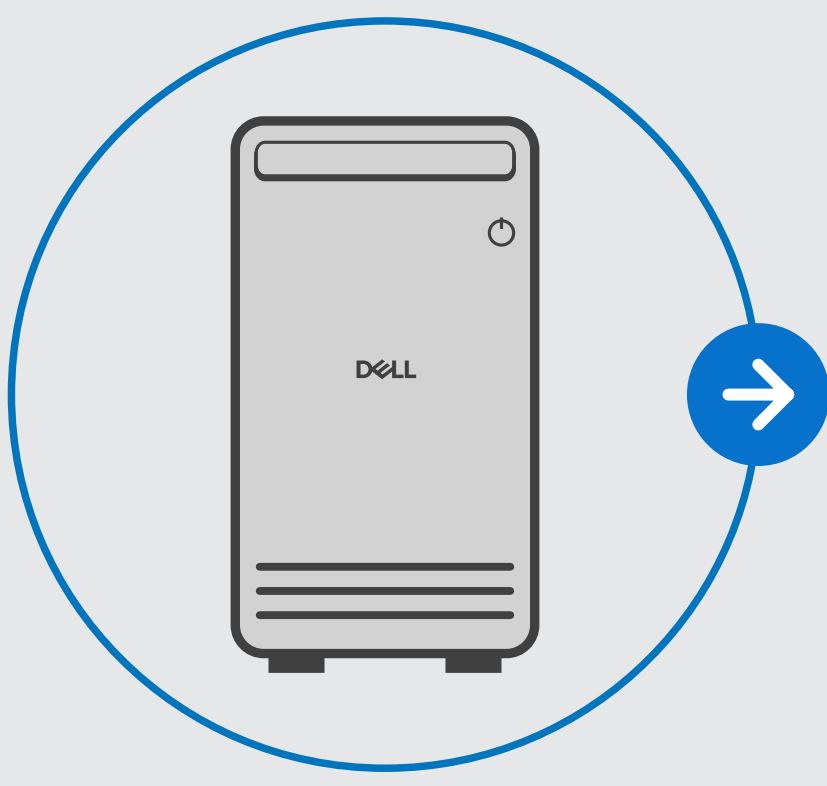

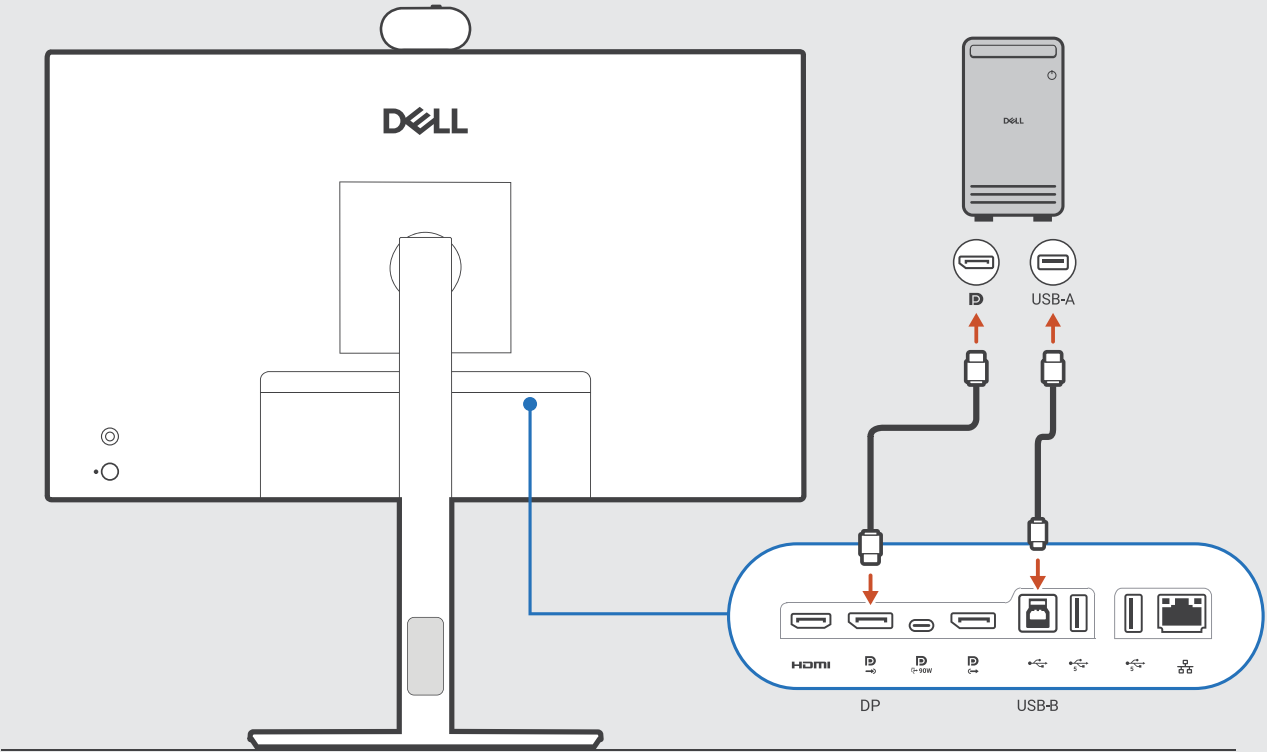


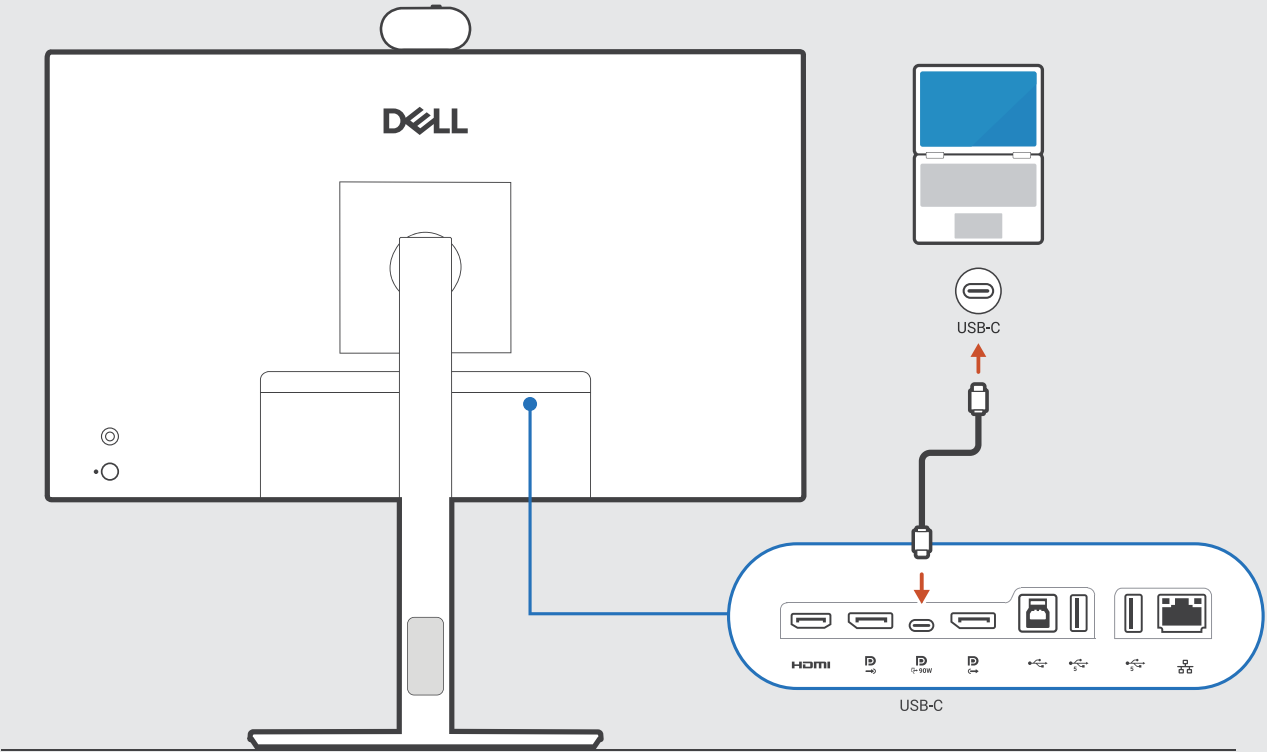




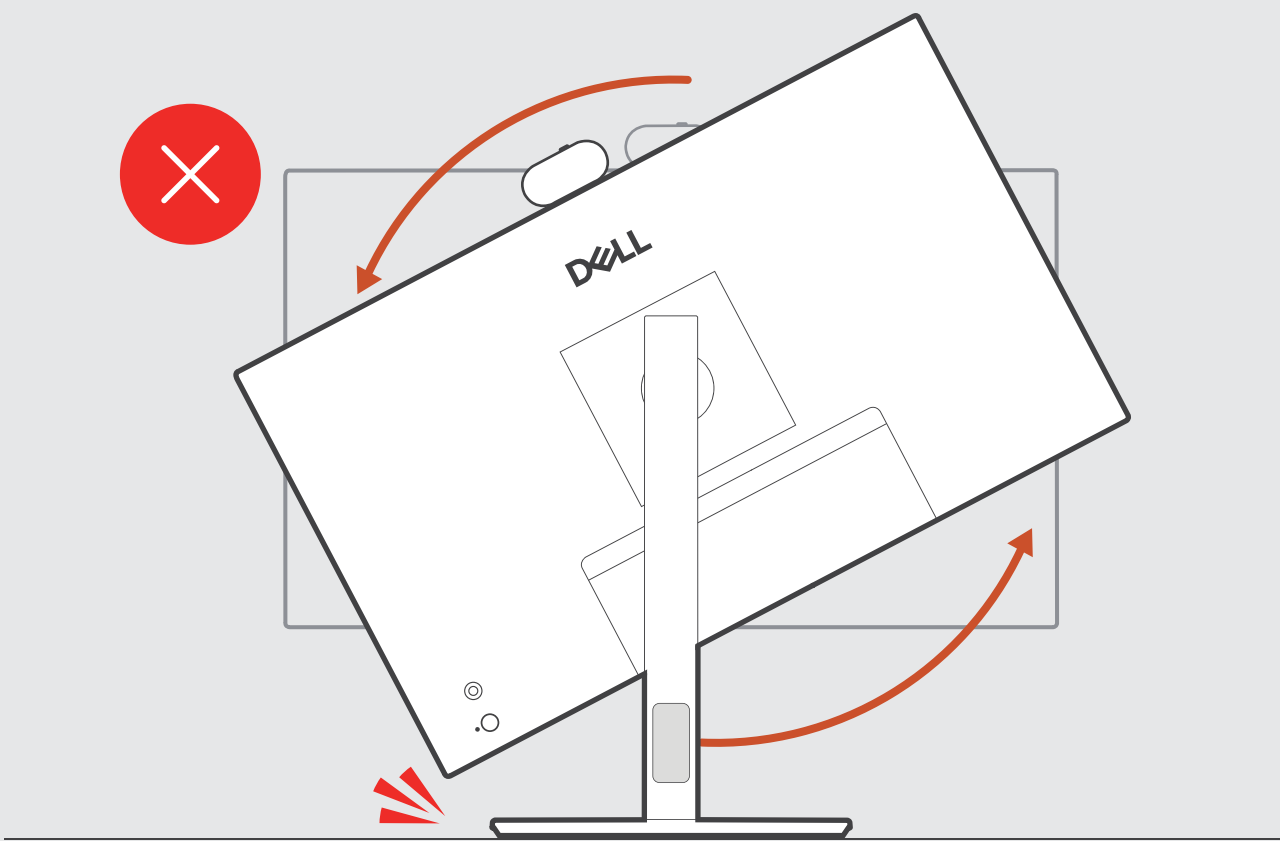


1


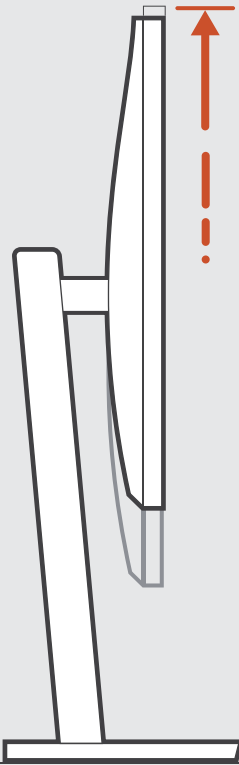



2

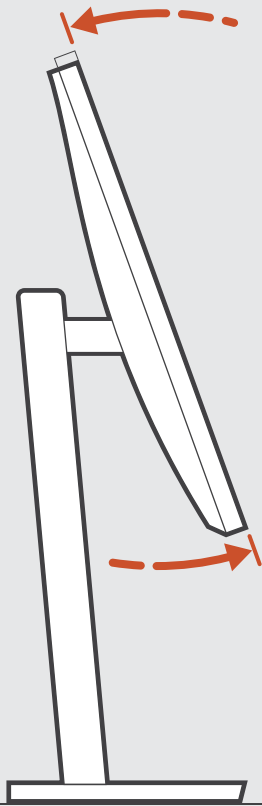


3

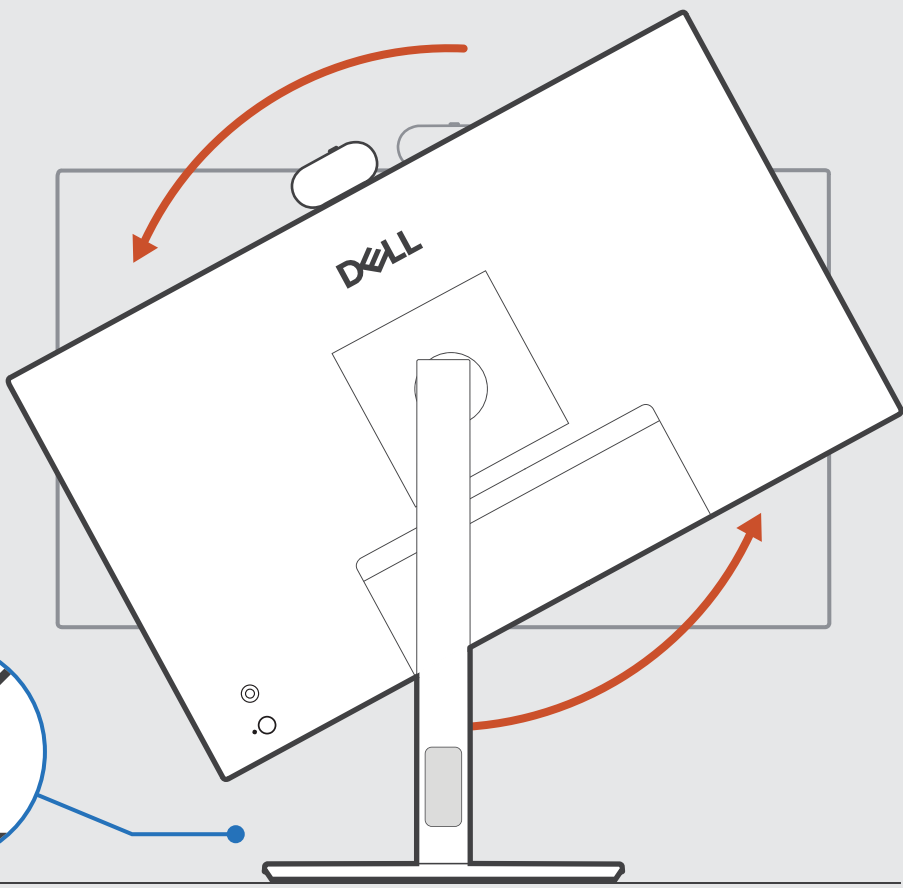


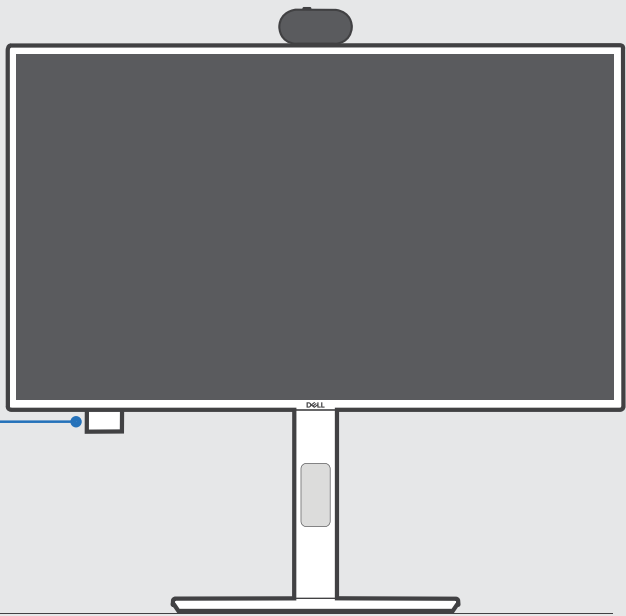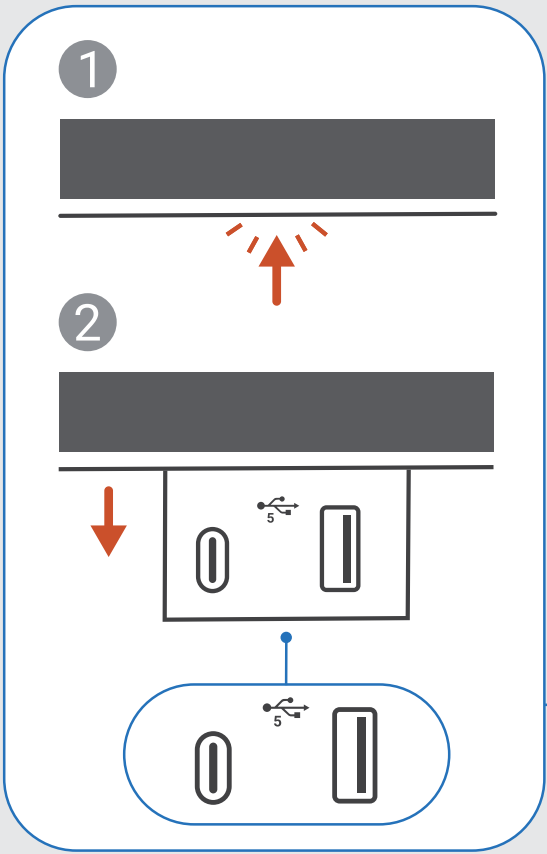

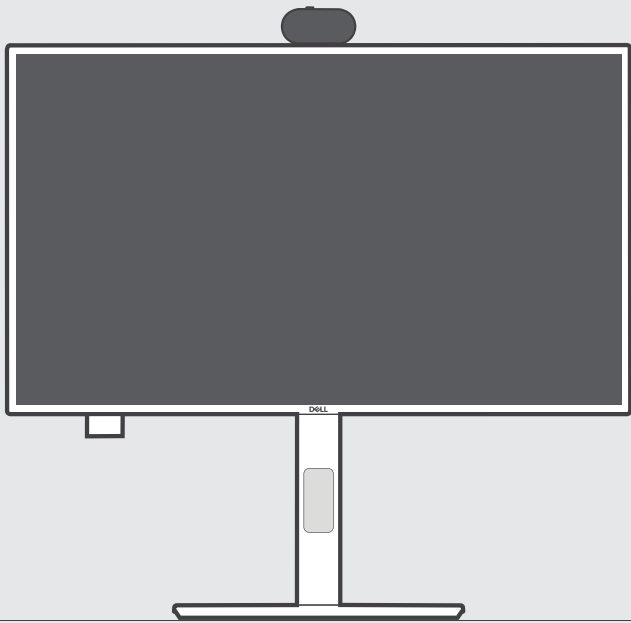

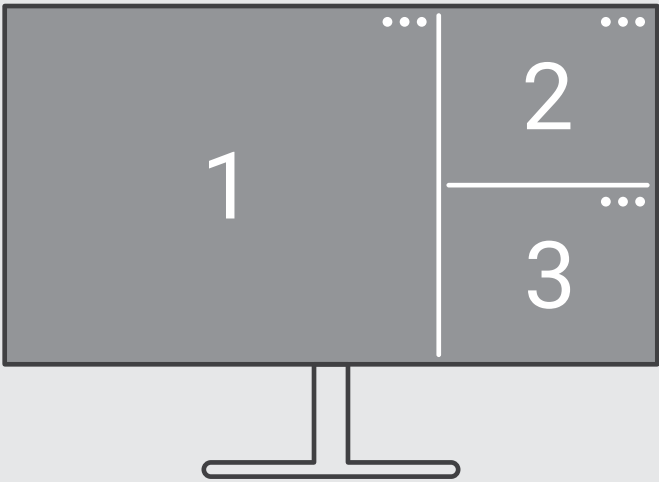


Dell Display and Peripheral Manager
Dell.com/support/ddpm

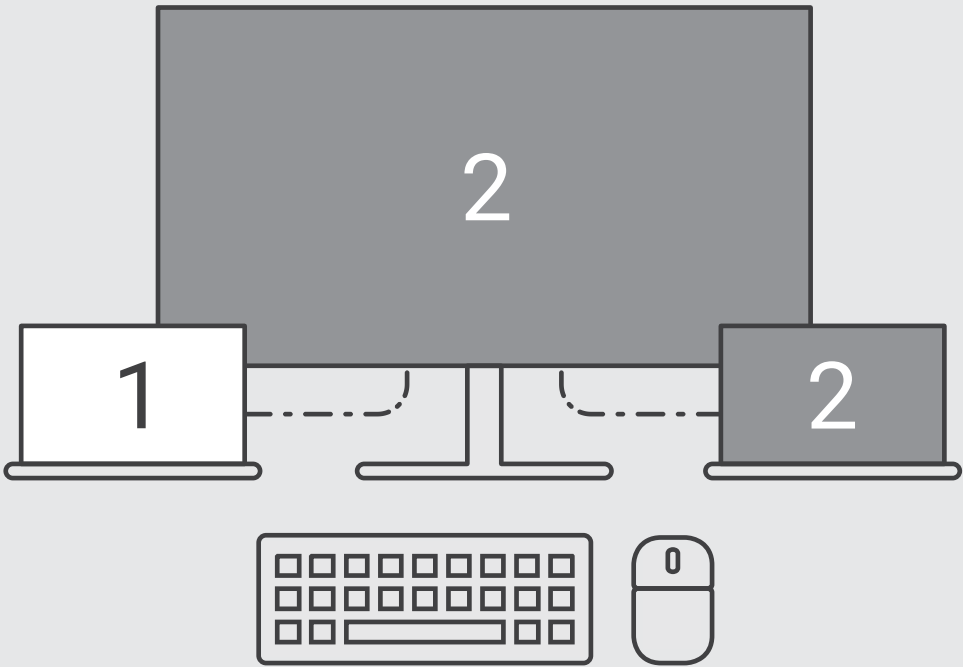

KVM



Daisy Chain

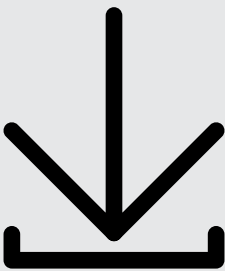

Dell.com/support/P2426HEV