










Dell Pro P 34 USB-C Hub Webcam-monitor




P3426WEV



Snelstartgids




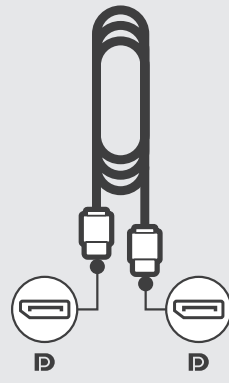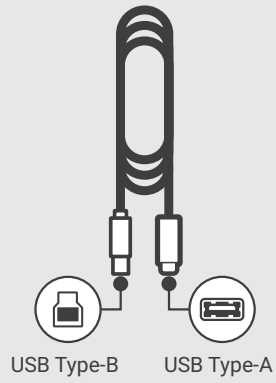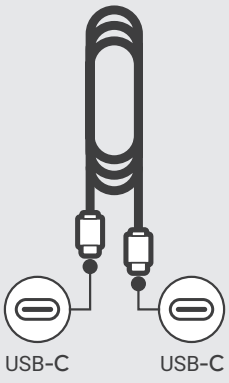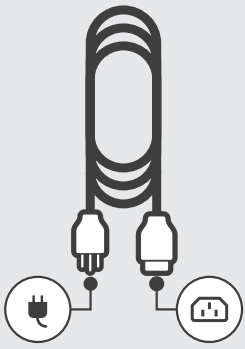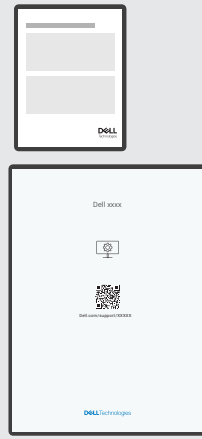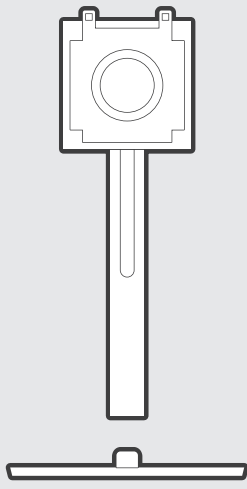


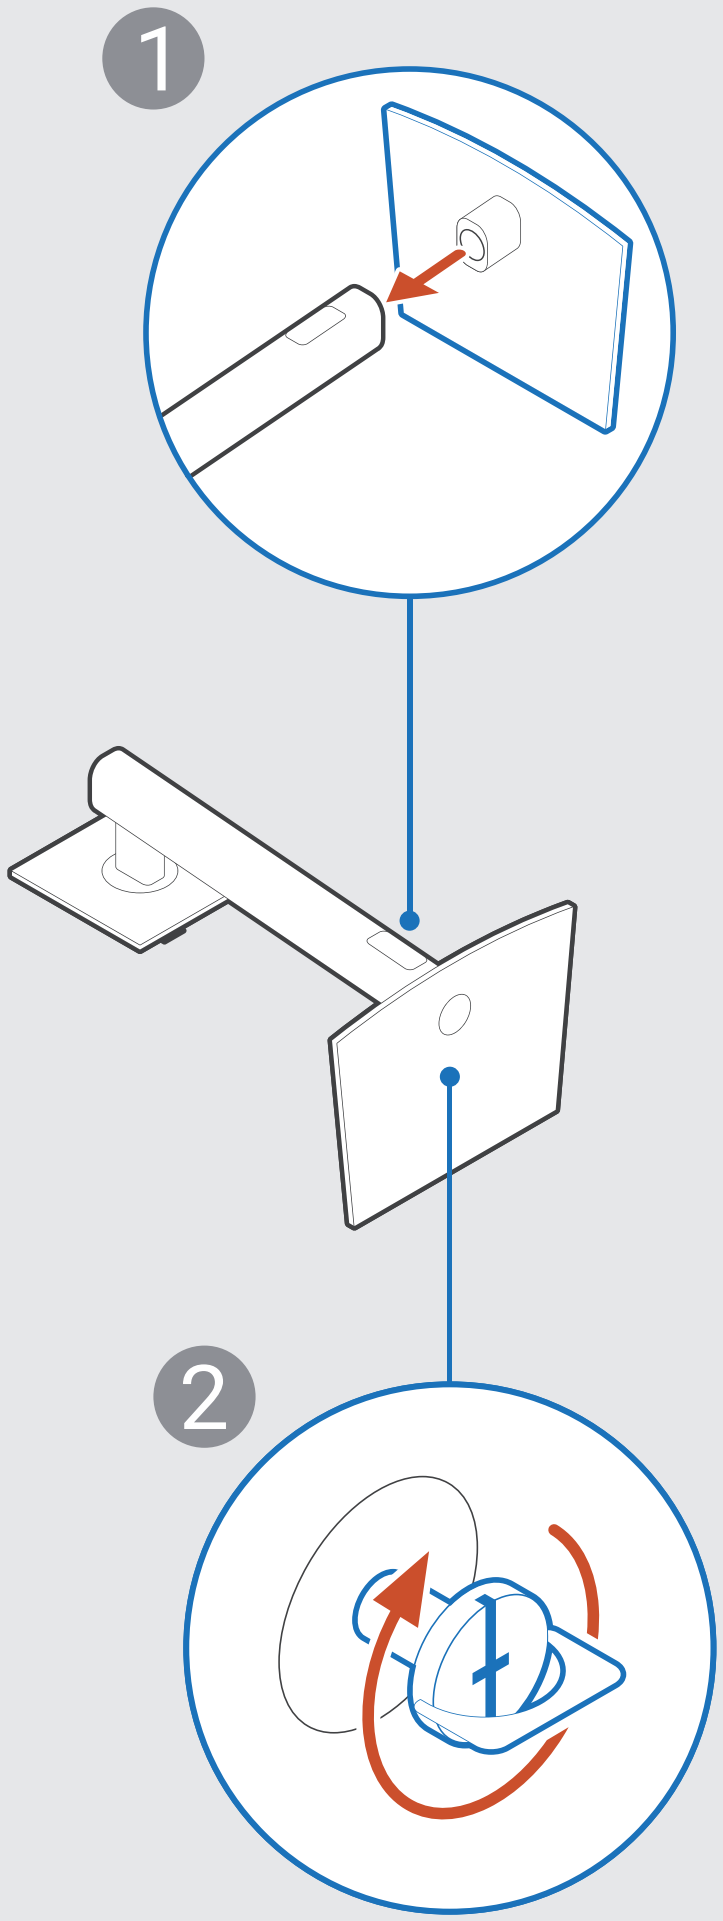


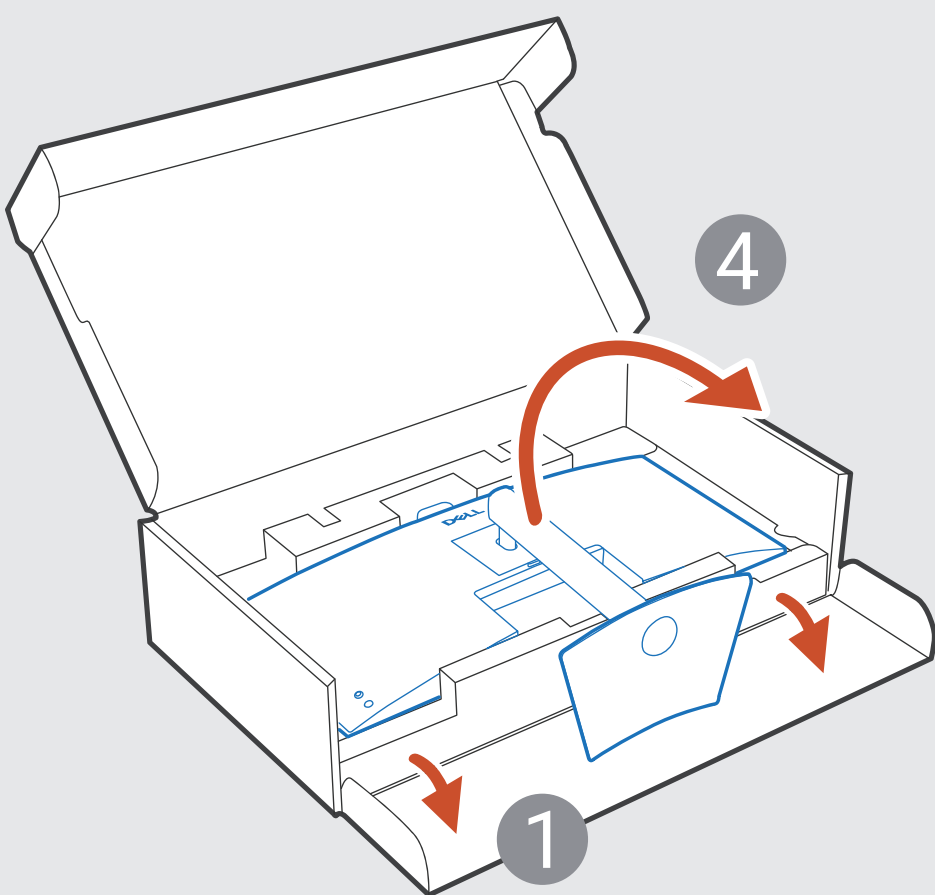
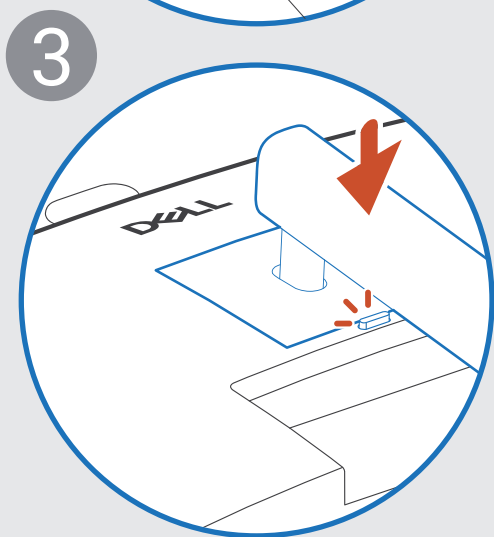
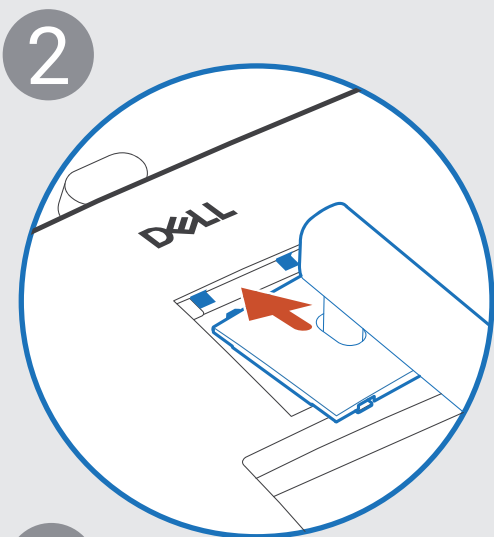



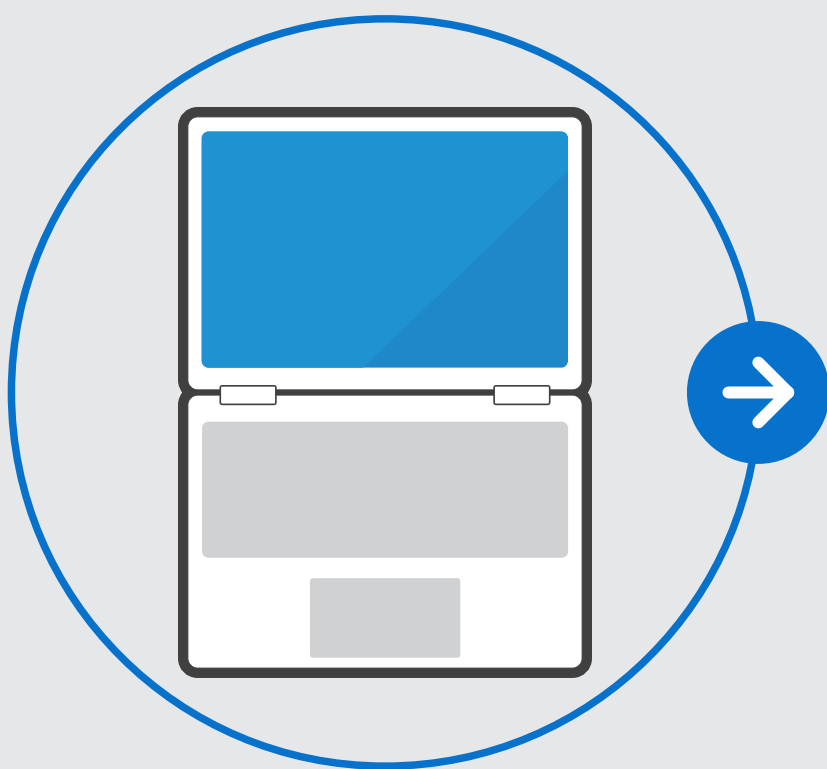
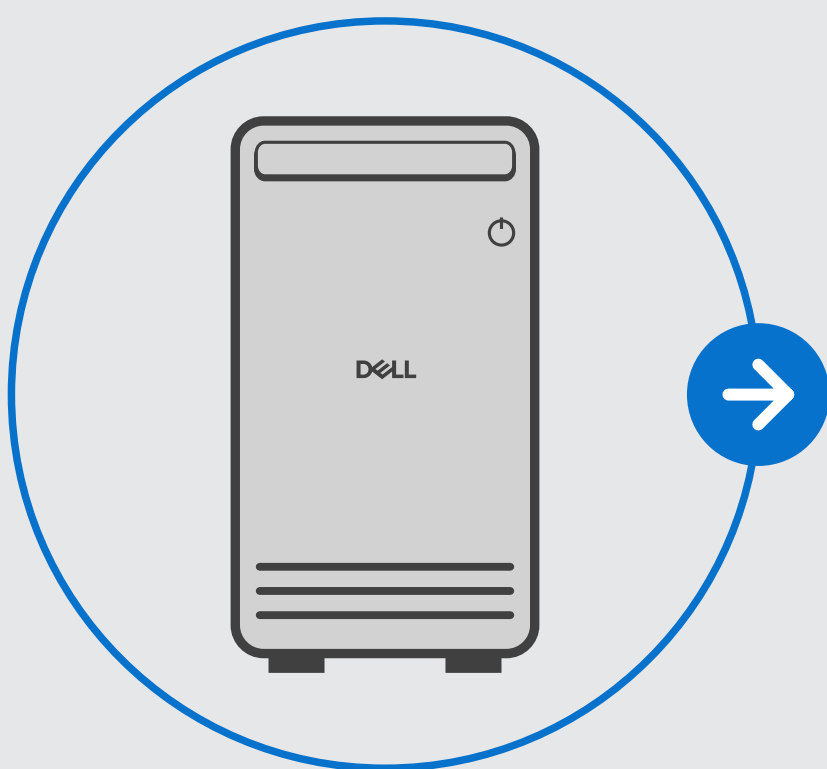


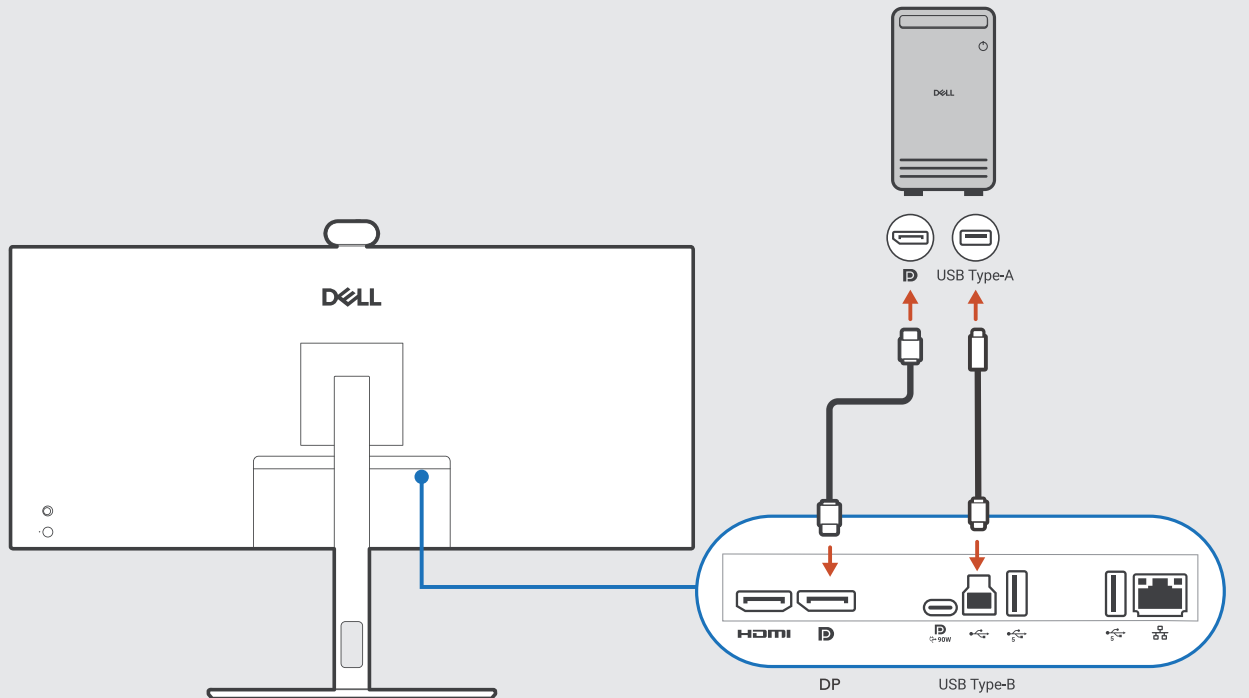


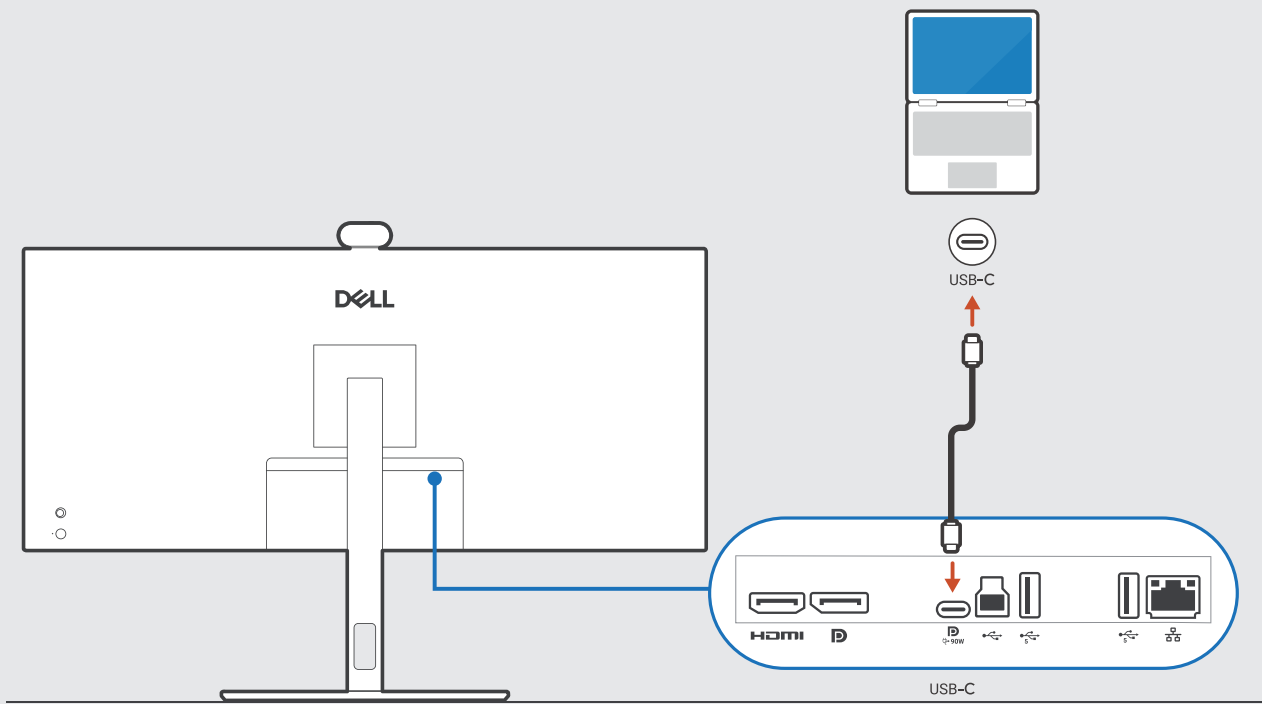


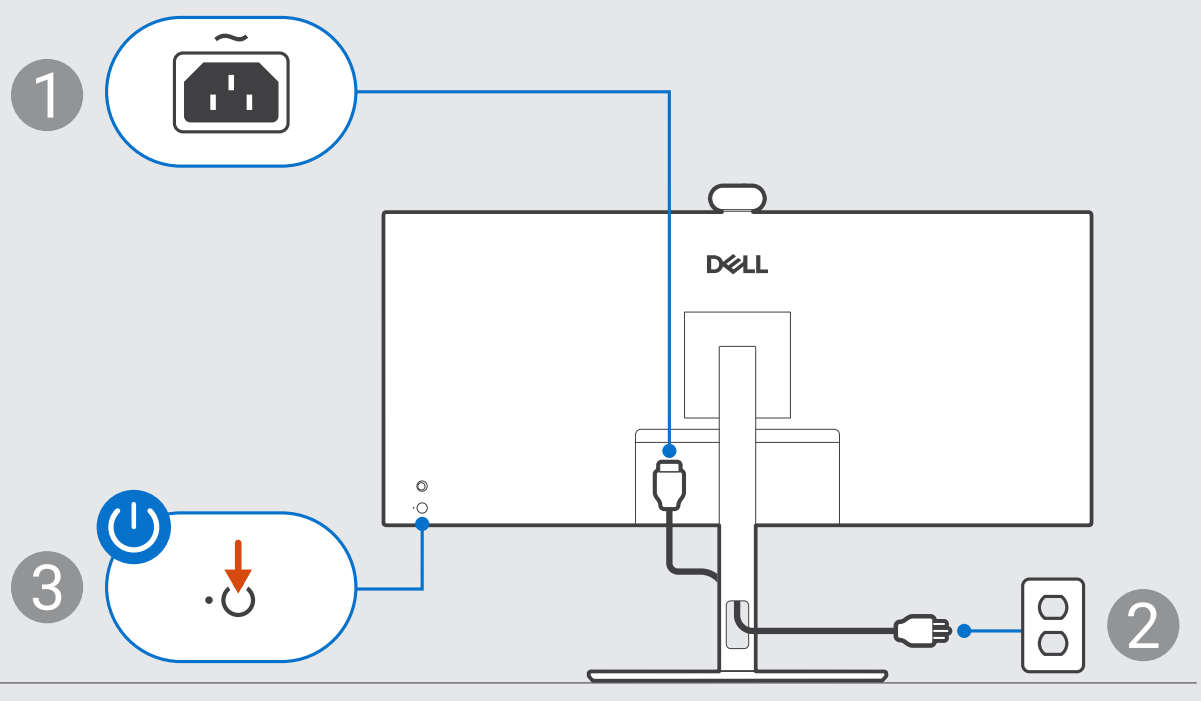


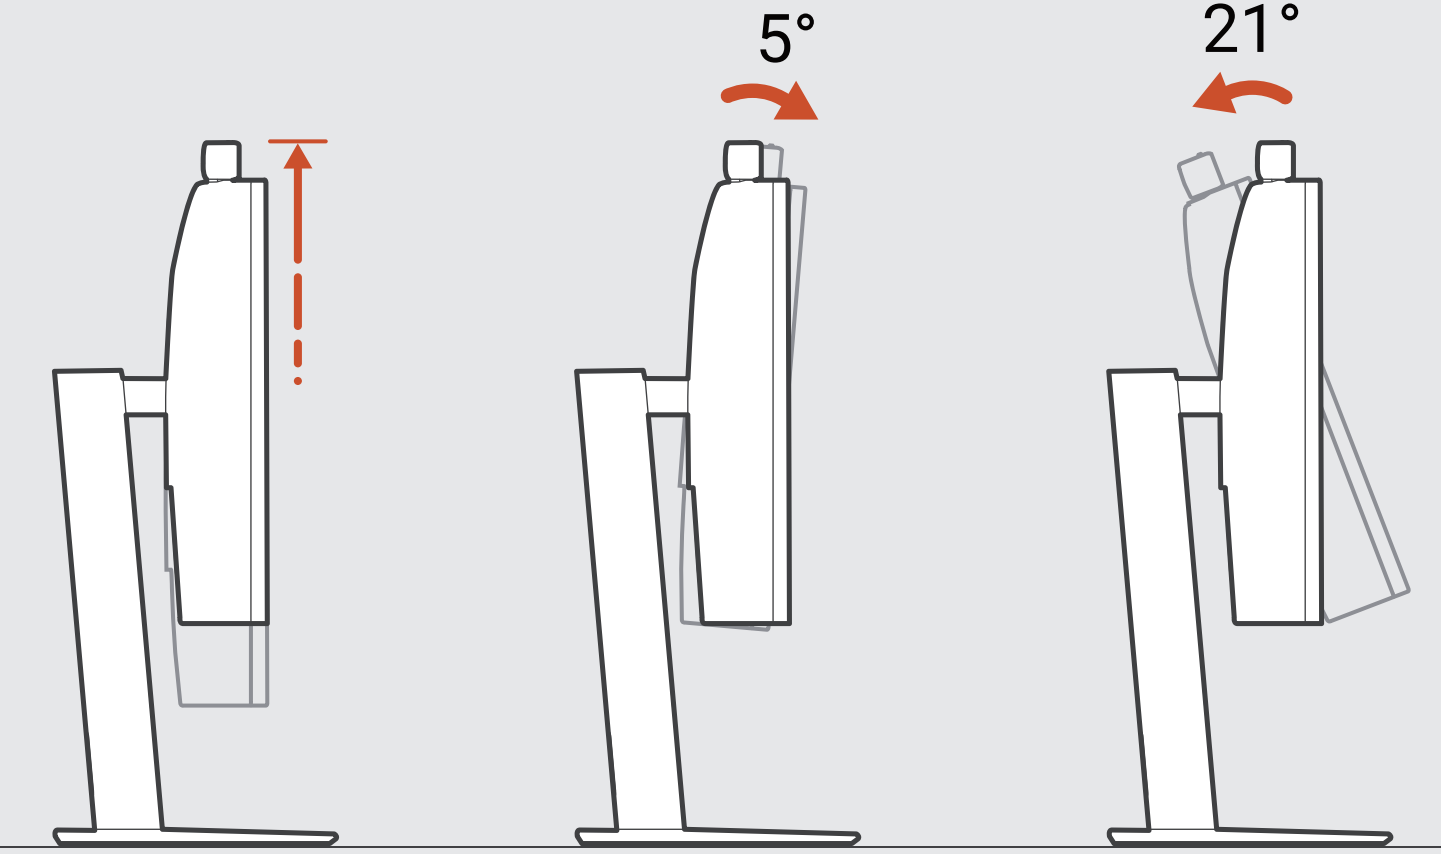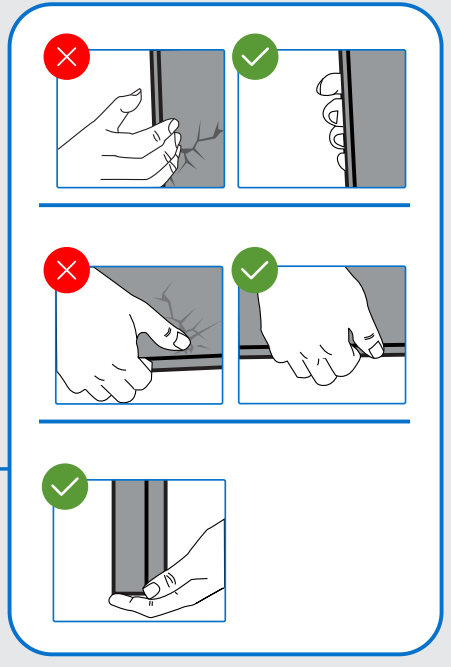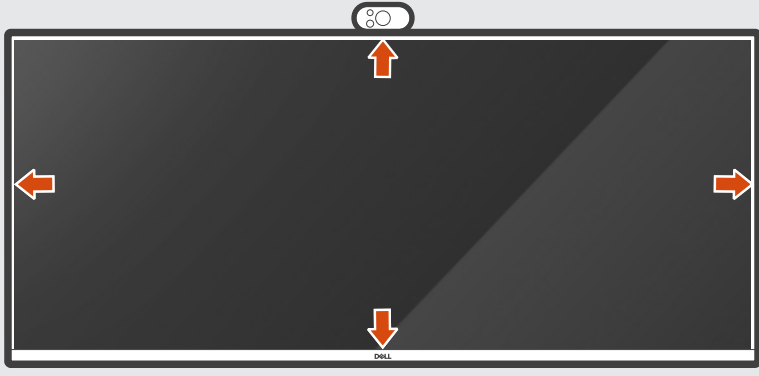

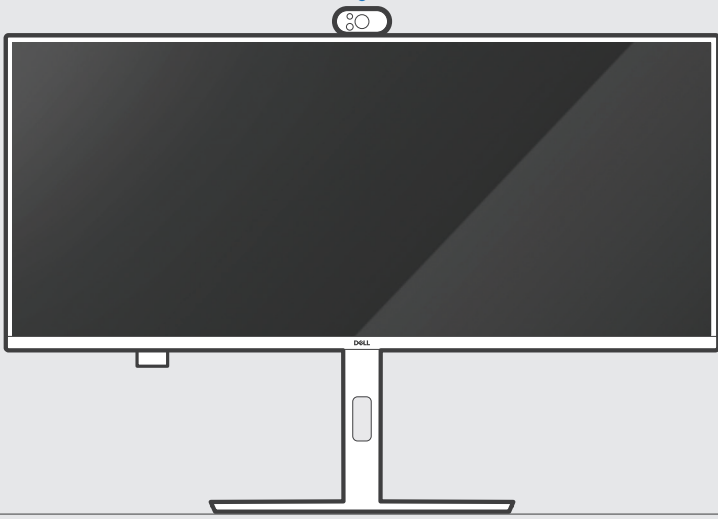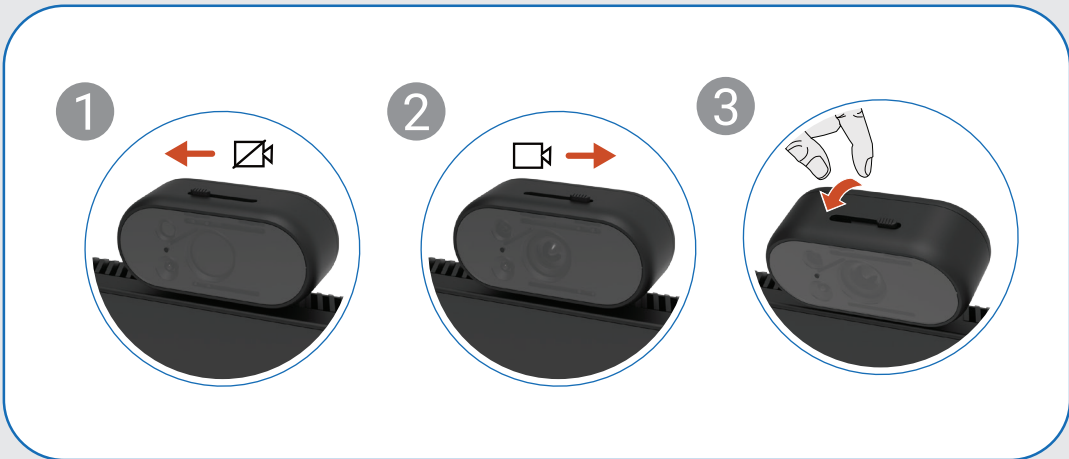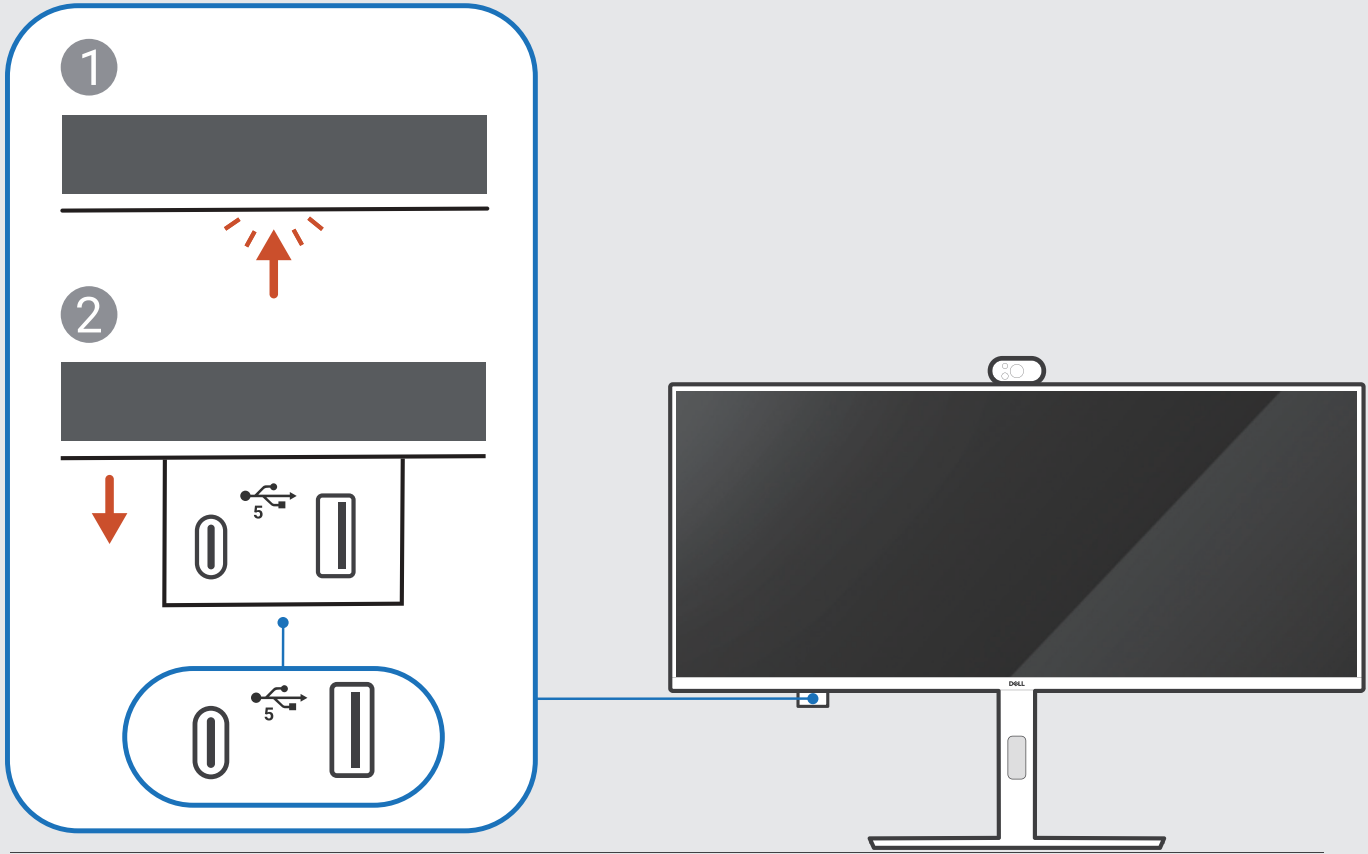

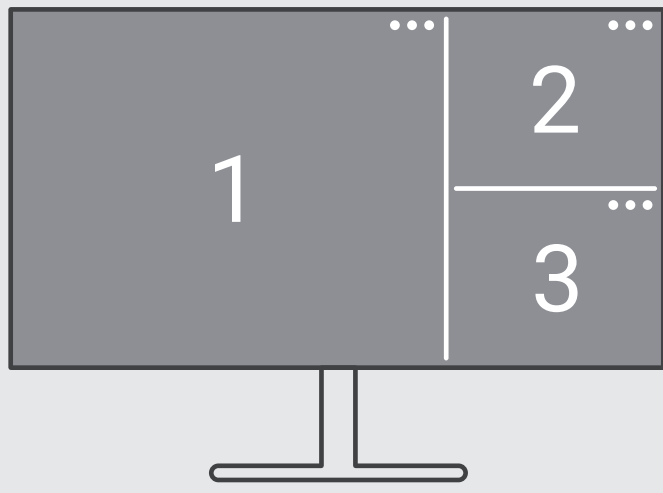

Dell Display and Peripheral Manager
Dell.com/support/ddpm

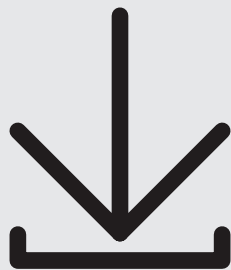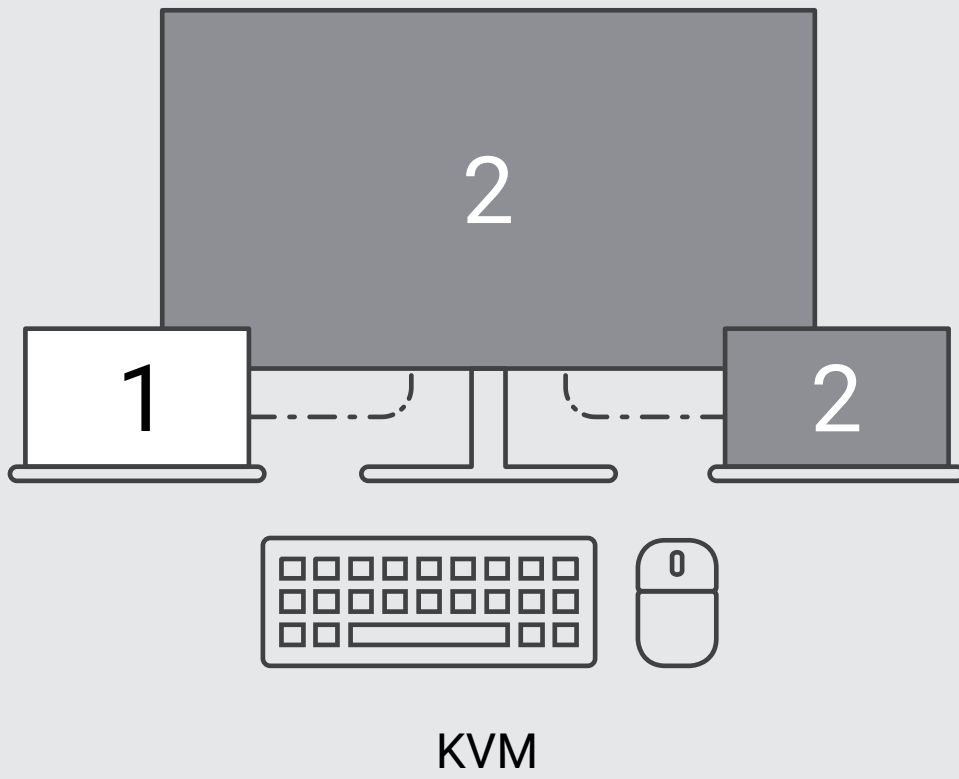

Dell.com/support/P3426WEV