









Dell Pro P 27 USB-C Hub-conferentiemonitor




P2726DEB



Snelstartgids

 


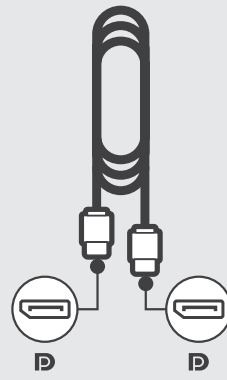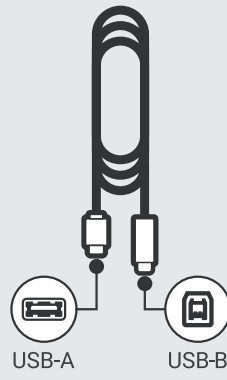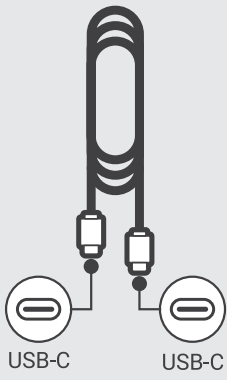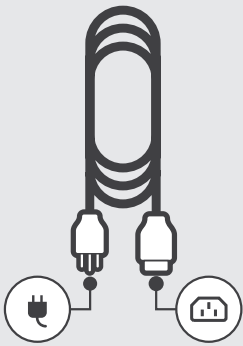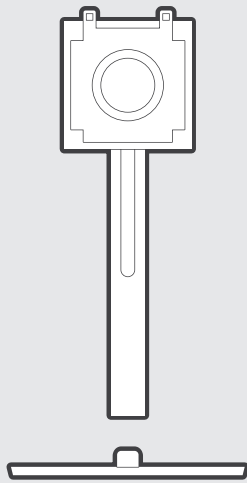


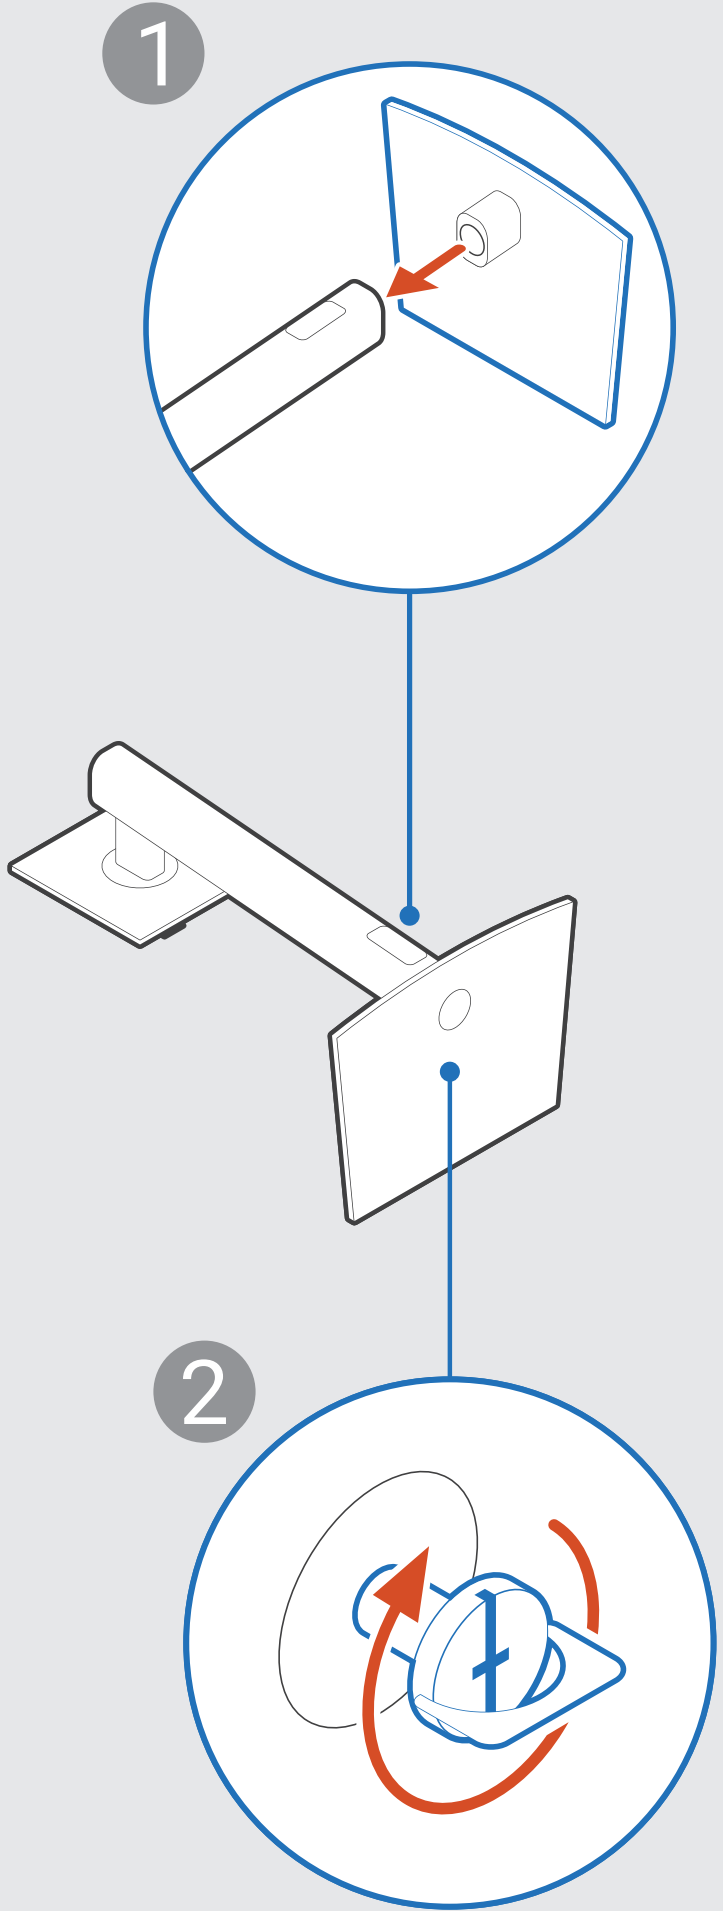


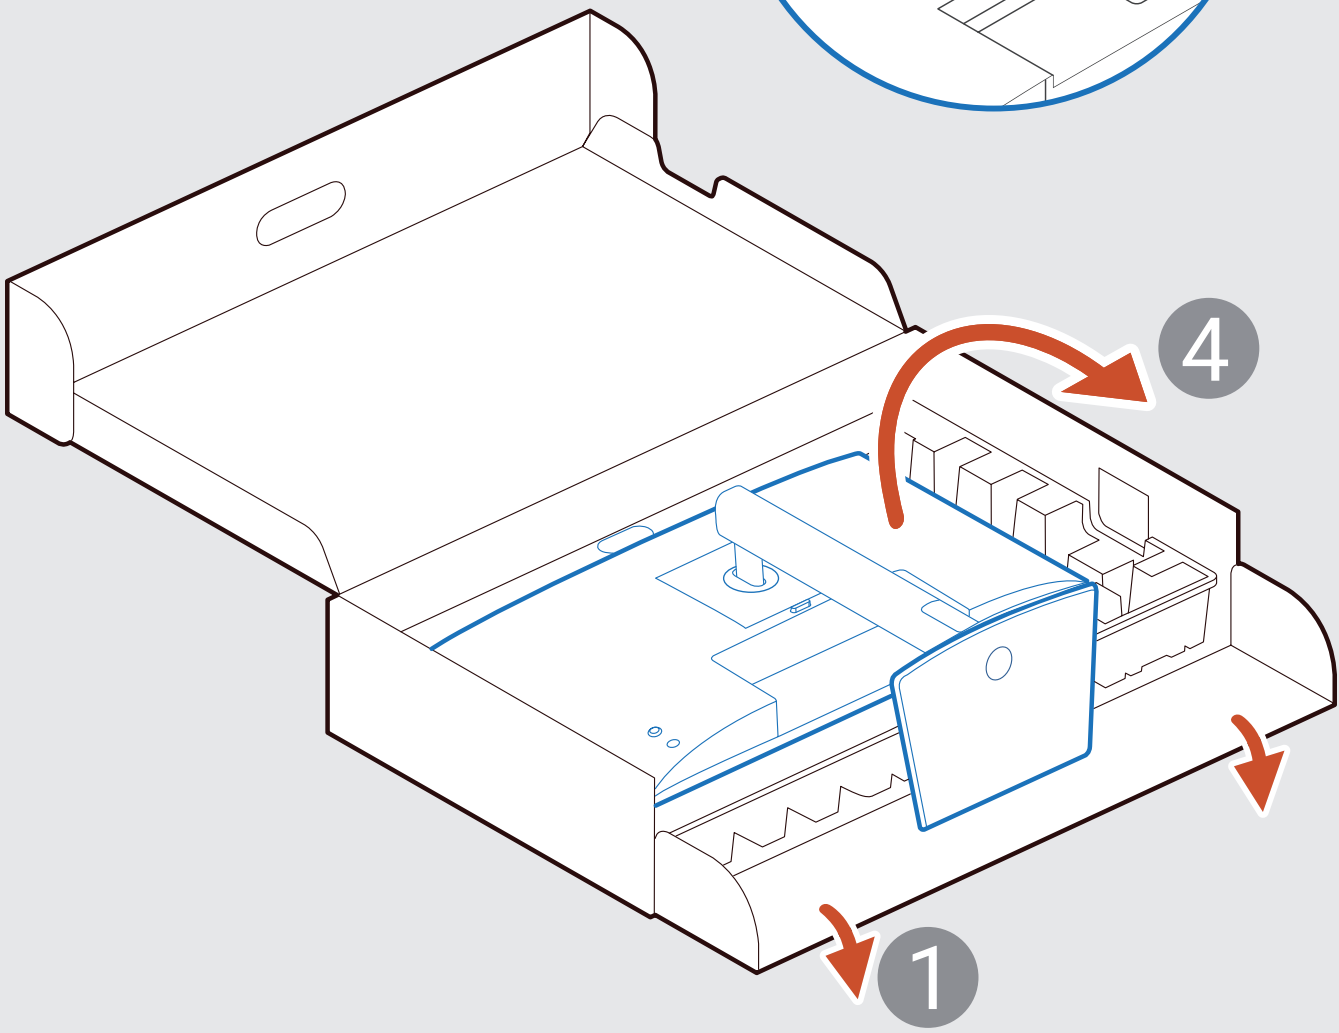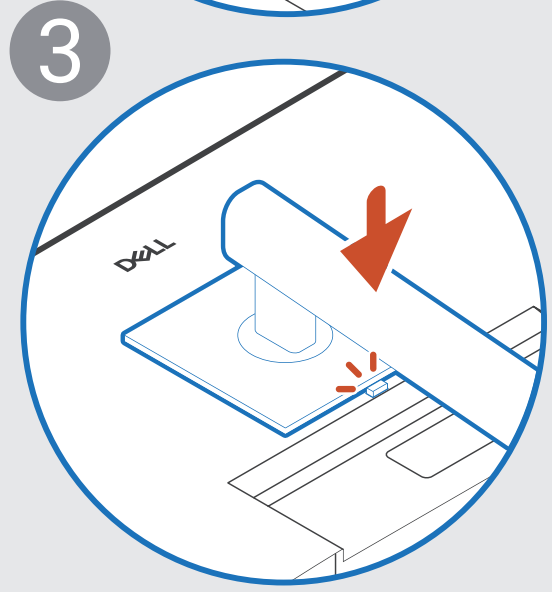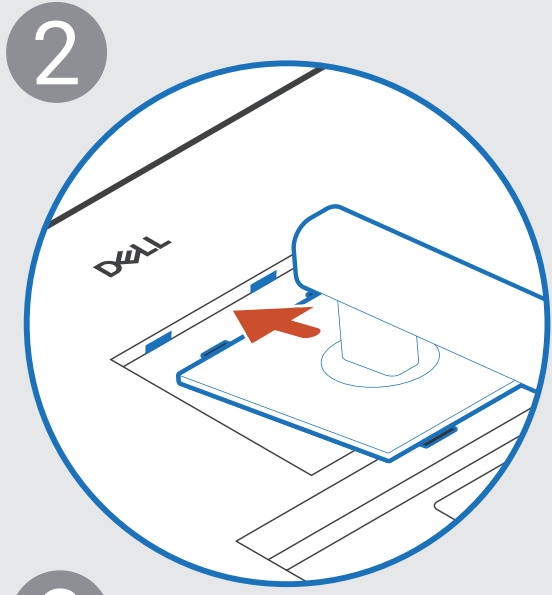


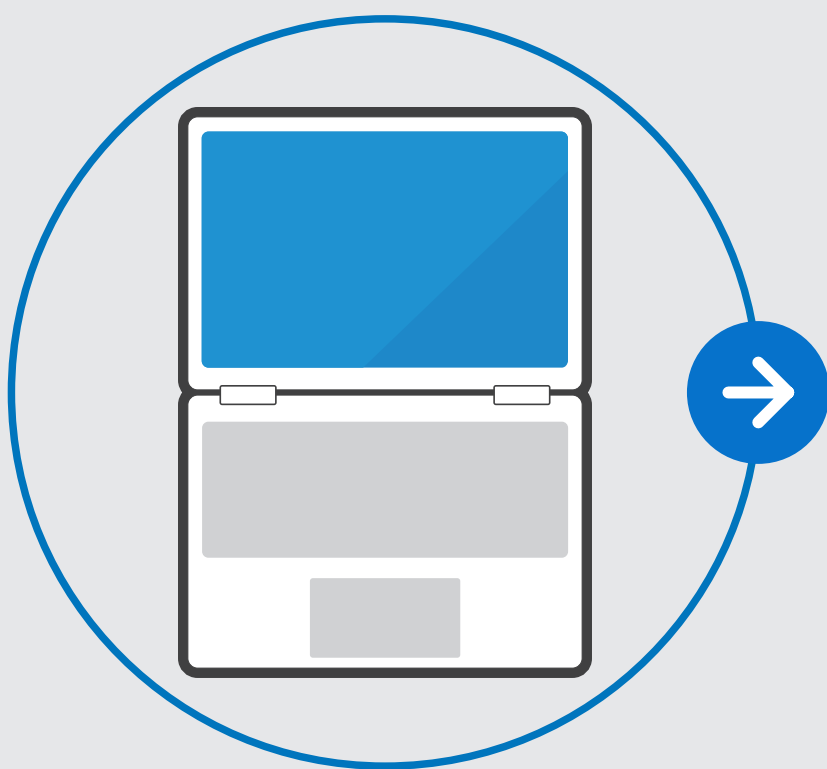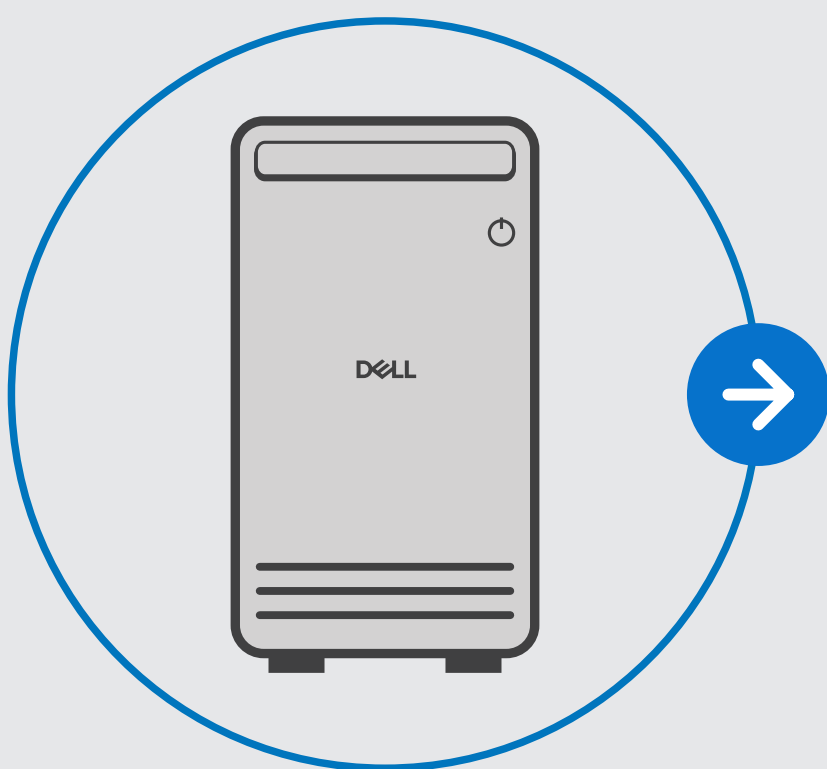

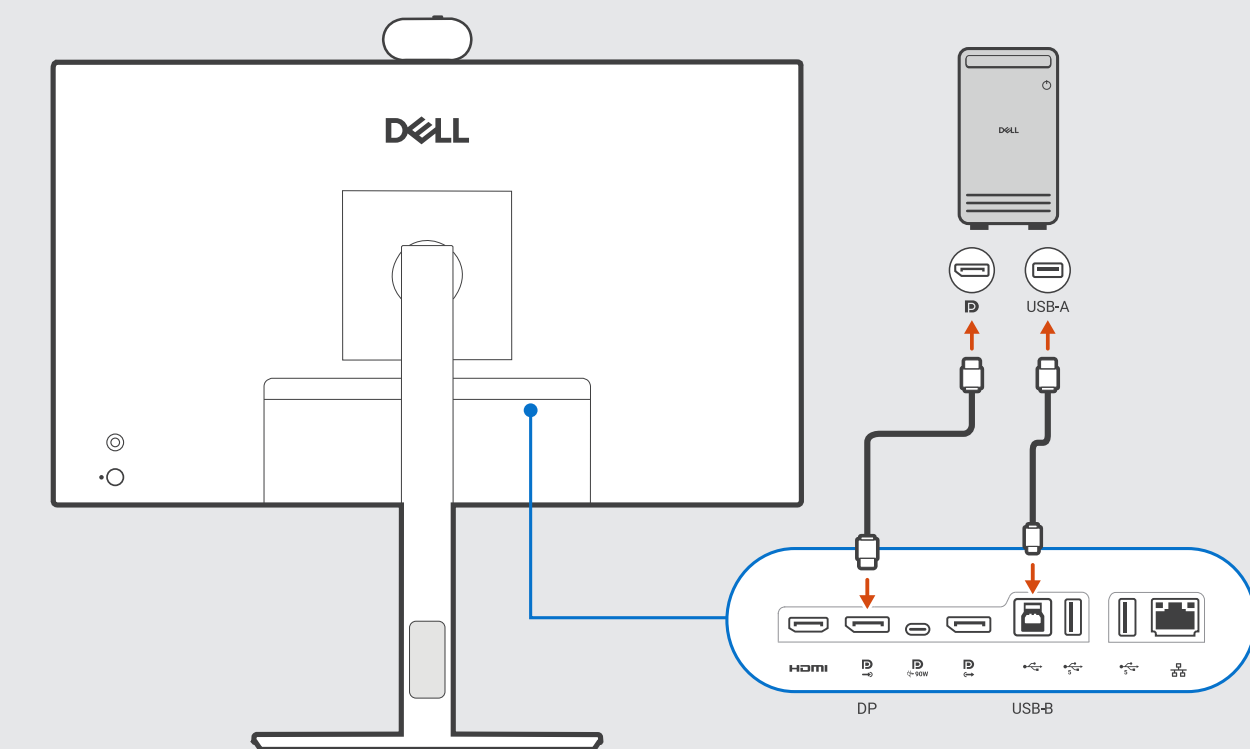


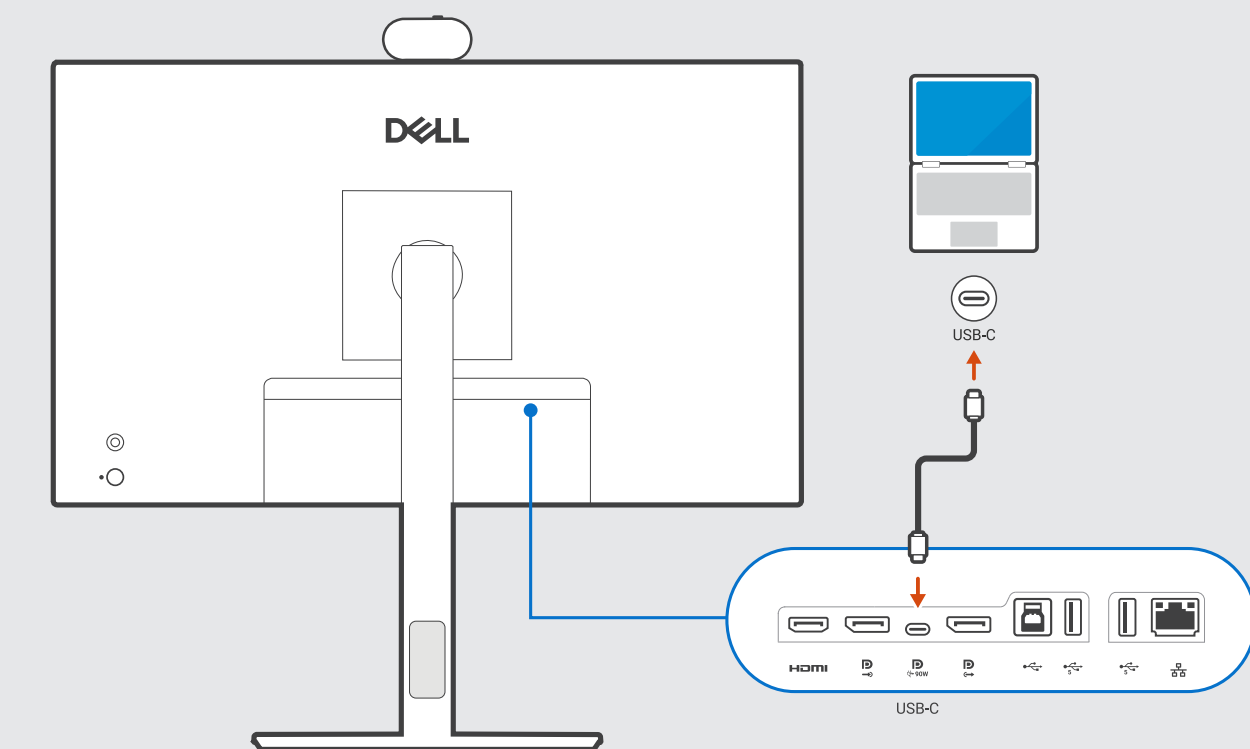

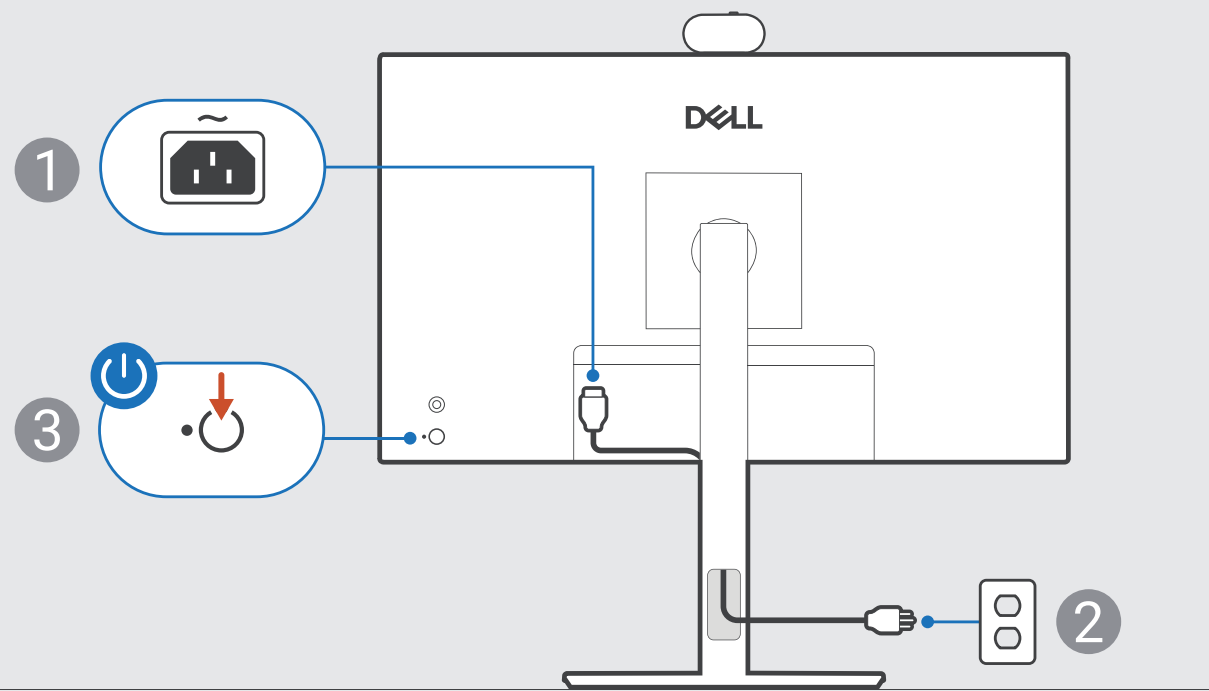


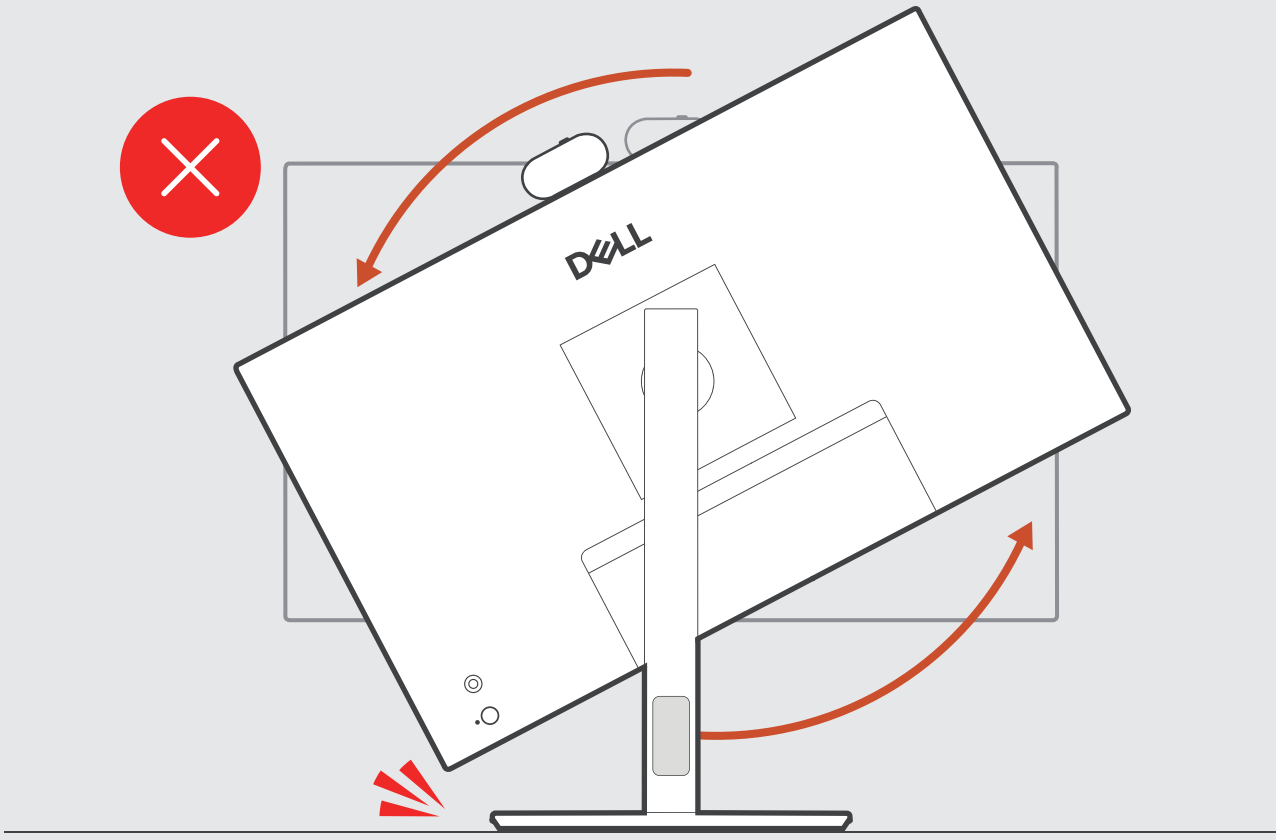



1


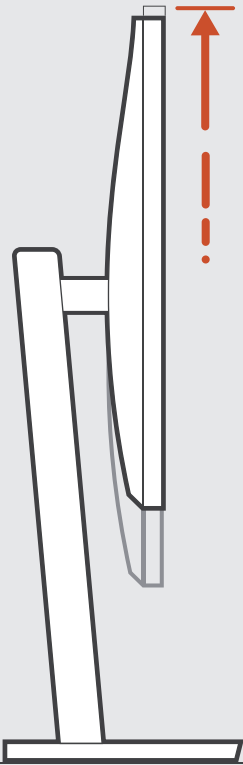 




2

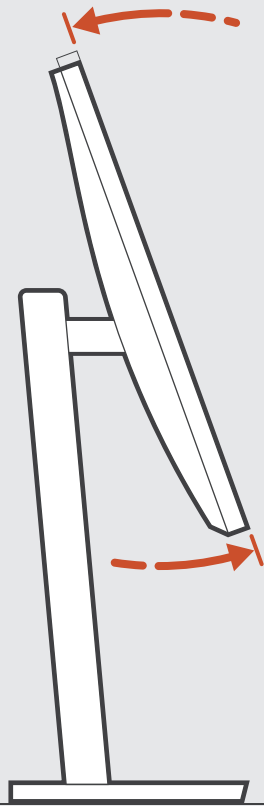 


3

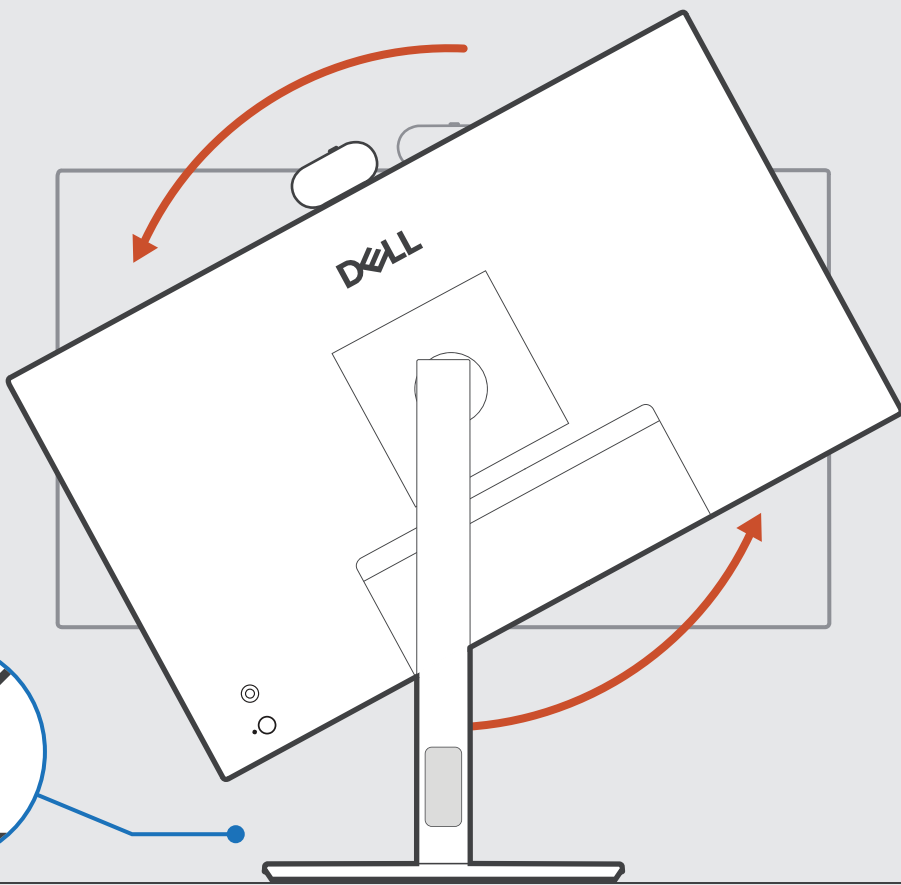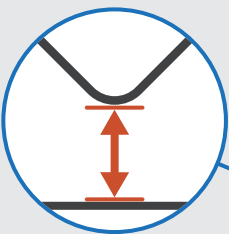


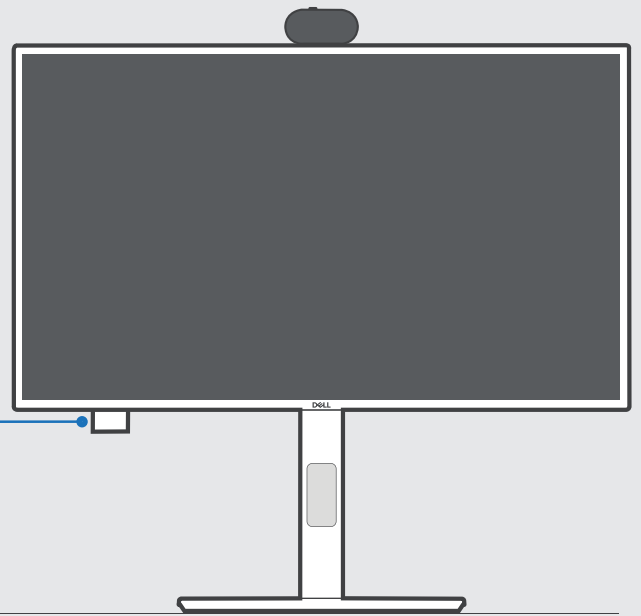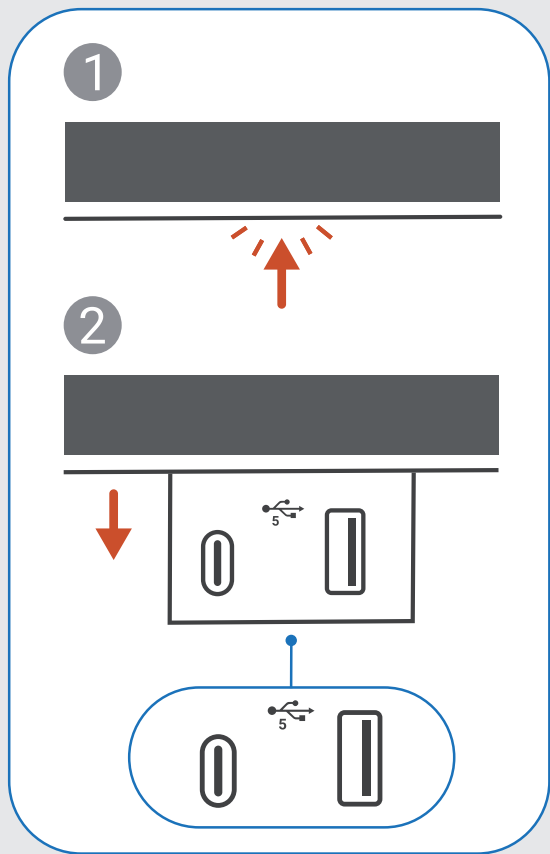

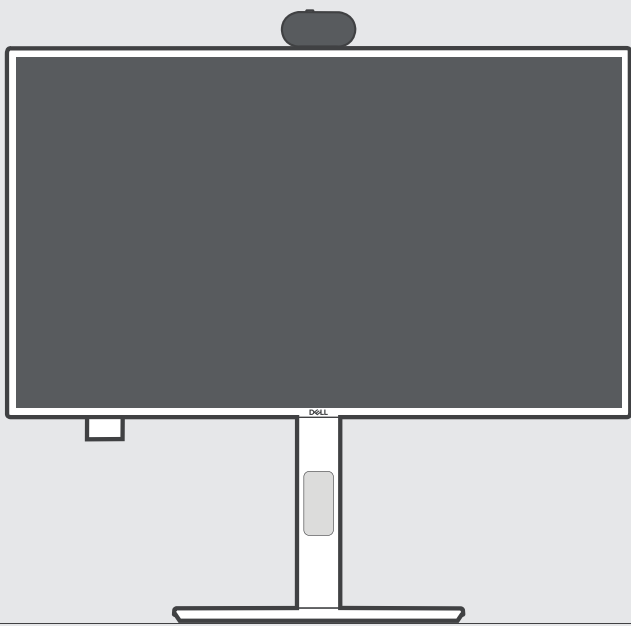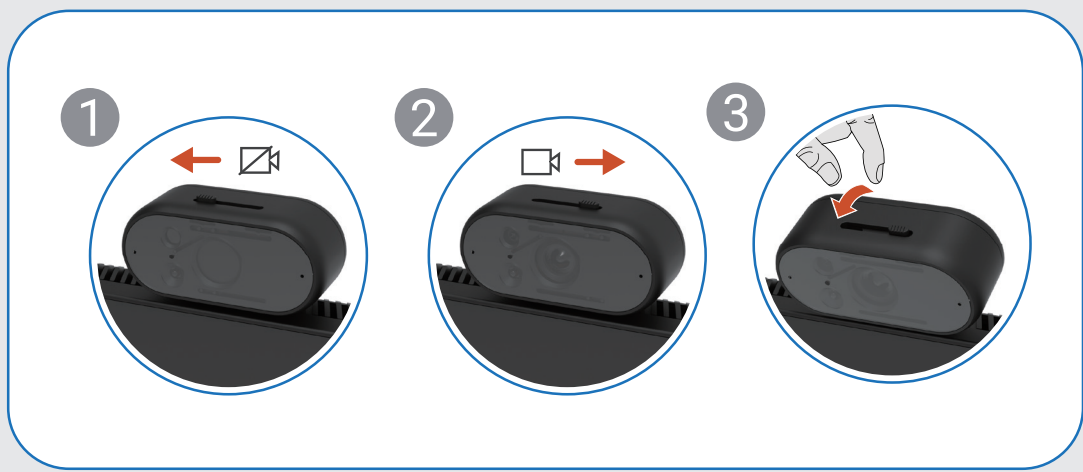  


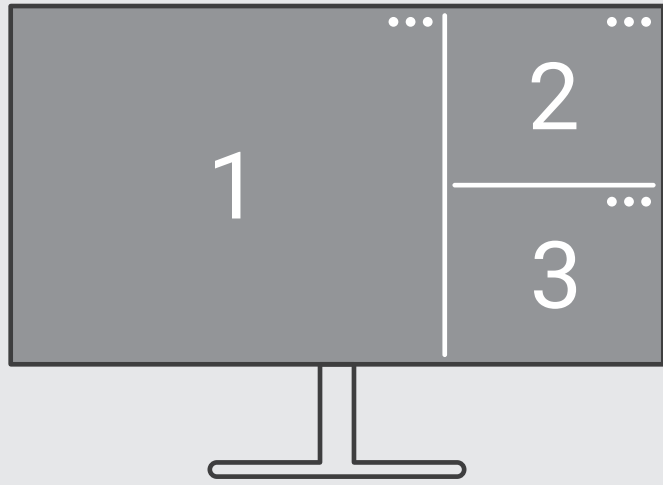


Dell Display and Peripheral Manager
Dell.com/support/ddpm

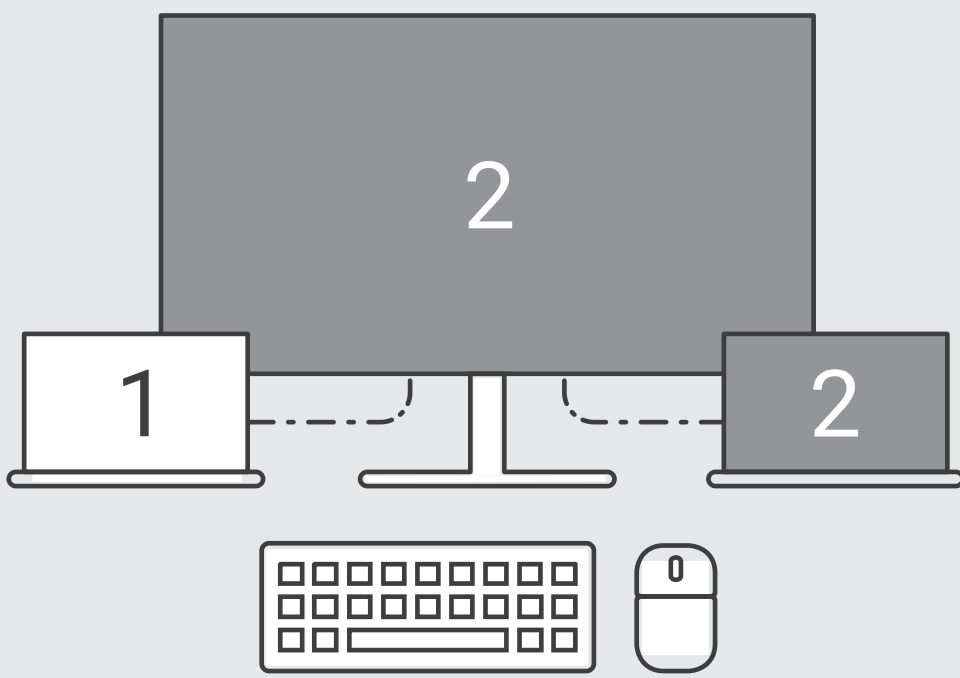

KVM

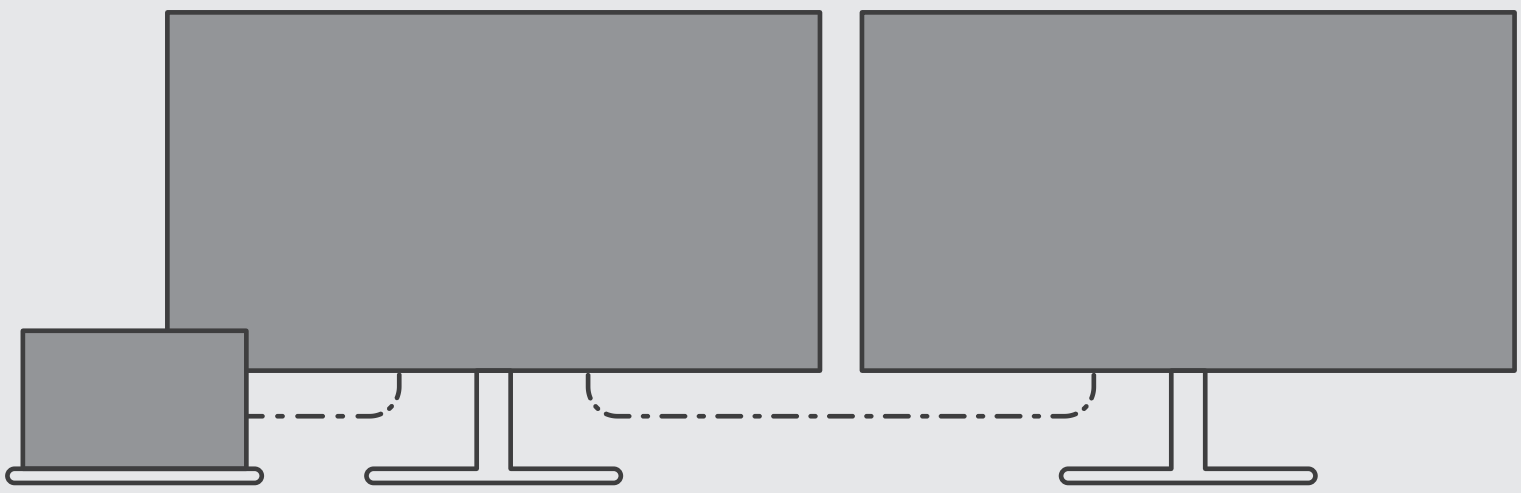

Daisy chain

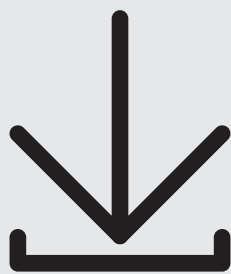

Dell.com/support/P2726DEB