

 






 
Dell Pro P 27 USB-C Hub Webcam-monitor

 


P2726DEV



Snelstartgids

 


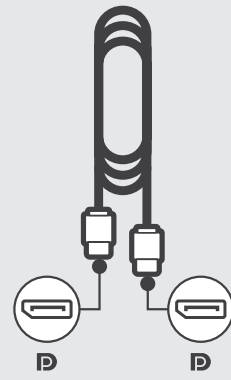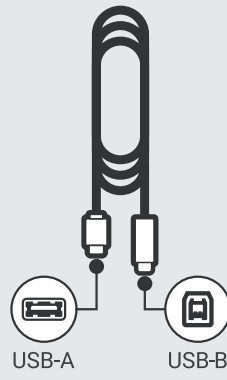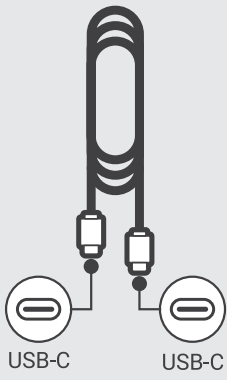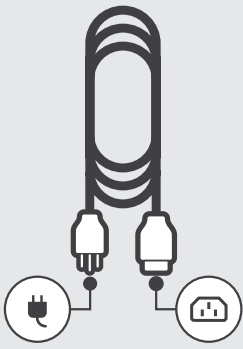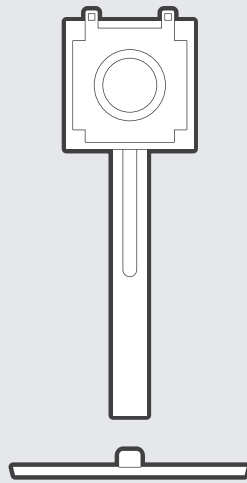 


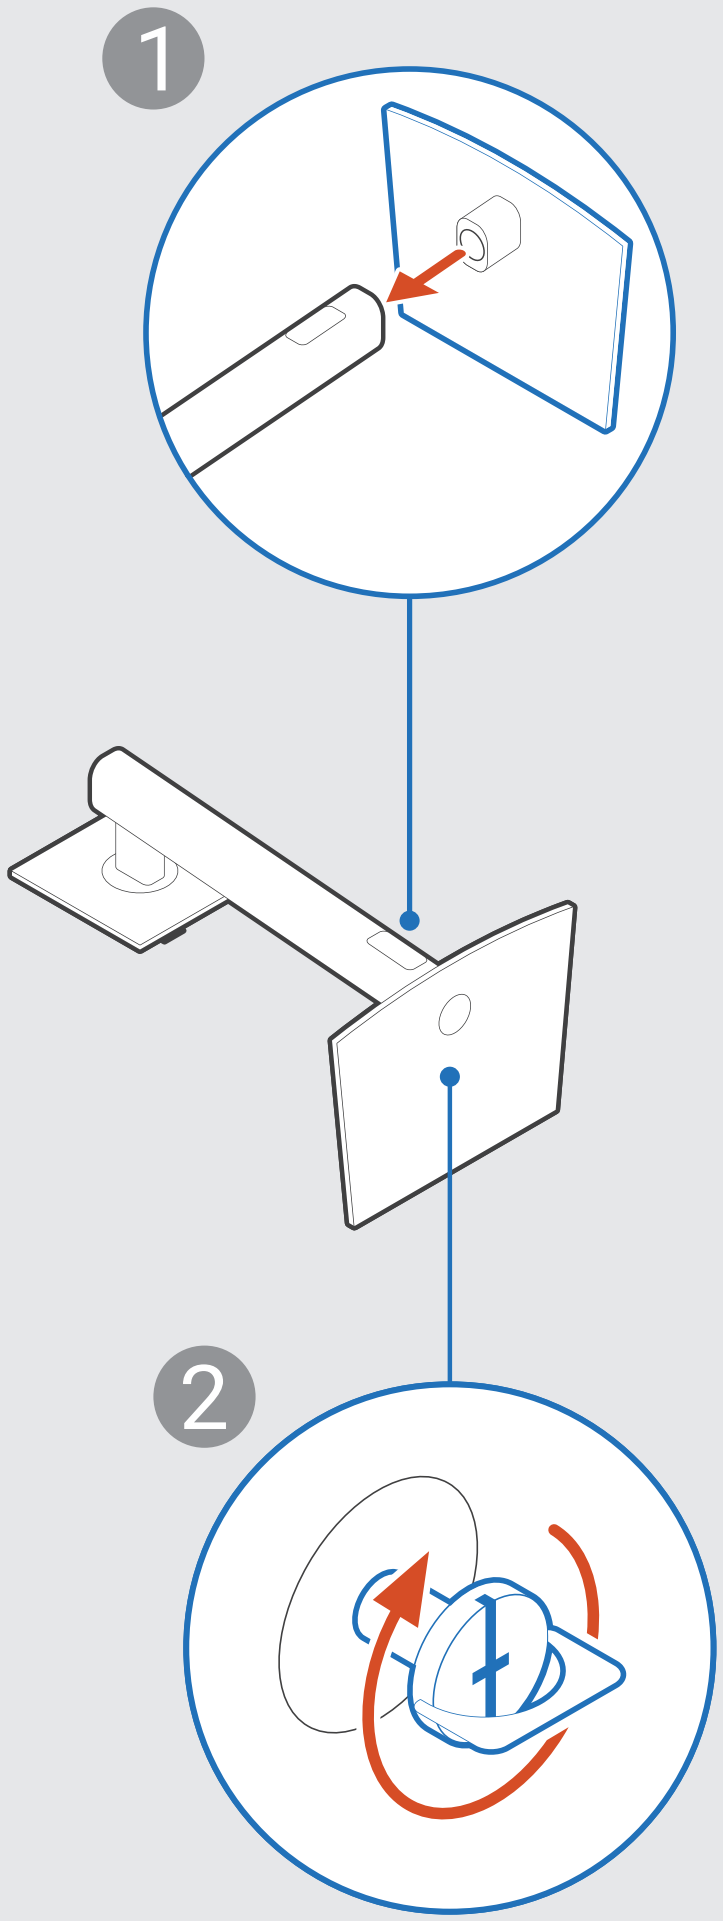


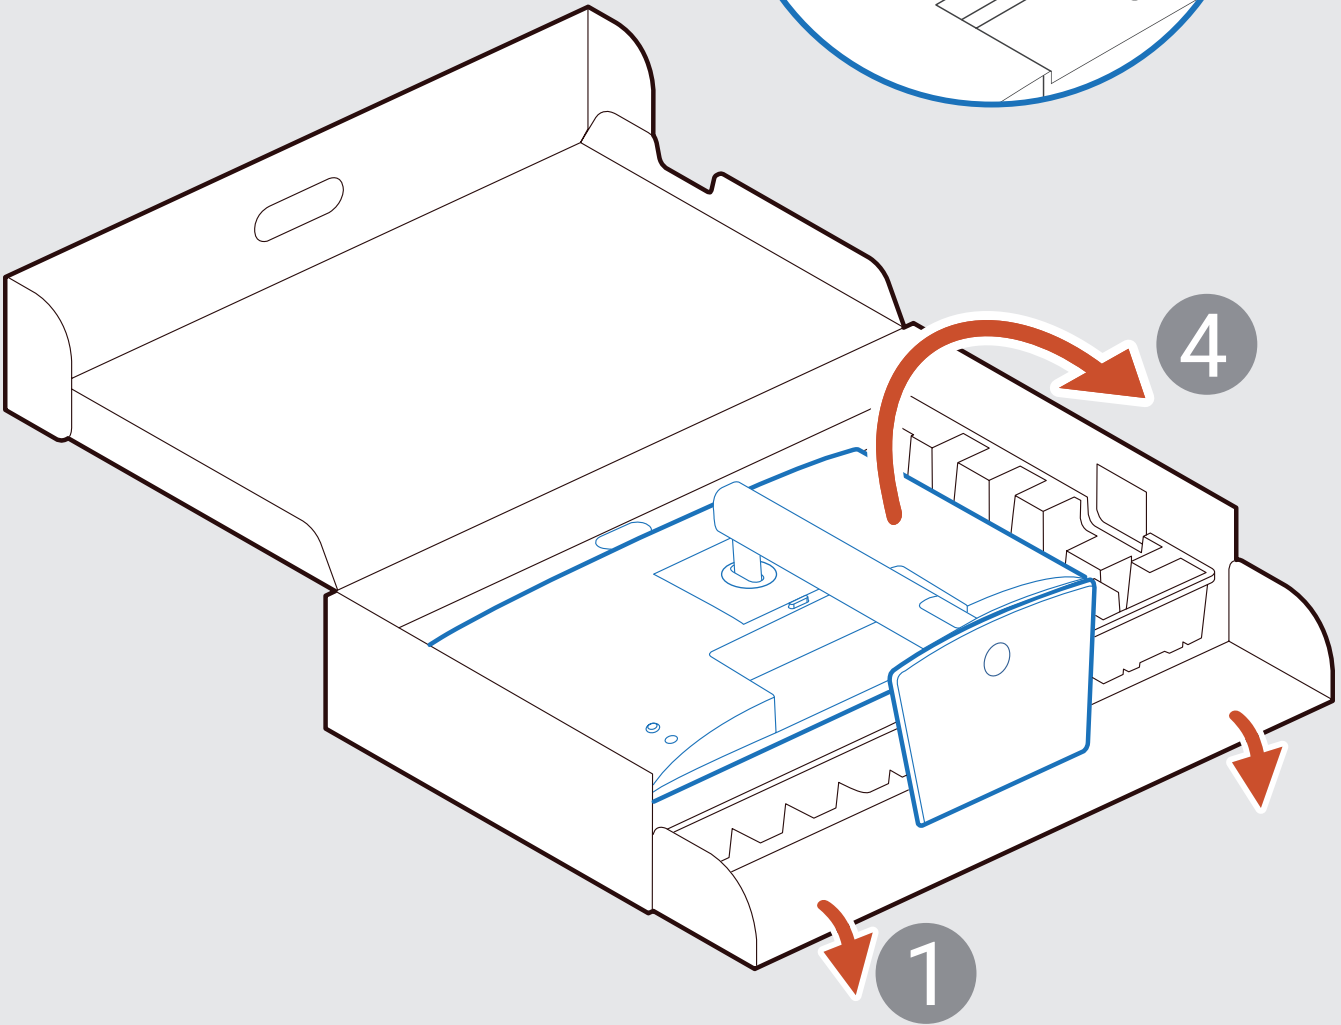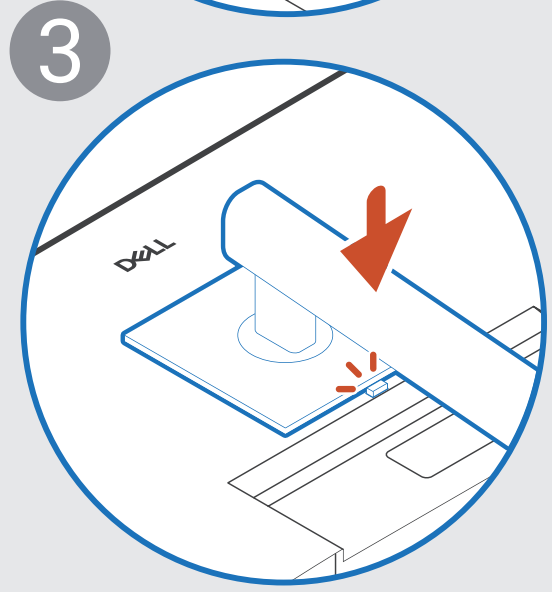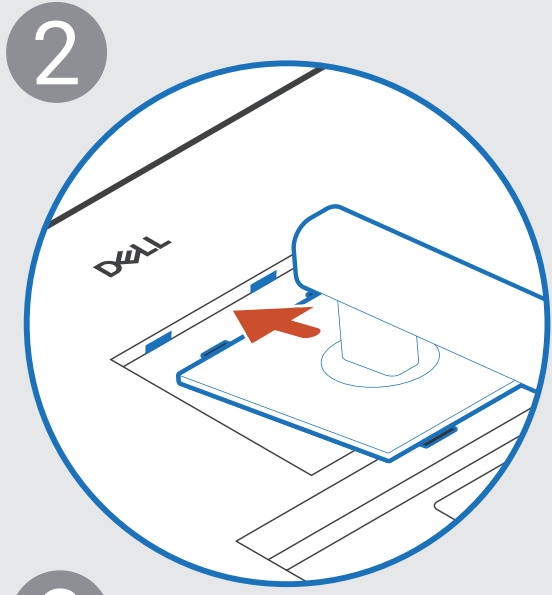


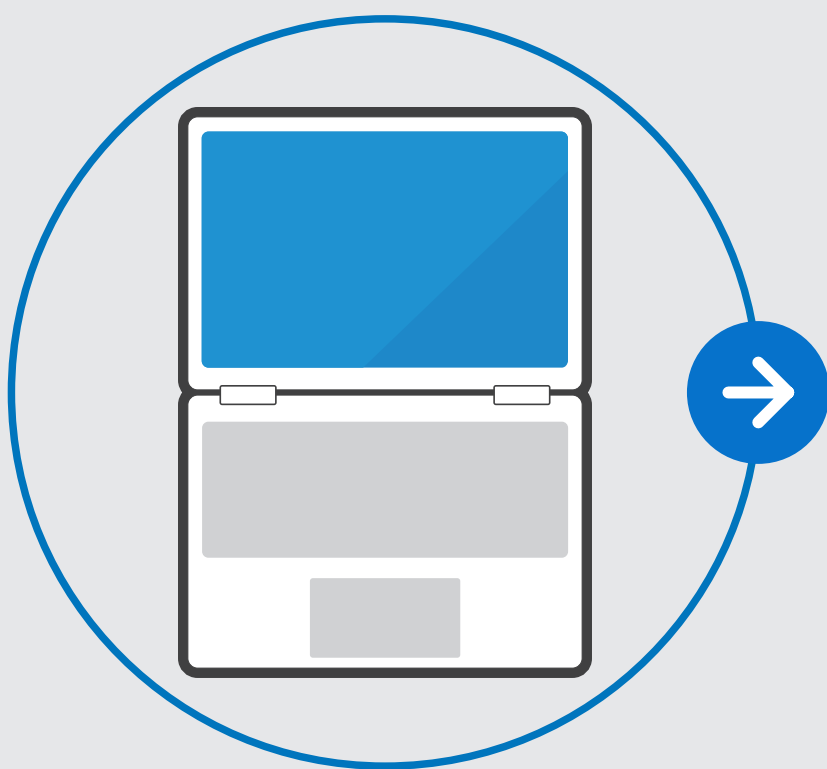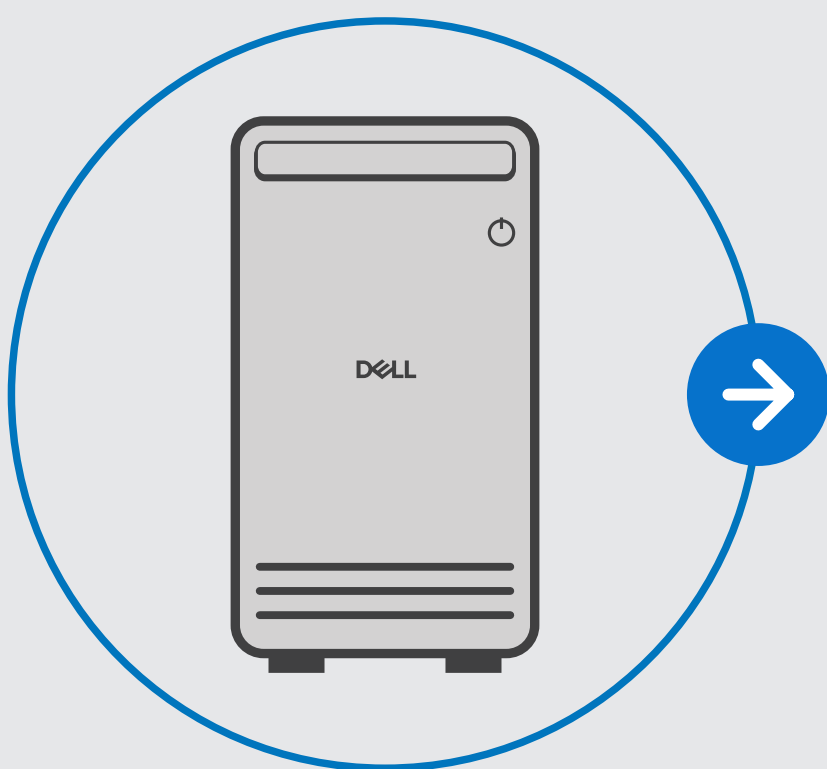

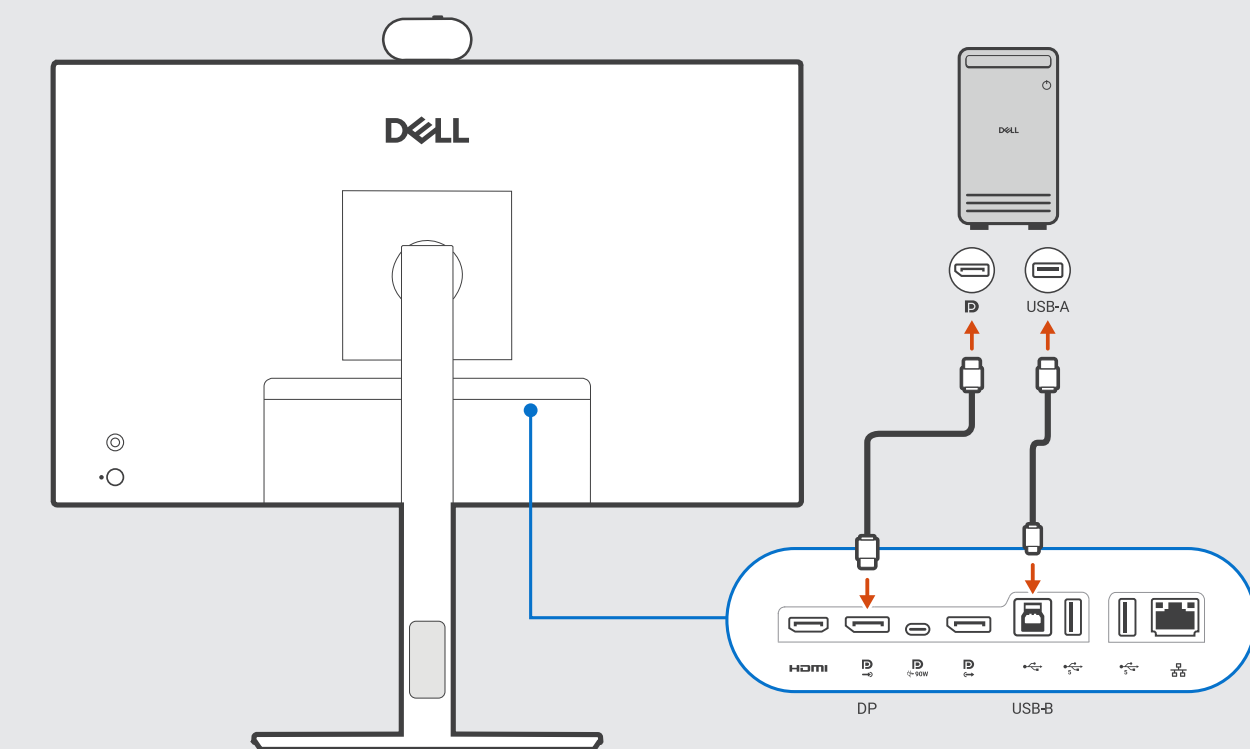


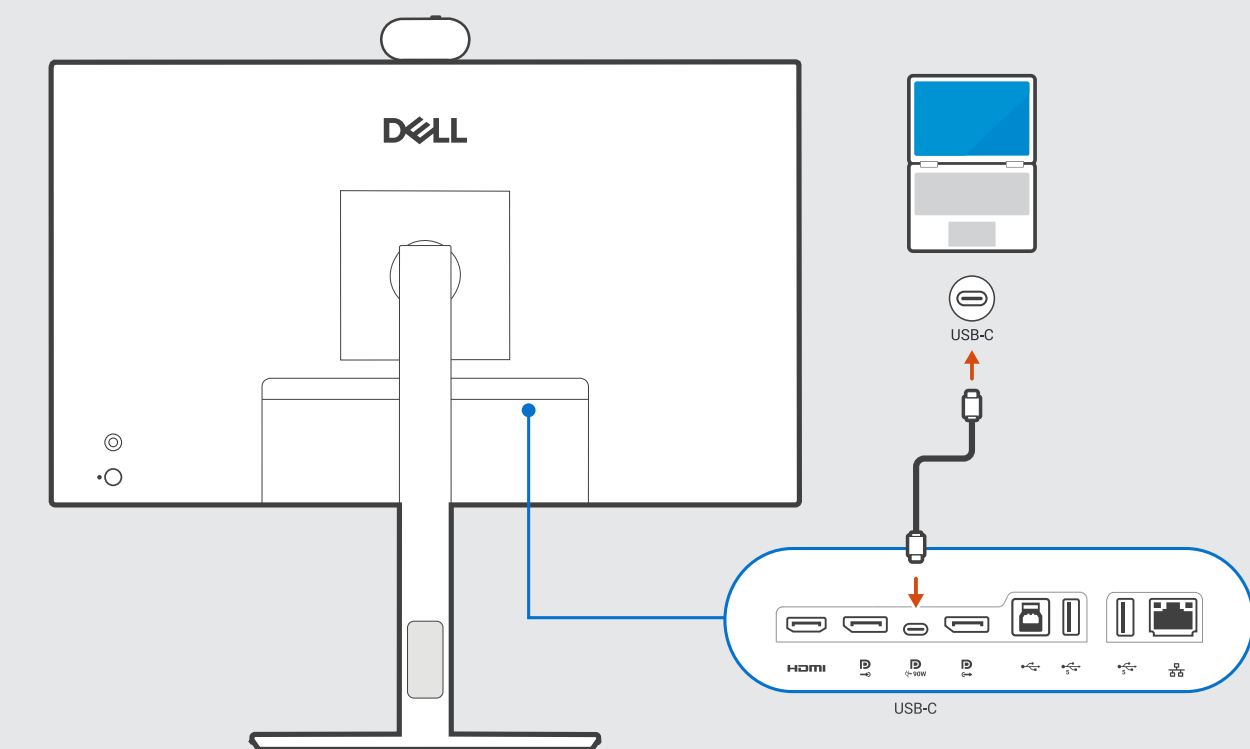

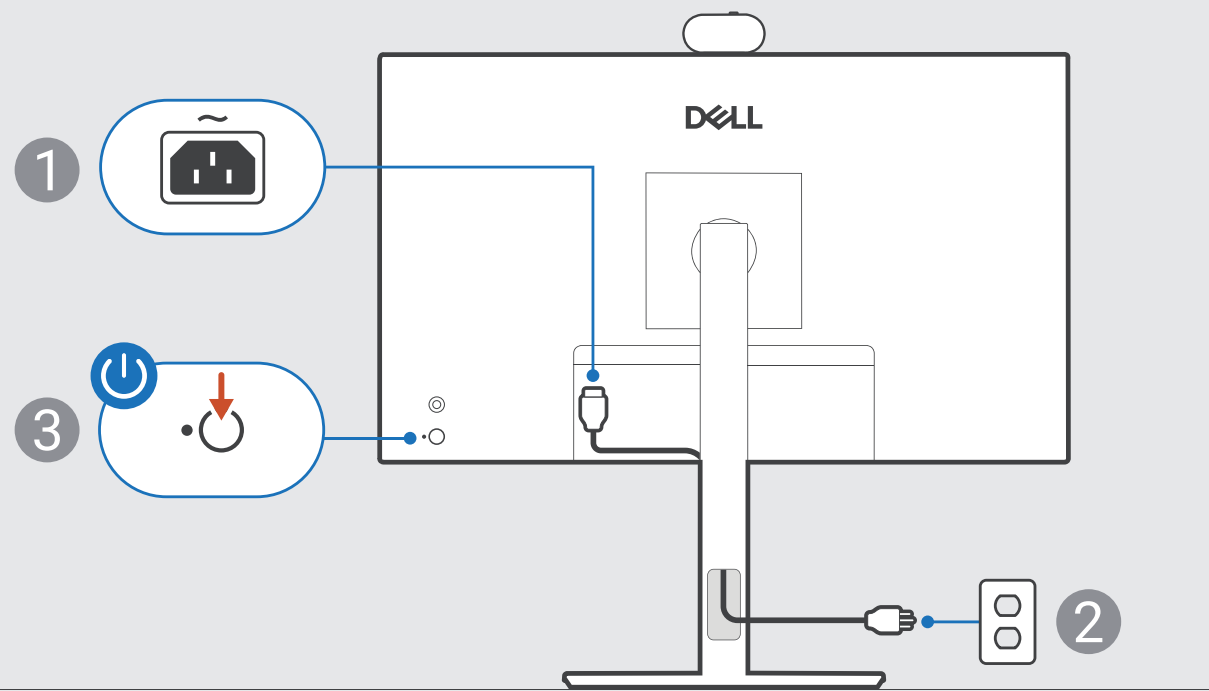


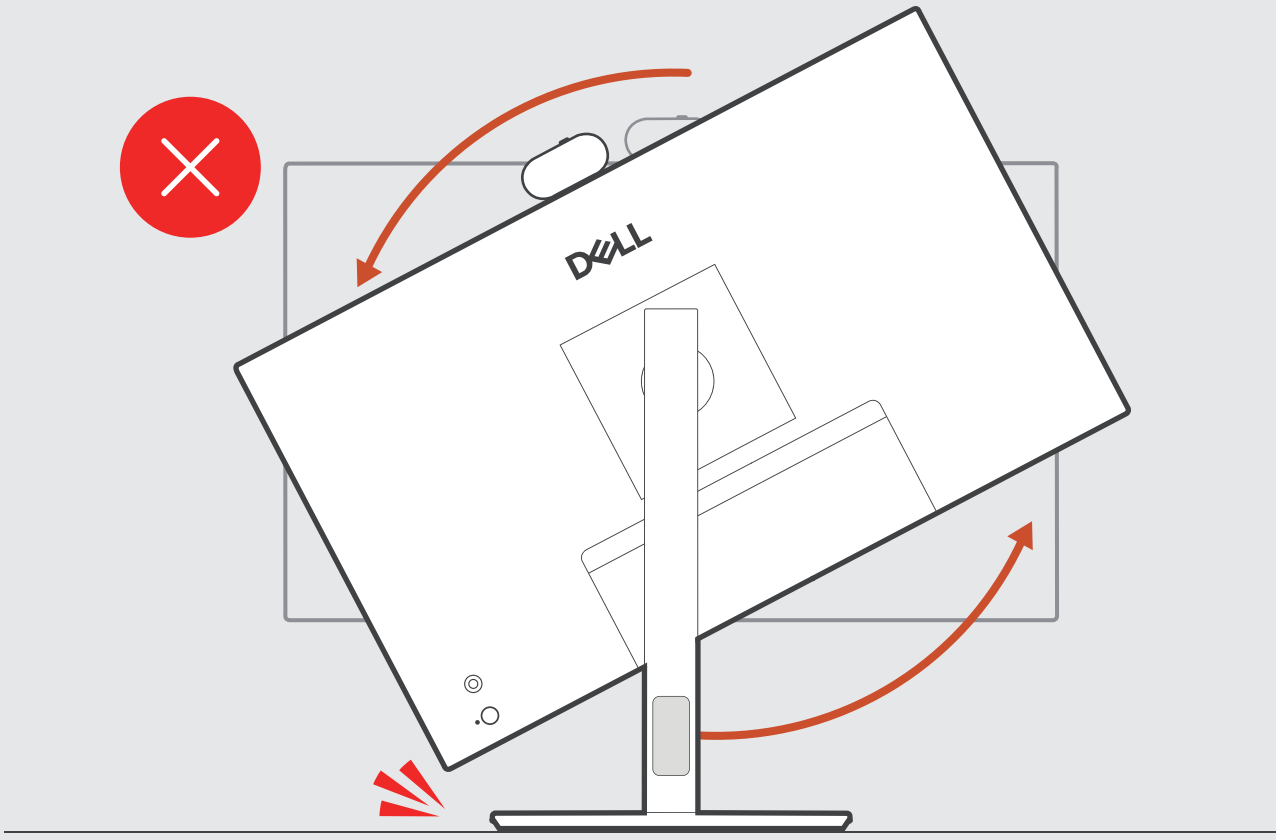



1


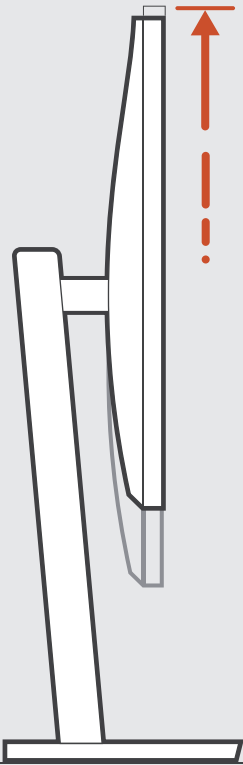 




2

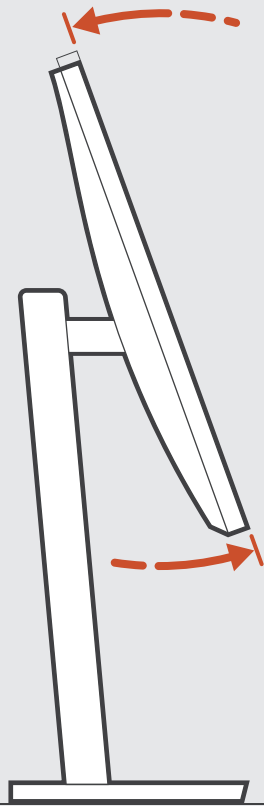 


3

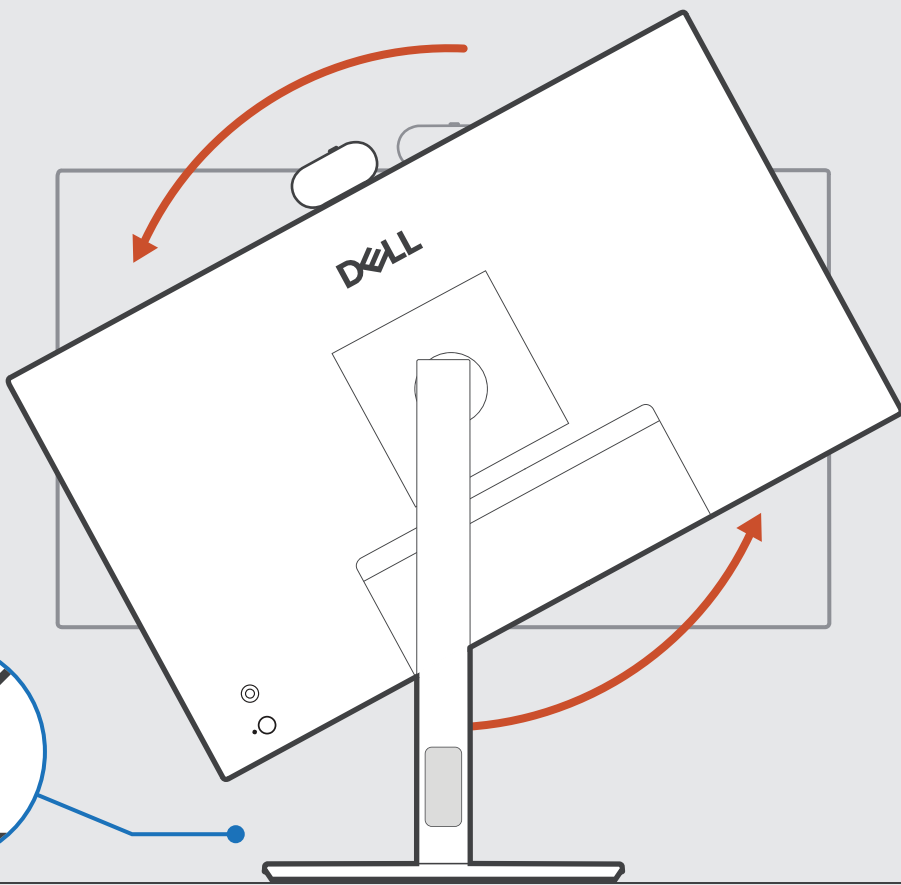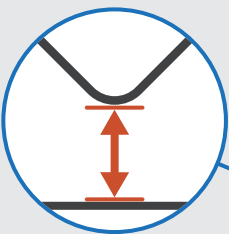


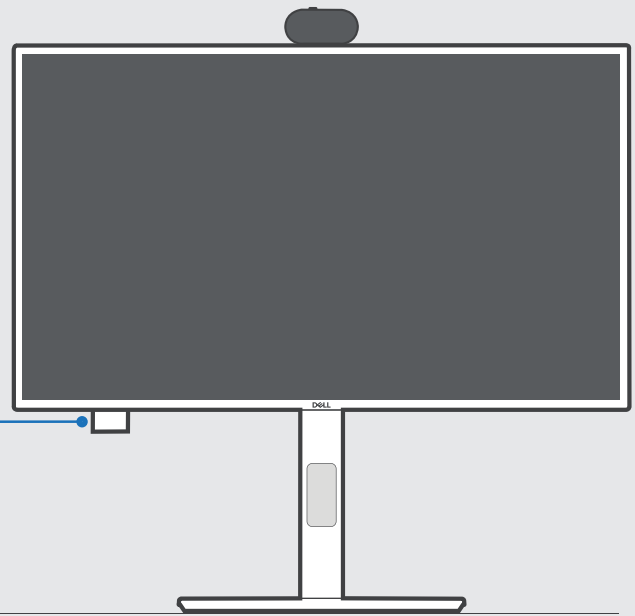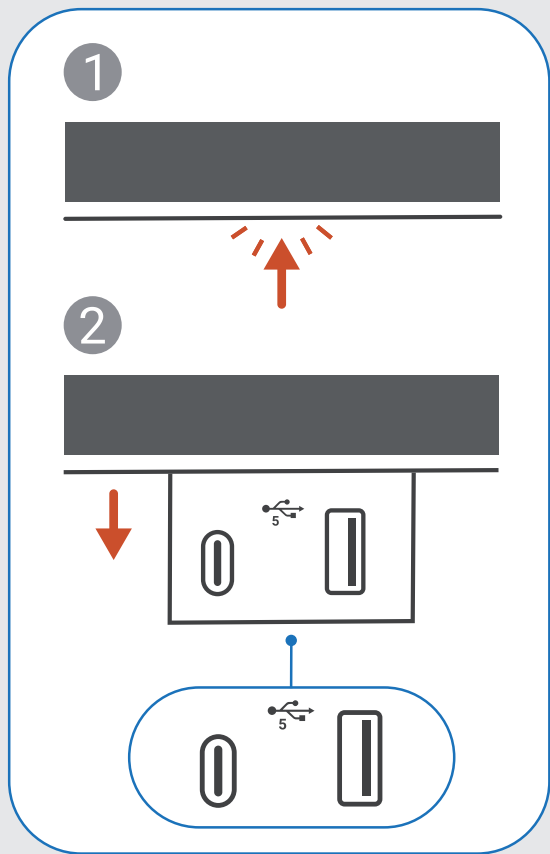 

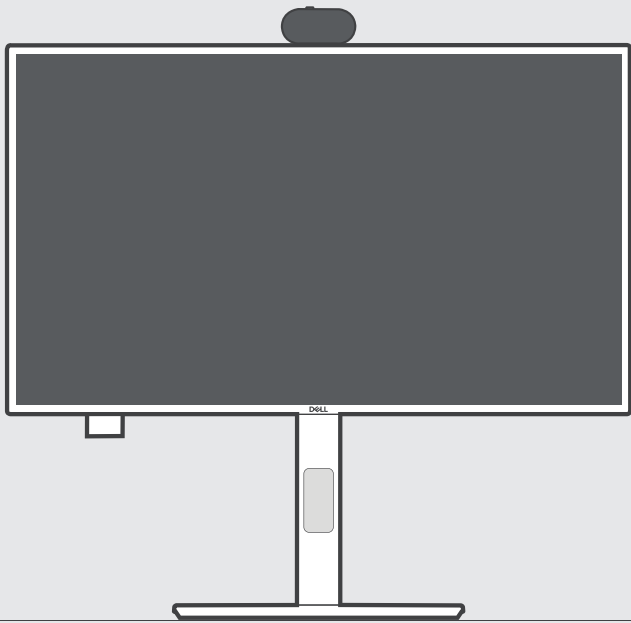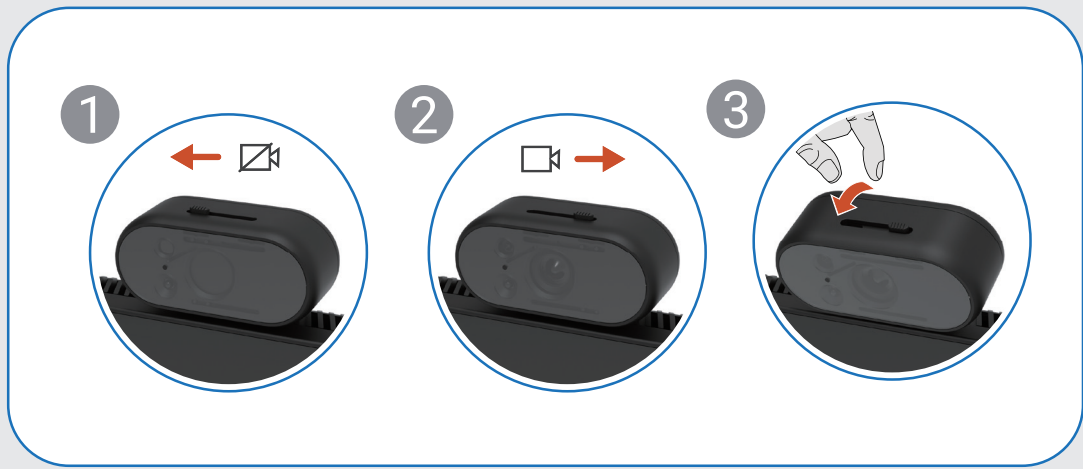  


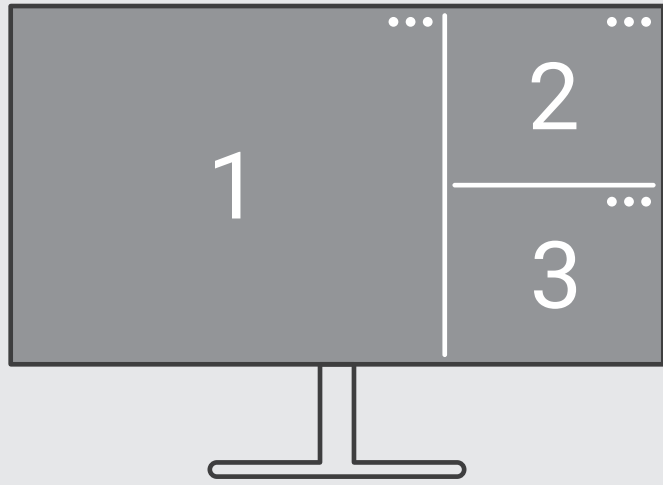


Dell Display and Peripheral Manager
Dell.com/support/ddpm

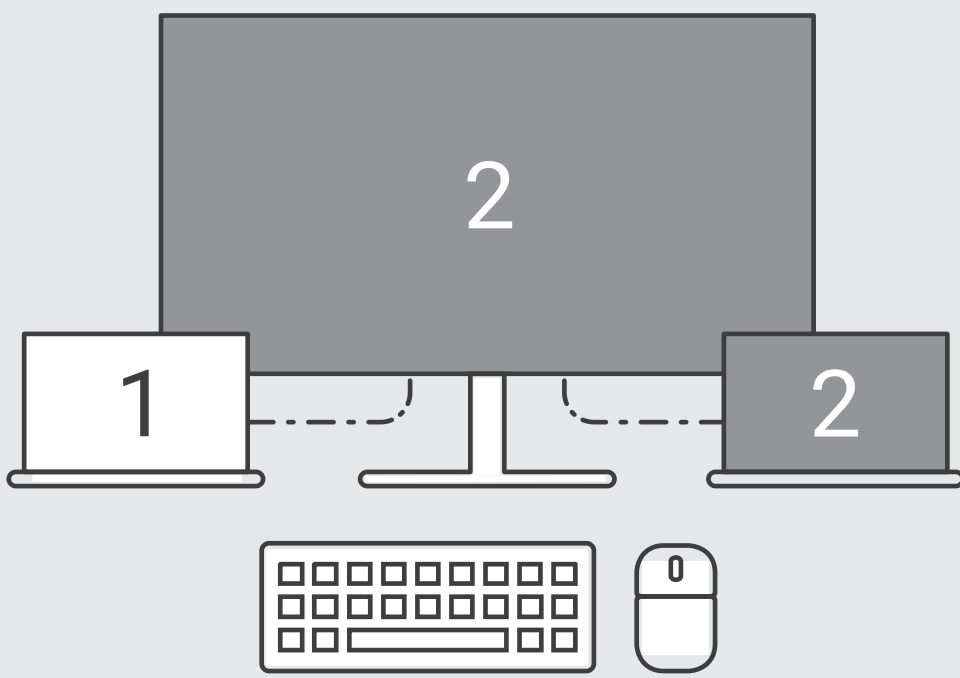

KVM

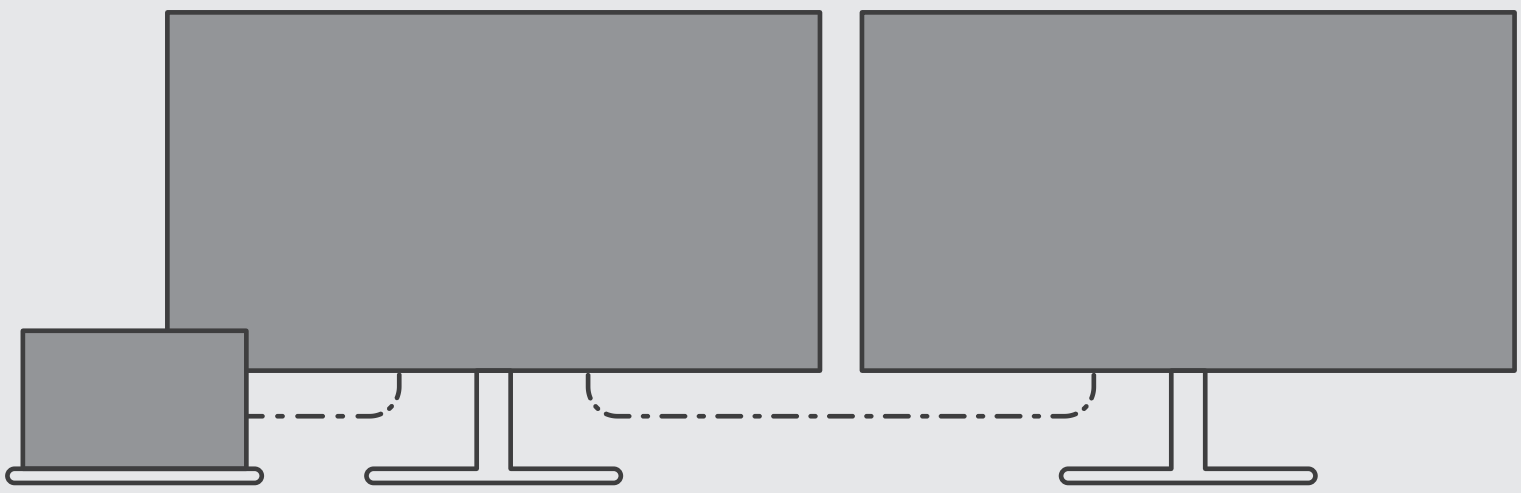

Daisy chain

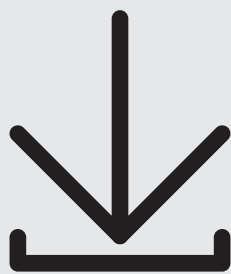

Dell.com/support/P2726DEV