










Dell Pro P 27 USB-C Hub Webcam Monitor

P2726DEV

Quick Start Guide



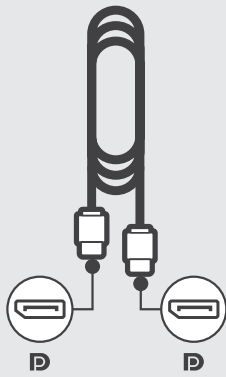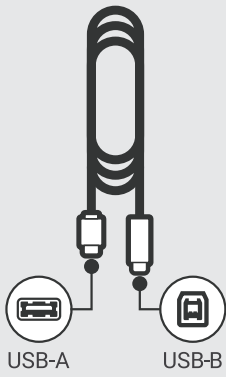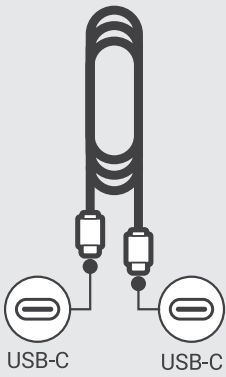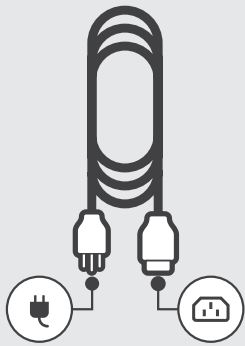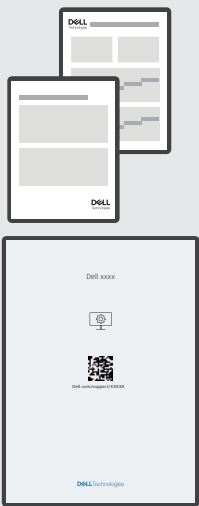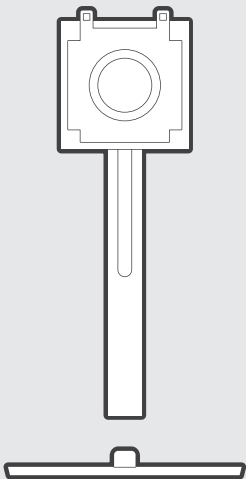


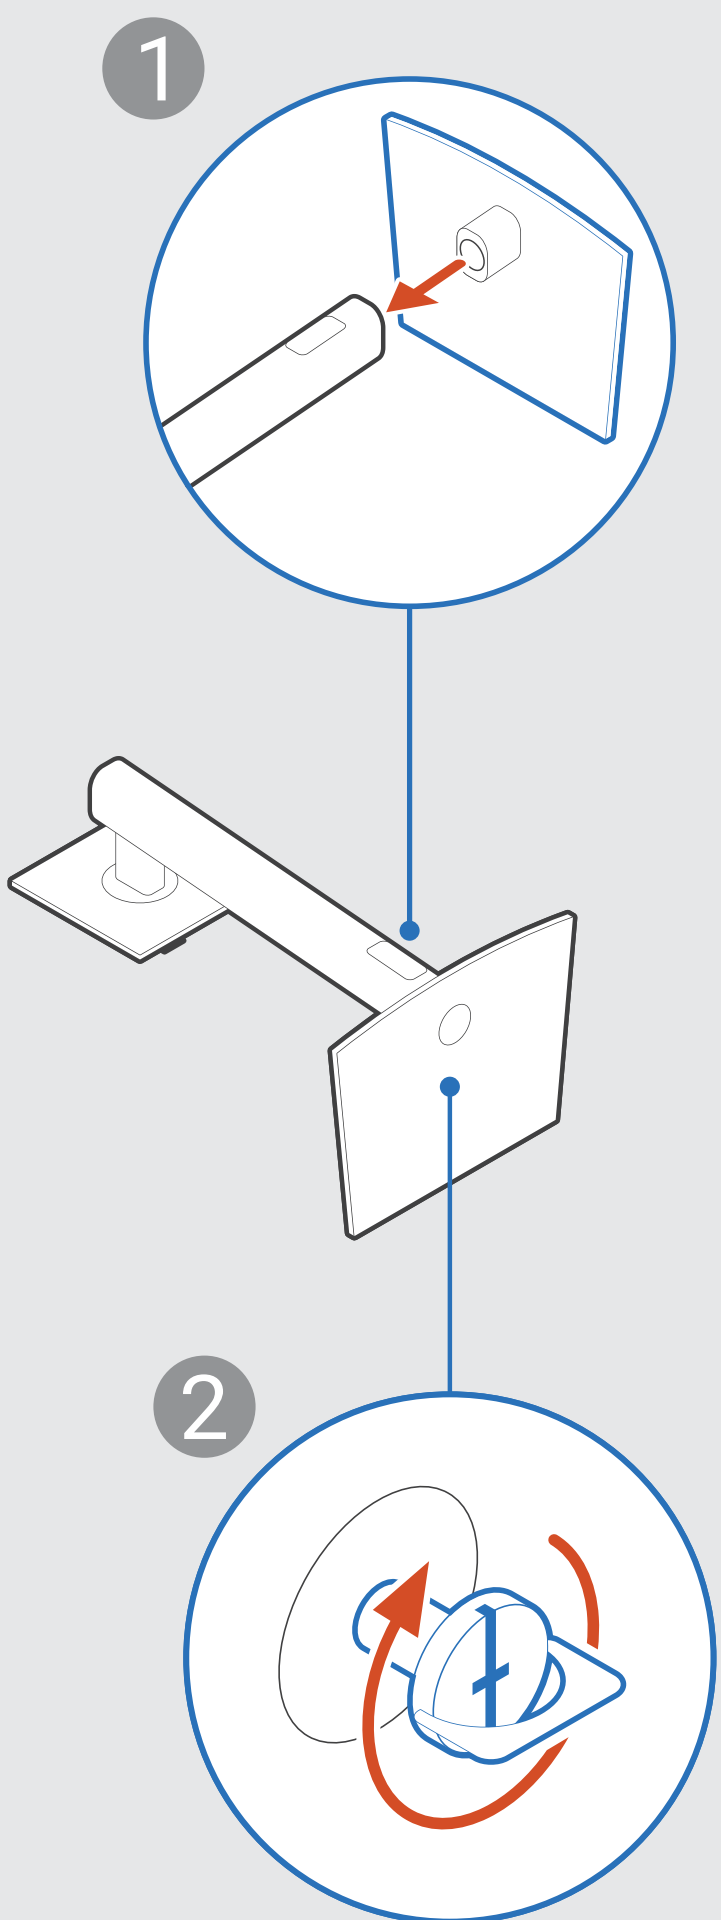


2




3


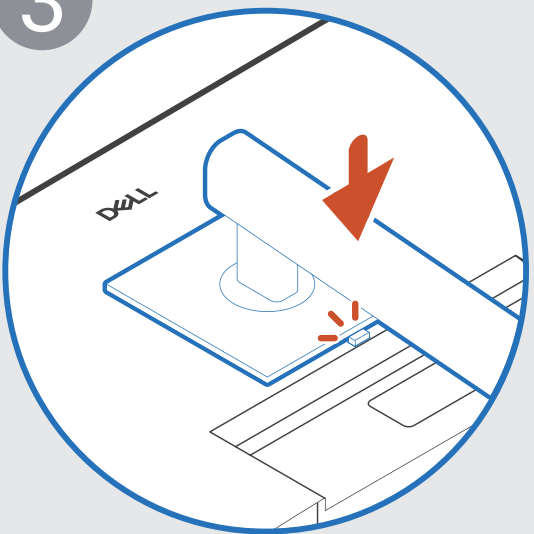



4

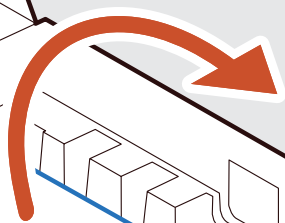



1

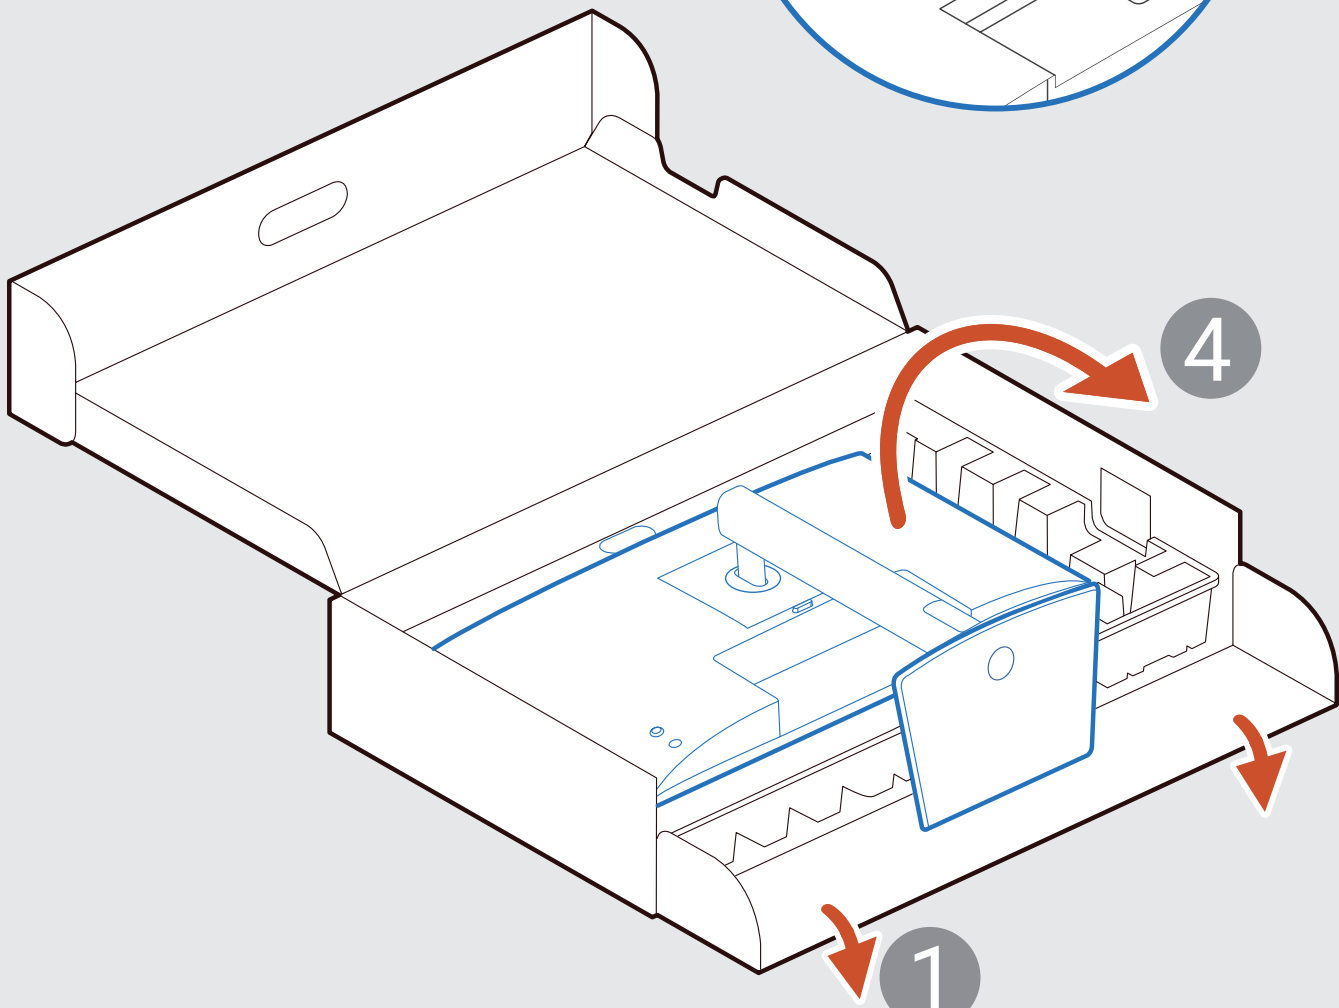


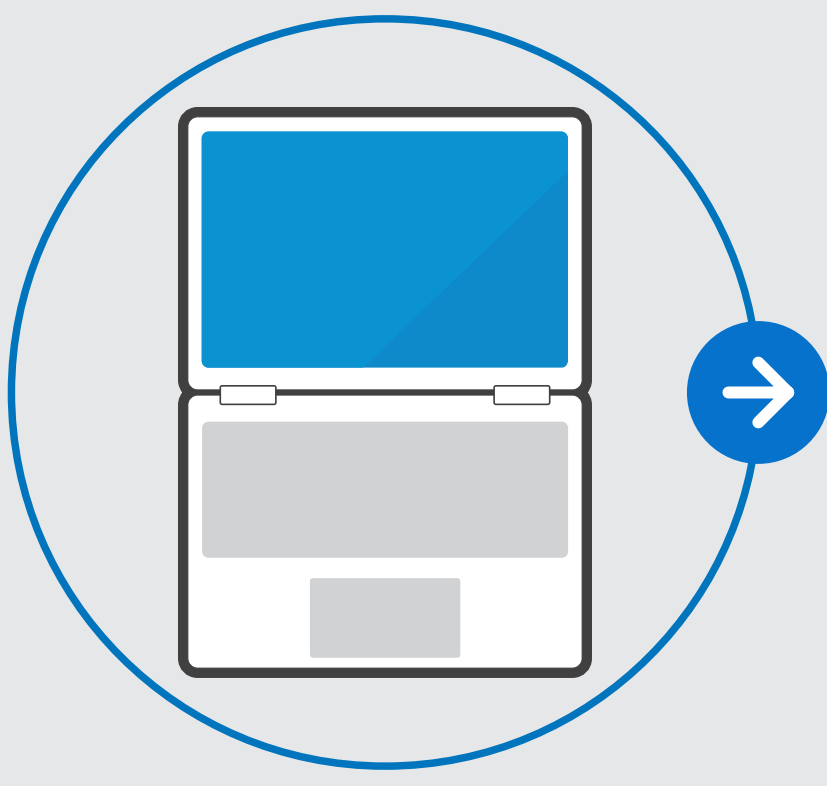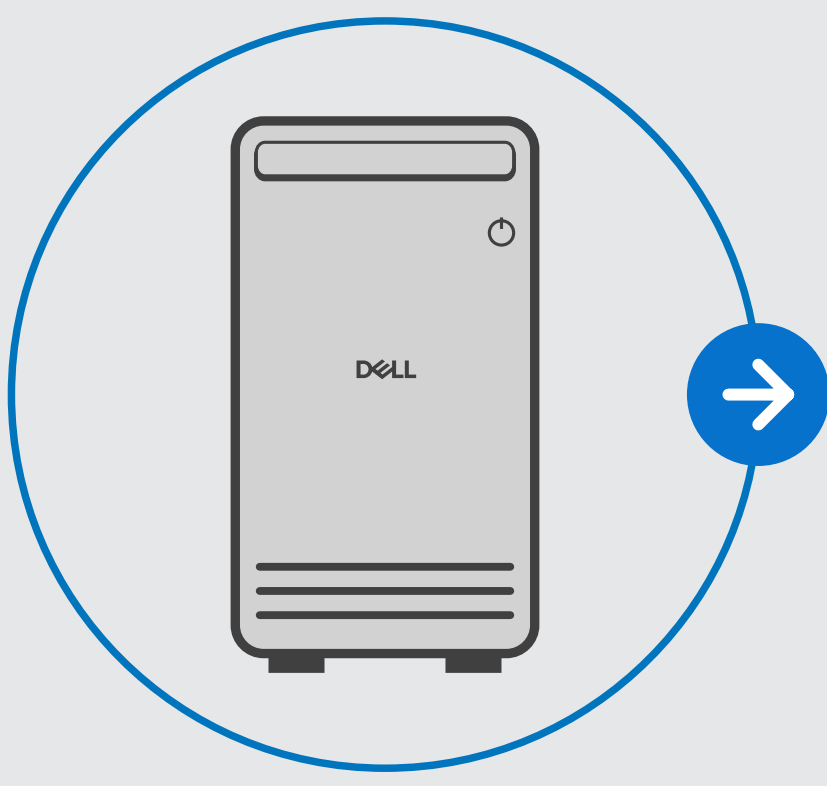

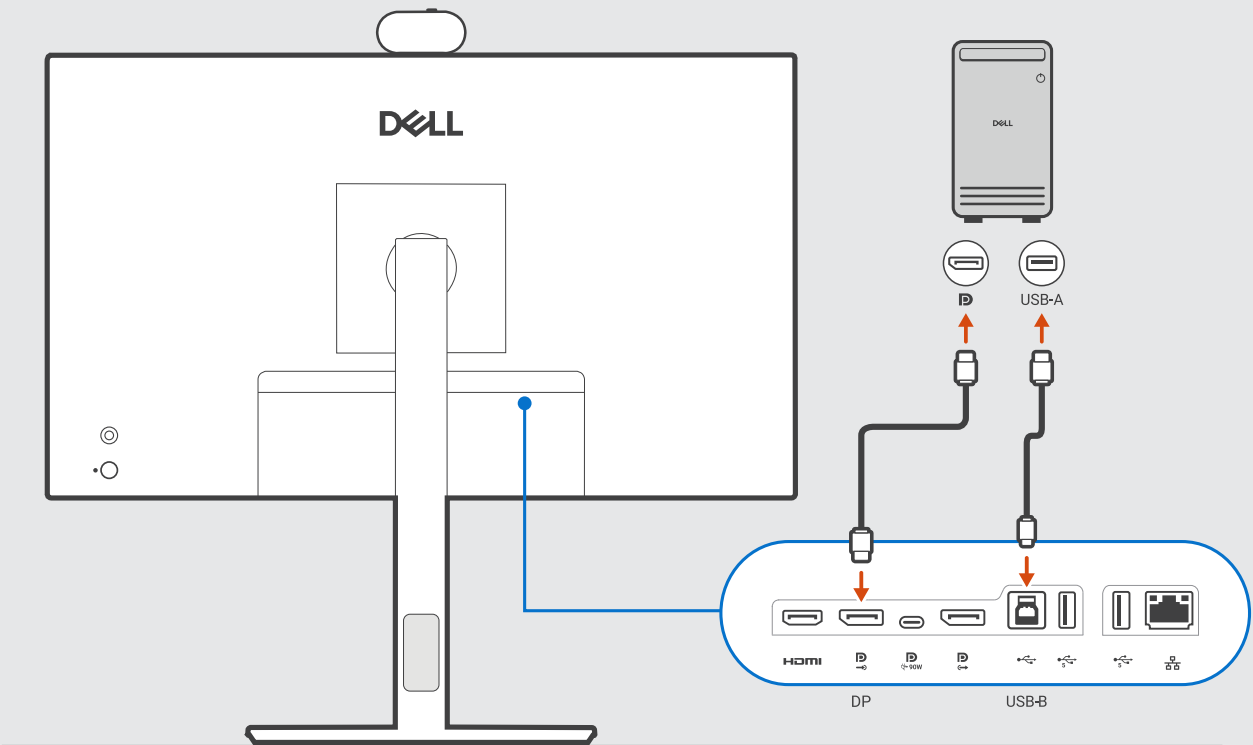


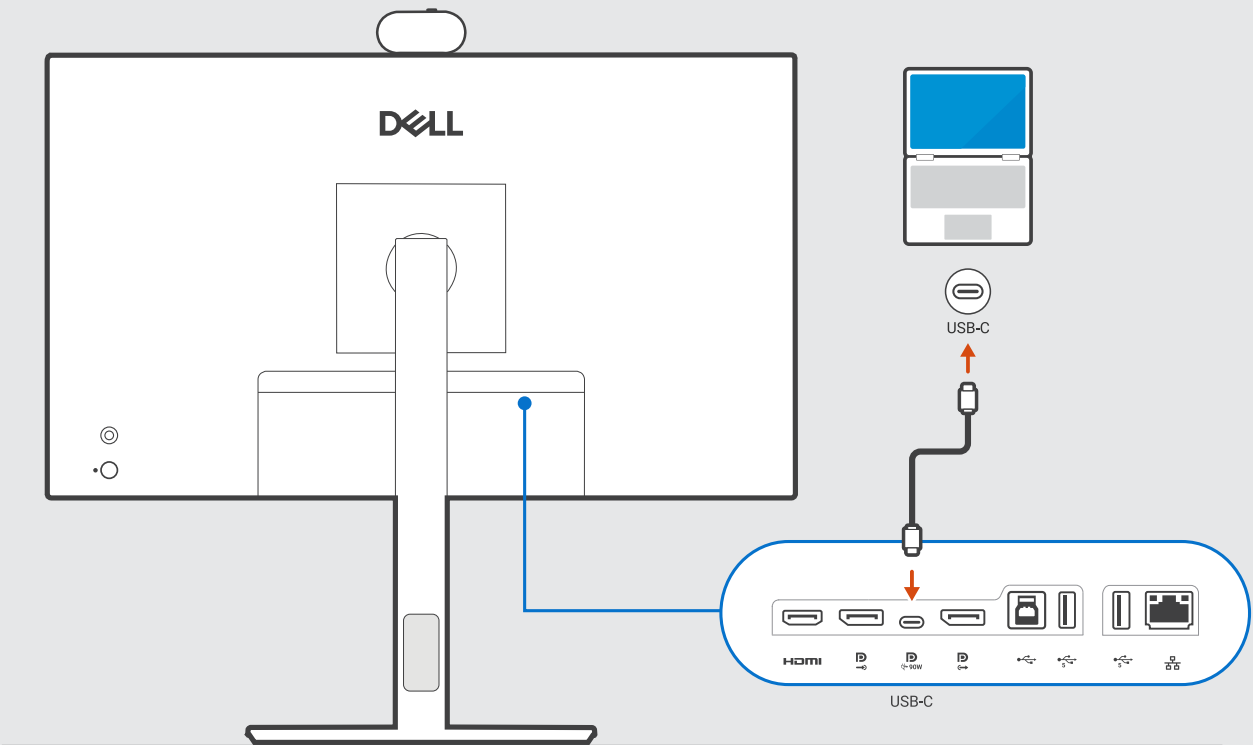

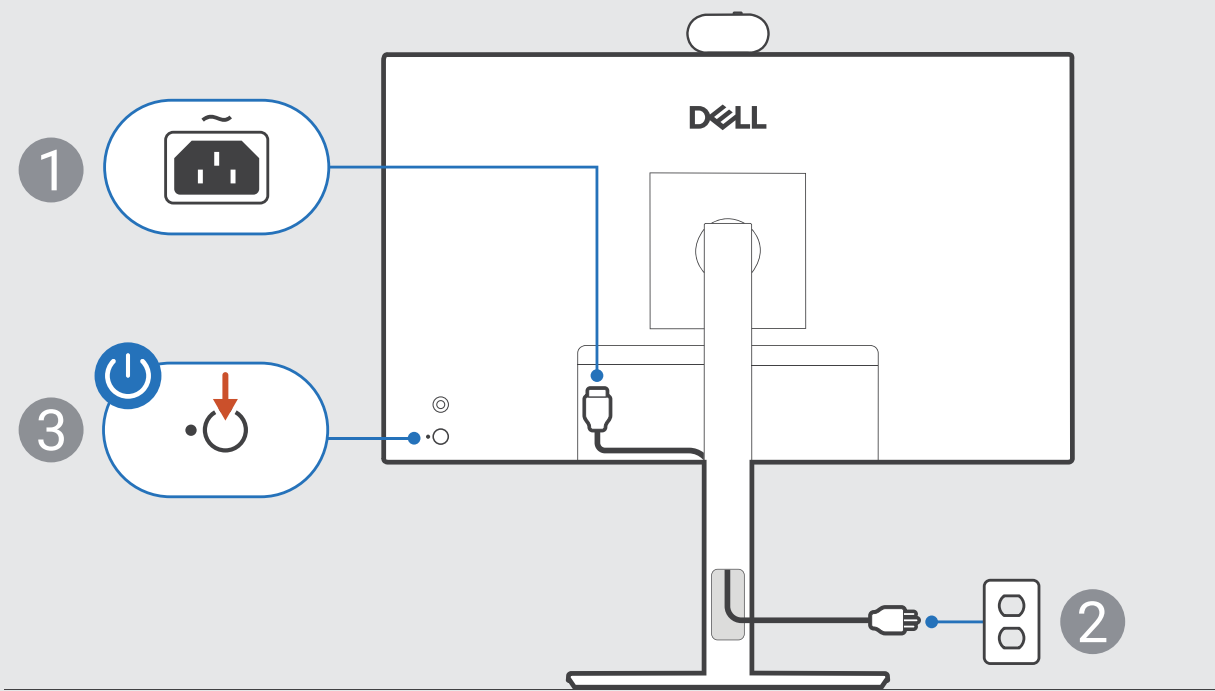


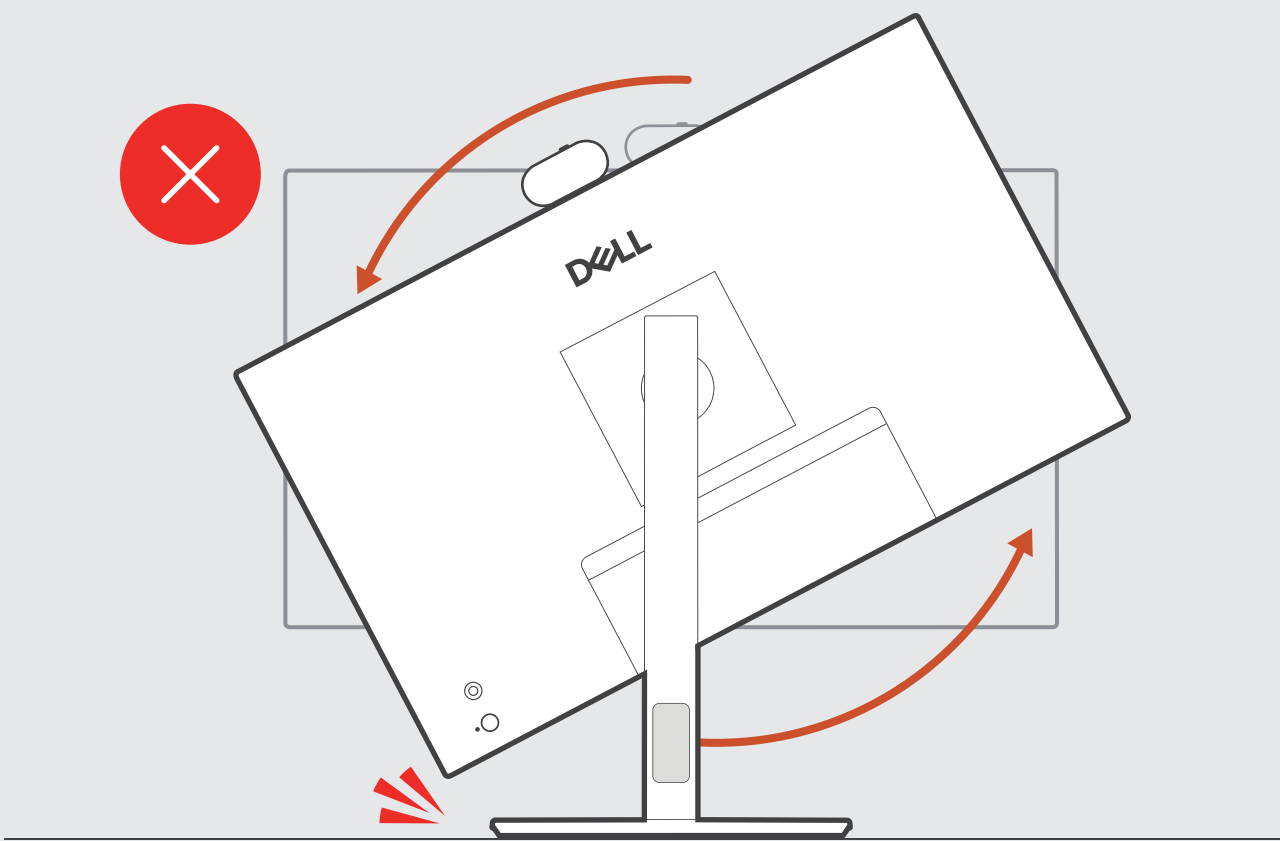


1


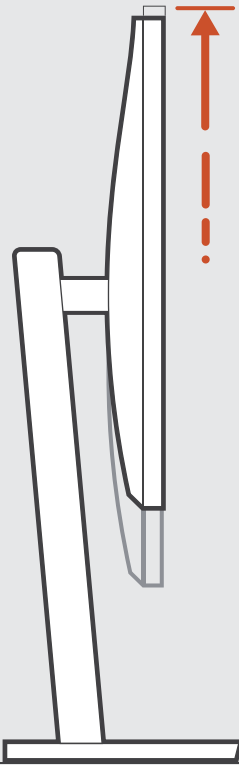



2

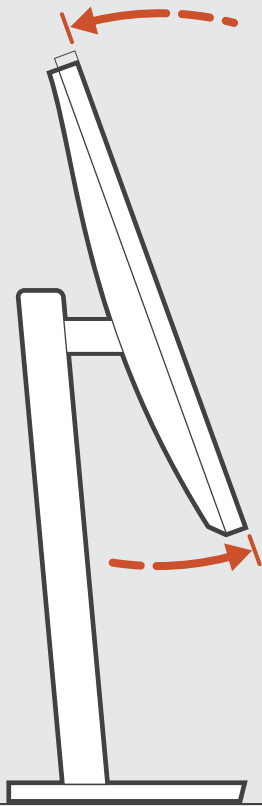


3

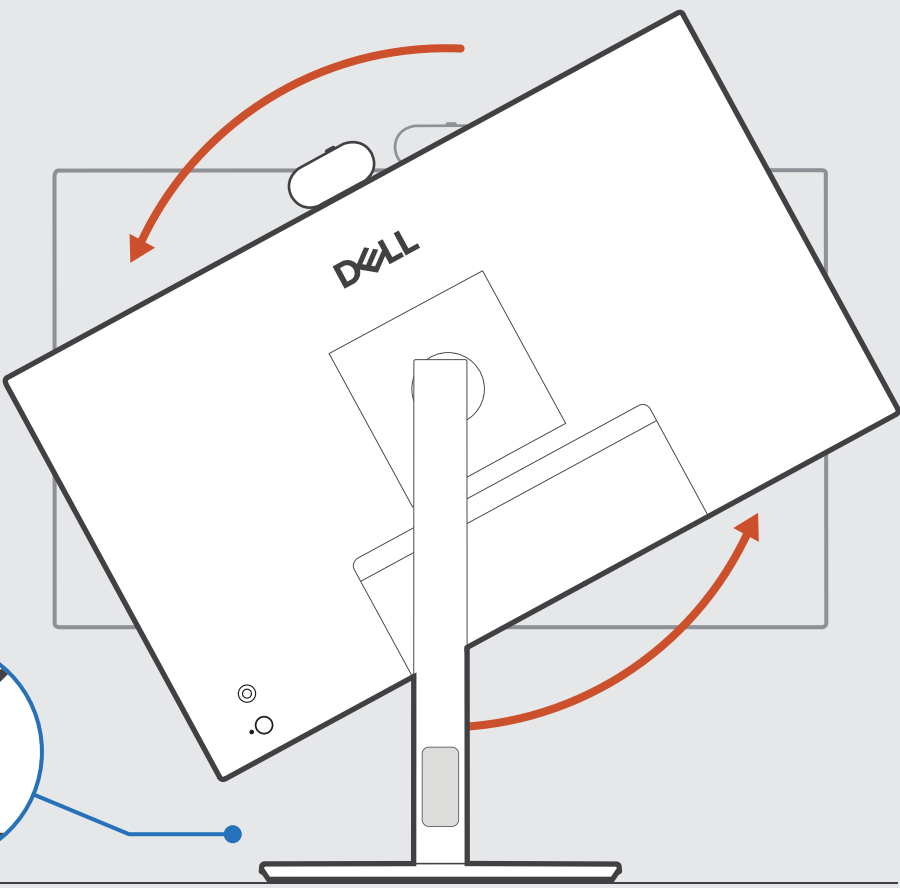


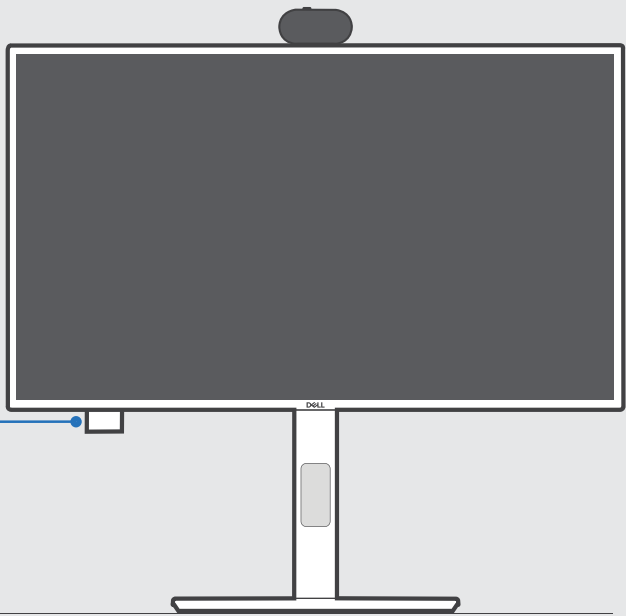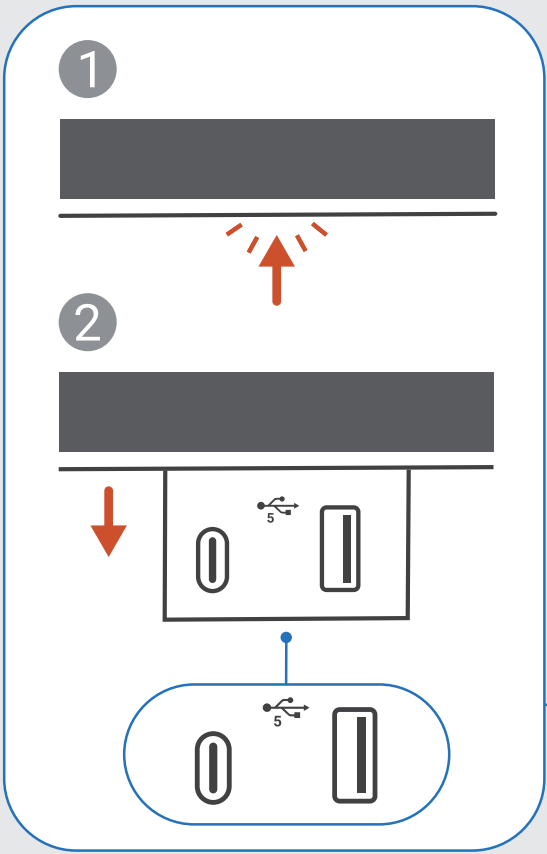

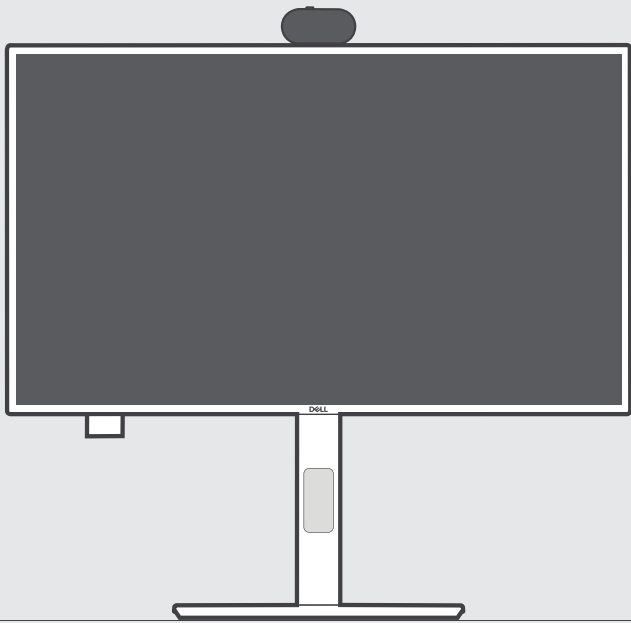

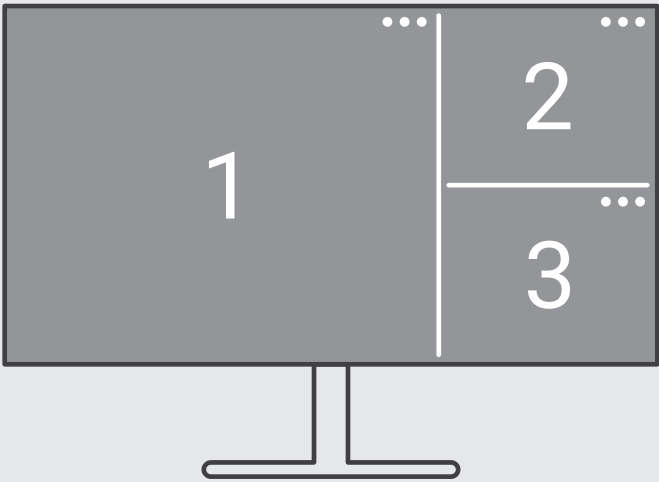


Dell Display and Peripheral Manager
Dell.com/support/ddpm

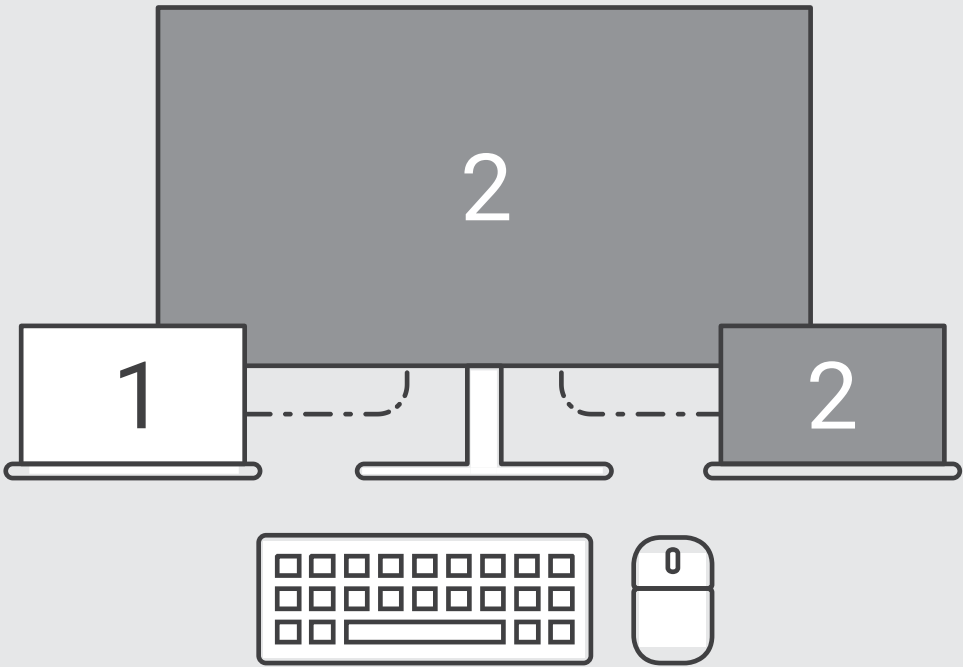

KVM



Daisy Chain

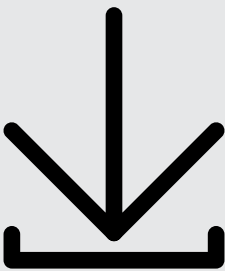

Dell.com/support/P2726DEV