









Dell Pro P 24 USB-C Hub-conferentiemonitor




P2426HEB



Snelstartgids




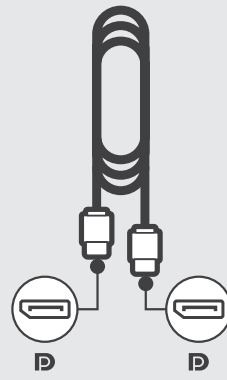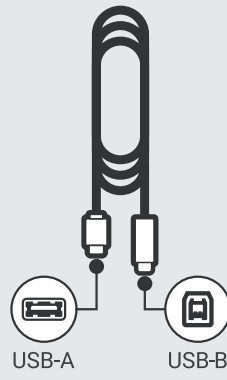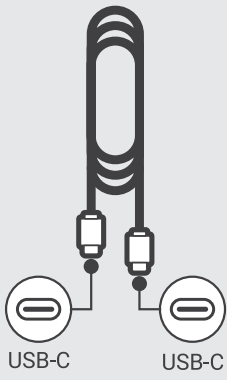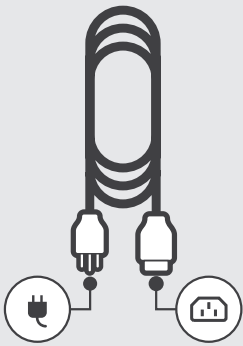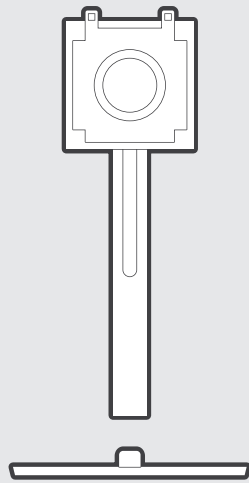


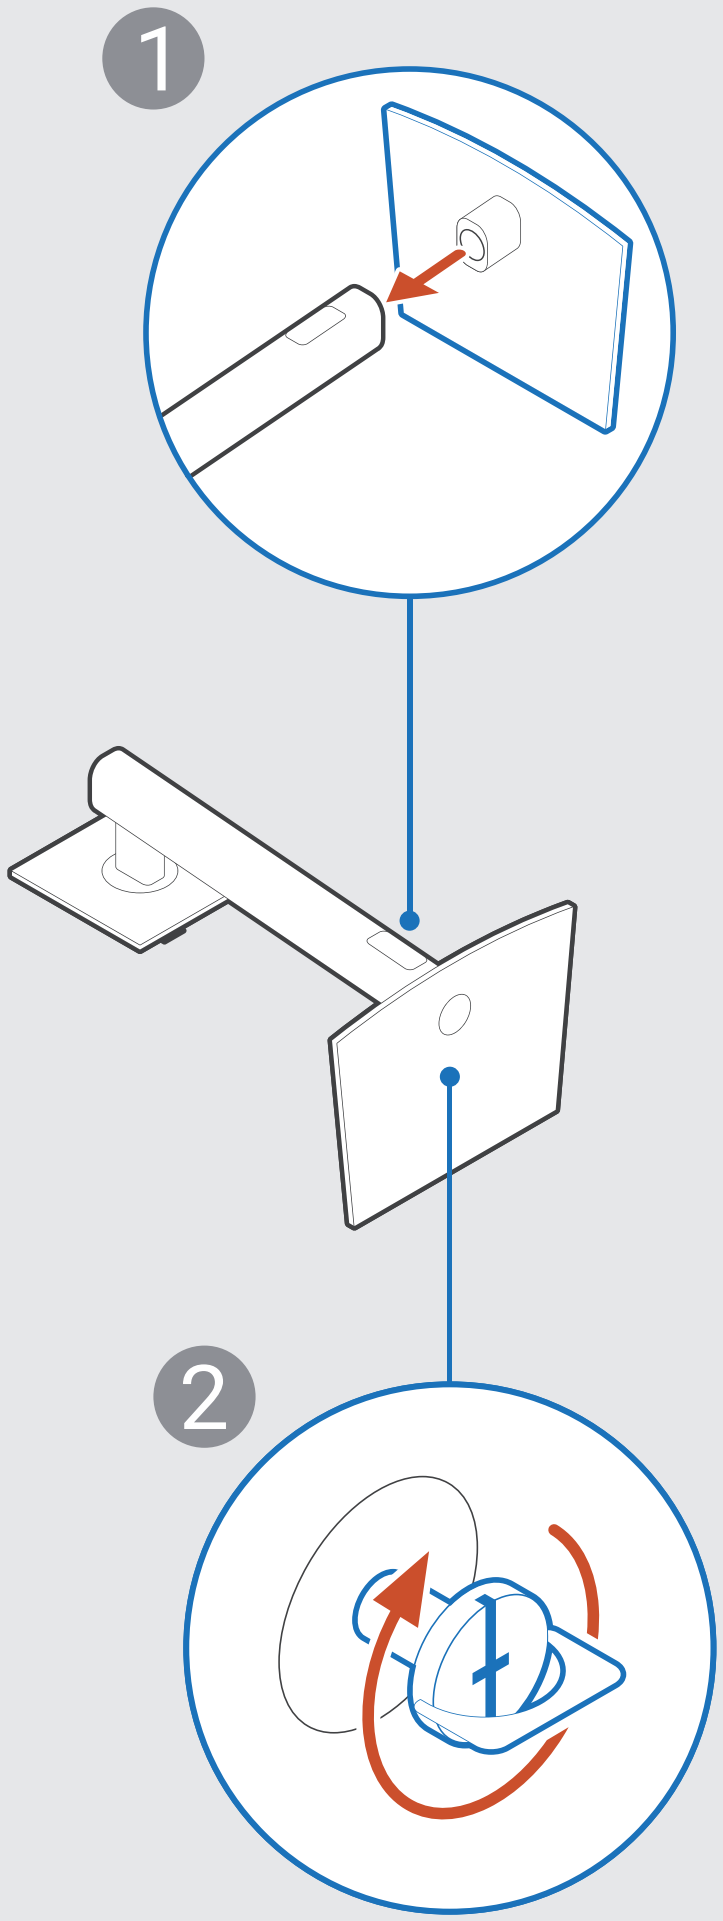


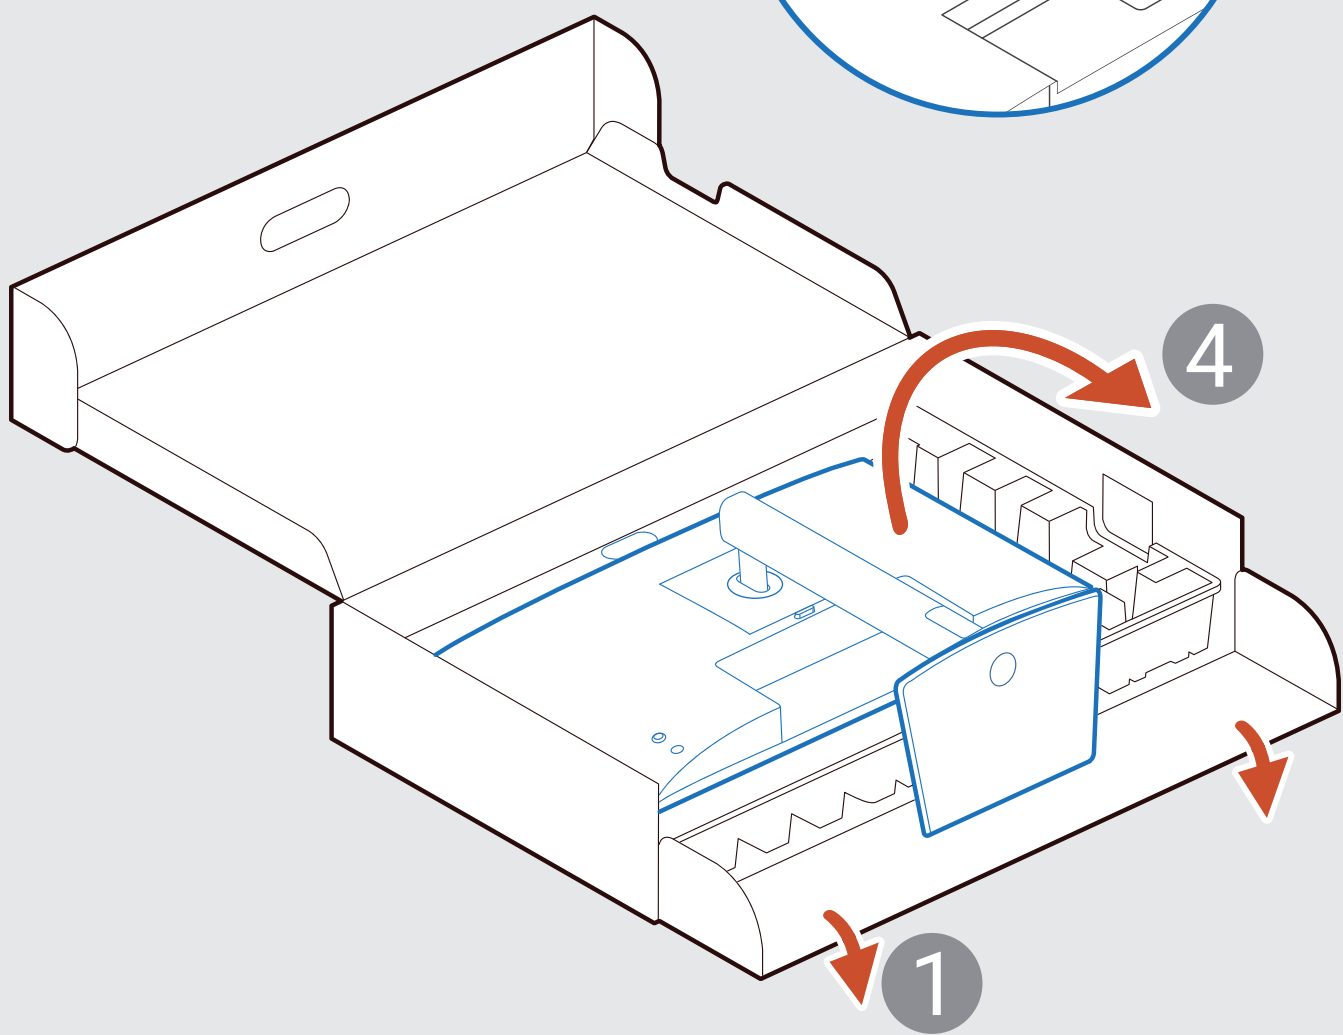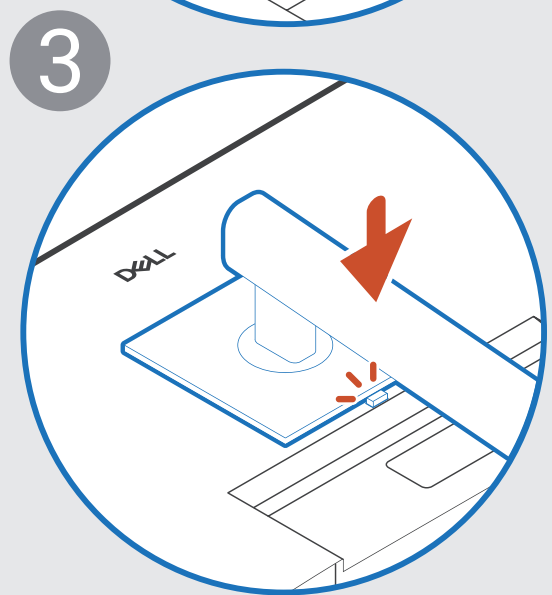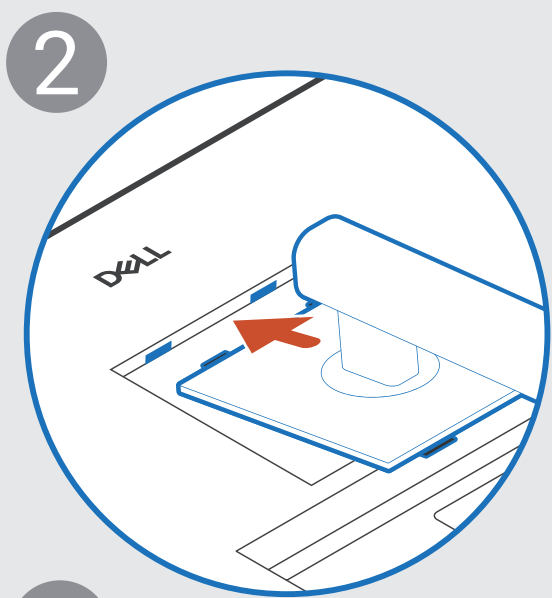


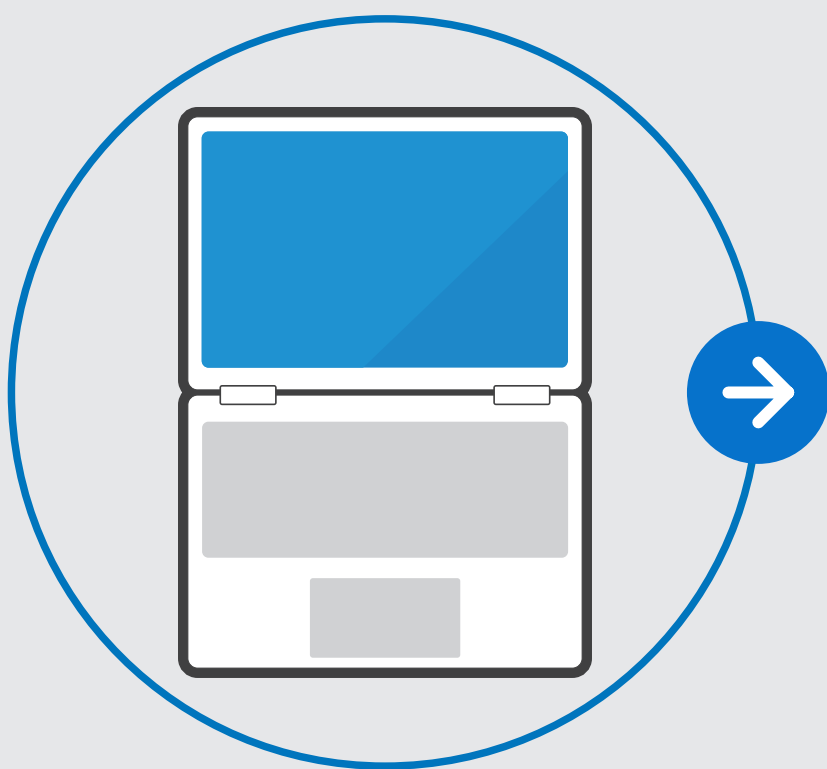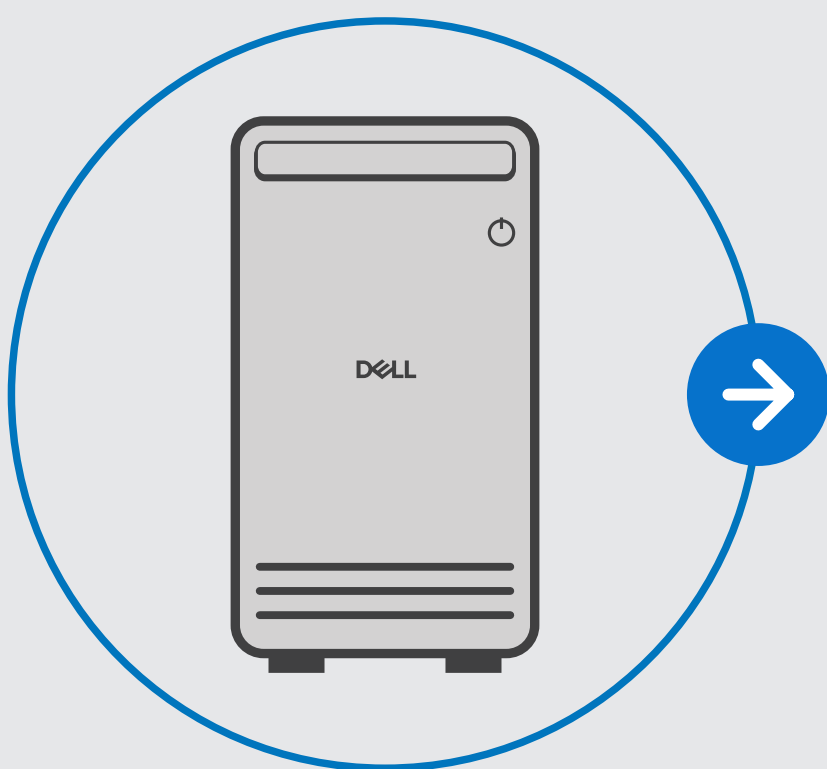

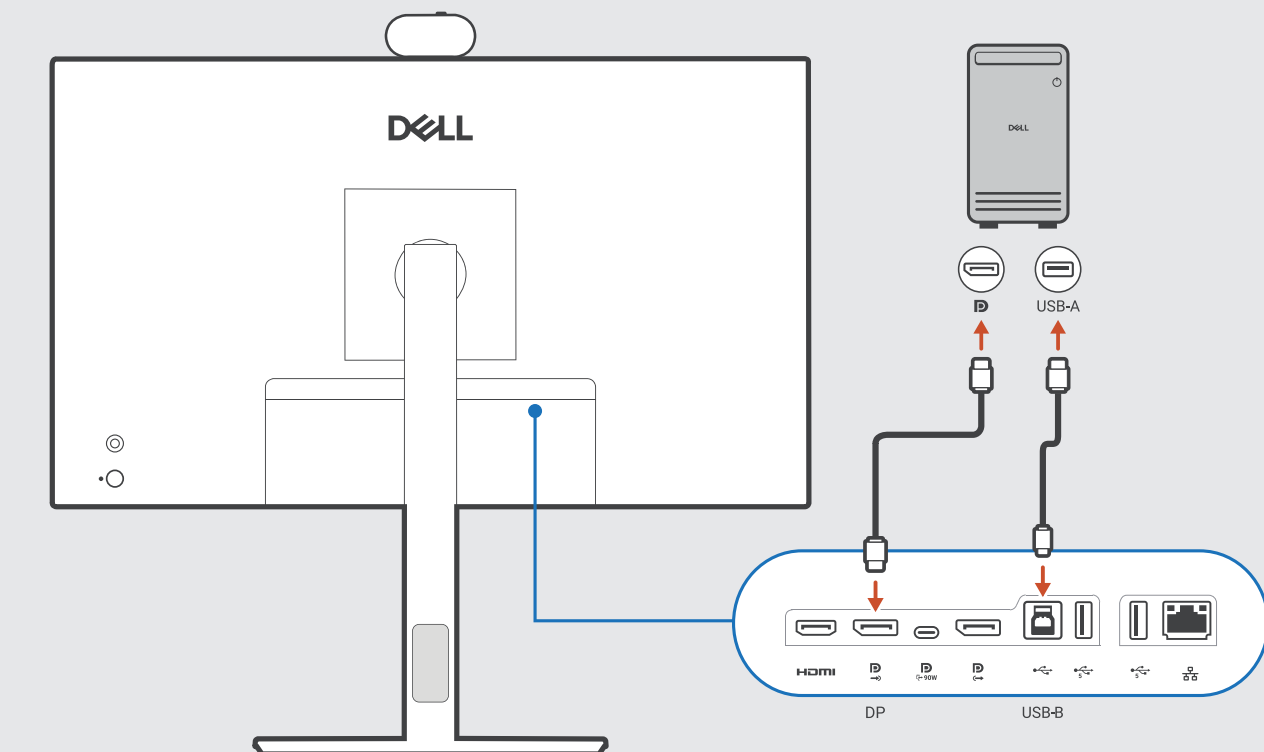


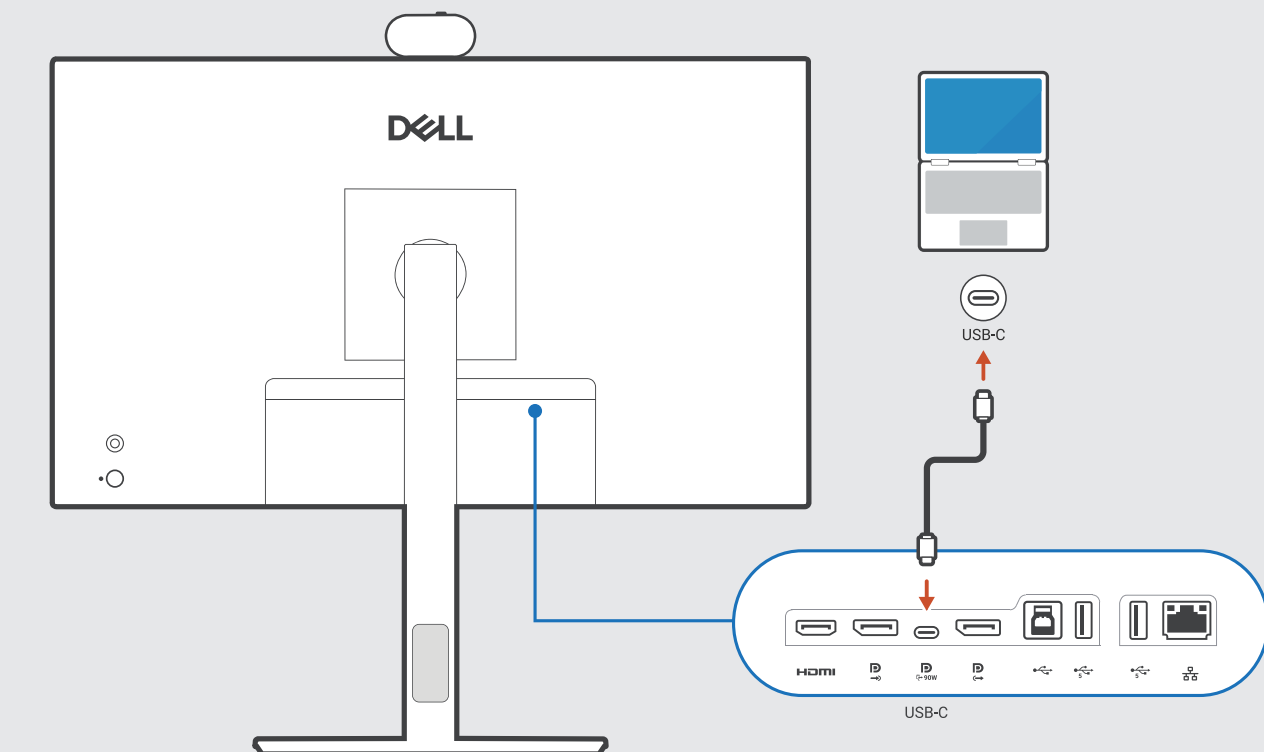

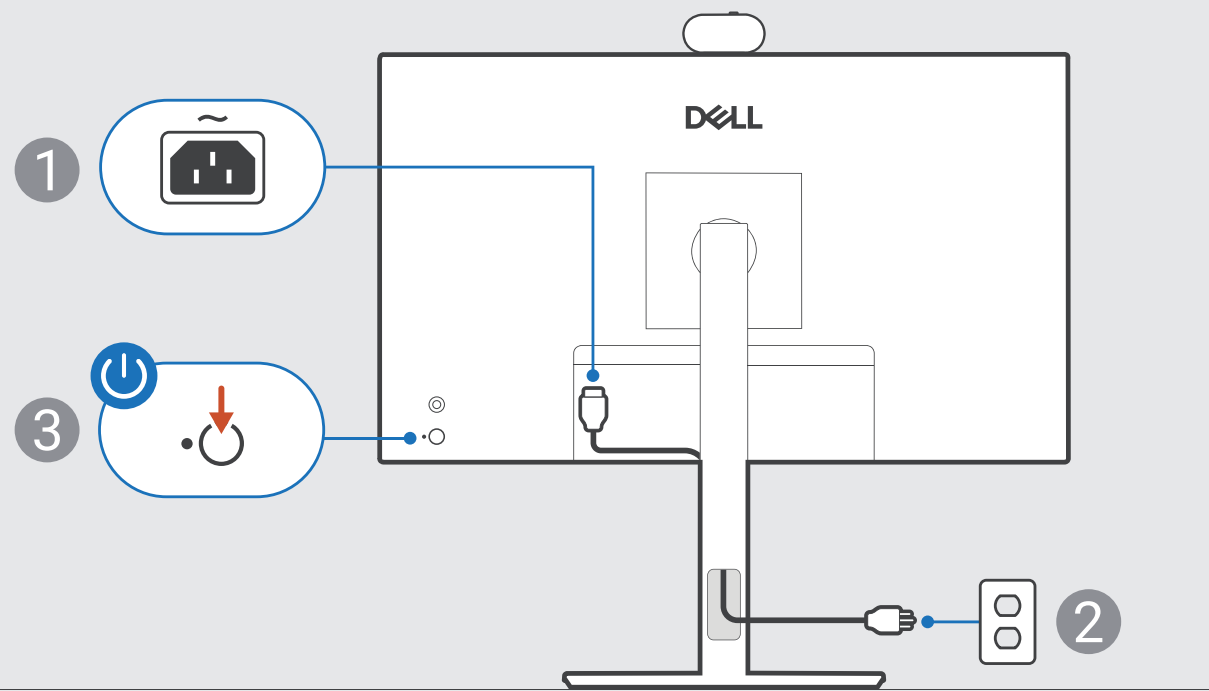


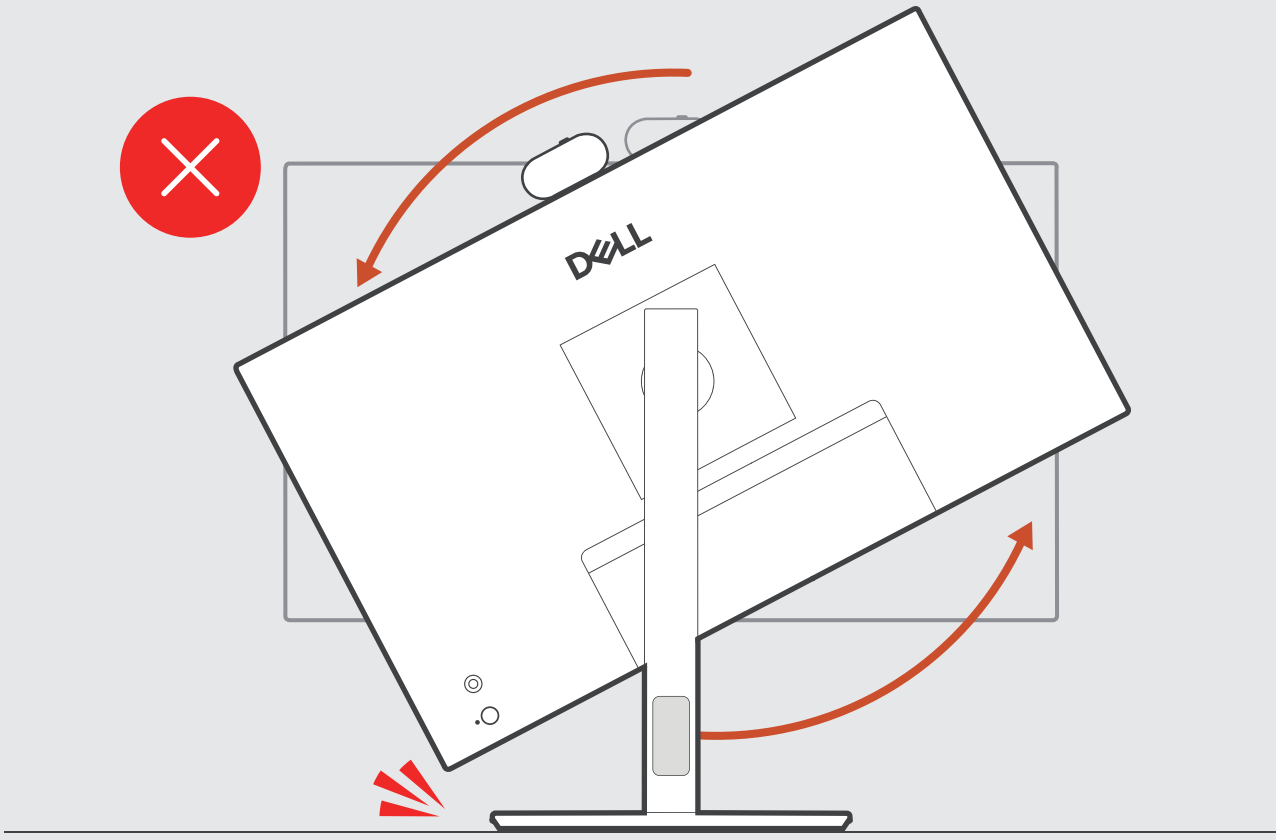



1


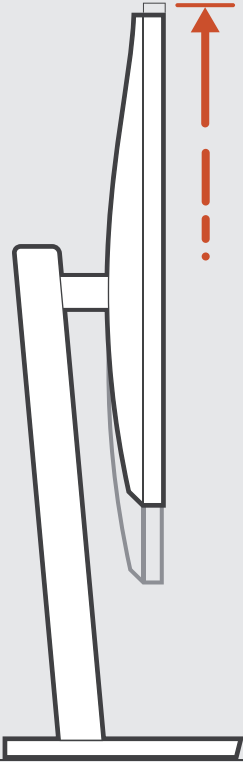



2

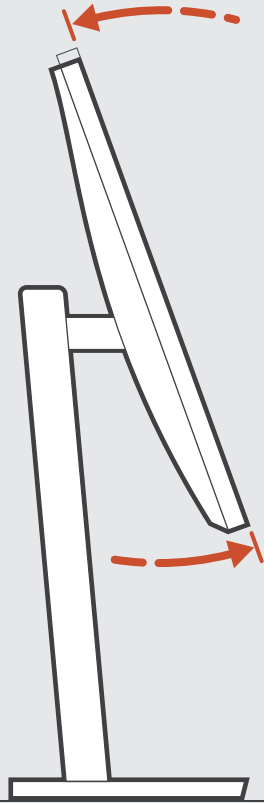


3

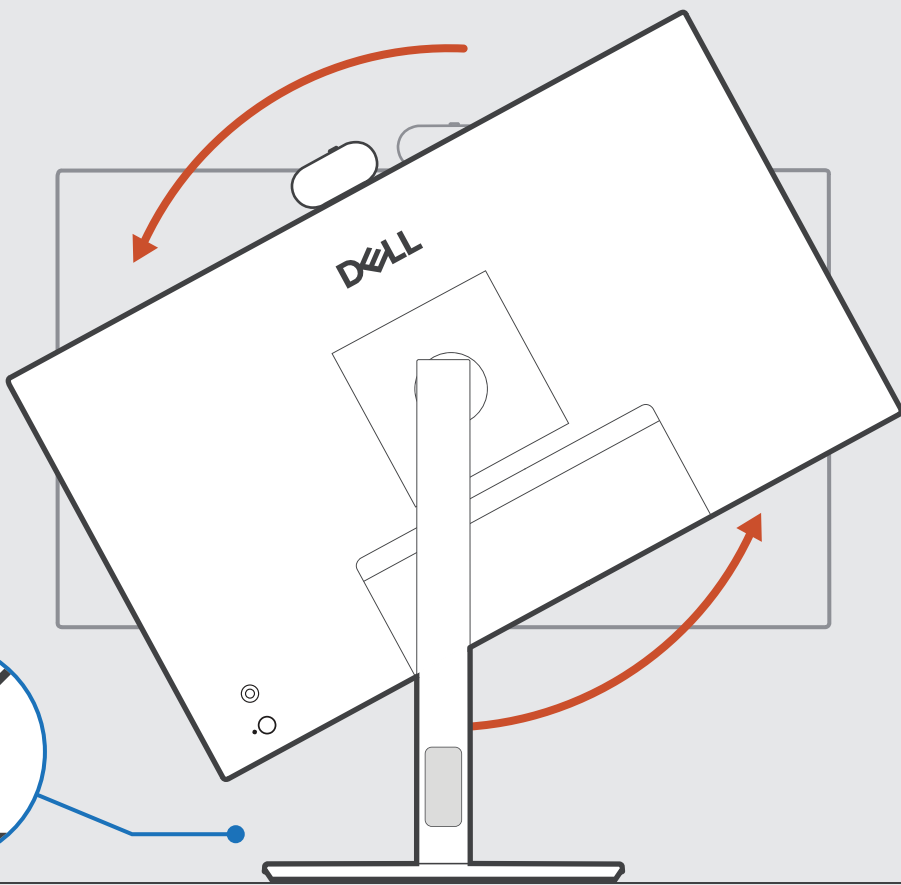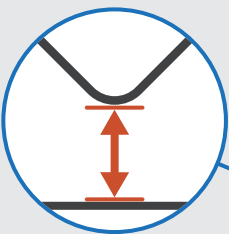


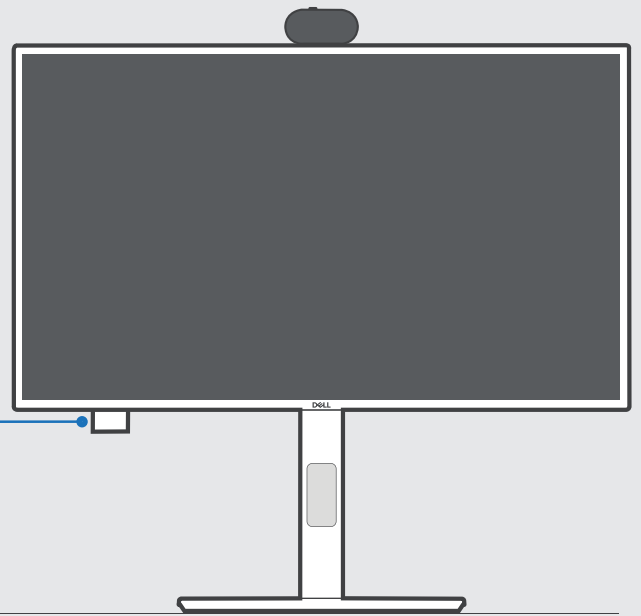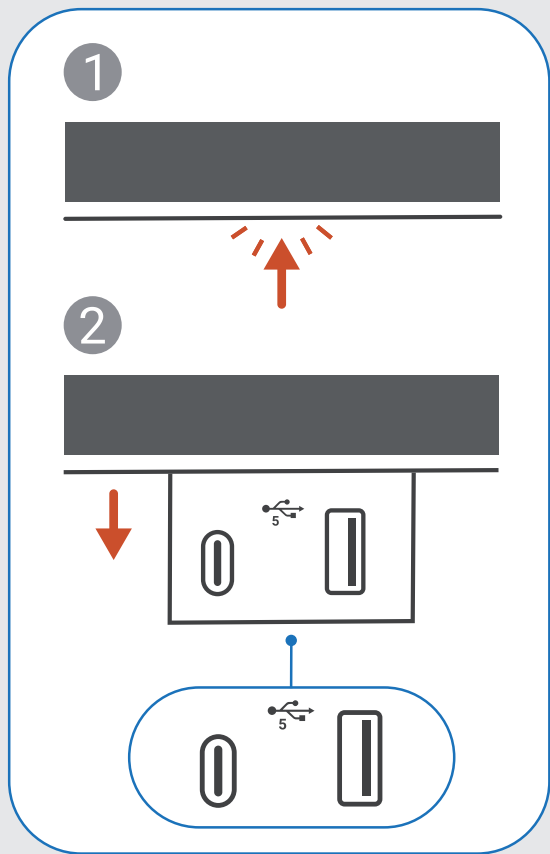

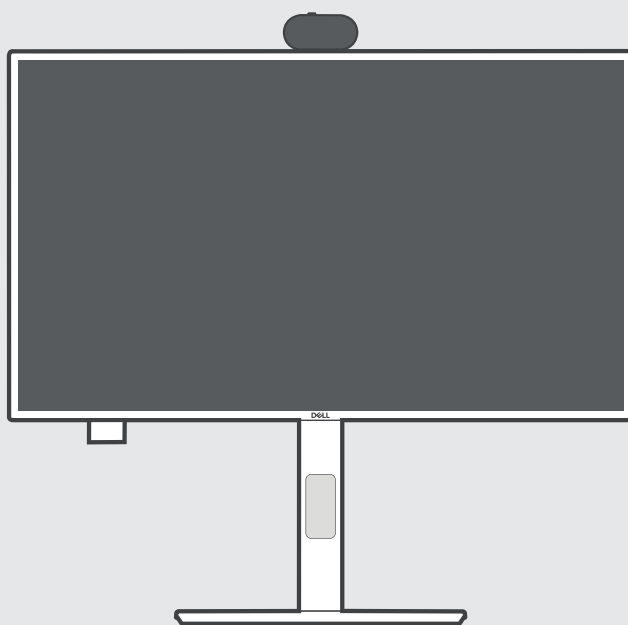


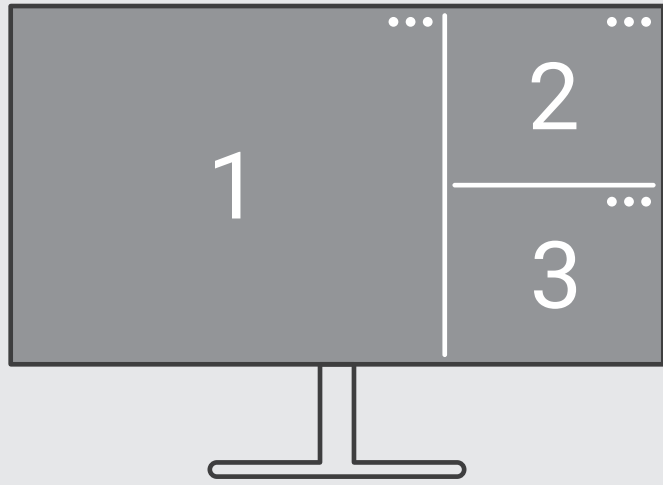


Dell Display and Peripheral Manager
Dell.com/support/ddpm

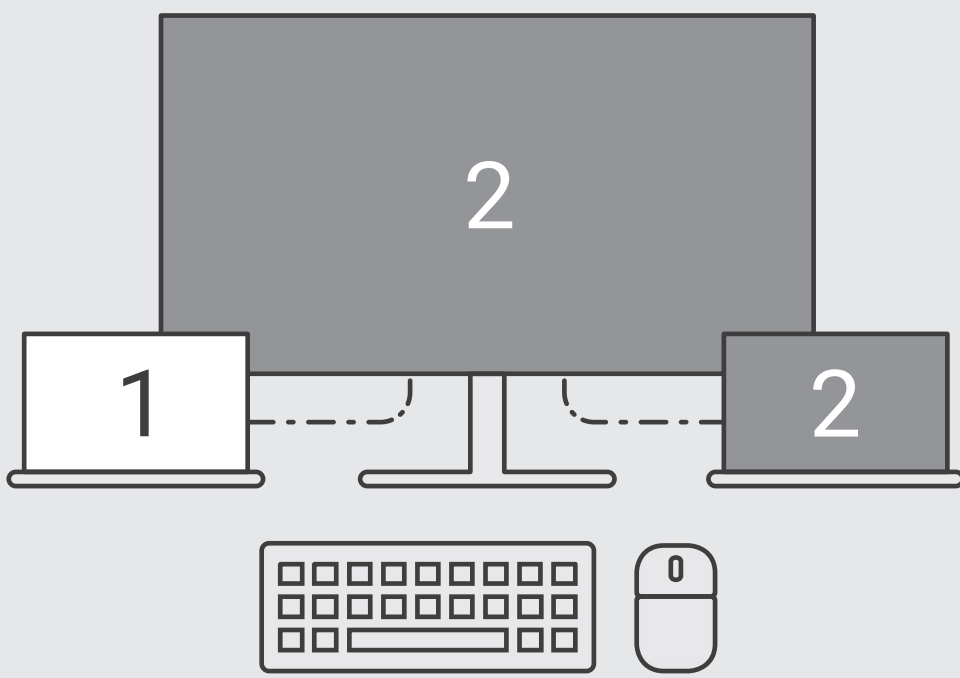

KVM

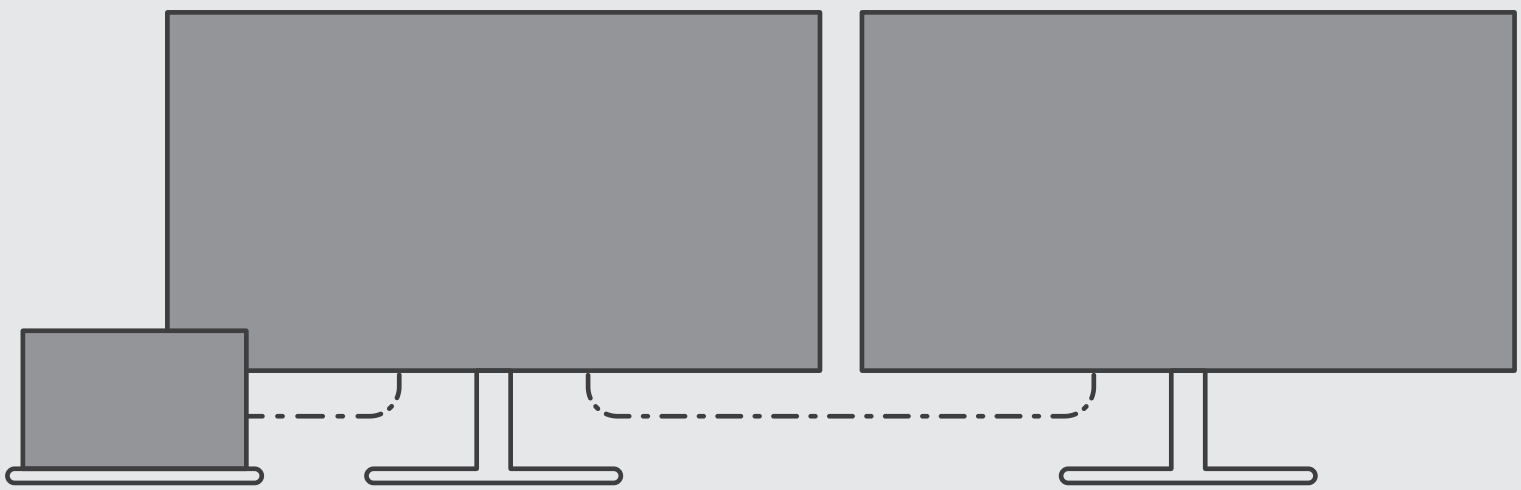

Daisy chain

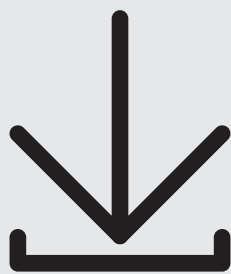

Dell.com/support/P2426HEB