

## Refrigerator Compartment

- A.** Fan and anti-bacterial and anti-odour filter (depending on the model)
- B.** Internal light (depending on the model)
- C.** Shelves
- D.** LED lights (depending on the model)
- E.** Crisper drawer(s) lid
- F.** Crisper drawer/drawers
- G.** Rating plate (at the side of crisper drawer)
- H.** Control panel
- N.** Dairy compartment
- O.** Door trays
- P.** Bottle holder (if provided)
- Q.** Bottle bin

- Least cold zone**
- Intermediate temperature zone**
- Coldest zone**
- Crisper zone**

## Freezer Compartment

- I.** Upper basket (freezing zone)
- L.** Middle and lower baskets (storage area for frozen and deep-frozen food)
- M.** Ice cube tray (if provided)

**Note:** All shelves, door trays and racks are removable.

The right temperatures for the storage of foodstuffs are preset in the factory

**Read the user handbook carefully before using the appliance.**

**Specifications, technical data and images may vary from model to model.**

## 6th Sense Fresh Control function

Enables the appliance to quickly reach optimal storage conditions in terms of internal temperature and humidity. The 6th Sense Fresh Control function can be disabled by pressing the 6th Sense key. An unlit indicator lamp means that the 6th Sense Fresh Control function is disabled. Repeat the same procedure to enable the function again.

To optimize energy consumption, disable the 6th Sense Fresh Control function.

## On / Stand-by

Press and hold for three seconds to enable/disable the appliance. In Stand-by mode, the display shows a few dashes. Note: This operation will not disconnect the appliance from the power supply.

## Freezer compartment temperature

The display will show the freezer compartment temperature. A different temperature can be set using the + and - keys beside the display.

## Refrigerator compartment temperature


The display shows the refrigerator compartment temperature. A different temperature can be set using the + and - keys beside the display.

## Key Lock

The child lock can be enabled/disabled by pressing and holding the + and - keys near the child lock key for three seconds until a beep sounds to confirm your selection. If a key is pressed while the child lock is enabled, a beep sounds and "CL" or "LO" appear for a few seconds on the freezer compartment temperature display.

**Antibacterial/anti-odour filter exhausted** (if installed).

**Switching off acoustic alarms.**

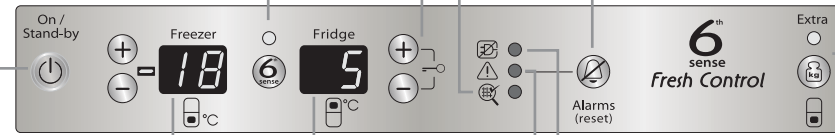

## Fast Freezing (Extra Load)

To be activated 24 hours before large quantities of food to be frozen are placed in the freezer compartment. The function disables automatically after 48 hours or can be switched off manually by pressing the button again. Do not place food to be frozen beside food that is already frozen. When freezing large quantities of food, a temperature alarm may occur (depending on the model).

## Blackout Alarm

See table below.

## Temperature or Malfunction Alarm

See table below.

What to do if...	Possible causes:	Solutions:
The control panel is off and the appliance is not working.	There might be a problem with the electric power supply to the appliance.	Check: - There isn't a power supply failure. - If the plug is inserted properly into the power socket and the bipolar mains switch is in the right position (i.e. power supplied to the appliance). - The electric circuit safety devices installed in the house are fully functional. - The power cable isn't broken.
Only for the version with double display: the control panel remains lit up (even with the door closed), the internal light is not working (or flashes) and a beep sounds (if not previously disabled).	<b>Refrigerator door open alarm</b> This activates when the refrigerator door is left open at length.	To switch off the acoustic alarm, press the mute alarm button and to remove an alarm completely, close the refrigerator door. On re-opening the door, check the light is working properly.
The internal light is not working.	If the control panel has 2 displays, check for a refrigerator door open alarm (see previous line). In all other cases, you may need to replace the light.	Models with standard lights: unplug the appliance from the mains power supply, check the bulb and replace it if necessary with a new one (see section entitled "Changing bulb or LED"). Models with LED lights: contact an authorized After-Sales Service.
It is not cold enough inside the compartments.	There could be various causes (see "Solutions" column).	Check: - The doors close properly. - The appliance is not placed near a heat source. - The right temperature has been set. - The circulation of air through the fan grilles at the bottom of the appliance is not obstructed.
Water collects at the bottom of the refrigerator compartment.	The defrost water drain is obstructed.	Clean the defrost water drain hole (see "Maintenance and Cleaning" section).
The front edge of the appliance near where the door seal strikes is warm.	This is not a defect. It is a design feature to prevent condensation from forming.	No action is required.
The control panel won't do anything: Every time a key is pressed, "CL" or "LO" appear on one or both displays.	The <b>"Key Lock"</b> function has been enabled.	Disable the function as explained in the Quick Start Guide.
The red indicator lamp will light up and a beep will sound (if not previously disabled).	<b>Temperature Alarm Freezer Compartment</b> The temperature alarm indicates that the temperature in the compartment is not ideal. This can happen: When it is first used after defrosting and/or cleaning, when freezing large quantities of food or when the freezer door doesn't close properly.	Press the <b>mute acoustic alarm</b> button to switch off the sound signal. The red indicator lamp goes off automatically when an optimal temperature has been reached. If the temperature alarm persists, contact an authorized After-Sales Service.
The red indicator lamp is flashing, there are letters on the single display, and a buzzer is sounding (if not previously disabled).	<b>Malfunction Alarm</b> The alarm indicates that a technical component has malfunctioned.	Call an authorized After-Sales Service. Press the <b>mute acoustic alarm</b> button to switch off the sound signal.
A buzzer sounds, and the freezer temperature display and the red indicator lamp (if installed) flash.	<b>Blackout Alarm (where provided)</b> This alarm activates when there has been an extended power failure causing the freezer compartment temperature to rise. The value flashing on the freezer display is the highest temperature reached during the power failure.	Press the mute alarm button to switch off the acoustic signal. Check the state of foodstuffs before consuming them.
A buzzer sounds. The red indicator lamp flashes or the letters "AF" appear on the display (depending on the model).	<b>Antibacterial and anti-odour filter exhausted (if installed).</b> Replace the antibacterial filter.	After replacing the filter, press and hold the mute alarm button for at least three seconds: The red indicator lamp will go off.