

# Dell Pro 7 Slim Keyboard and Mouse

## KM726

### User's Guide

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

# Contents

<b>About your keyboard and mouse</b> . . . . .	<b>4</b>
Package contents . . . . .	4
Information available on the packaging . . . . .	5
<b>Features</b> . . . . .	<b>6</b>
Mouse . . . . .	6
Keyboard . . . . .	7
Launch Copilot in Windows . . . . .	8
<b>Regulatory and Piece Part Identification (PPID) label location</b> . . . . .	<b>9</b>
<b>Dell Display and Peripheral Manager</b> . . . . .	<b>11</b>
Installing Dell Display and Peripheral Manager . . . . .	11
<b>Setting up your wireless mouse</b> . . . . .	<b>12</b>
<b>Setting up your wireless keyboard</b> . . . . .	<b>14</b>
<b>Pairing with a USB receiver</b> . . . . .	<b>15</b>
<b>Pairing your wireless keyboard and mouse using Swift Pair</b> . . . . .	<b>16</b>
<b>Pairing your wireless keyboard and mouse using Bluetooth</b> . . . . .	<b>17</b>
<b>Pairing device two using Bluetooth</b> . . . . .	<b>18</b>
<b>Switching between paired devices</b> . . . . .	<b>19</b>
Smart Connect . . . . .	19
<b>Mouse specifications</b> . . . . .	<b>20</b>
General . . . . .	20
Electrical . . . . .	20
Physical characteristics . . . . .	20
Environmental . . . . .	20
Wireless . . . . .	20
<b>Keyboard specifications</b> . . . . .	<b>21</b>
General . . . . .	21
Electrical . . . . .	21
Physical characteristics . . . . .	21
Environmental . . . . .	21
Wireless . . . . .	21
<b>Troubleshooting</b> . . . . .	<b>22</b>
<b>Statutory information</b> . . . . .	<b>24</b>
<b>Warranty</b> . . . . .	<b>24</b>
Limited warranty and return policies . . . . .	24
For U.S. customers: . . . . .	24
For European, Middle Eastern and African customers: . . . . .	24
For non-U.S. customers: . . . . .	24
<b>European Accessibility Act</b> . . . . .	<b>25</b>
<b>Revision history</b> . . . . .	<b>26</b>



# About your keyboard and mouse

## Package contents

The following table provides the list of components that are shipped with your keyboard and mouse. If any component is missing, contact Dell. For more information, see [Contacting Dell](#).

**NOTE:** Some items may be optional and may not ship with your keyboard and mouse. Some features may not be available in certain countries.

**Table 1. Components and descriptions**

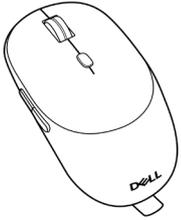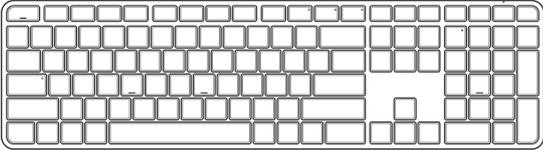Component image	Component description
	Dell MS726 Mouse
	Dell KB726 Keyboard
	Dell Secure Link USB receiver <b>NOTE:</b> The Dell Secure Link USB receiver is stored in the mouse. <b>NOTE:</b> The Dell Secure Link USB receiver is referred to as USB receiver in the rest of the document.
	Document <b>NOTE:</b> Scan the QR code on the document to access the information about setting up, features, specifications, and troubleshooting.
	AA-type battery
	AAA-type batteries (2)

## Information available on the packaging

KM726 is compatible with the following operating systems:

- Windows
- macOS
- iOS
- Red Hat
- Ubuntu
- ChromeOS


The following accessories are shipped in the box:

- USB receiver
- **NOTE:** USB receiver is stored inside the mouse.
- Batteries (AA-type x 1 and AAA-type x 2)

For information about recycling, see the [Dell recycling](#).

# Features

## Mouse

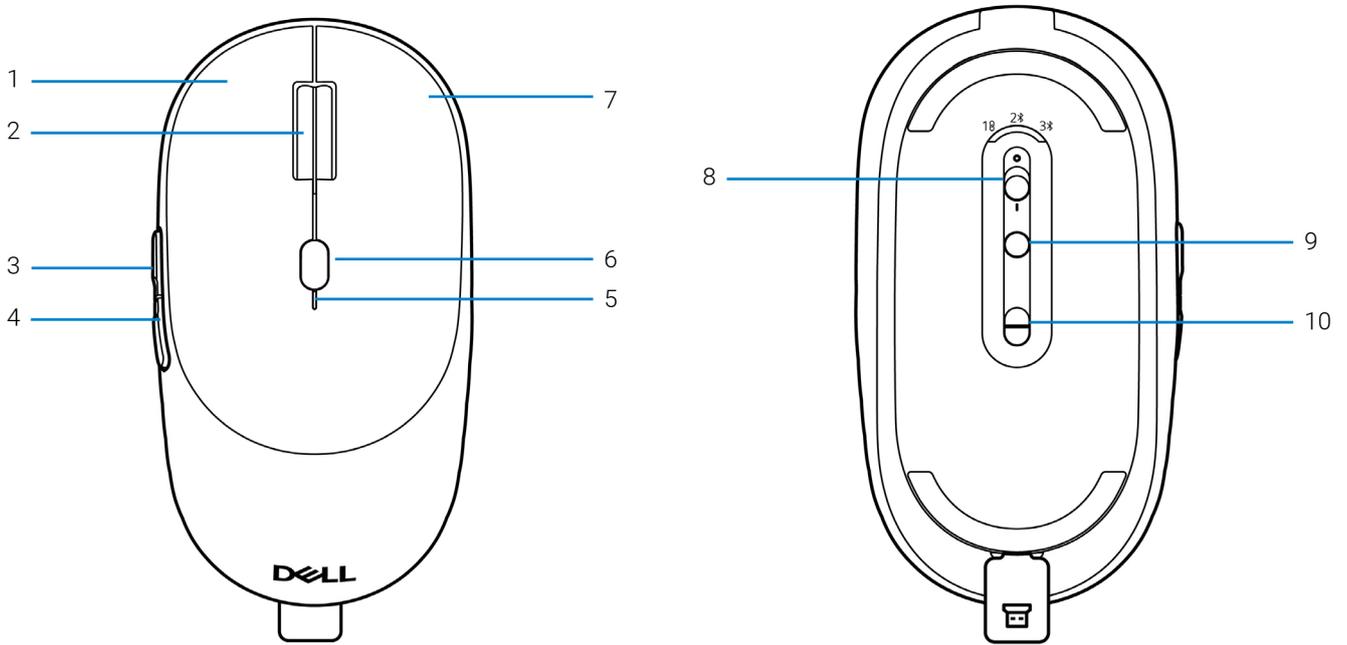

**Figure 1. Top and Bottom views**

**Table 2. Mouse components**

Callout	Description	Callout	Description
1	Left button	2	Scroll wheel
3	Page up button	4	Page down button
5	Battery-status light	6	Scroll speed button
7	Right button	8	Power switch
9	Connection-mode button	10	Optical sensor

# Keyboard

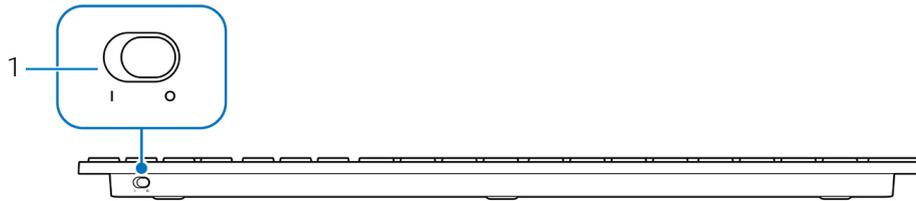


Figure 2. Back view

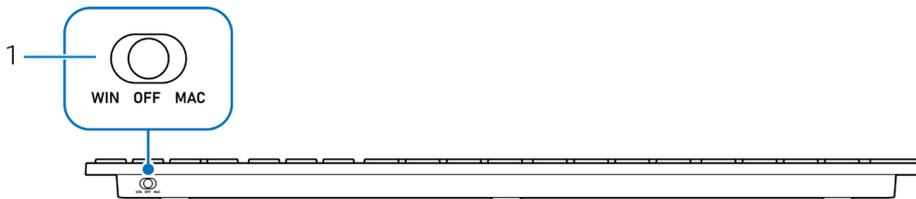


Figure 3. Back view (MAC and Windows)



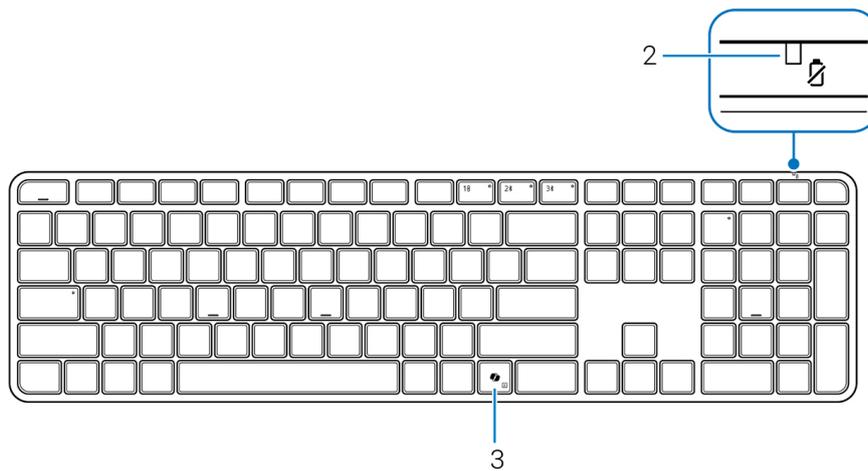


Figure 4. Top view

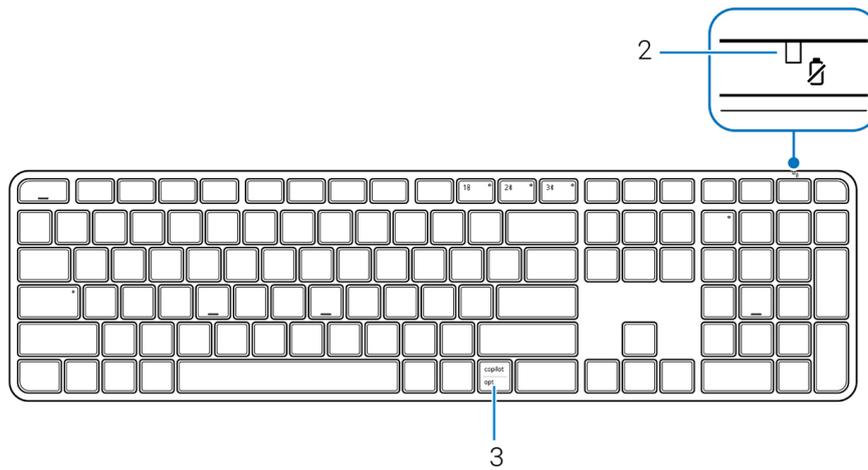

**Figure 5. Top view (MAC and Windows)**

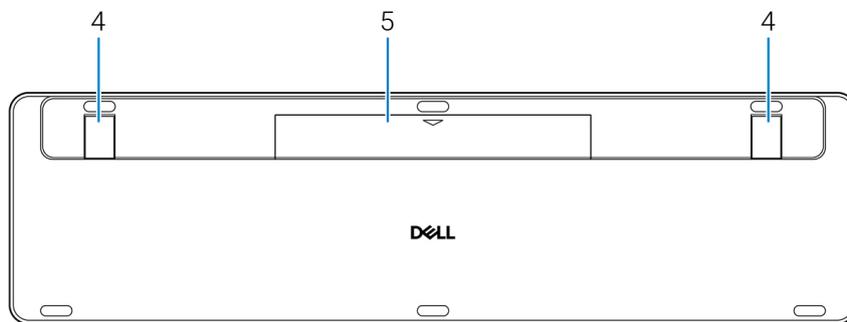

**Figure 6. Bottom view**

**Table 3. Keyboard components**

Callout	Description	Callout	Description
1	Power switch	2	Battery-status light
3	Copilot/Option key	4	Keyboard feet
5	Battery cover		

## Launch Copilot in Windows


**NOTE:** Use the  key with supported Windows 11 devices. The feature availability varies by device and market, see [aka.ms/KeySupport](https://aka.ms/KeySupport).

**NOTE:** Copilot in Windows is available only in approved markets.


# Regulatory and Piece Part Identification (PPID) label location

The regulatory and PPID labels are in the battery compartment.


① **NOTE:** The following images are sample illustrations that are intended only to show the location of the regulatory label. To view the regulatory and PPID labels or logos, open the mouse cover and keyboard battery cover, respectively.

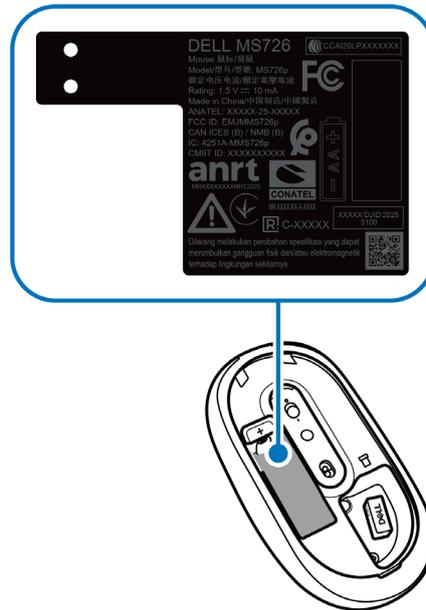

**Figure 7. Regulatory and PPID label location in the mouse - Front**

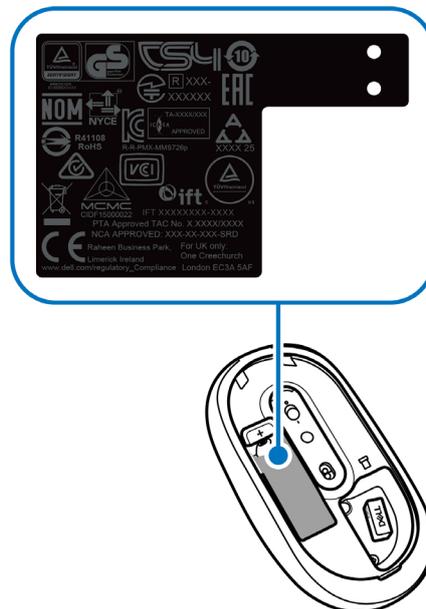

**Figure 8. Regulatory and PPID label location in the mouse - Rear**

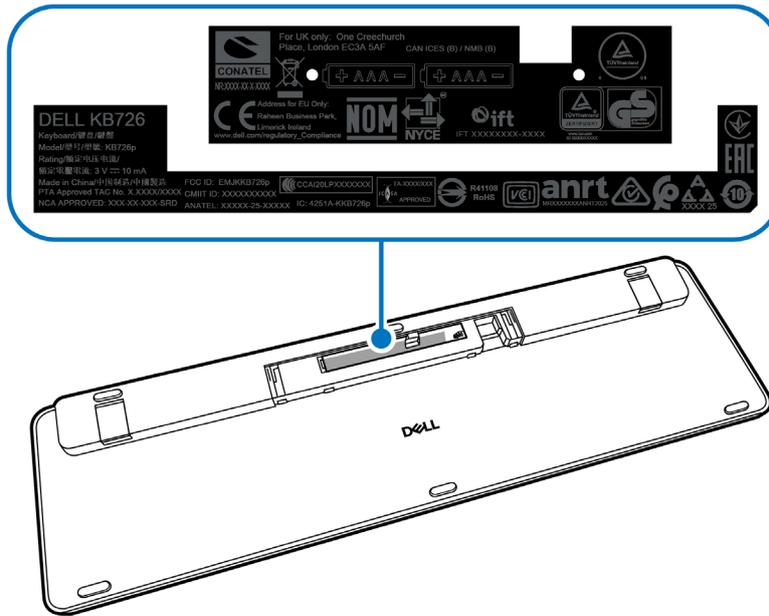

**Figure 9.** Regulatory and PPID label location in the keyboard

# Dell Display and Peripheral Manager

Dell Display and Peripheral Manager is an app that enables you to set up and configure your Dell monitors and peripherals. With this app you can:

- Assign program shortcuts to device programmable buttons or keys through **Button Customization** tab or **Key Customization** tab. You can even set shortcuts specific to an app with App settings.
- View device information such as firmware version and battery status for wireless devices.
- Upgrade to the latest firmware for your device.
- Configure DPI setting and set primary mouse button.
- Pair or unpair to the USB receiver.

## Installing Dell Display and Peripheral Manager


When you connect the device to your computer for the first time, you may be prompted to download and install the app.

**i** **NOTE:** If the download prompt does not appear within a few minutes, you can manually install the software from [Dell.com/support/DDPM](https://Dell.com/support/DDPM).

For more information, expand **Support Resources** and click or tap **Manuals & Documents** to access the *Dell Display and Peripheral Manager User's Guide*.


# Setting up your wireless mouse

1. Locate the slot at the back of the mouse. Using your fingertip, pry open the base cover.

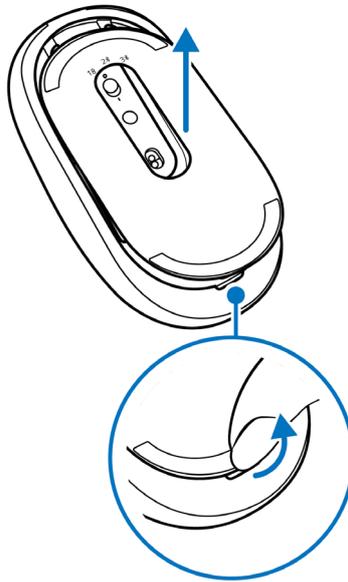


**Figure 10.** Opening the base cover

2. Remove the USB receiver from its compartment.

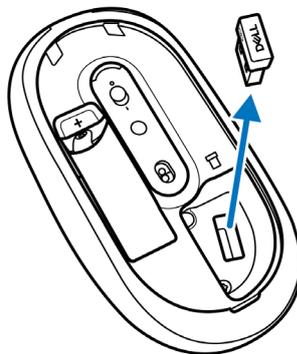

**Figure 11.** Removing the USB receiver

3. Install the AA battery in the battery compartment.

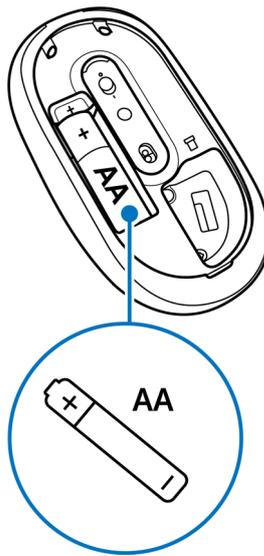


**Figure 12.** Installing the battery

4. Replace the base cover.



**Figure 13.** Replacing the base cover


5. Slide the power switch down to turn on the mouse.

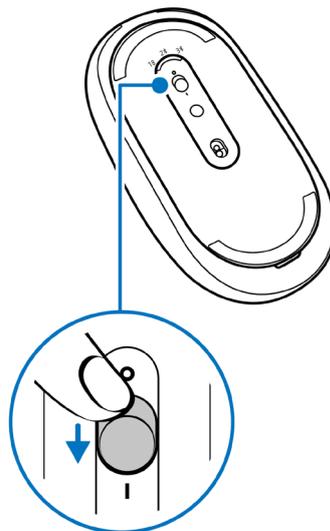

**Figure 14.** Turning on the mouse


# Setting up your wireless keyboard

1. Using your fingertip, slide the battery cover down to open the battery cover.

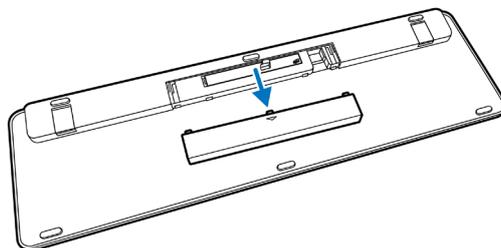


**Figure 15. Opening the battery cover**

2. Install the AAA batteries into the battery compartment and then replace the battery cover.

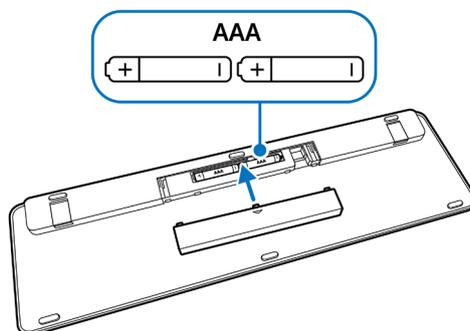


**Figure 16. Installing the batteries**

3. Slide the power switch to the left to turn on the keyboard.

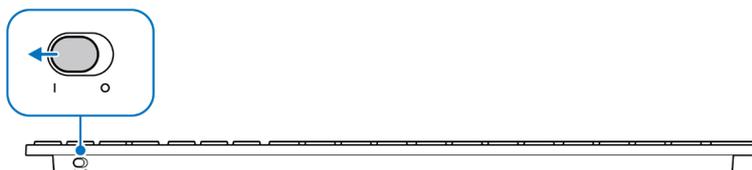

**Figure 17. Turning on the keyboard**

Depending on the keyboard type, slide the power button to the left to turn on the keyboard on Windows platform or slide to the right to turn on the keyboard on MAC.

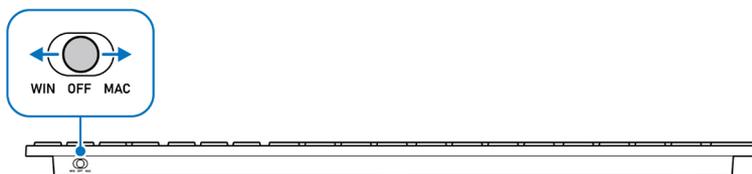


**Figure 18. Turning on the keyboard (MAC and Windows)**

# Pairing with a USB receiver

Your Dell wireless keyboard and mouse can be paired with devices using the USB receiver. You can pair and switch between a laptop, desktop, and a compatible mobile device.


**NOTE:** You can connect a device to your wireless keyboard and mouse using the USB receiver.

1. Connect the USB receiver to the USB port on your computer.

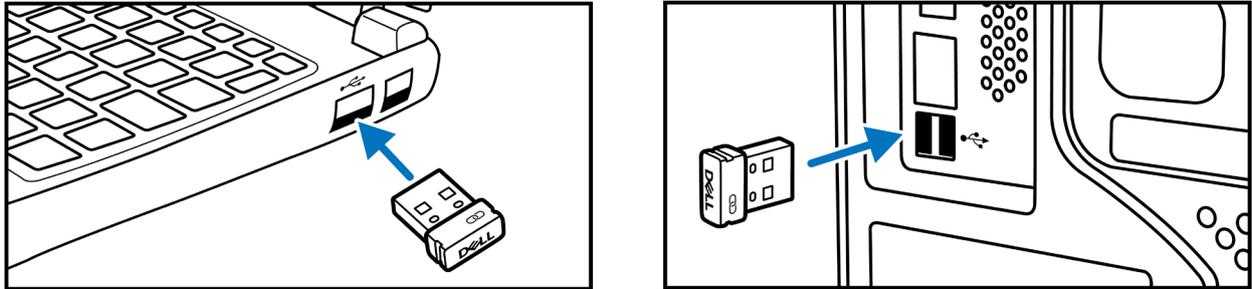


**Figure 19. Connecting the USB receiver**

2. Toggle the connection-mode button on your mouse until USB mode is selected (10). Press 10 on the keyboard. The LED indicator (10) turns on automatically for three seconds and then turns off.

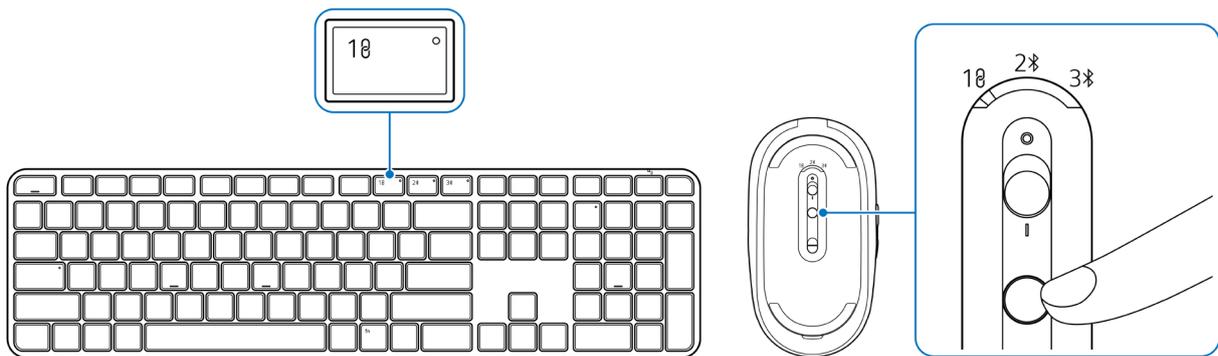

**Figure 20. Selecting the USB mode**


The keyboard and mouse are now connected to your computer.

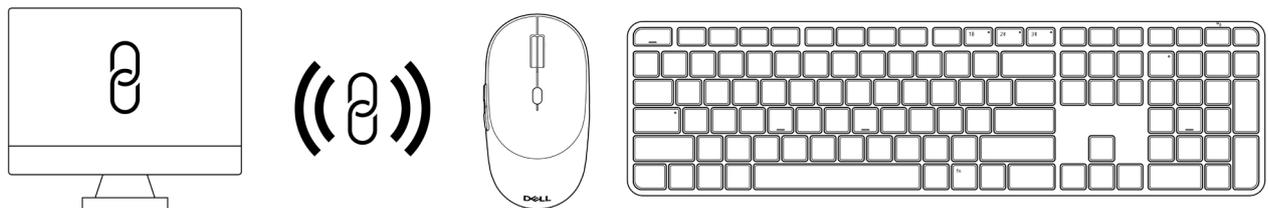

**Figure 21. Keyboard and mouse connected to the computer**


# Pairing your wireless keyboard and mouse using Swift Pair

1. In Windows Search, type Bluetooth.
2. Click **Bluetooth and other devices settings**. The **Settings** window appears.
3. Ensure that the **Show notifications to connect using Swift Pair** setting is turned on.

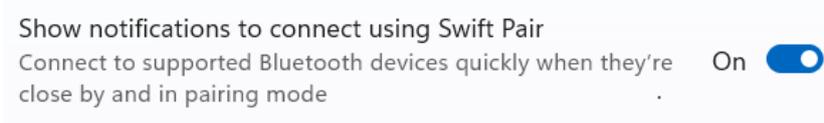


**Figure 22. Show notifications**

4. Ensure that the Bluetooth is turned on in your computer.
5. Place your wireless mouse near your computer. Then, press the connection-mode button to switch to the first Bluetooth pairing mode (2⌘).
6. Press the connection-mode button for three seconds. Ensure that the Bluetooth channel LED (2⌘) blinks white, indicating that the Bluetooth pairing is initiated. The **New Dell MS726 found** window appears.
7. Click **Connect** to confirm the pairing process between the wireless mouse and your computer.

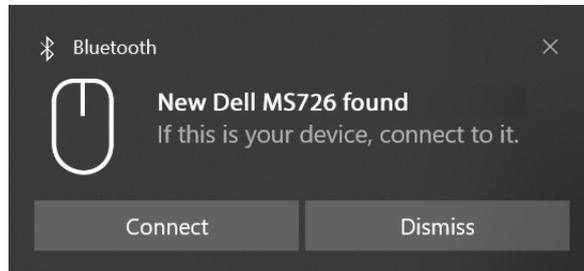

**Figure 23. New Dell MS726 found**

8. On the wireless keyboard, press 2⌘ to initiate the Bluetooth pairing. The **New Dell KB726 found** window appears. Click **Connect** to confirm the pairing process between the wireless keyboard and your computer.

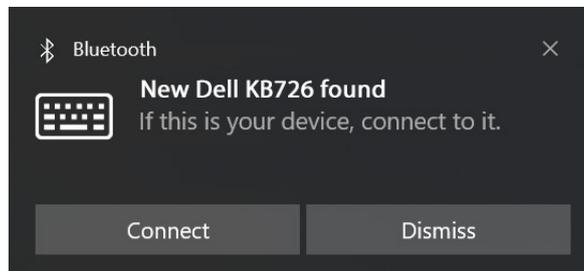


**Figure 24. New Dell KB726 found**

# Pairing your wireless keyboard and mouse using Bluetooth

Your Dell wireless keyboard and mouse can be paired with your Bluetooth-enabled computer. You can pair and switch between laptop, desktop, and a compatible mobile device.

- ① **NOTE:** You can connect up to two devices with your wireless keyboard and mouse using Bluetooth.
- ① **NOTE:** Before pairing your wireless keyboard and mouse using Bluetooth, ensure that you unpair the inactive devices on your computer. Update the Bluetooth driver on your Dell computer to the latest version. For more information, see **Drivers & Downloads** at [Dell Support Site](#).
- ① **NOTE:** Ensure that the distance between your computer and mouse is within the Bluetooth reception range.


1. Toggle the connection-mode button on the wireless mouse to switch to the first Bluetooth pairing mode (2⌘).
2. Press the connection-mode button for three seconds. Ensure that the Bluetooth channel LED (2⌘) blinks white, indicating that the Bluetooth pairing is initiated.
3. On the wireless keyboard, press 2⌘ to initiate pairing.

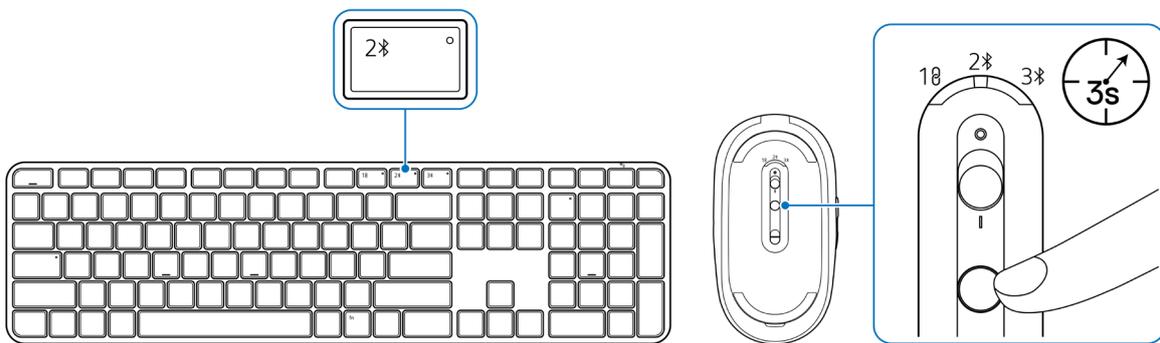

**Figure 25. Initiating pairing with devices**

4. Pair your wireless keyboard and mouse with your Bluetooth-enabled computer.
    1. Select **Start > Settings > Bluetooth & devices > Add device**.
    2. Click **Bluetooth**. A list of bluetooth-enabled devices are displayed.
    3. Click **Dell MS726**, and then click **Done**.
    4. Click **Dell KB726**. Type the numbers that are shown onscreen when using the wireless keyboard, press Enter, and then click **Done**.
- ① **NOTE:** Ensure that the distance between your computer and keyboard and mouse is within the Bluetooth reception range.
5. Confirm the pairing process on both the wireless keyboard and mouse and your computer. The Bluetooth channel LED (2⌘) turns solid white for a few seconds to confirm the pairing, and then the light turns off. After your keyboard and mouse and computer pairing is completed, the keyboard and mouse connect to the computer automatically.

The following image indicates the first Bluetooth (2⌘) enabled device pairing.

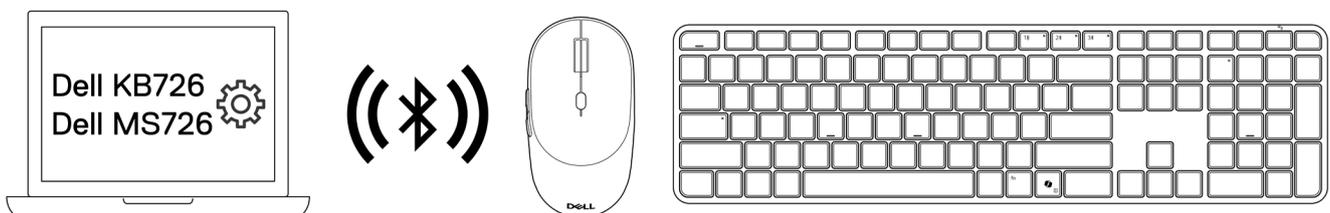


**Figure 26. First Bluetooth-enabled device pairing**

# Pairing device two using Bluetooth

- ① **NOTE:** You can connect up to two devices with your wireless keyboard and mouse using Bluetooth.
- ① **NOTE:** Before pairing your wireless keyboard and mouse using Bluetooth, ensure that you unpair the inactive devices on your computer. Update the Bluetooth Driver on your Dell computer to the latest version. For more information, see **Drivers & Downloads** at [Dell Support Site](#).
- ① **NOTE:** Ensure that the distance between your computer and mouse is within the Bluetooth reception range.
- ① **NOTE:** For Bluetooth pairing, you can use Swift Pair or manual pair option.


1. In **Windows Search**, type **Bluetooth**.
2. Click **Bluetooth and other devices settings**. The **Settings** window appears.
3. Ensure that the Bluetooth is turned on.
4. Place your wireless mouse near your computer. Then, press the connection-mode button to switch to the second Bluetooth pairing mode (3⌘).
5. Press the connection-mode button for three seconds. Ensure that the Bluetooth channel LED (3⌘) blinks white, indicating that the Bluetooth pairing is initiated. The **New Dell MS726 found** window appears.
6. On the wireless keyboard, press 3⌘ to initiate pairing.

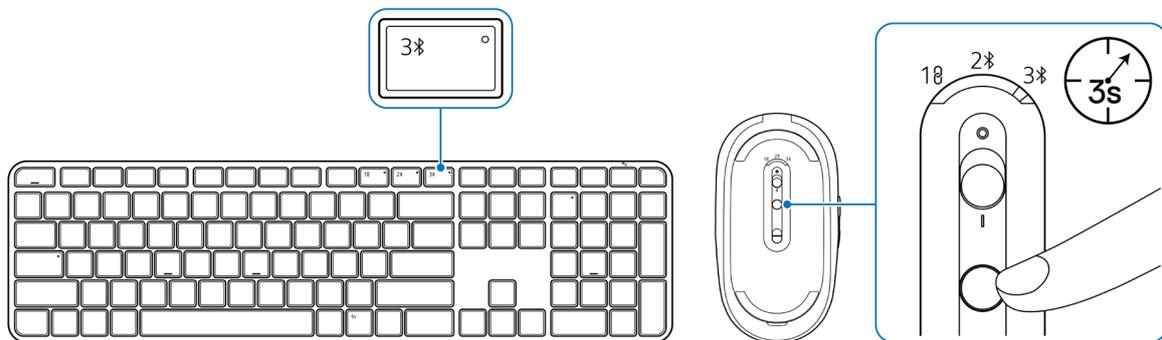

**Figure 27. Initiating pairing**


The **New Dell KB726 found** window appears.

7. Click **Connect** to confirm the pairing process between the wireless mouse and your computer.

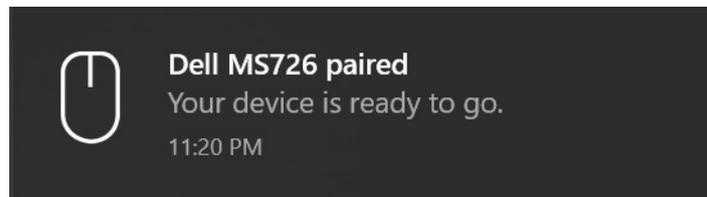

**Figure 28. Dell MS726 mouse is paired**

8. Click **Connect** to confirm the pairing process between the wireless keyboard and your computer. Type the pin number that is shown onscreen using the wireless keyboard and press Enter.

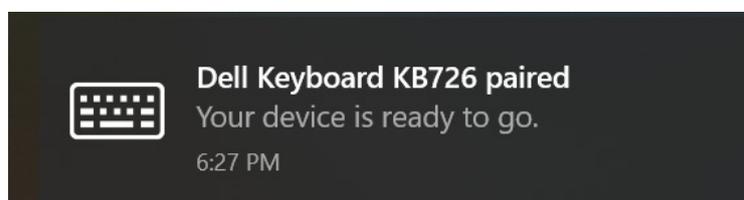


**Figure 29. Dell KB726 keyboard is paired**

# Switching between paired devices

Your wireless keyboard and mouse remember the last connection mode. When you turn on the keyboard and mouse, the last connection-mode light along with the low battery LED indicator on the mouse turns on for three seconds.

If you want to switch to another paired device, toggle the connection-mode button on the mouse until the respective connection-mode light turns on. Press the corresponding key on the keyboard.

For example, if the computer is connected through the USB receiver, press 3\* on the keyboard to immediately switch the active connection to the assigned Bluetooth device (3\*). Toggle the connection-mode button on the mouse until the connection-mode light (3\*) turns on.

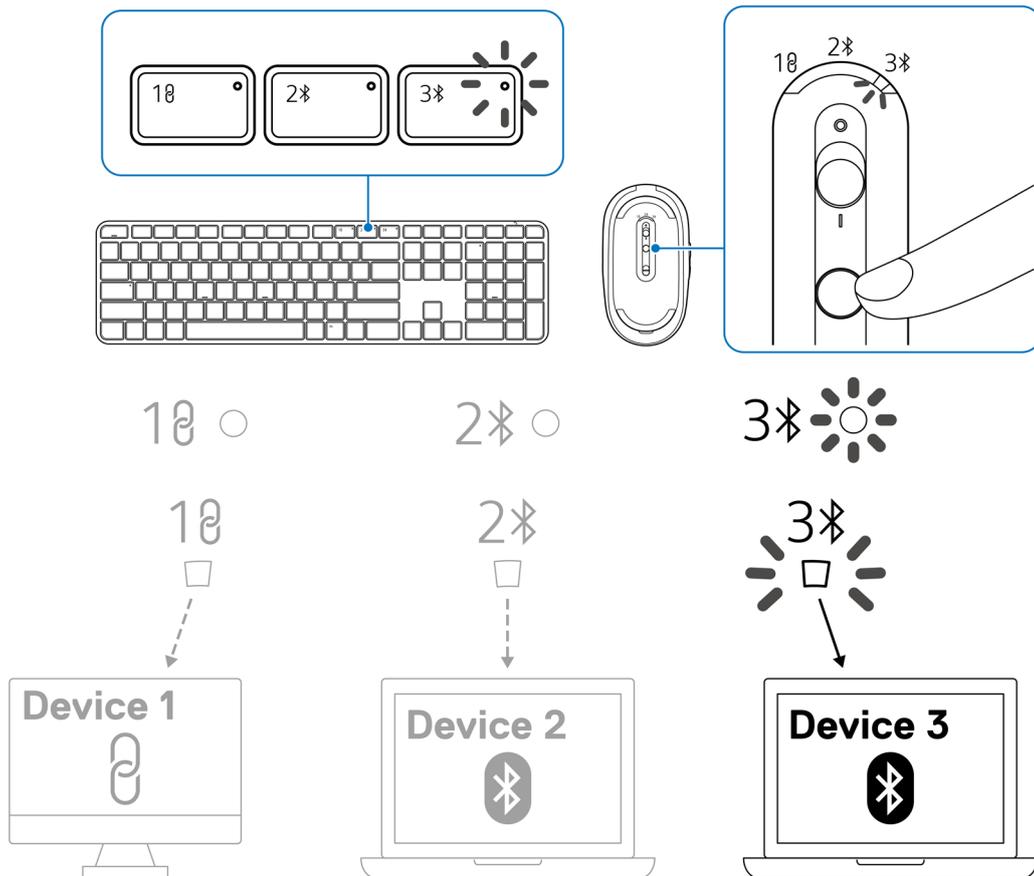

**Figure 30. Switching between paired devices**

## Smart Connect

- Once connectivity is set up on different channels, when the device is disconnected it searches and switches to another channel if that connection exists.
- When on Bluetooth, after an idle period of 10 seconds, the device checks for RF connectivity and switches over accordingly.
- Manual switching of connectivity to Bluetooth disables this feature until mouse or keyboard is turned off or on again.

# Mouse specifications

## General

**Table 4. General specifications**

Description	Value
Model number	MS726
Connection type	<ul style="list-style-type: none"><li>• Wireless (2.4 GHz RF with Dell Secure Link Receiver)</li><li>• Bluetooth 6.0 LE (supports Microsoft Swift Pair)</li></ul>
Supported operating systems	<ul style="list-style-type: none"><li>• Windows Server 2012; 2012 R2, 2016 (RF receiver only)</li><li>• Windows 8, 32/64-bit</li><li>• Windows 10, 32/64-bit</li><li>• Windows 11</li><li>• Android</li><li>• Chrome</li><li>• MAC OS</li><li>• Linux 6.x, Ubuntu 18, and Red Hat 8 Enterprise</li><li>• Free-DOS (RF receiver only)</li></ul>

## Electrical

**Table 5. Electrical specifications**

Description	Value
Operating voltage	1.50 V
Battery type	One AA battery

## Physical characteristics

**Table 6. Physical characteristics**

Description	Value
Weight (without battery)	73 g (0.16 lb)
Dimensions:	
Length	115.62 mm (4.55 in.)
Width	62.41 mm (2.46 in.)
Height	39.44 mm (1.55 in.)

## Environmental

**Table 7. Environmental specifications**

Description	Value
Temperature:	
Operating	-10°C to 50°C (14°F to 122°F)
Storage	-40°C to 65°C (-40°F to 149°F)
Storage humidity	20% to 90% relative humidity; non-condensing

## Wireless

**Table 8. Wireless specifications**

Description	Value
RF resolution	2.4 GHz RF
Transmission range	> 10 m (outdoor without any interference)

# Keyboard specifications

## General

**Table 9. General specifications**

Description	Value
Model number	KB726
Connection type	<ul style="list-style-type: none"><li>• Wireless (2.4 GHz RF with Dell Secure Link Receiver)</li><li>• Bluetooth 6.0 LE (supports Microsoft Swift Pair)</li></ul>
Supported operating systems	<ul style="list-style-type: none"><li>• Windows Server 2012; 2012 R2, 2016 (RF receiver only)</li><li>• Windows 8, 32/64-bit</li><li>• Windows 10, 32/64-bit</li><li>• Windows 11</li><li>• Android</li><li>• Chrome</li><li>• MAC OS</li><li>• Linux 6.x, Ubuntu 18, and Red Hat 8 Enterprise</li><li>• Free-DOS (RF receiver only)</li></ul>

## Electrical

**Table 10. Electrical specifications**

Description	Value
Operating voltage	3.00 V
Battery type	Two AAA batteries

## Physical characteristics

**Table 11. Physical characteristics**

Description	Value
Weight (without batteries)	570 g (1.26 lb)
Dimensions:	
Length	429.67 mm (16.91 in.)
Width	117.87 mm (4.64 in.)
Height	20.87 mm (0.82 in.)

## Environmental

**Table 12. Environmental specifications**

Description	Value
Temperature:	
Operating	-10°C to 50°C (14°F to 122°F)
Storage	-40°C to 65°C (-40°F to 149°F)
Storage humidity	20% to 90% relative humidity; non-condensing

## Wireless

**Table 13. Wireless specifications**

Description	Value
RF resolution	2.4 GHz RF
Transmission range	> 10 m (outdoor without any interference)

# Troubleshooting

**Table 14. Troubleshooting**

Problem	Possible solution
Unable to find dongle for the wireless mouse or wireless keyboard	<ol style="list-style-type: none"> <li>1. Locate the USB receiver inside your mouse. The USB receiver is shipped and placed inside the wireless mouse USB storage location. Only one USB receiver is required for both the wireless mouse and wireless keyboard.</li> <li>2. If you have accidentally unpaired the wireless mouse or keyboard, use the Dell Display and Peripheral Manager to pair the wireless mouse or keyboard again.</li> </ol>
Keyboard or mouse is not functioning	<ol style="list-style-type: none"> <li>1. Check if the batteries are inserted in the correct orientation. The "+" and "-" ends of the battery must be placed as indicated on the battery compartment.</li> <li>2. Check the battery level. <ul style="list-style-type: none"> <li>• If the device uses the rechargeable batteries, ensure that the batteries are fully charged.</li> <li>• If the batteries are exhausted, replace them with new batteries.</li> </ul> </li> <li>3. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light does not turn on.</li> <li>4. Restart your computer.</li> <li>5. Ensure that the USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on.</li> <li>6. Change the USB port.</li> </ol>
Unable to pair the keyboard or mouse with your computer	<ol style="list-style-type: none"> <li>1. Check the battery level. <ul style="list-style-type: none"> <li>• If the device uses the rechargeable batteries, ensure that the batteries are fully charged.</li> <li>• If the batteries are exhausted, replace them with new batteries.</li> </ul> </li> <li>2. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light does not turn on.</li> <li>3. Restart your computer.</li> <li>4. Ensure that the USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on.</li> <li>5. Change the USB port or insert the USB receiver into another USB port on your computer.</li> <li>6. Ensure that the distance between your computer and keyboard or mouse is within 10 meters.</li> <li>7. Use the Dell Display and Peripheral Manager to initiate the pairing process with your keyboard or mouse.</li> </ol>

Problem	Possible solution
<p>Mouse pointer does not move</p> <p>Mouse left/right button does not work</p> <p>Keyboard buttons do not work</p> <p>Wireless connection is lost</p>	<ol style="list-style-type: none"> <li>1. Check the battery level. <ul style="list-style-type: none"> <li>• If the device uses the rechargeable batteries, ensure that the batteries are fully charged.</li> <li>• If the batteries are exhausted, replace them with new batteries.</li> </ul> </li> <li>2. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light does not turn on.</li> <li>3. Restart your computer.</li> <li>4. Ensure that the distance between your computer and keyboard or mouse is within 10 meters.</li> <li>5. Remove if there are any debris under scroll wheel, keys, or buttons.</li> </ol>
<p>Mouse pointer is moving slowly</p>	<ol style="list-style-type: none"> <li>1. Ensure that the sensor is not obstructed or dirty. Glass or smooth glossy surfaces are not suitable for the mouse sensor to capture the mouse movement. Using a dark colored fabric mouse pad can improve the tracking.</li> <li>2. Change the mouse settings to adjust the pointer speed.</li> <li>3. Click or tap the tab that matches the Operating System (OS) installed on your laptop/desktop and perform the steps within that section to change the settings.</li> <li>4. In the Windows Search box, type <b>main.cpl</b>. Click or tap <b>main.cpl</b> in the list of programs. The <b>Mouse Properties</b> dialog box appears.</li> <li>5. Click or tap the <b>Pointer Options</b> tab. In the <b>Motion</b> section, move the slider to adjust the pointer speed to the desired level.</li> <li>6. Click or tap <b>OK</b>.</li> </ol>
<p>Dell Display and Peripheral Manager software features are not working as intended.</p>	<p>Dell Display and Peripheral Manager features are dependent on the operating system and processor that is installed in your computer.</p> <p>For more information, see the documentation for Dell Display and Peripheral Manager at <a href="#">Dell Support Site</a>.</p>
<p>Mouse scroll wheel intermittently skips lines or scrolls erratically</p>	<ol style="list-style-type: none"> <li>1. Ensure that the scroll wheel is not obstructed with debris or dirt as it may affect its functionality.</li> <li>2. Follow these steps to clean the mouse: <ul style="list-style-type: none"> <li>• Turn off or unplug the mouse.</li> <li>• Use compressed air or blow air around the scroll wheel to dislodge dust and debris.</li> <li>• Use a soft brush or toothbrush to gently brush around the wheel.</li> <li>• Dampen a cotton swab with isopropyl alcohol (70% or higher). Lightly clean the exposed part of the wheel and surrounding area.</li> <li>• Roll the wheel while cleaning to reach more surface area.</li> </ul> </li> <li>3. Try a different surface. Avoid using glass or smooth glossy surface. Using a dark colored fabric mouse pad can improve tracking.</li> <li>4. Ensure that you have installed the latest firmware version.</li> </ol>

# Statutory information

## Warranty

### Limited warranty and return policies

Dell Pro 7 Slim Keyboard and Mouse (KM726) carry a three-year limited hardware warranty. If purchased together with Dell computer, it follows the system warranty.

#### For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at [Terms of Sale](#). This document contains a binding arbitration clause.

#### For European, Middle Eastern and African customers:

Dell Pro 7 Slim Keyboard and Mouse (KM726) that is sold and used is subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which applies between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty – full details of the Dell end user contract and warranty terms can be found by going to [Terms of Sale](#), selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link for the end user terms or the "support" link for the warranty terms.

#### For non-U.S. customers:

Dell Pro 7 Slim Keyboard and Mouse (KM726) that is sold and used is subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which applies between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty – full details of Dell's warranty terms can be found by going to [Dell Site](#), selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link or the "support" link for the warranty terms.

## European Accessibility Act

- Power button location: With the keyboard laying down face up, and the space bar closer to the end user, the user can tactilely discern the location of the power button. The end user can feel for the top key in the right-hand corner of the keyboard and count one key to the left. If they reach towards the back of the keyboard from there, they can feel the power switch.
  - For Windows-only keyboards, Off position is towards the center of the keyboard, and On is located towards the edge of the keyboard.
  - For dual-layout keyboards, to determine where the switch to control the dual layout settings: Off is in the middle position, with MAC OS position towards the center of the keyboard, and Windows OS position towards the outside edge of the keyboard.

# Revision history

The following table provides the revision history of this document:

**Table 15. Revision history**

Revision	Date	Description
A00	March 2026	Original publish date.