



Moniteur Dell Pro P 22
P2226H







Moniteur Dell Pro P 24
P2426H

Moniteur Dell Pro P 24 16:10
P2426


Moniteur Dell Pro P 27
P2726H


Guide de démarrage rapide




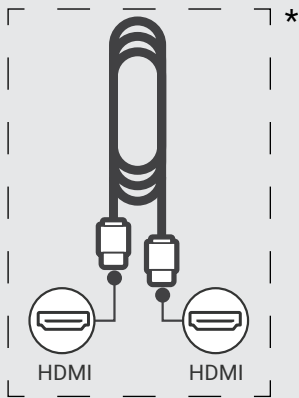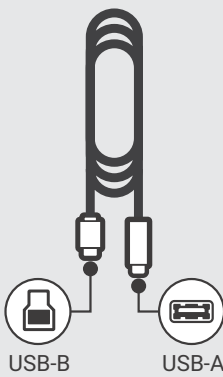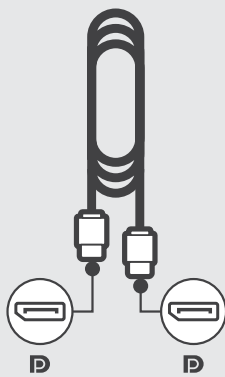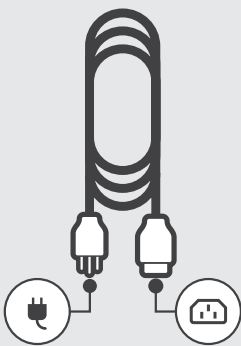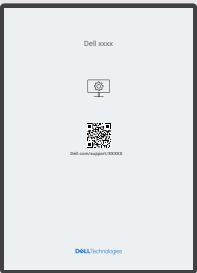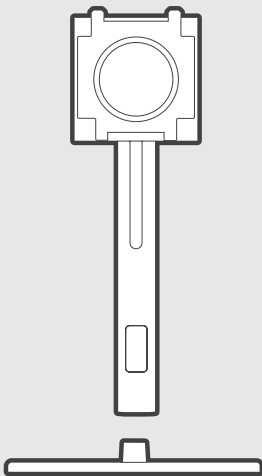




*Pour certains pays uniquement

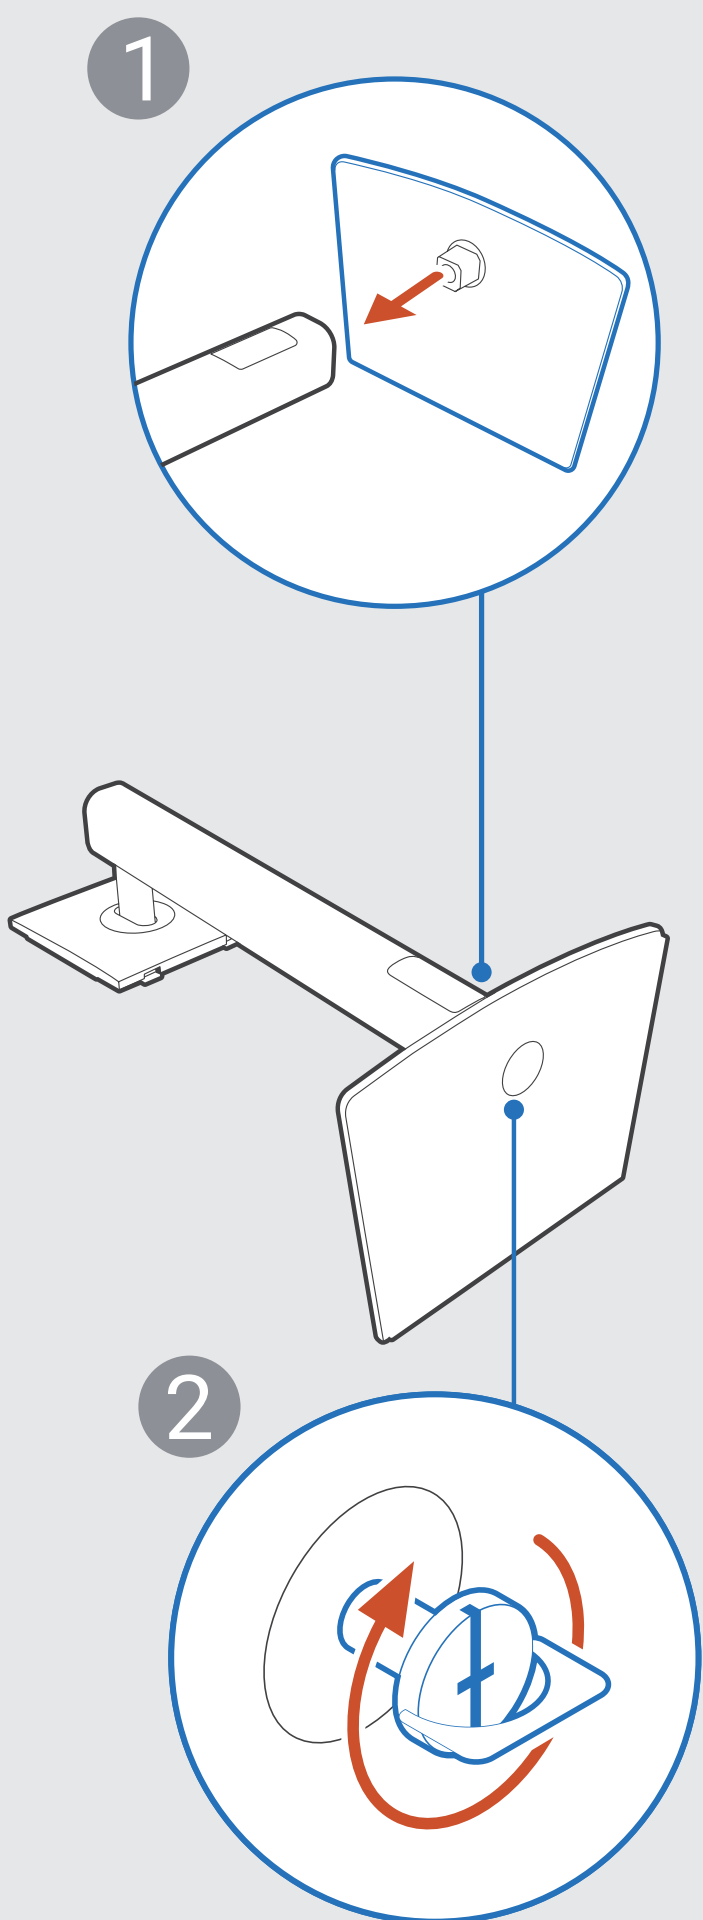


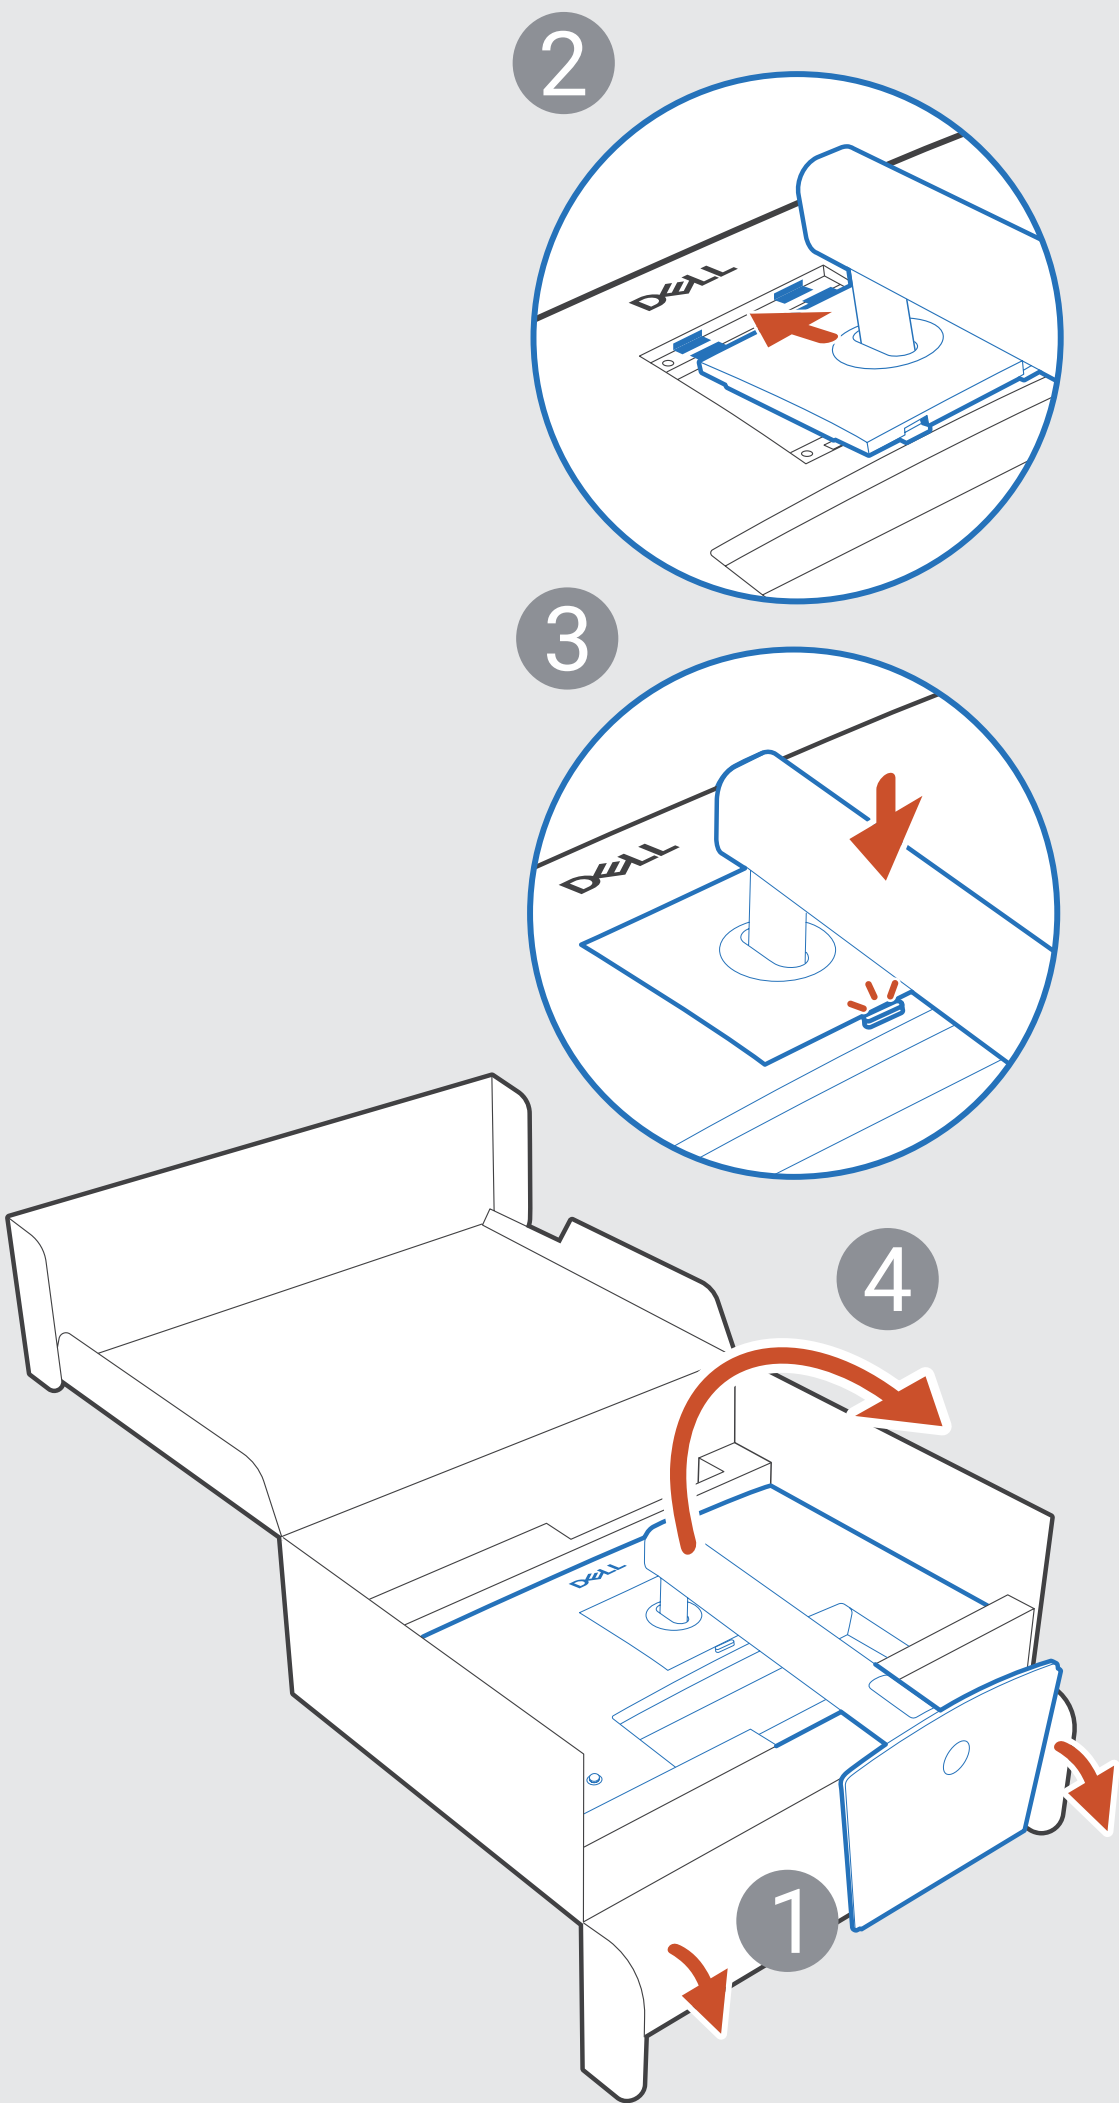


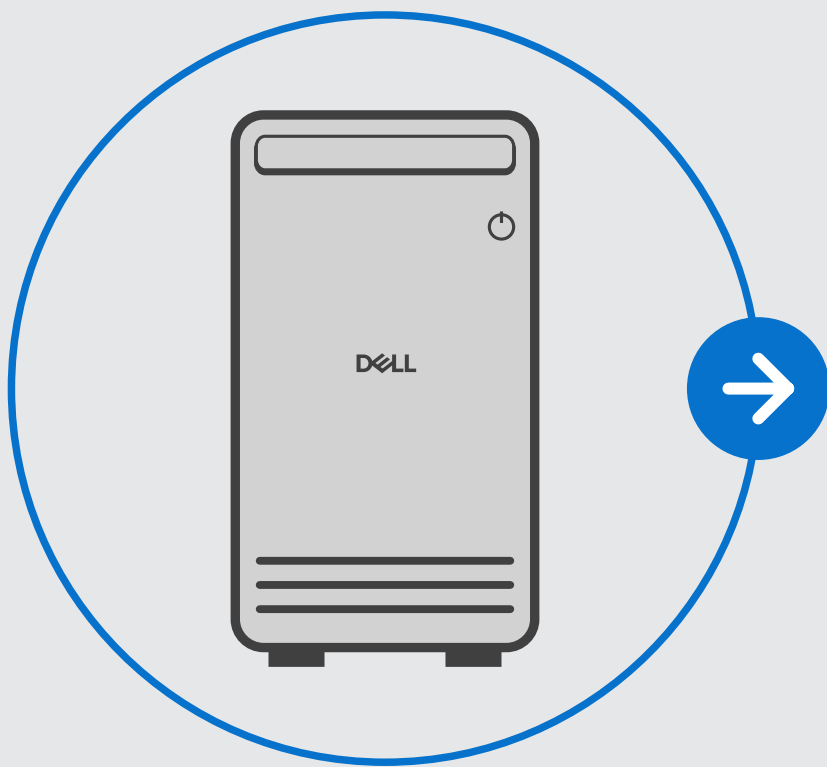

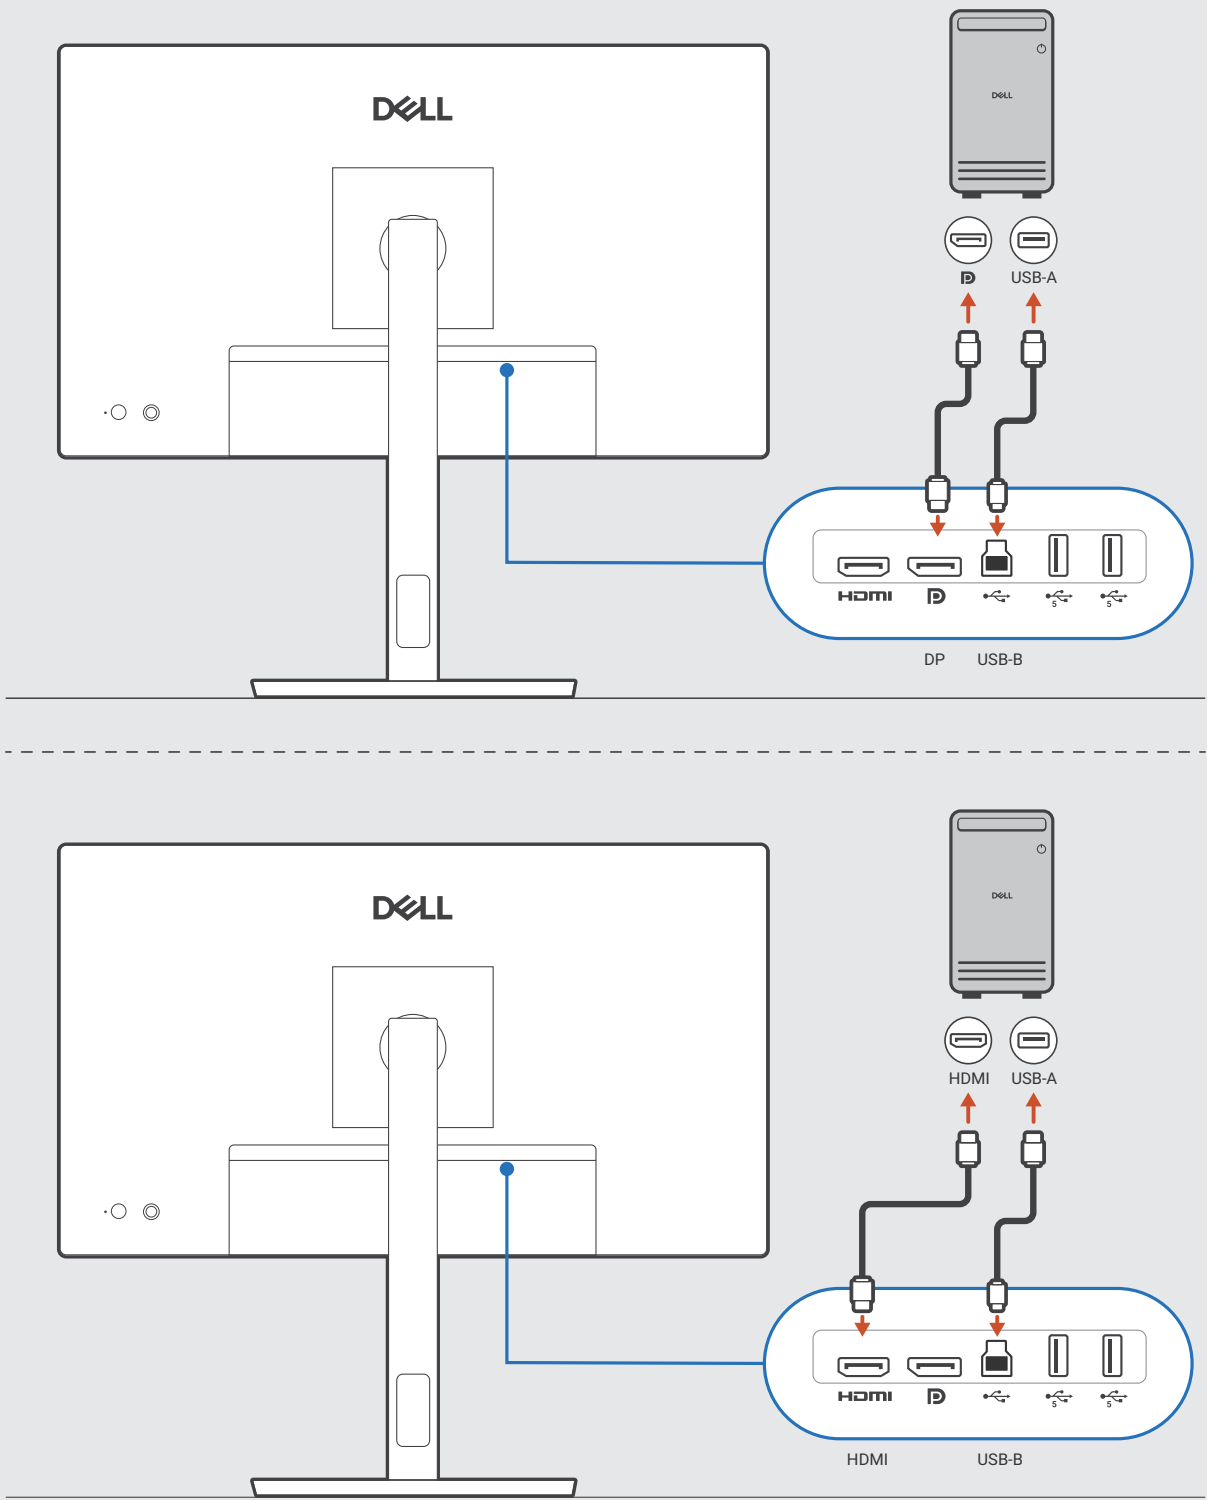


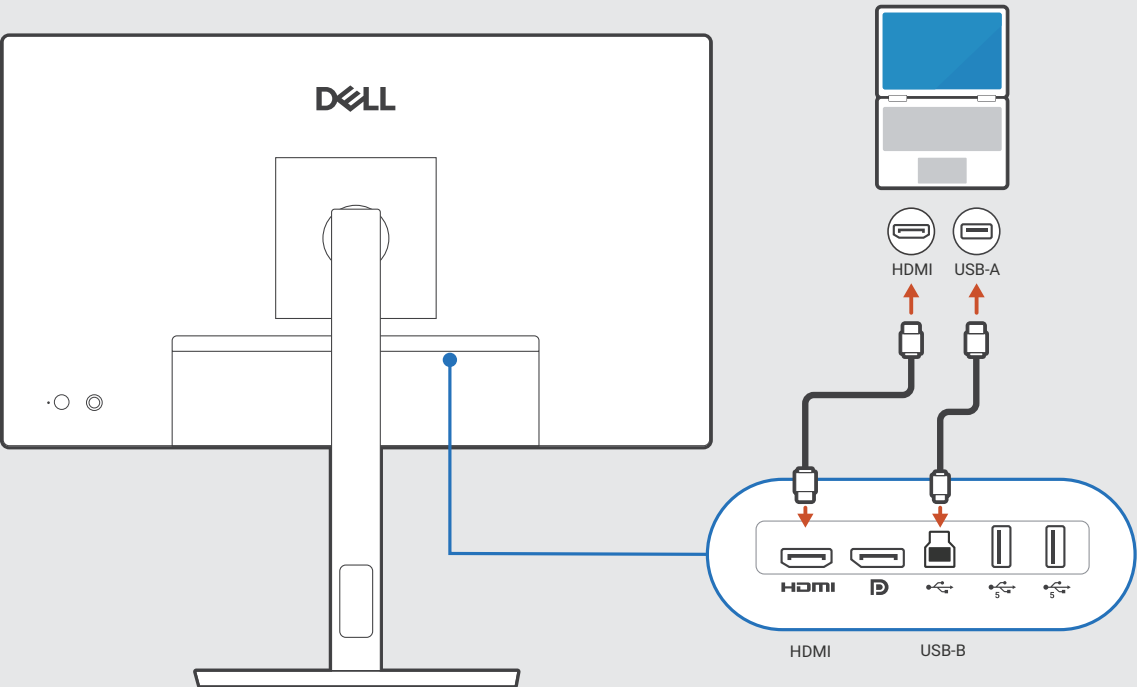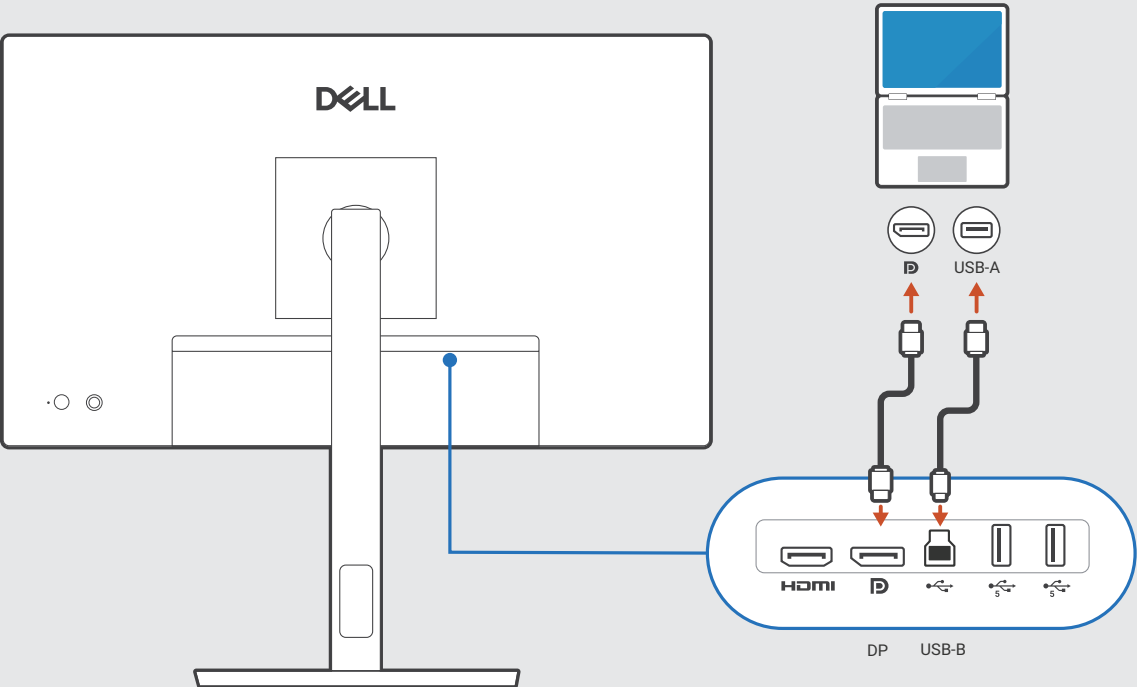

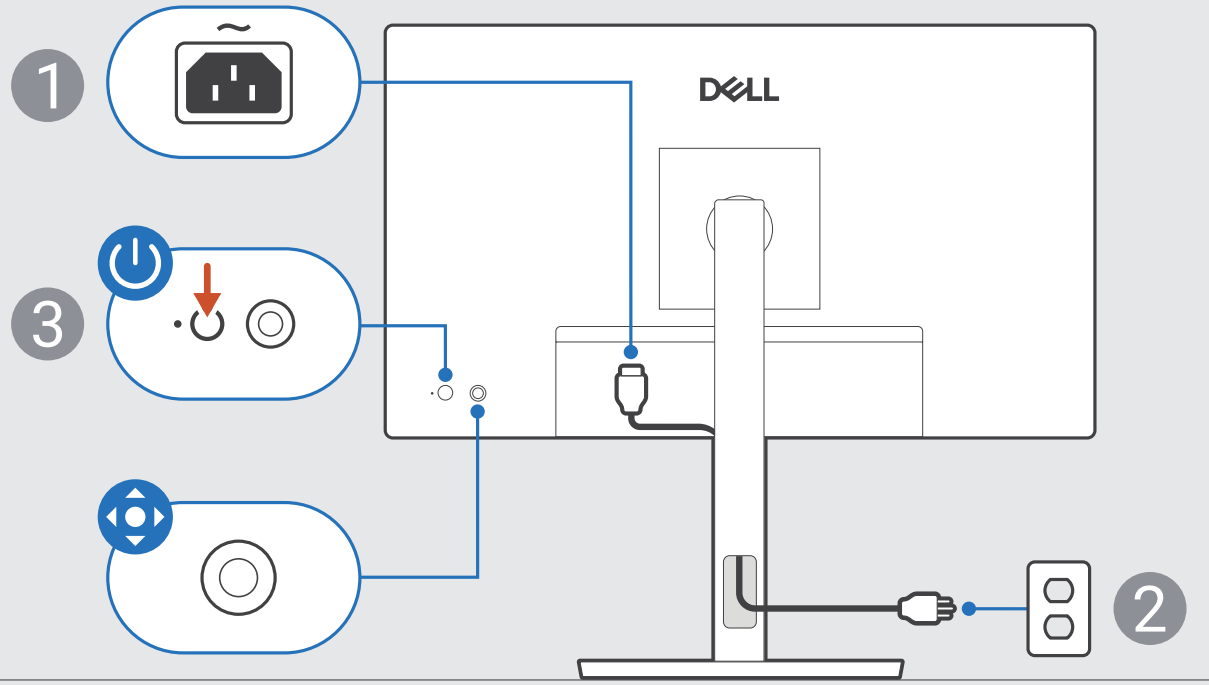


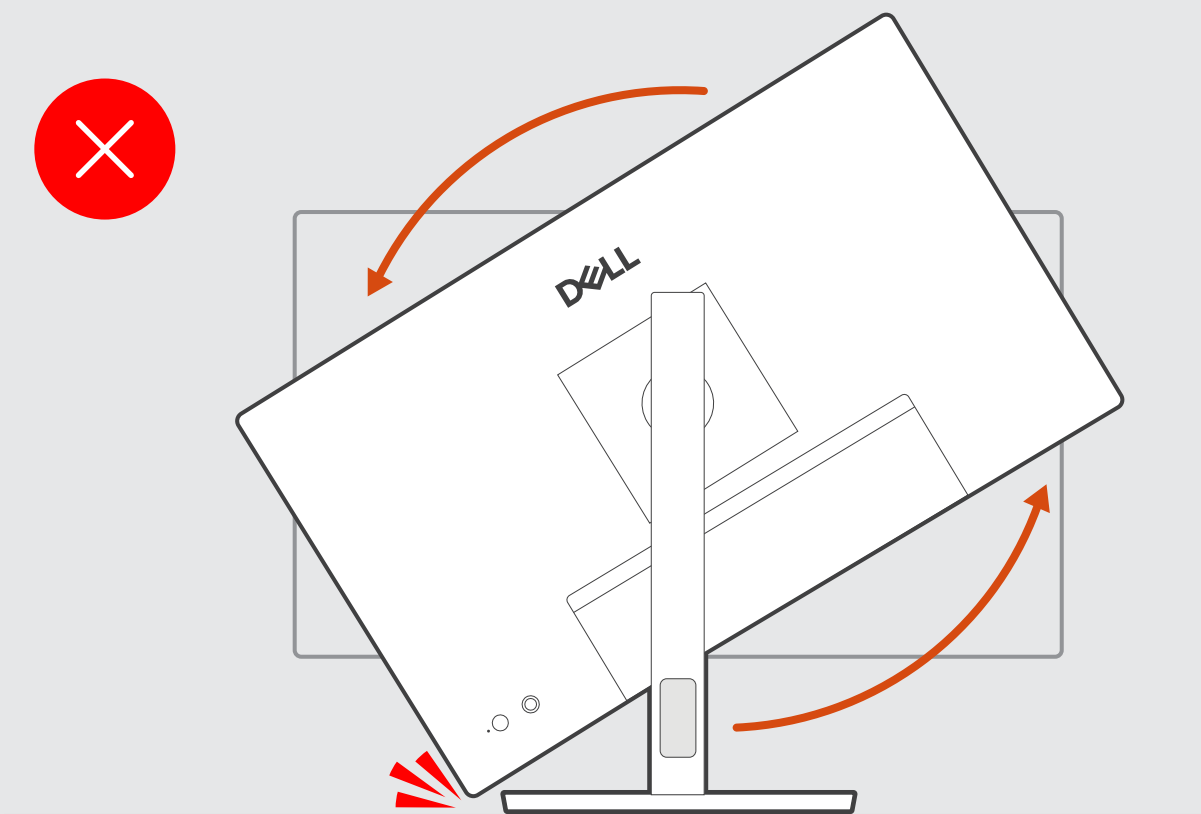



1

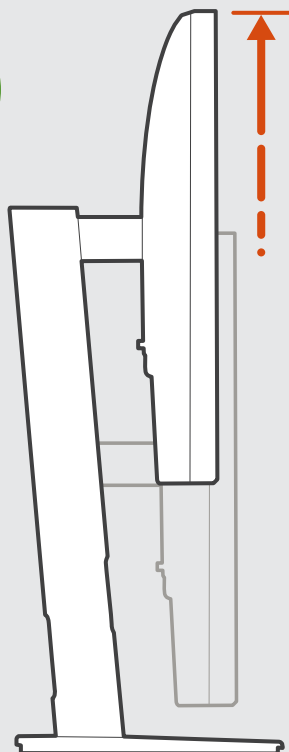


2

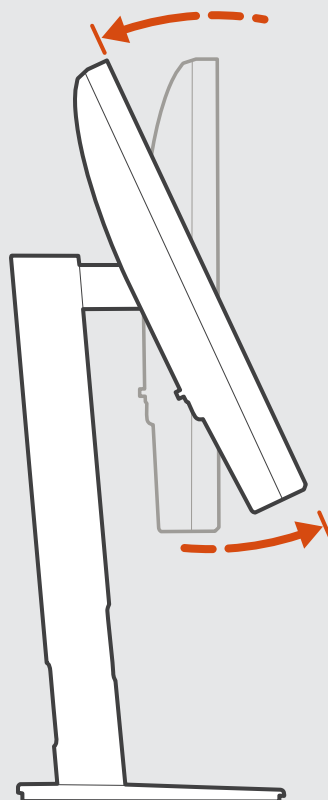


3

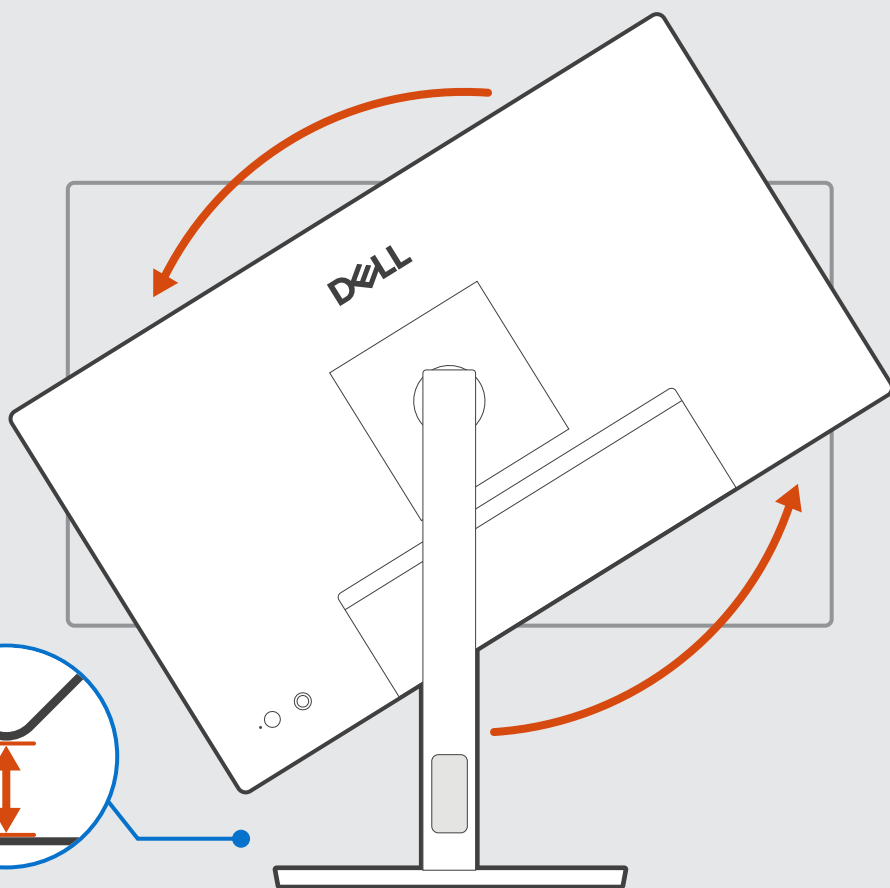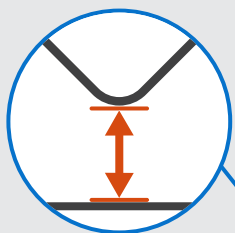

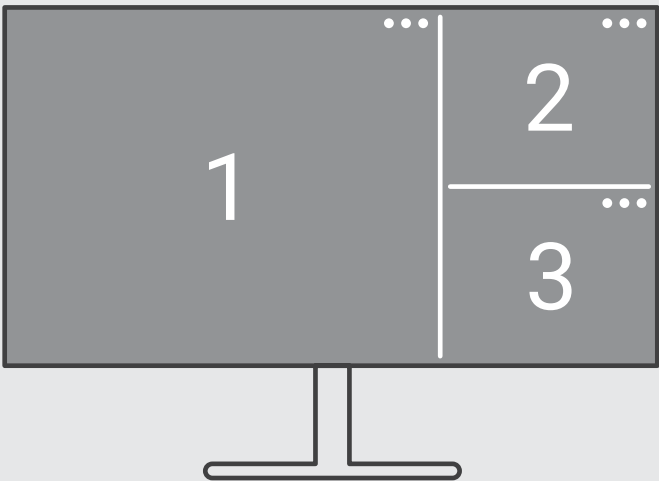

Dell Display and Peripheral Manager
[Dell.com/support/ddpm](https://dell.com/support/ddpm)

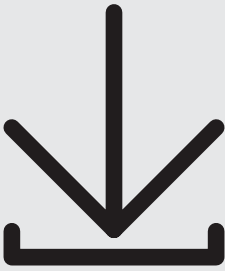

- [Dell.com/support/P2226H](https://dell.com/support/P2226H)
- [Dell.com/support/P2426H](https://dell.com/support/P2426H)
- [Dell.com/support/P2426](https://dell.com/support/P2426)
- [Dell.com/support/P2726H](https://dell.com/support/P2726H)