



Dell Pro P 22 beeldscherm
P2226H







Dell Pro P 24 beeldscherm
P2426H

Dell Pro P 24 16:10 beeldscherm
P2426


Dell Pro P 27 beeldscherm
P2726H


Snelstartgids




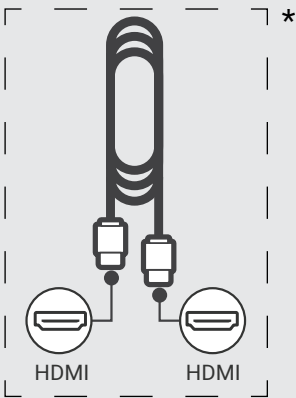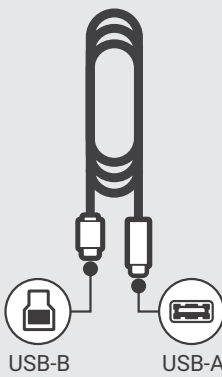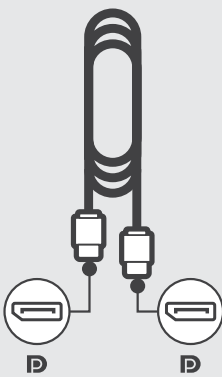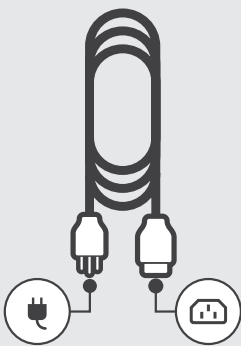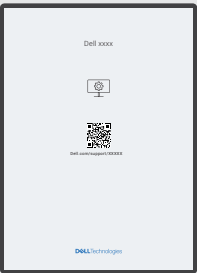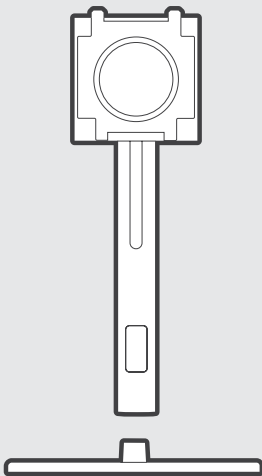




*Alleen voor geselecteerde landen

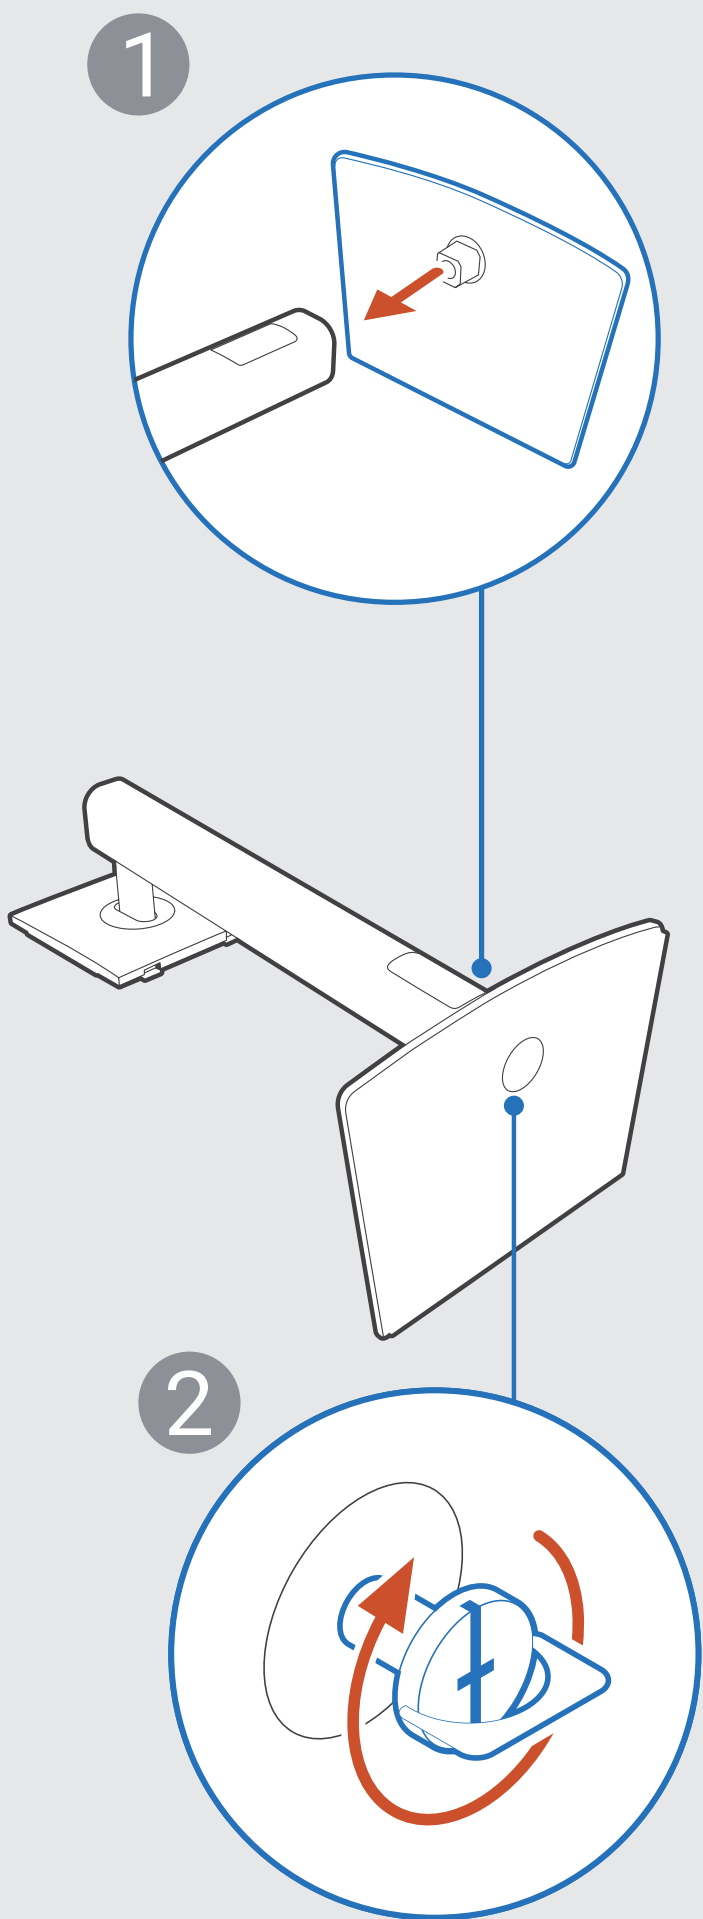


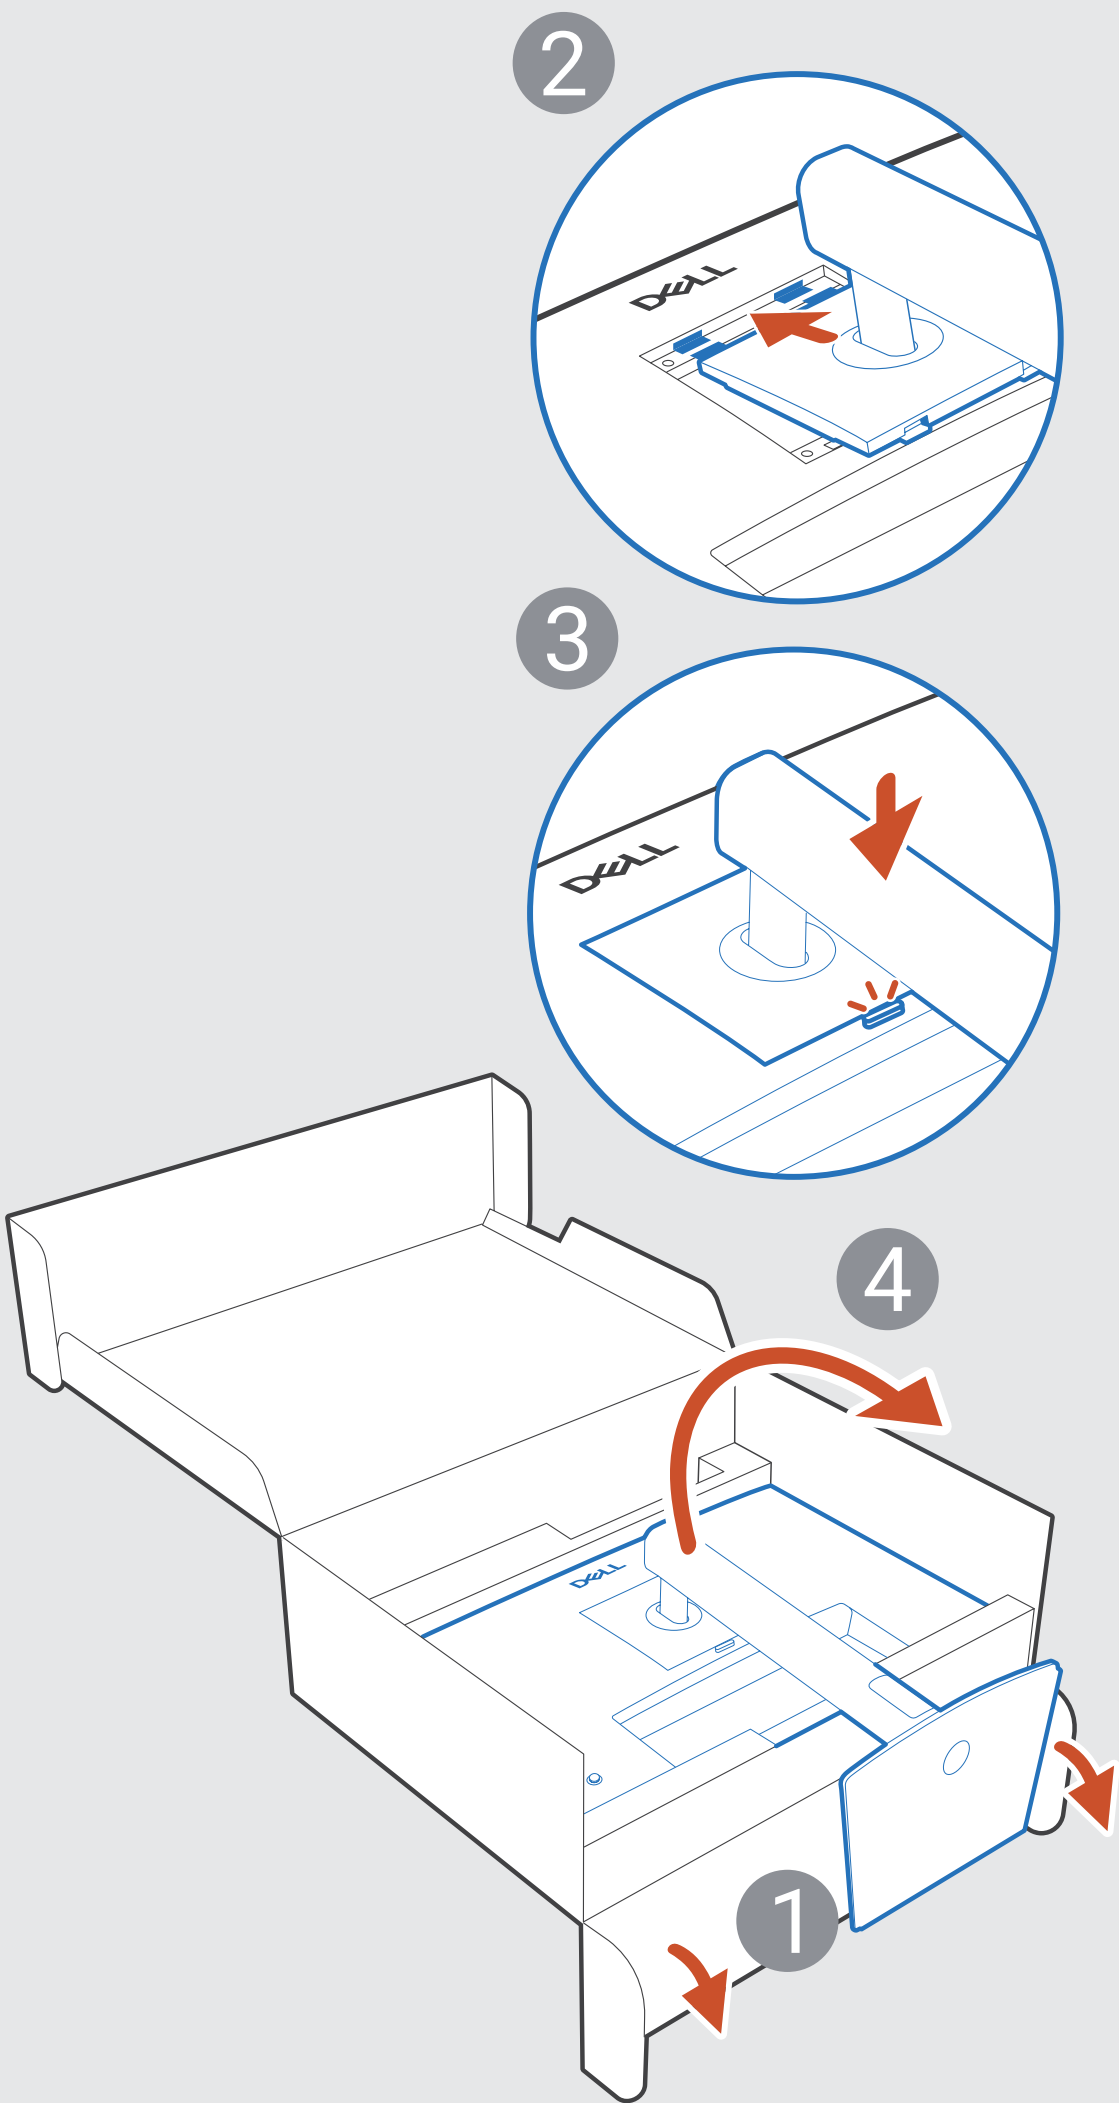


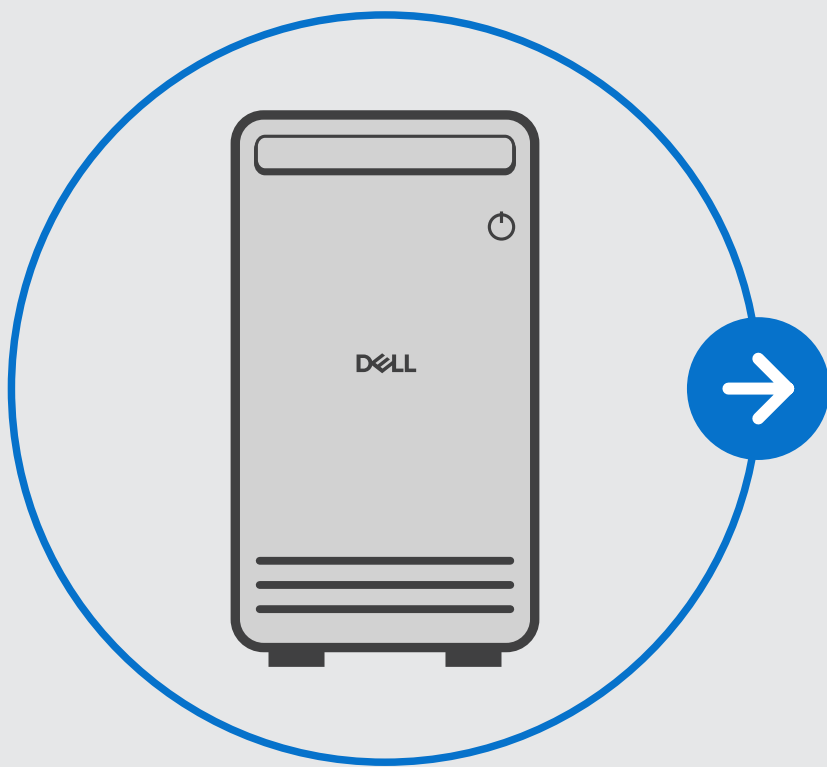

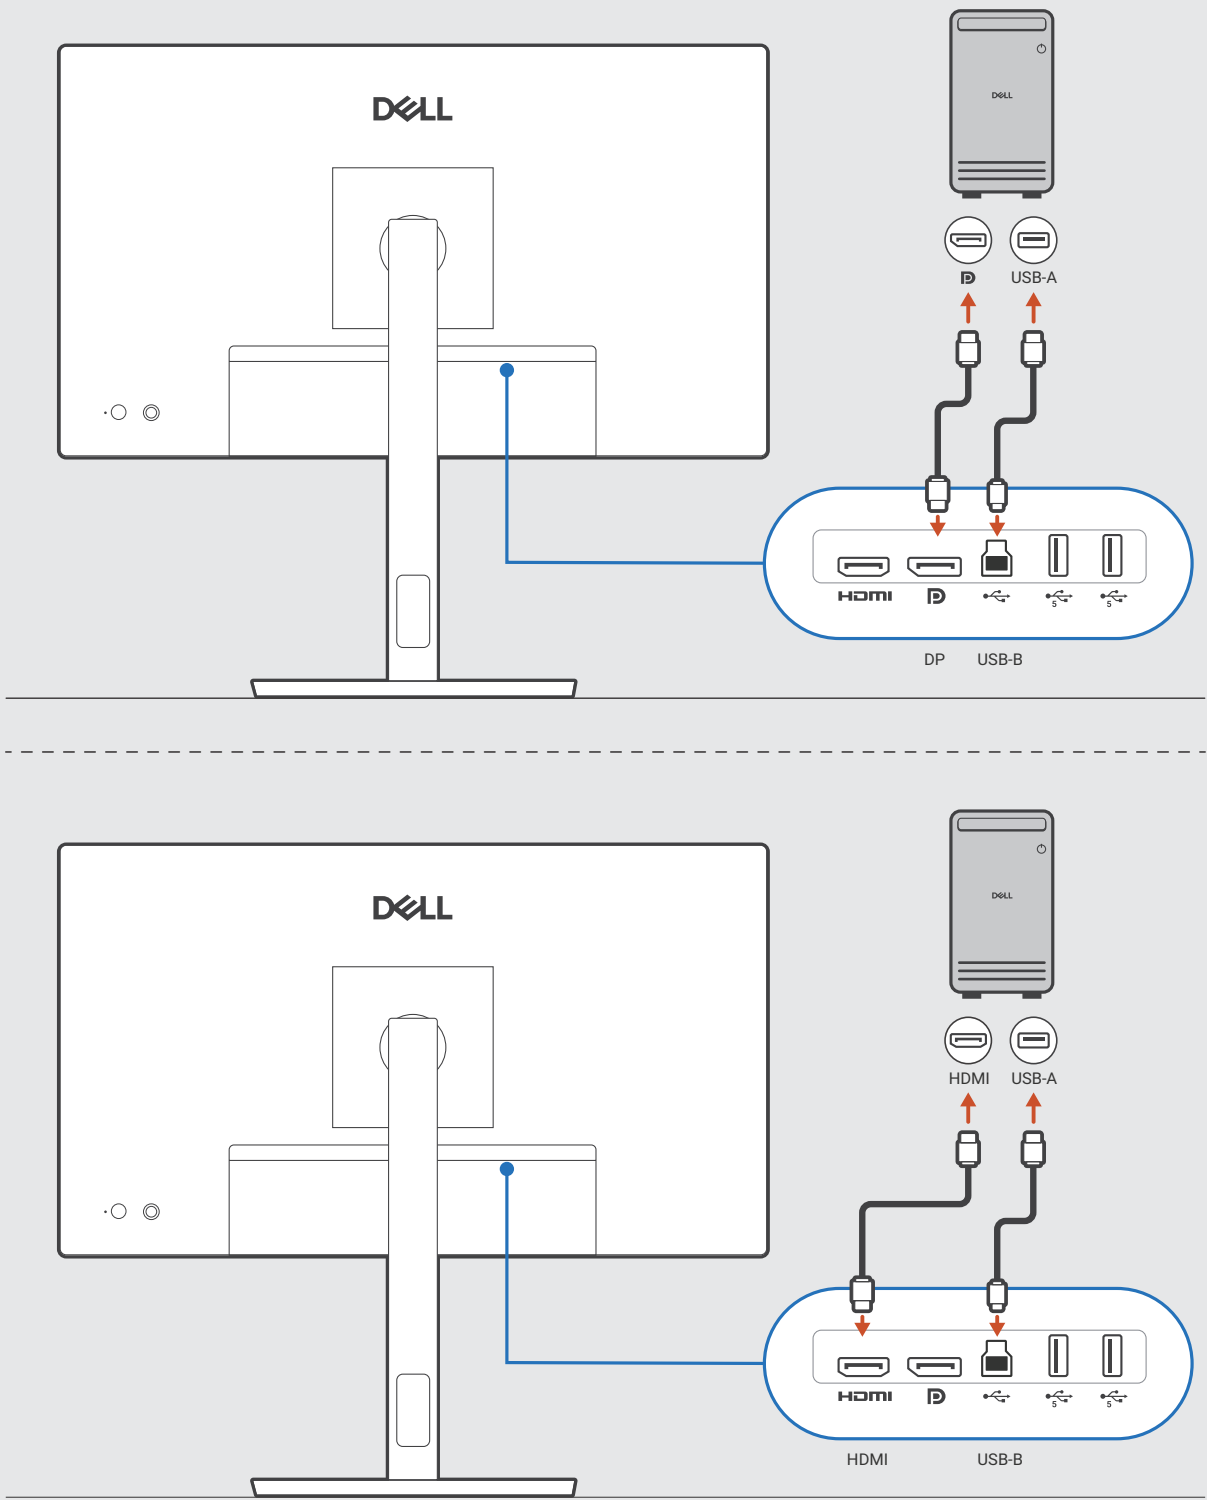


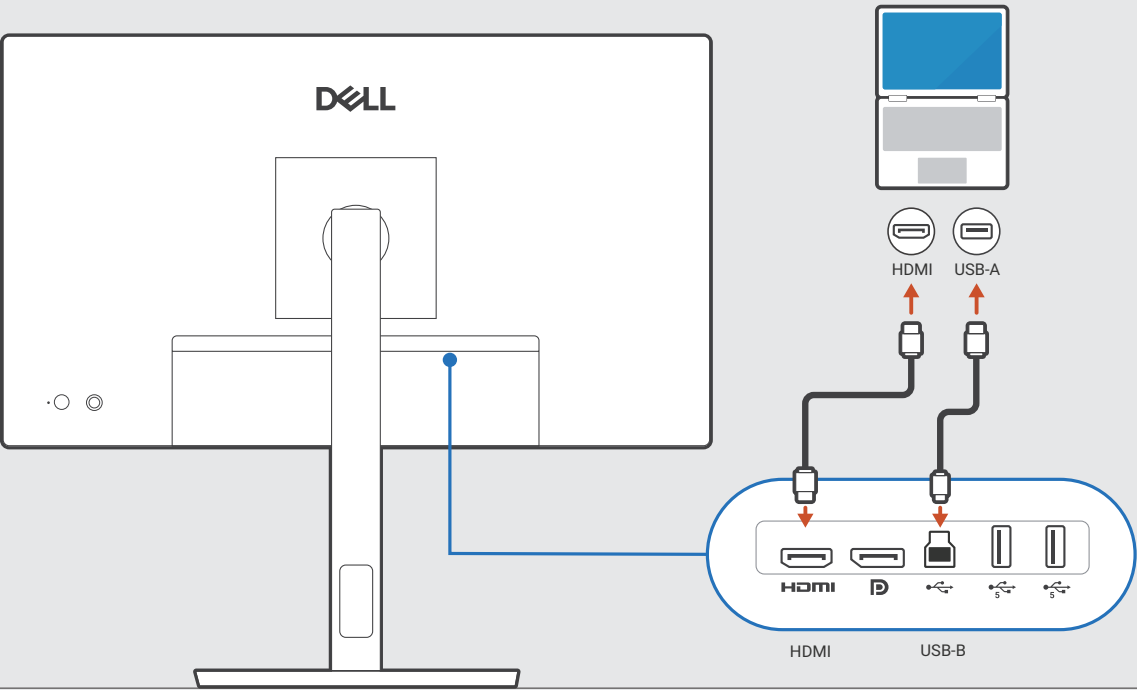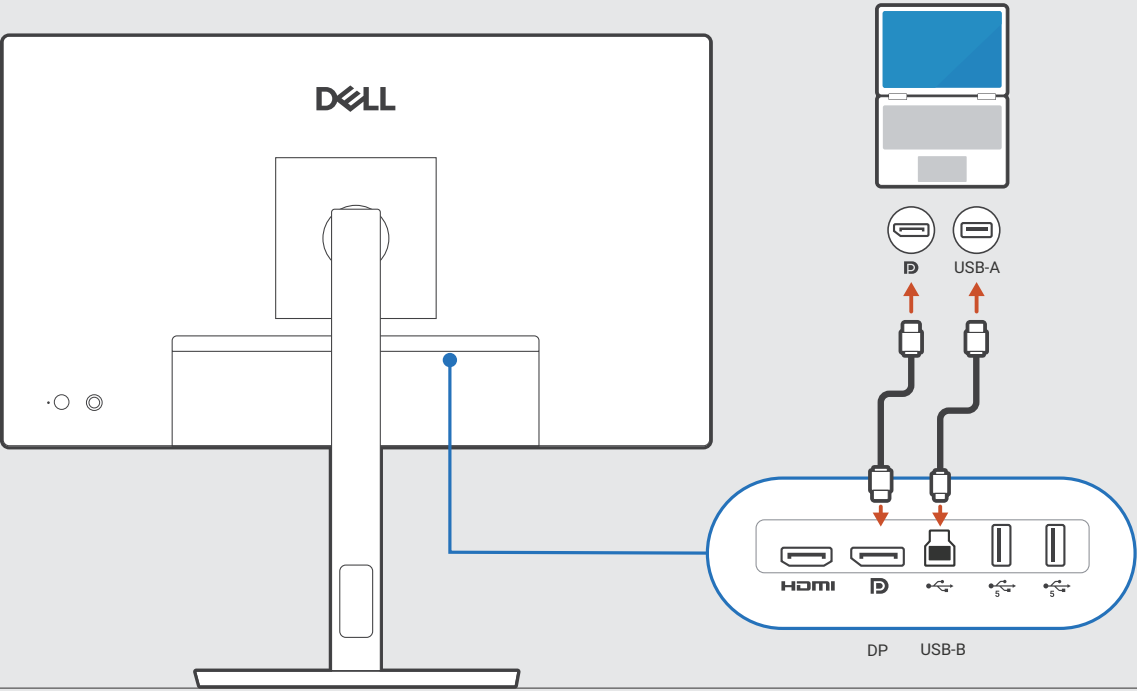

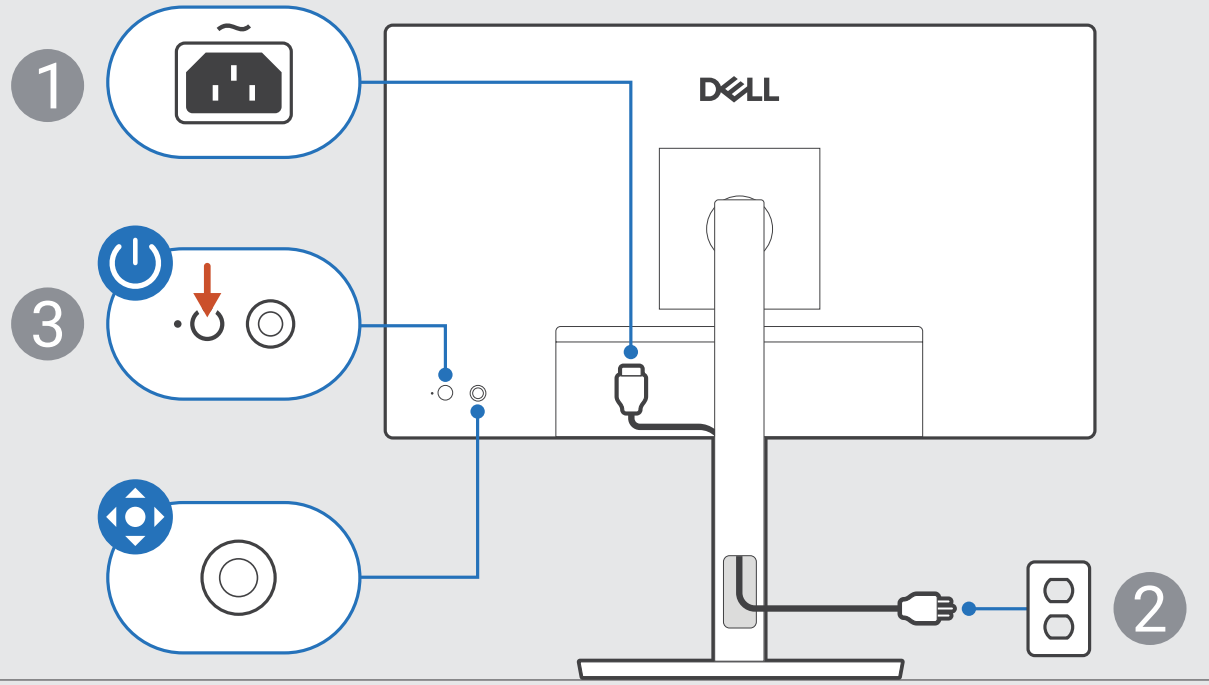


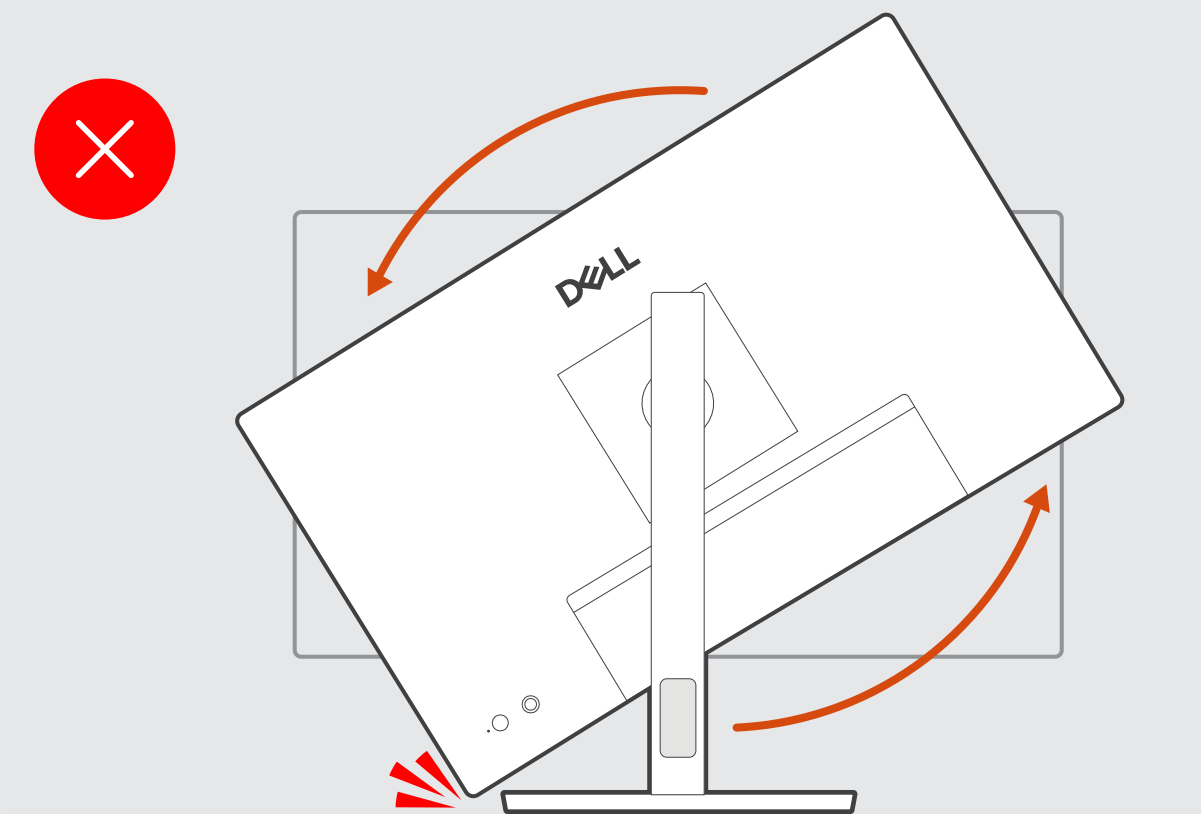



1

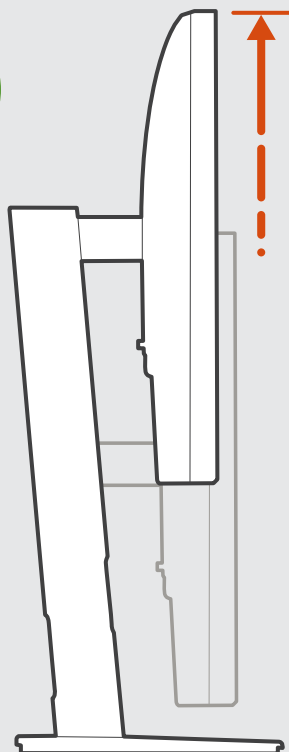


2

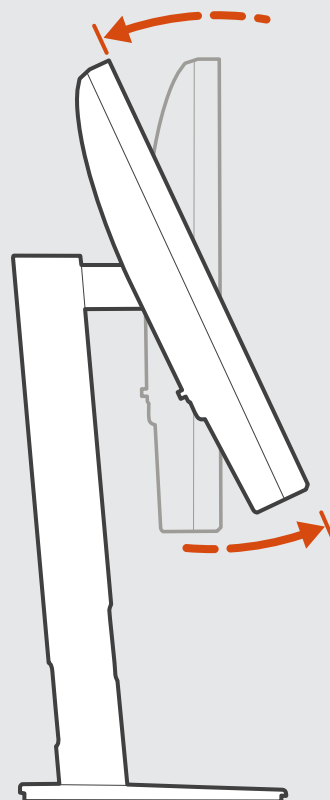


3

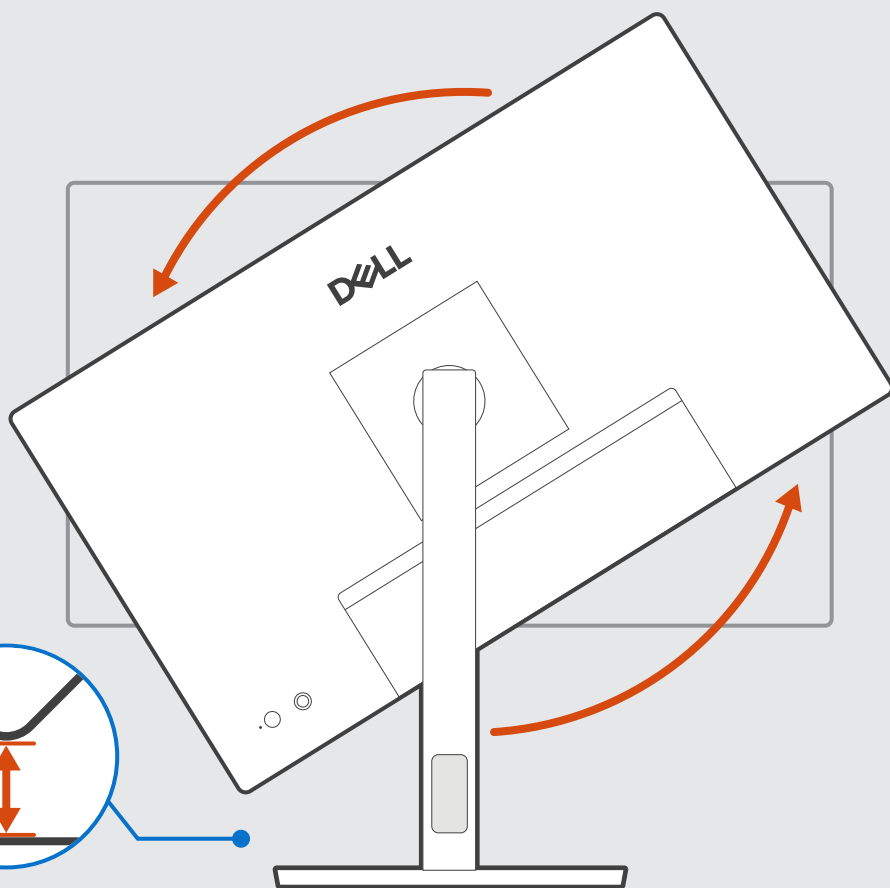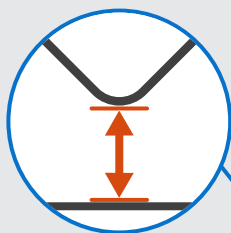

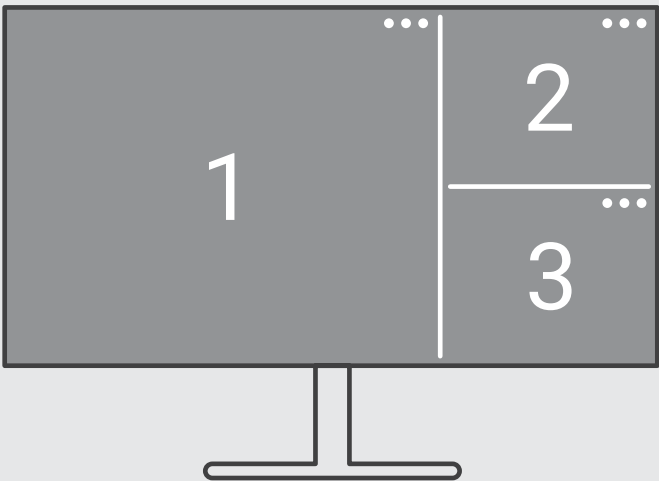

Dell Display and Peripheral Manager
[Dell.com/support/ddpm](https://dell.com/support/ddpm)

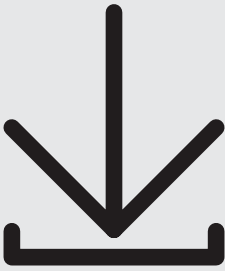

- [Dell.com/support/P2226H](https://dell.com/support/P2226H)
- [Dell.com/support/P2426H](https://dell.com/support/P2426H)
- [Dell.com/support/P2426](https://dell.com/support/P2426)
- [Dell.com/support/P2726H](https://dell.com/support/P2726H)