



Monitor Dell Pro P 22  
P2226H







Monitor Dell Pro P 24  
P2426H

Monitor Dell Pro P 24 16:10  
P2426


Monitor Dell Pro P 27  
P2726H


Instrukcja szybkiego uruchamiania





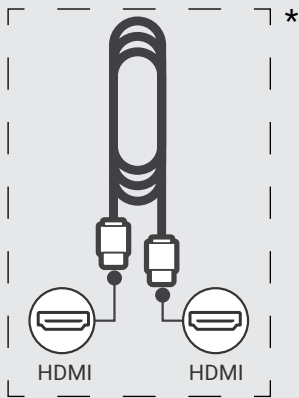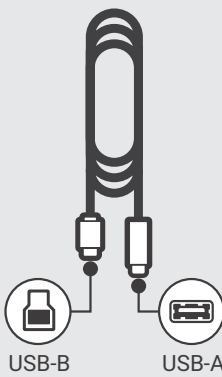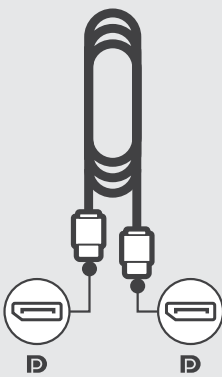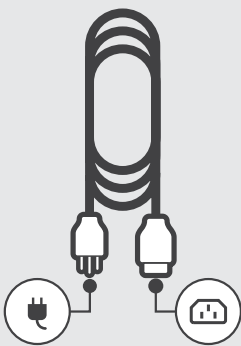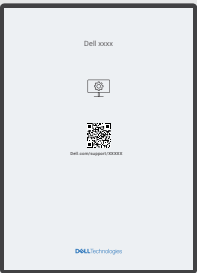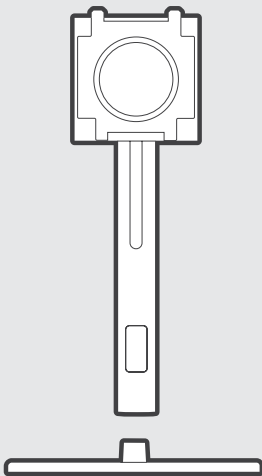




\*Tylko dla wybranych krajów

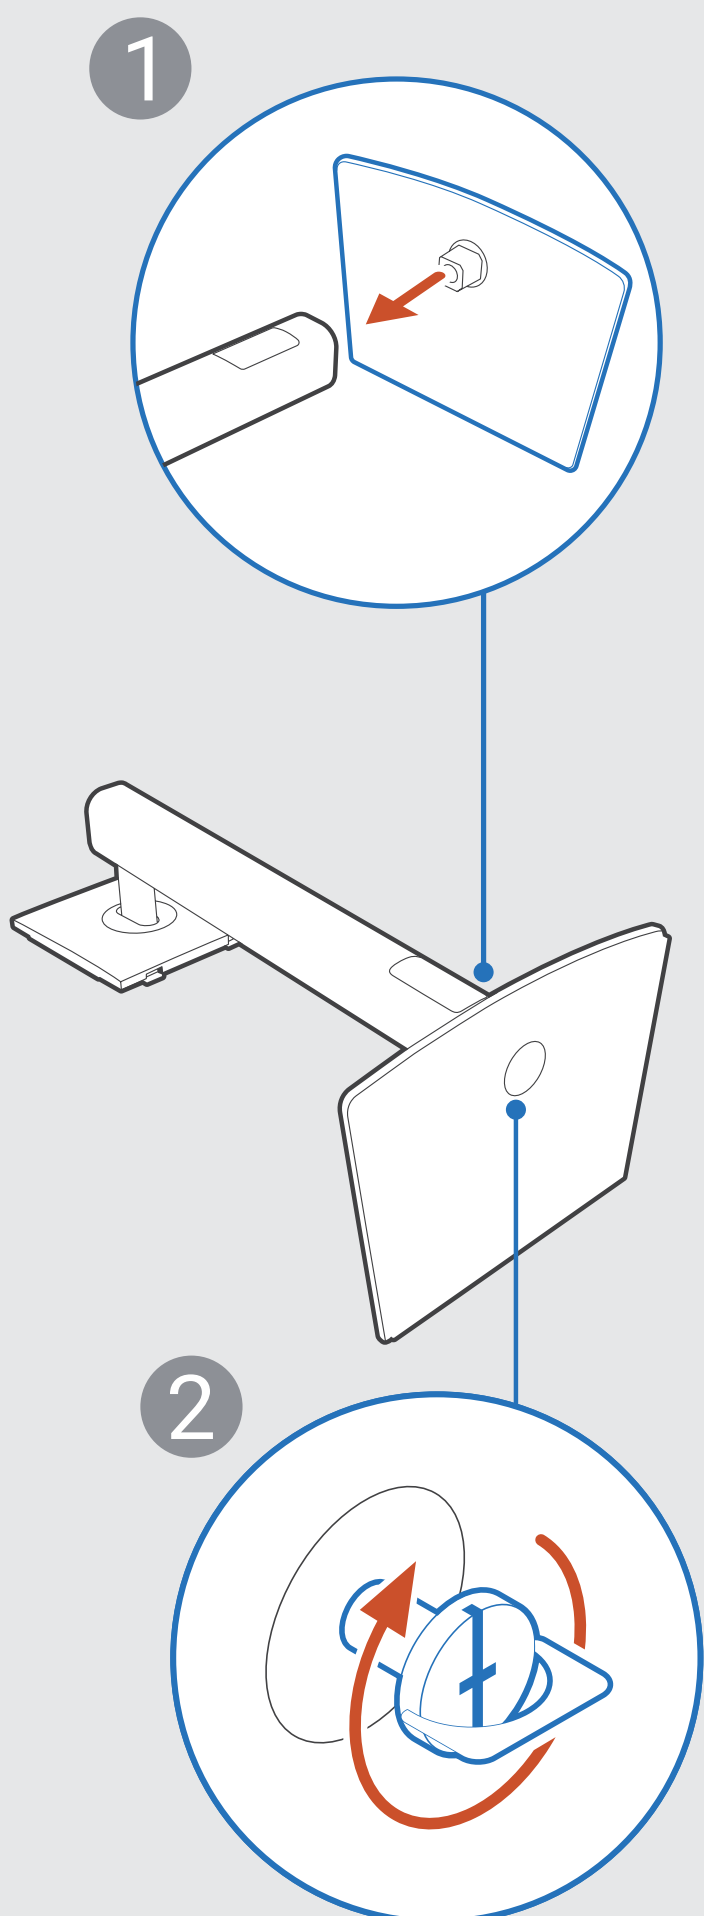




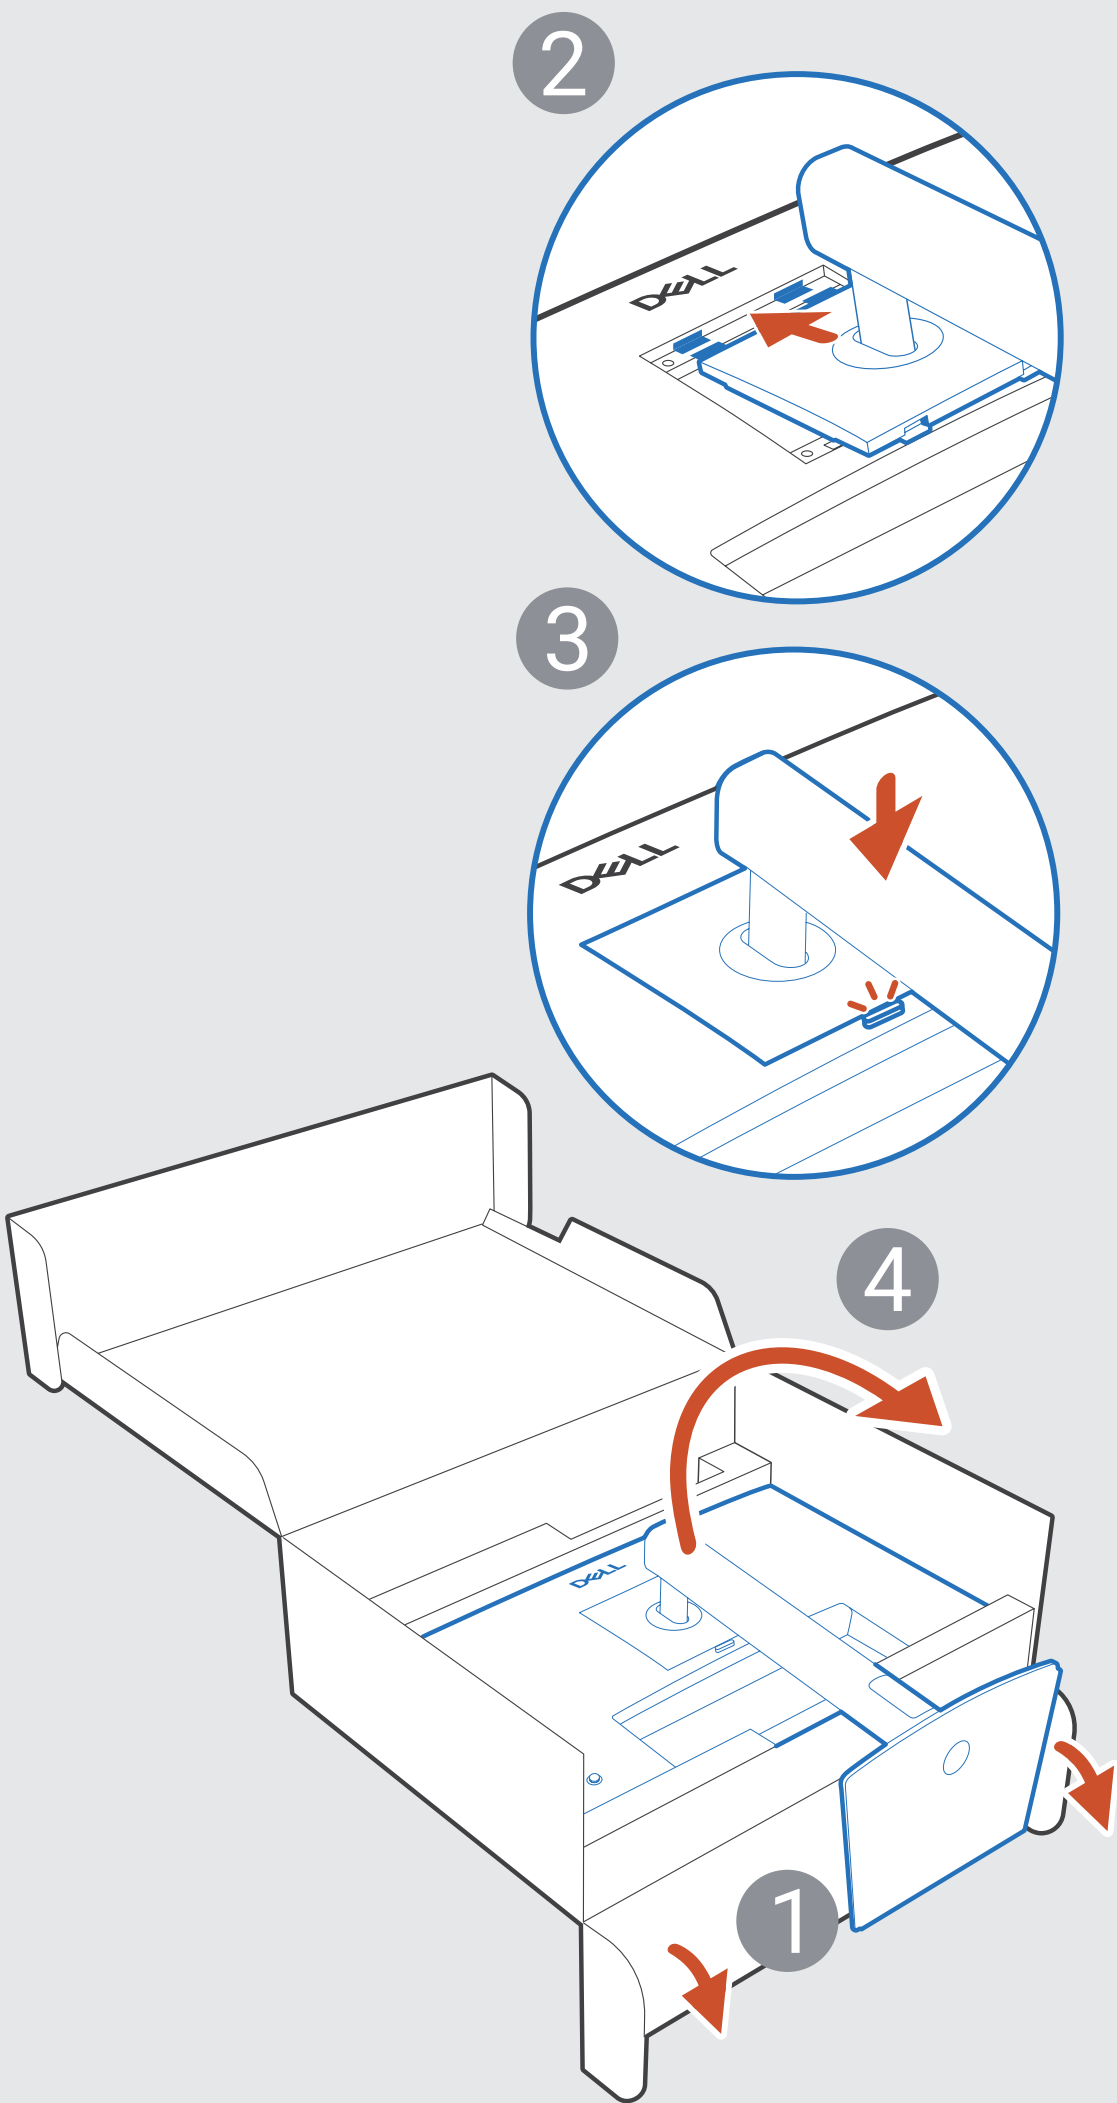


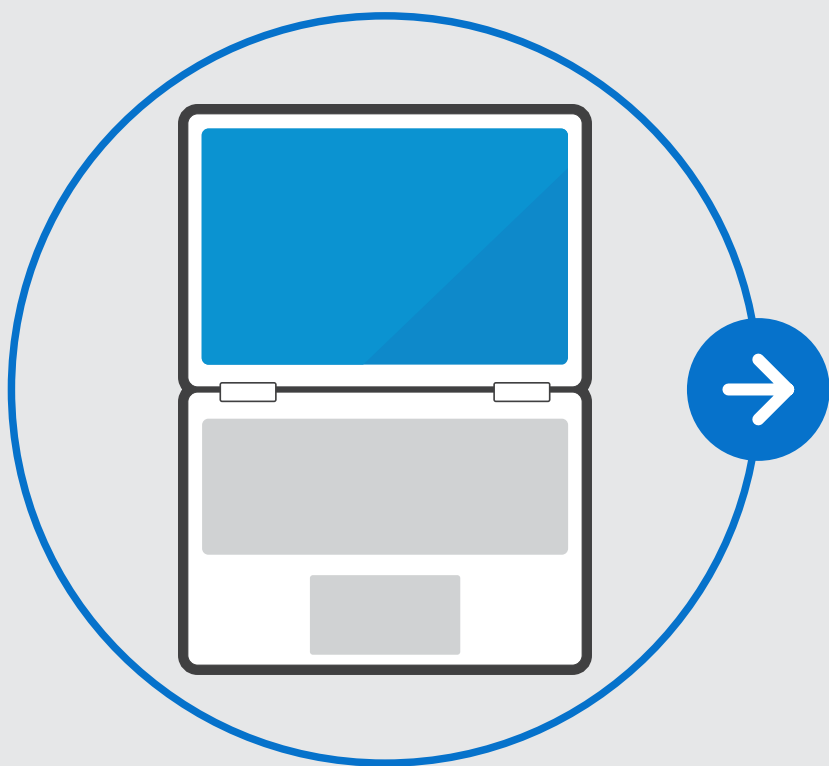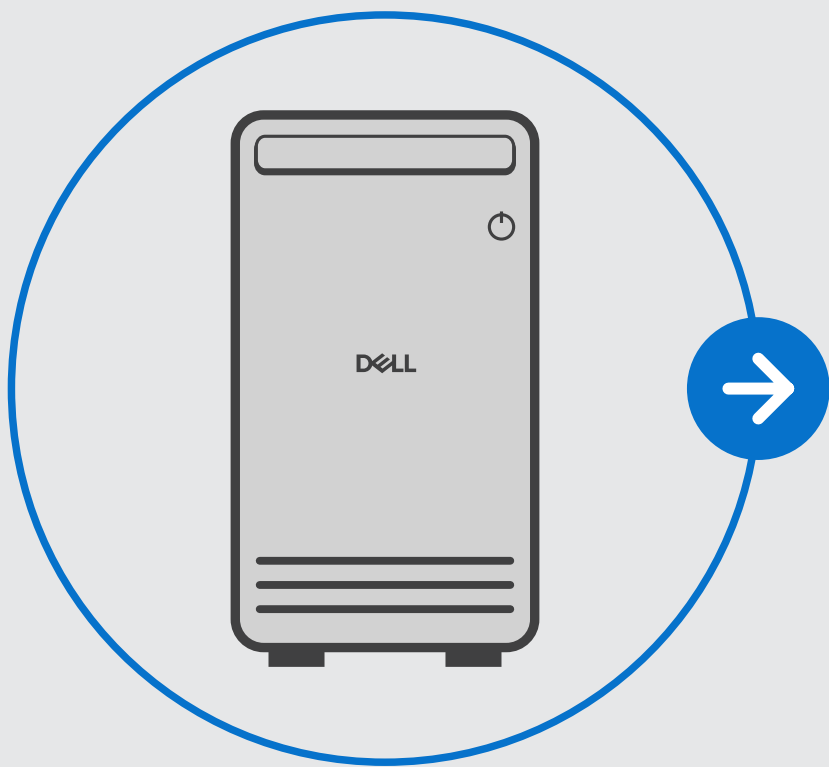


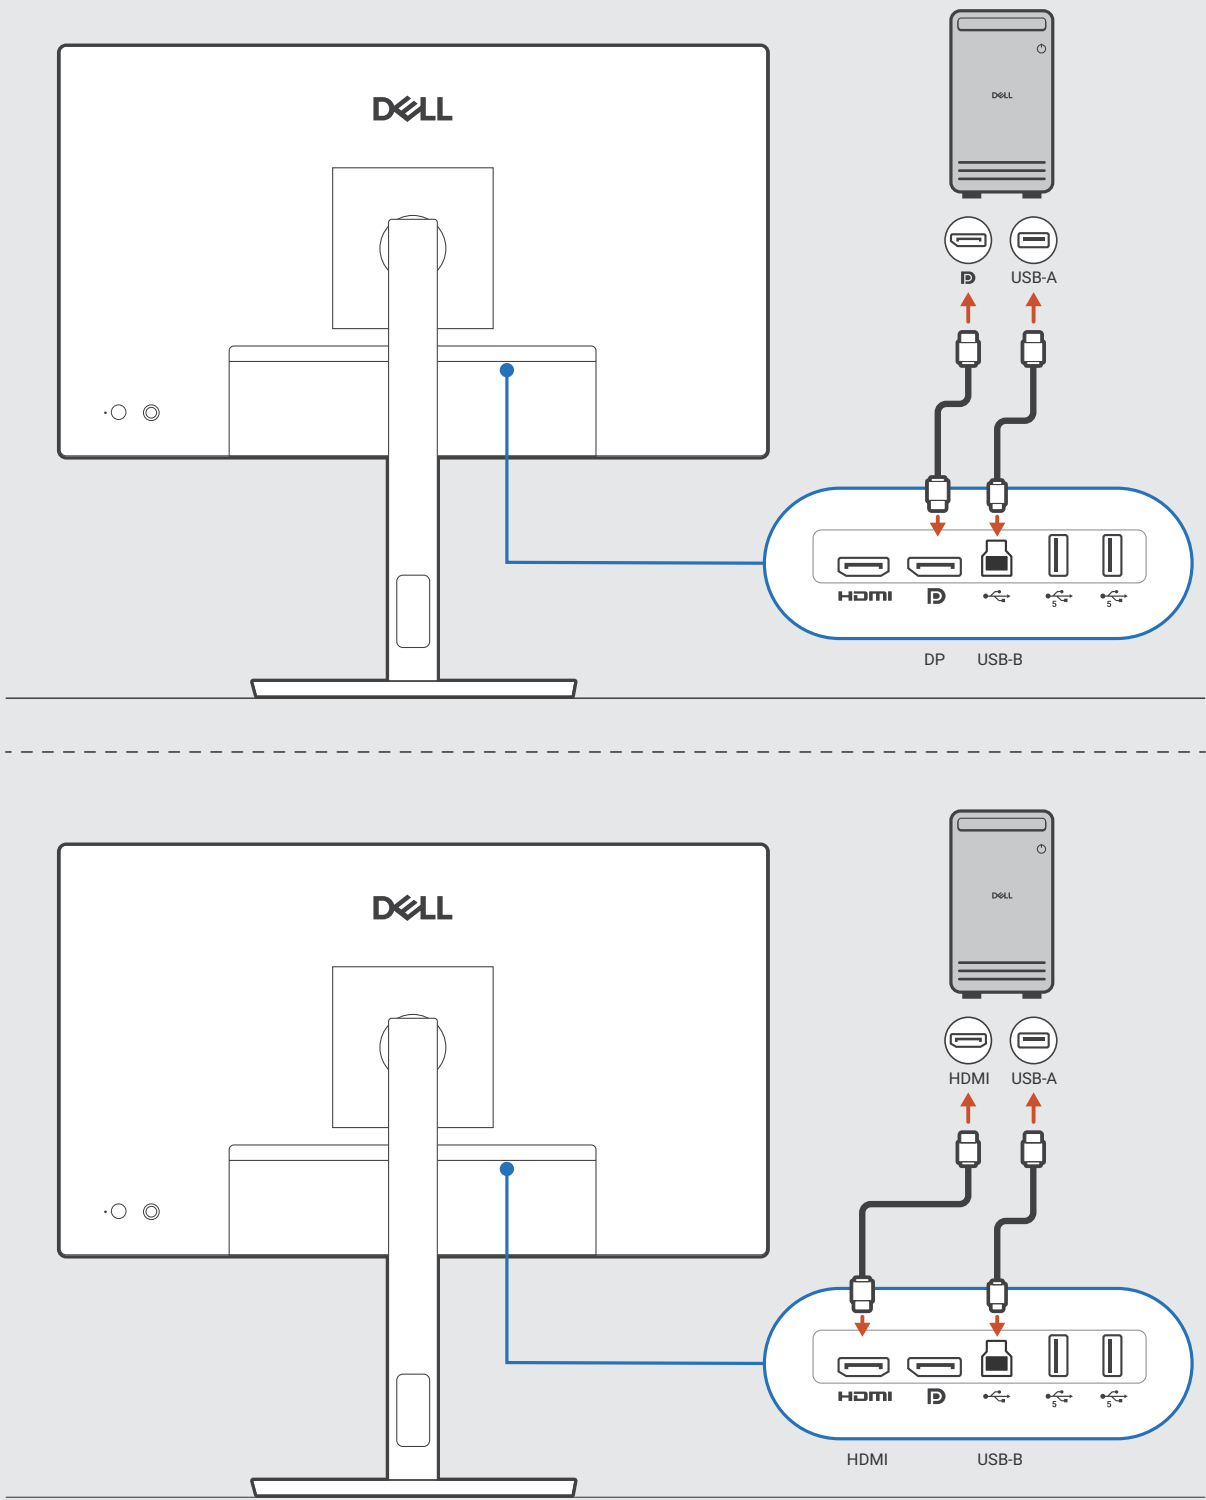

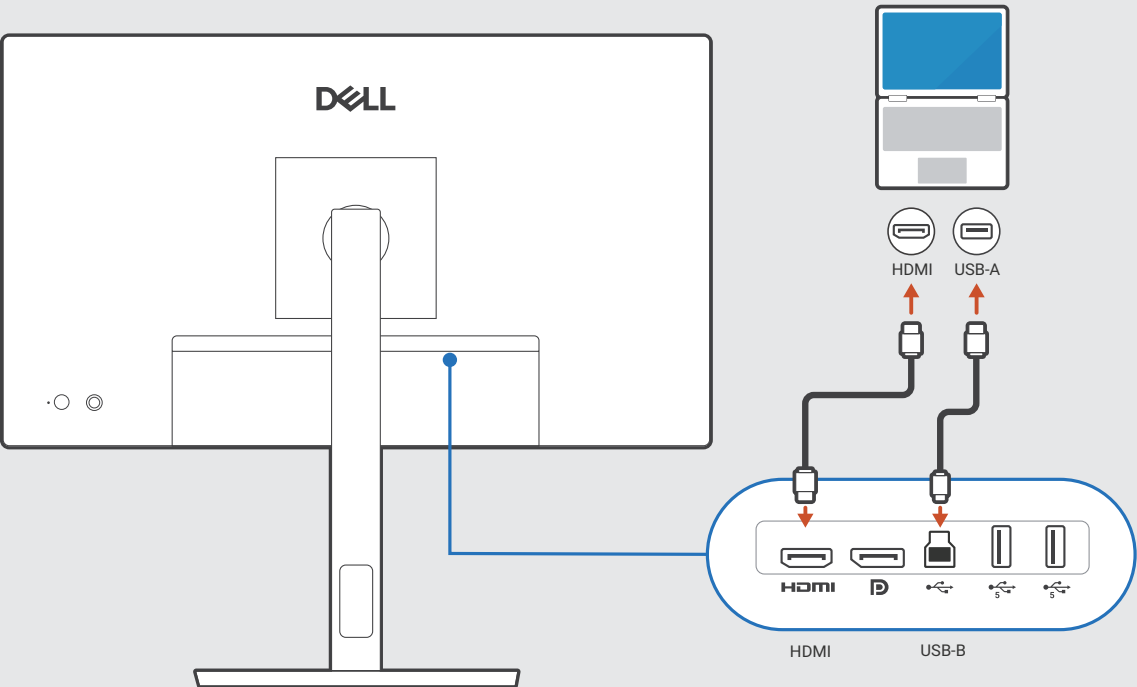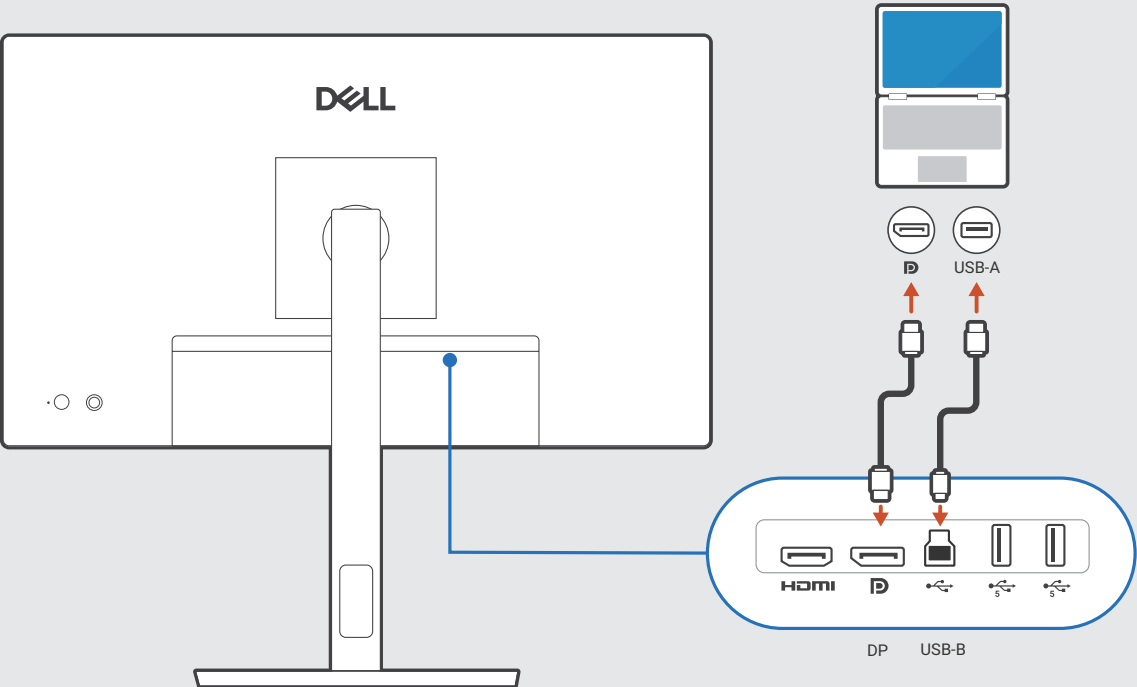


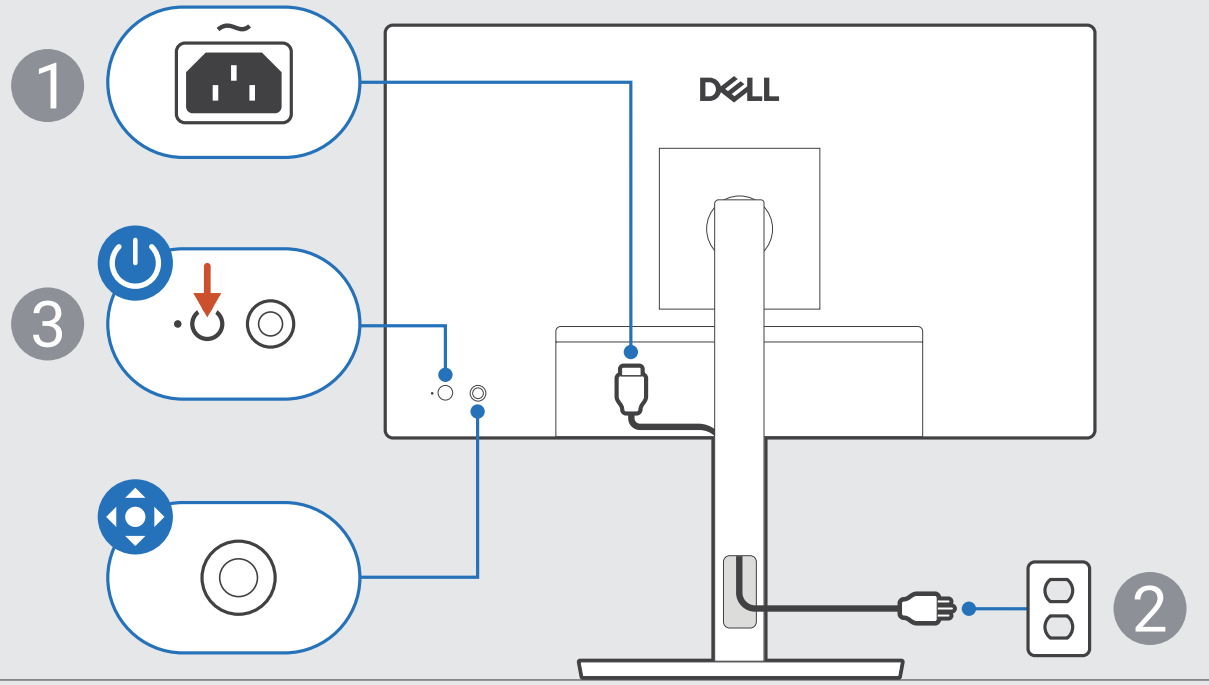

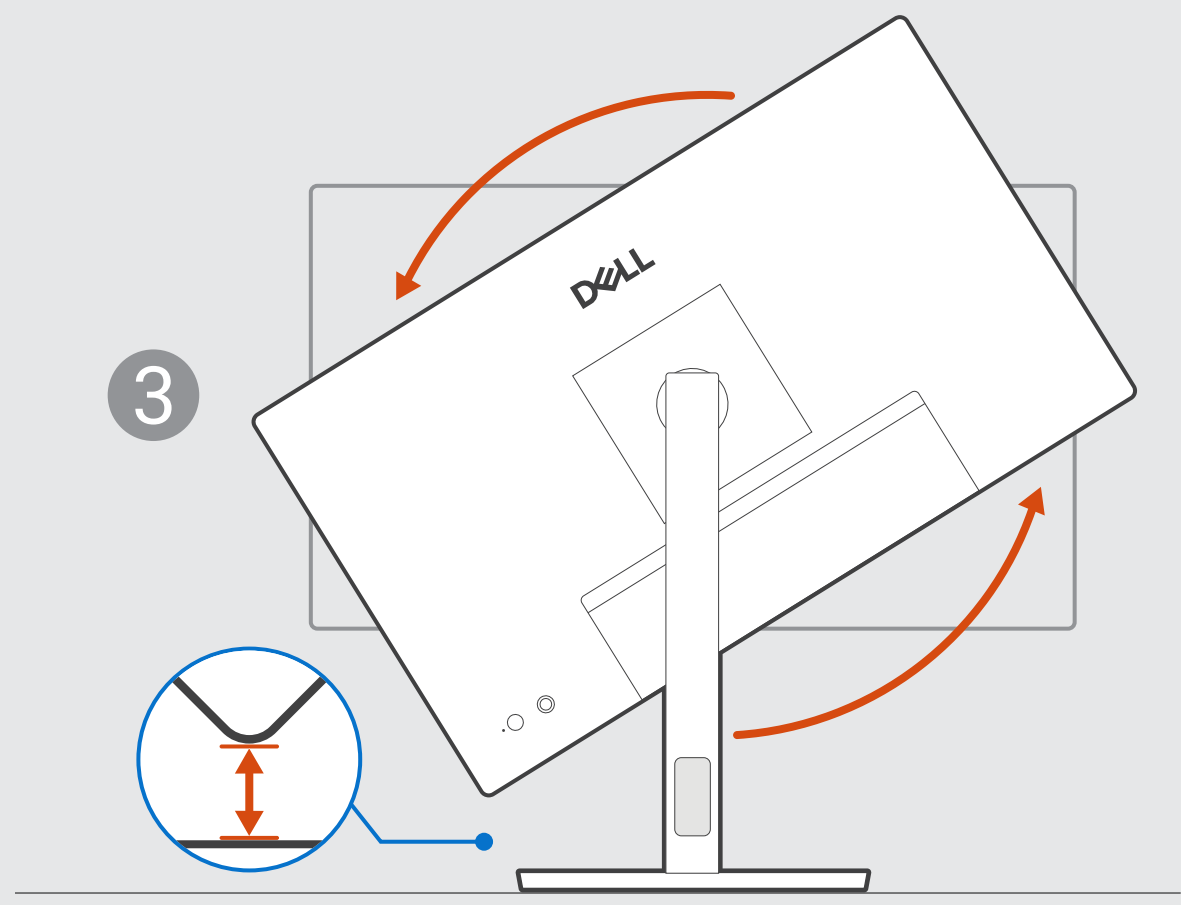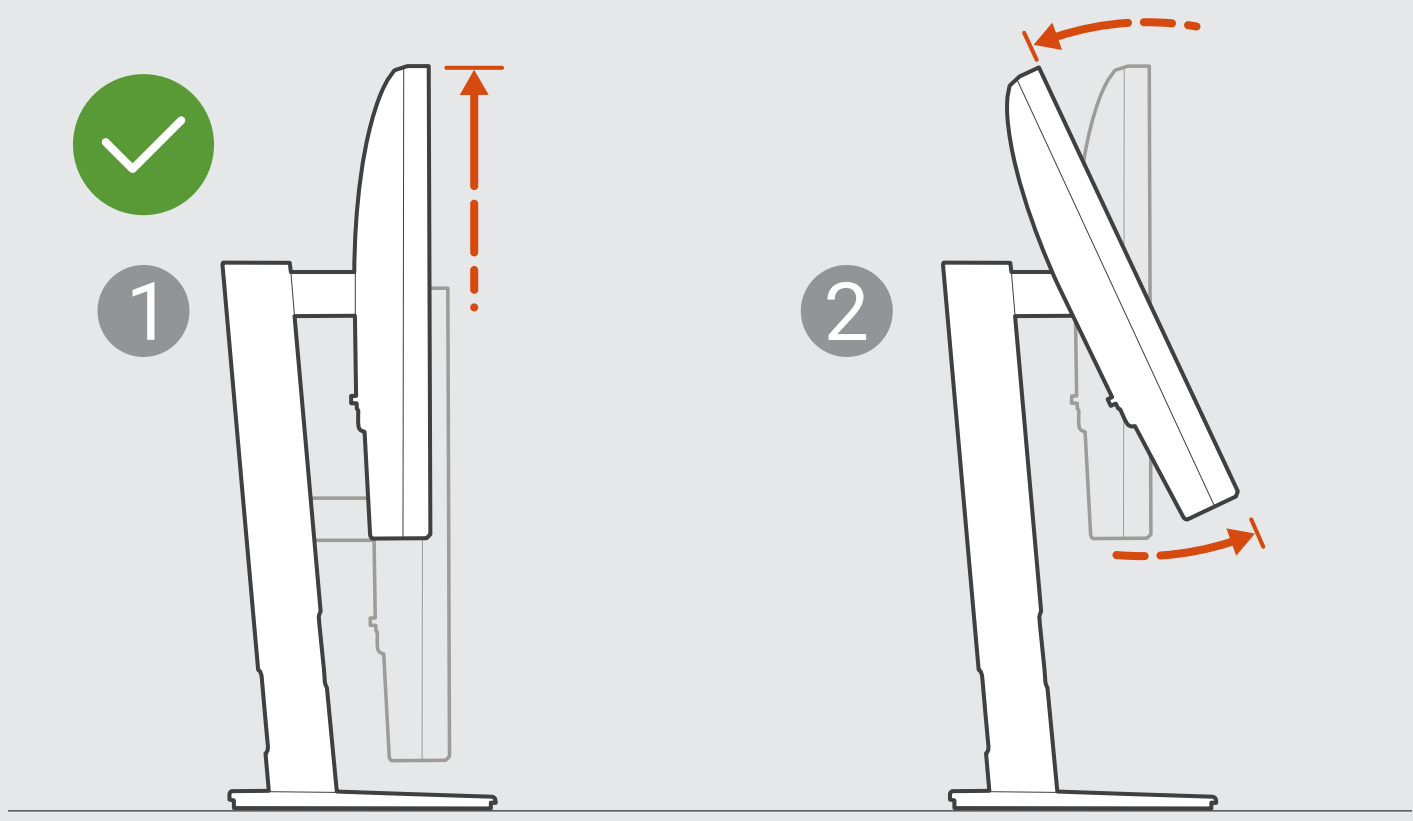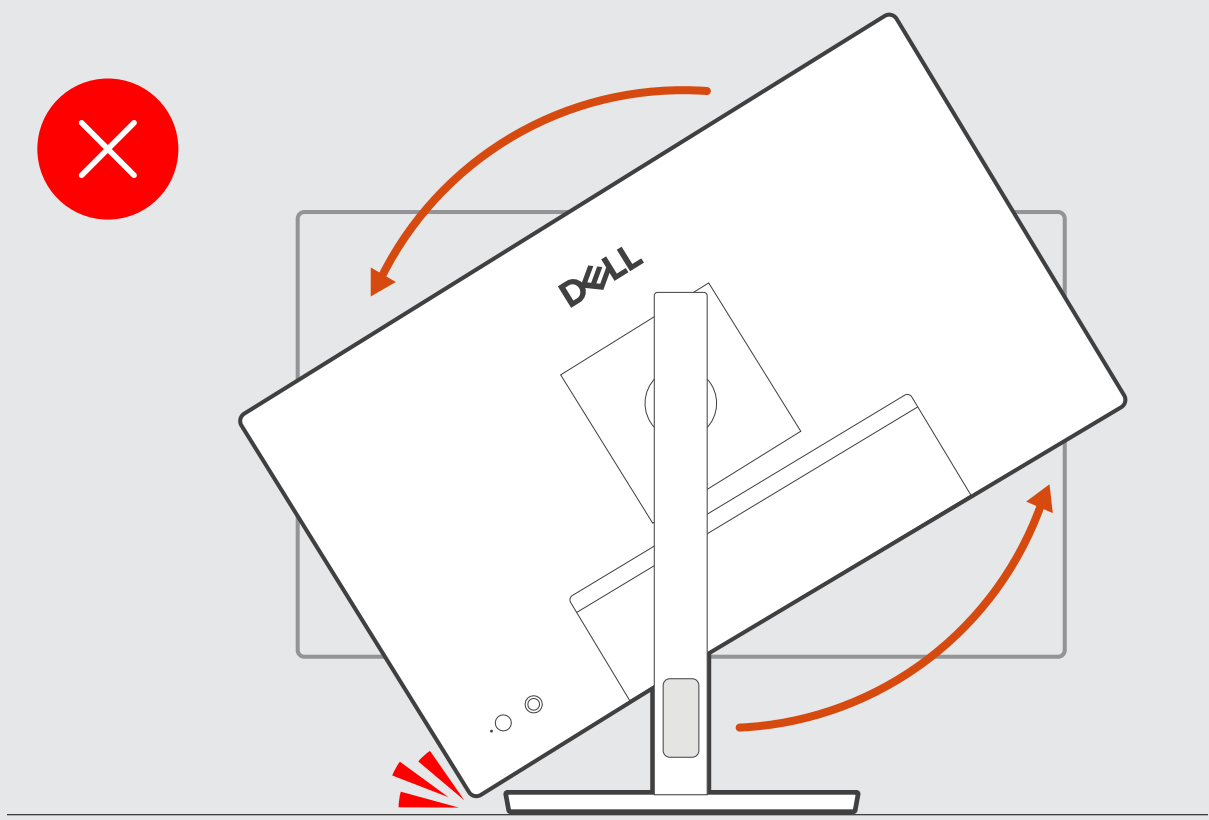

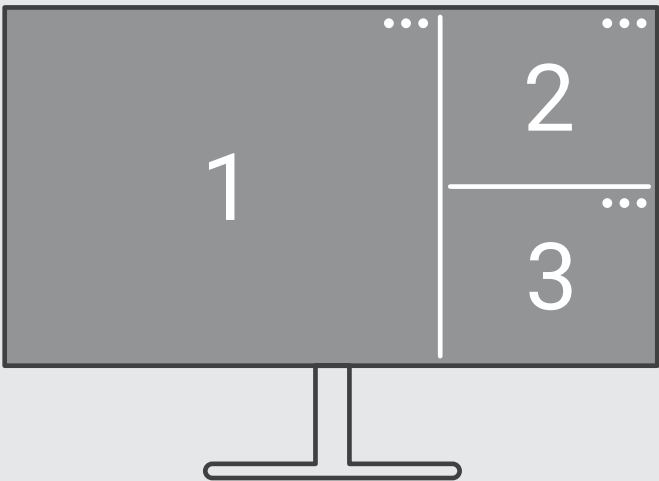

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://dell.com/support/ddpm)

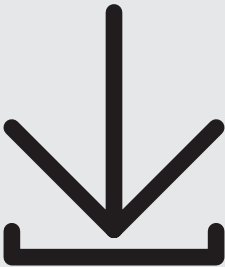

- [Dell.com/support/P2226H](https://dell.com/support/P2226H)
- [Dell.com/support/P2426H](https://dell.com/support/P2426H)
- [Dell.com/support/P2426](https://dell.com/support/P2426)
- [Dell.com/support/P2726H](https://dell.com/support/P2726H)