



Moniteur Dell Pro P 24 USB-C Hub  
P2426HE





Moniteur Concentrateur USB-C Dell Pro P 24 sans halogènes  
P2426HE


Moniteur Dell Pro P 24 16:10 USB-C Hub  
P2426E


Moniteur Dell Pro P 27 USB-C Hub  
P2726HE


Guide de démarrage rapide




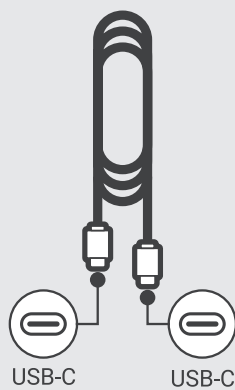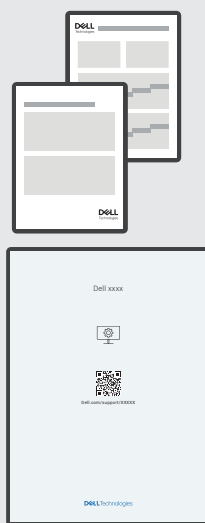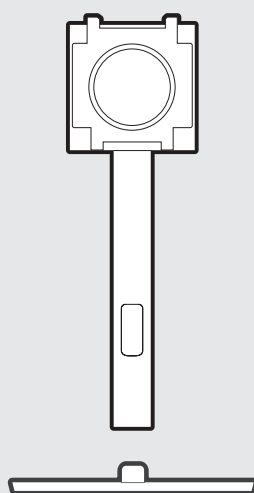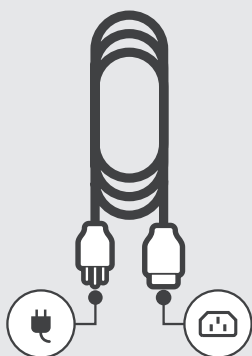

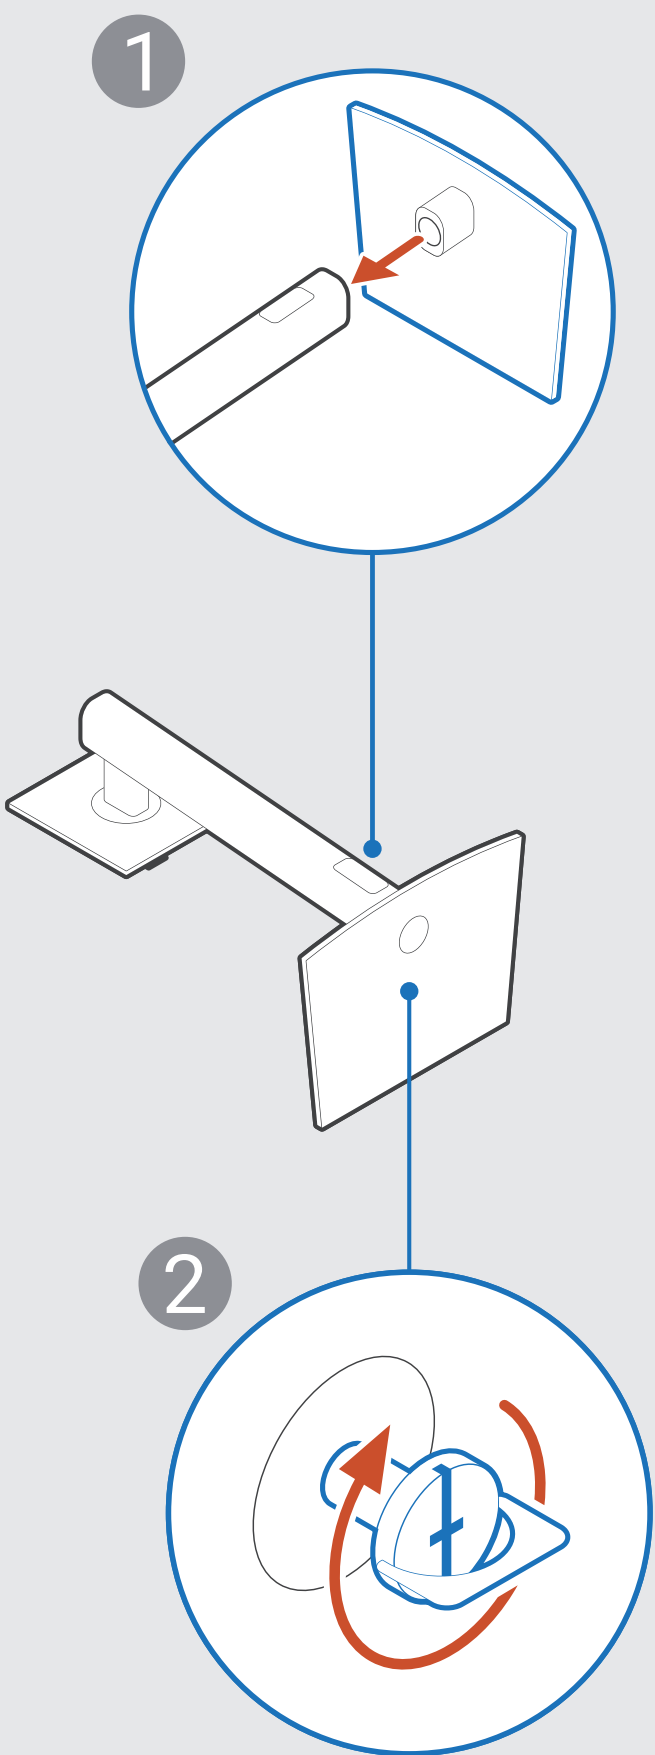


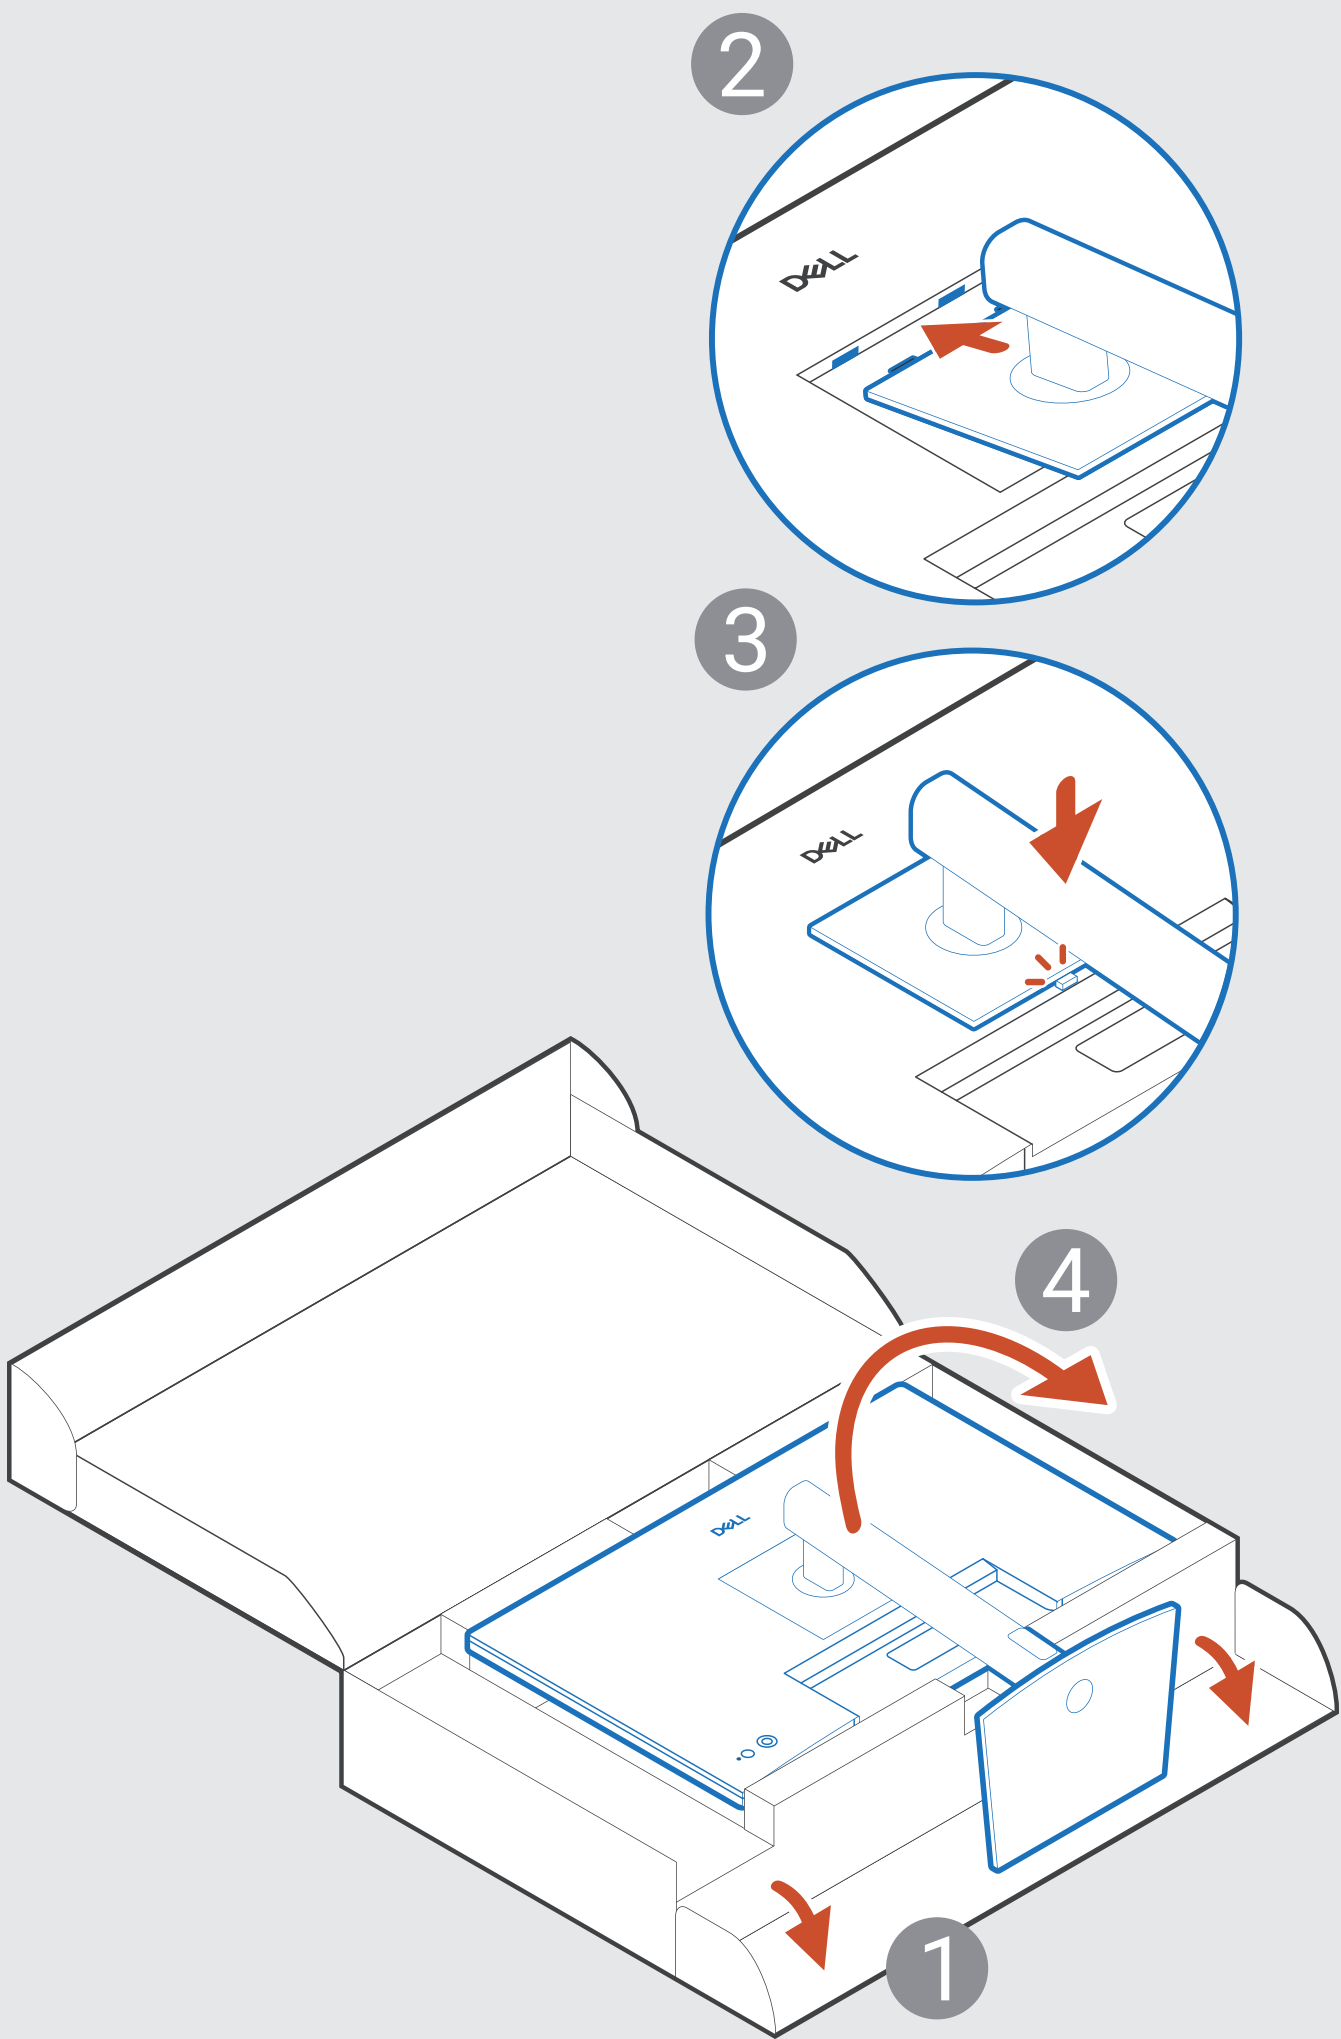


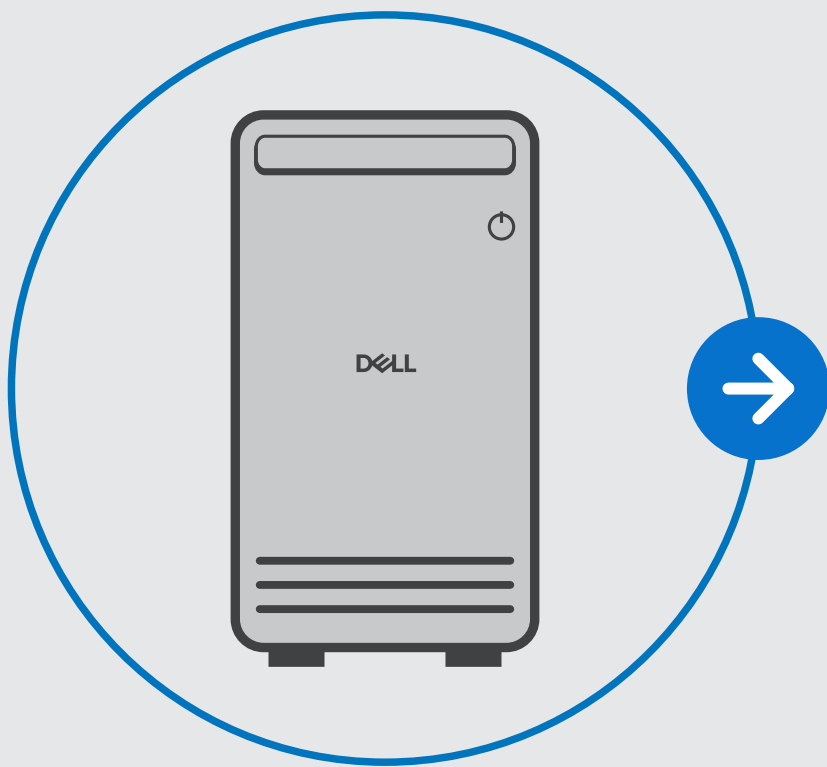

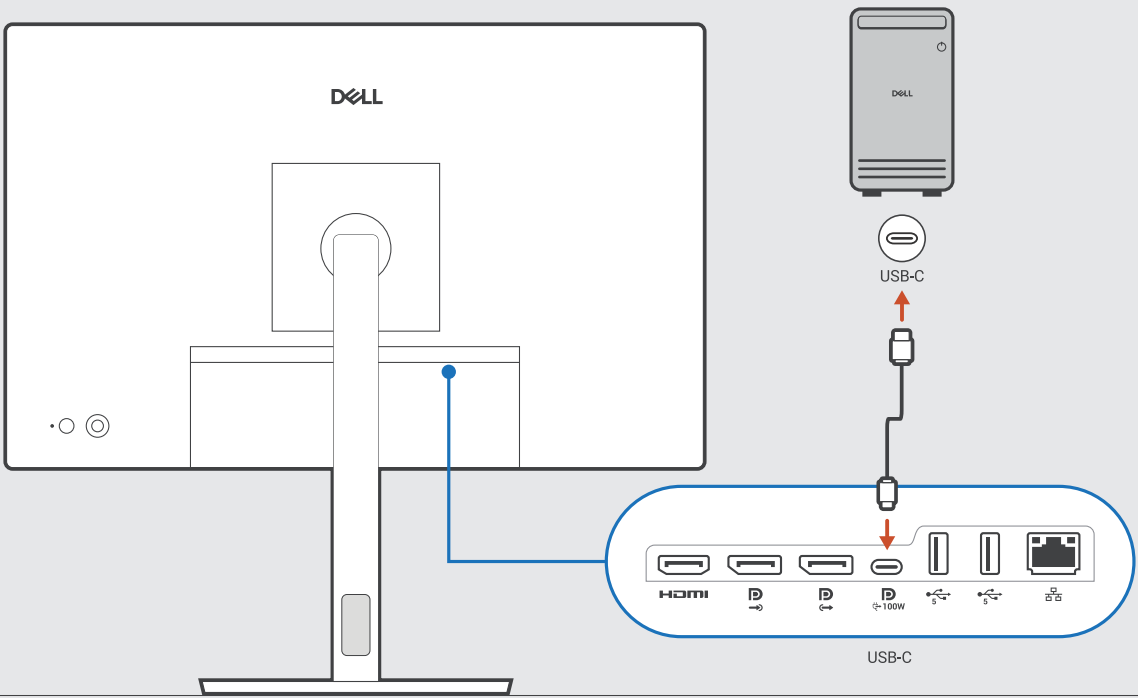




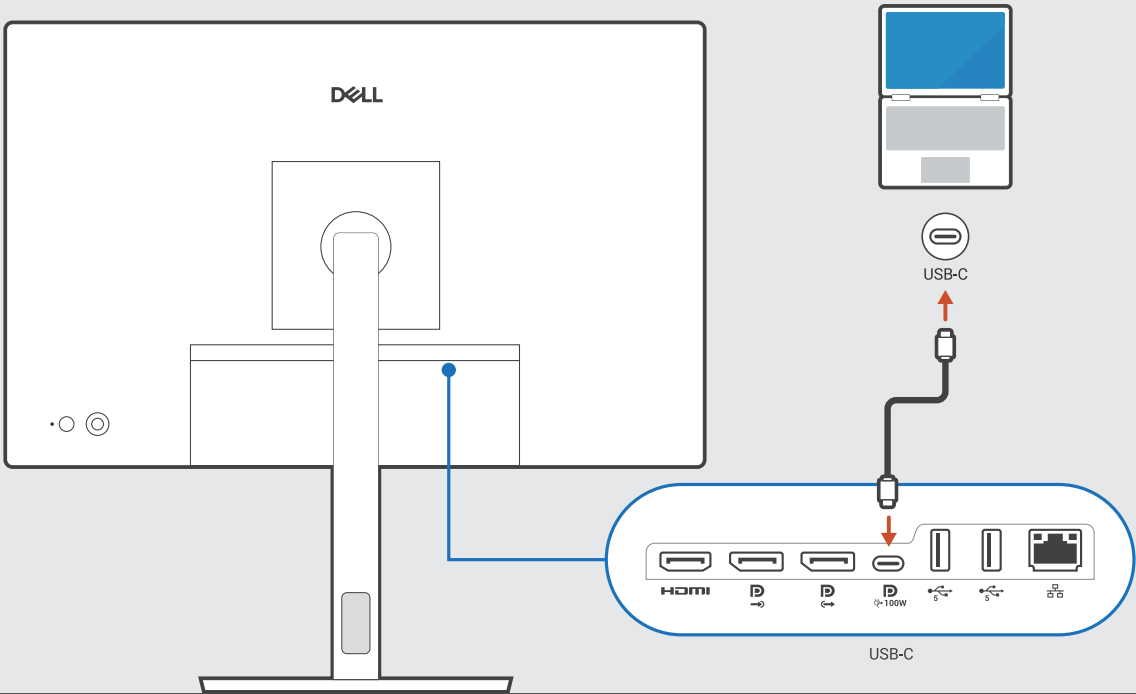


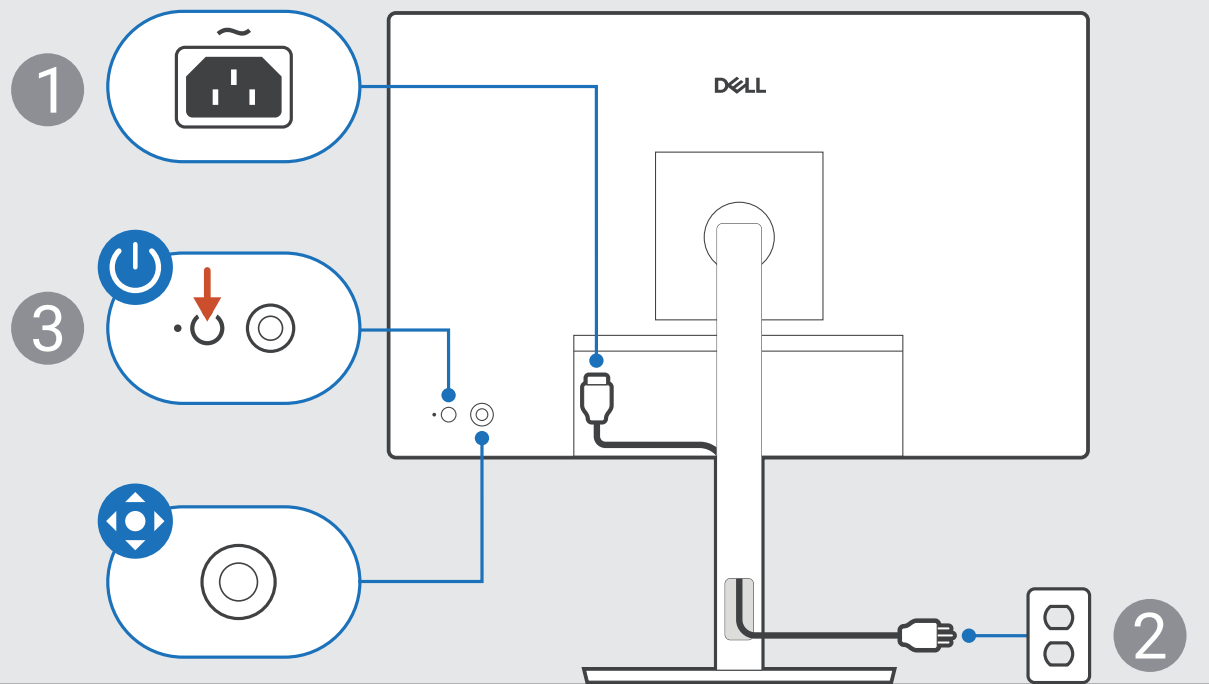




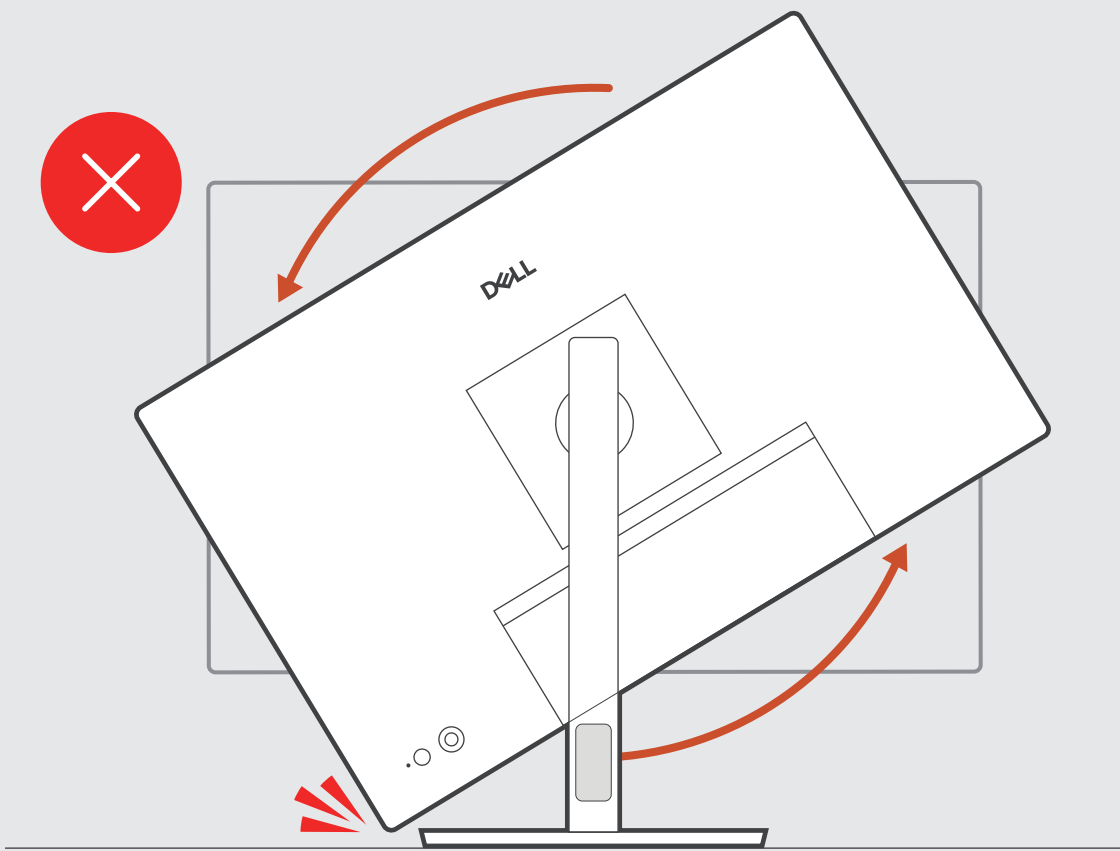



1

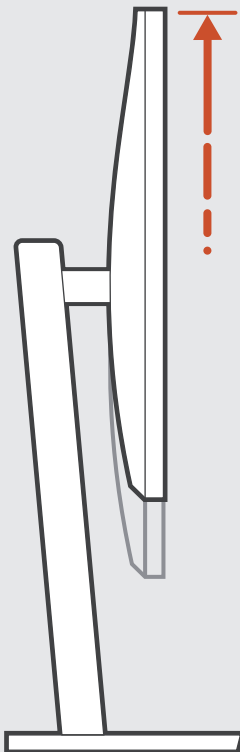


2

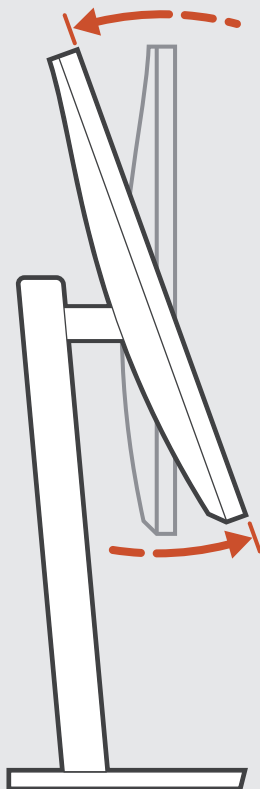


3

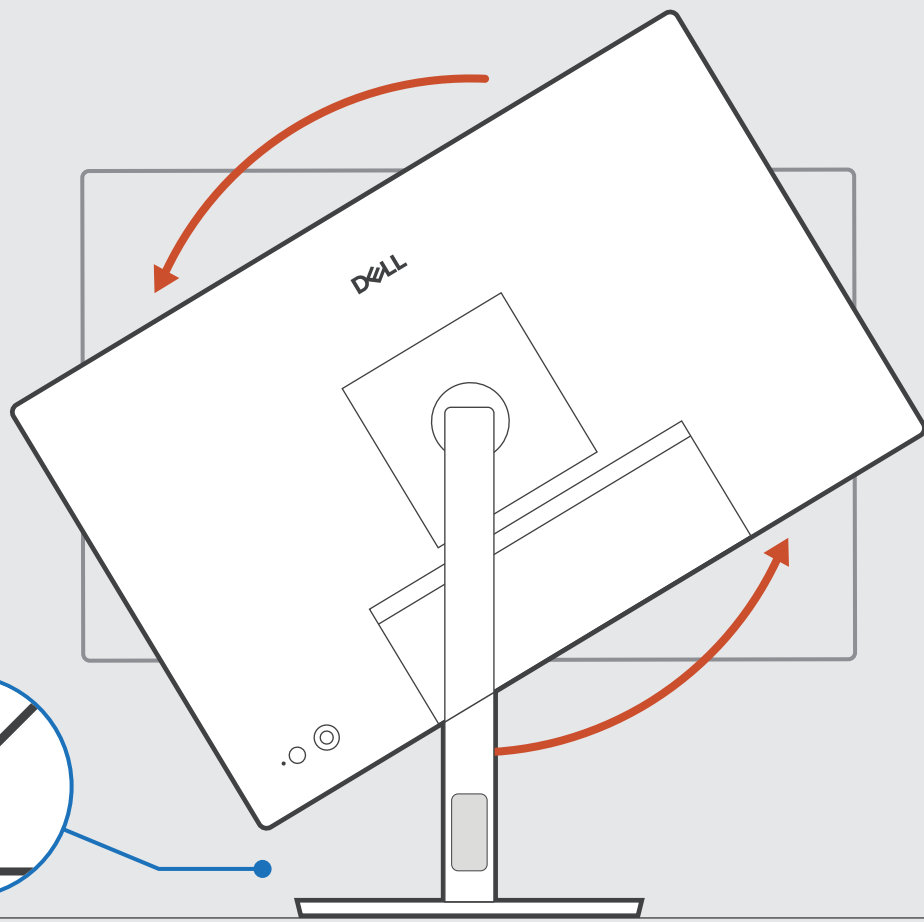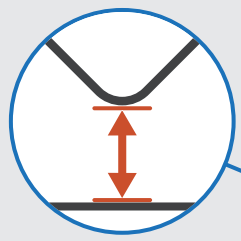

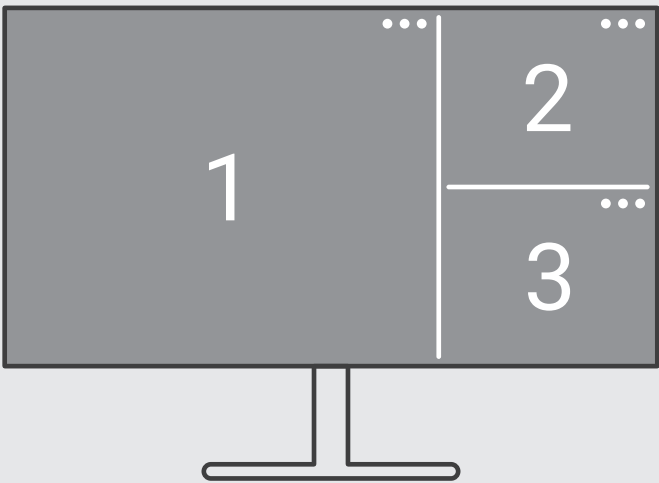

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://Dell.com/support/ddpm)

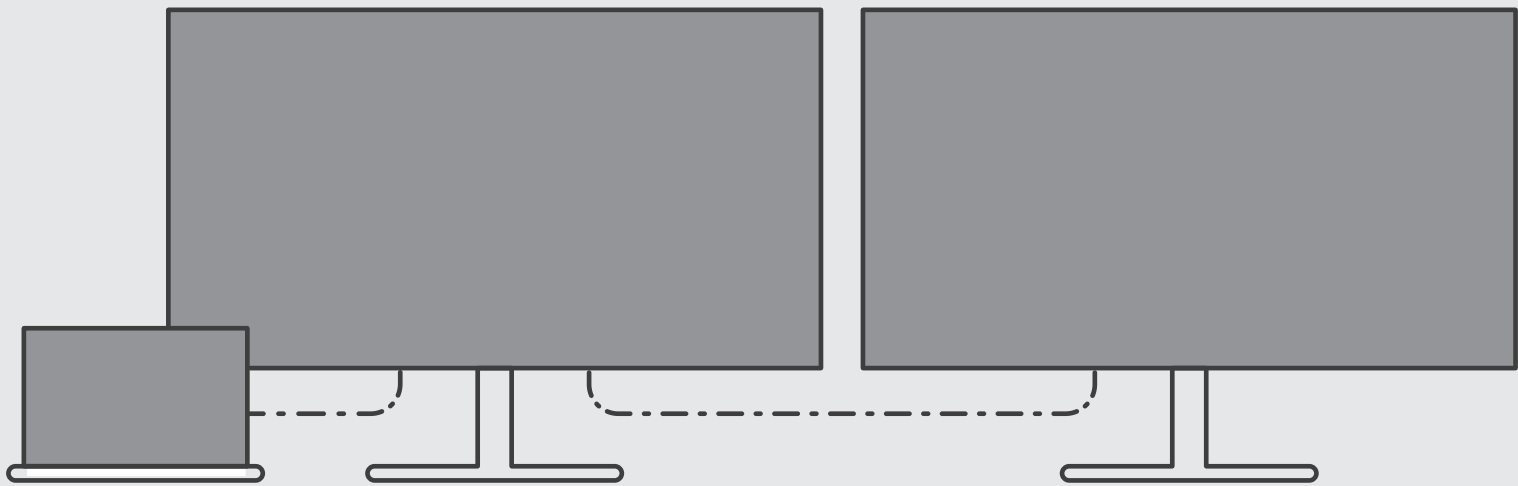

Chaînage en série



[Dell.com/support/P2426HE](https://Dell.com/support/P2426HE)  
[Dell.com/support/P2426HE-HF](https://Dell.com/support/P2426HE-HF)  
[Dell.com/support/P2426E](https://Dell.com/support/P2426E)  
[Dell.com/support/P2726HE](https://Dell.com/support/P2726HE)