



[Monitor Dell Pro P 22](#)

[P2226H](#)

[Monitor Dell Pro P 24](#)

[P2426H](#)

[Monitor Dell Pro P 24 16:10](#)







[P2426](#)

[Monitor Dell Pro P 27](#)


[P2726H](#)




[Guía de inicio rápido](#)





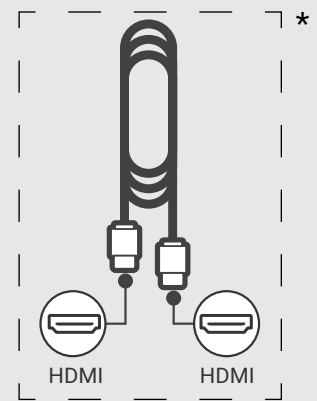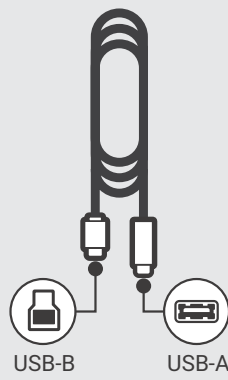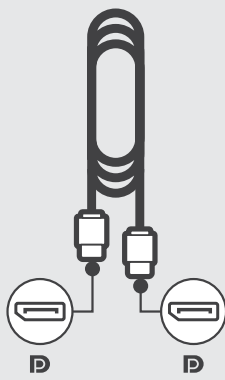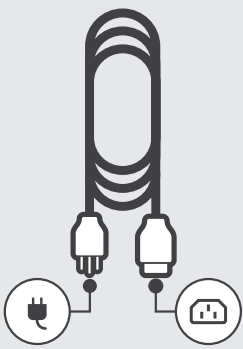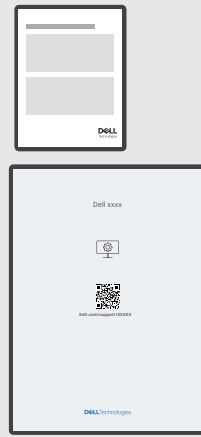
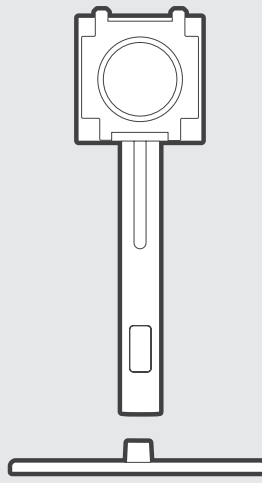




*Solo para determinados países

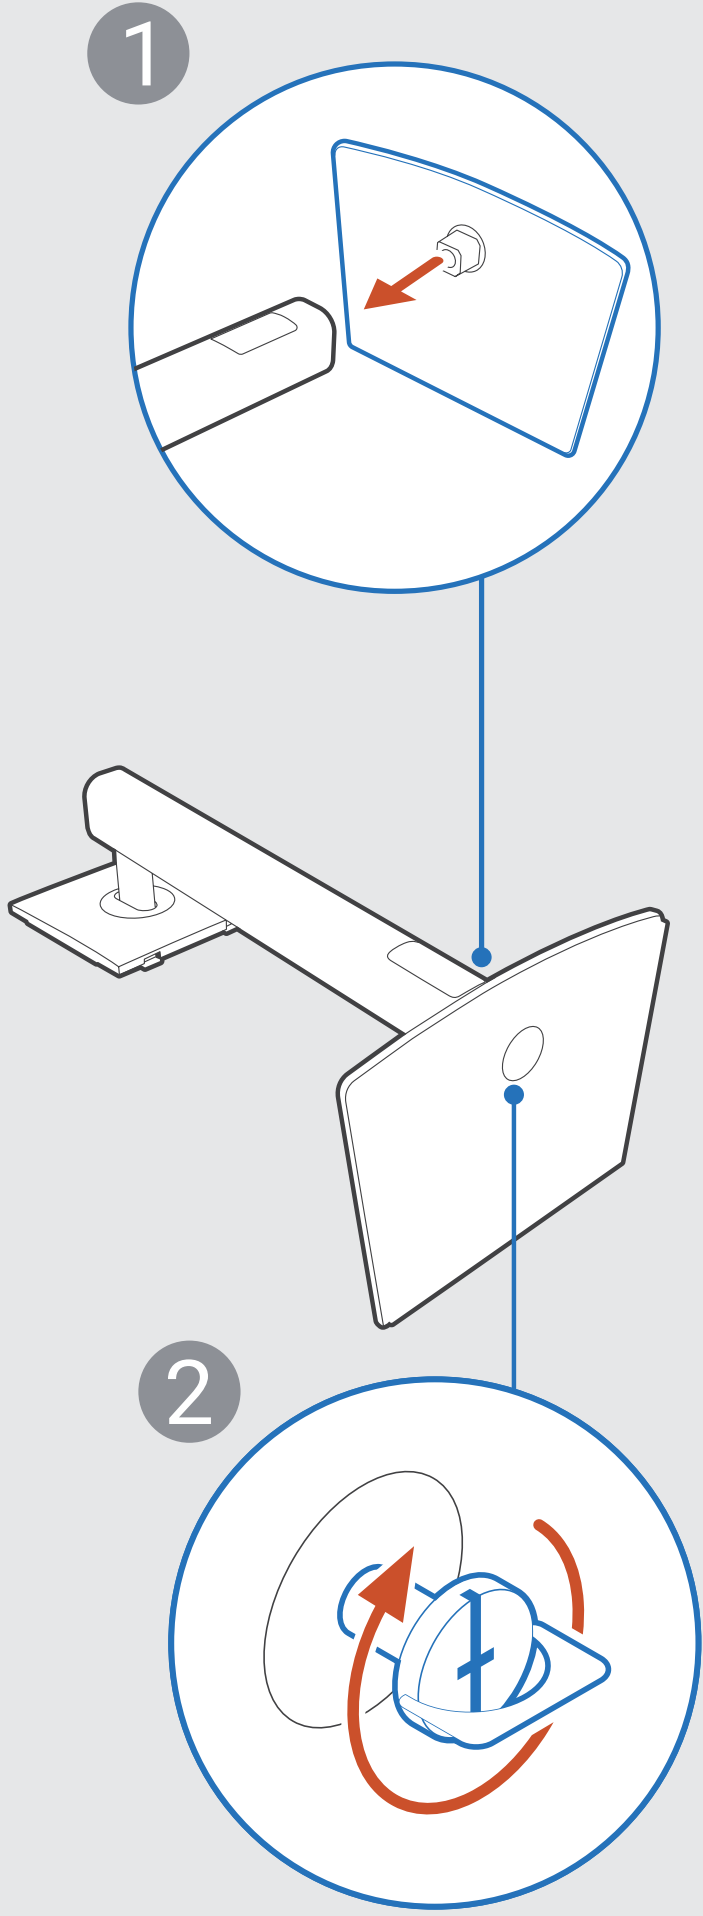


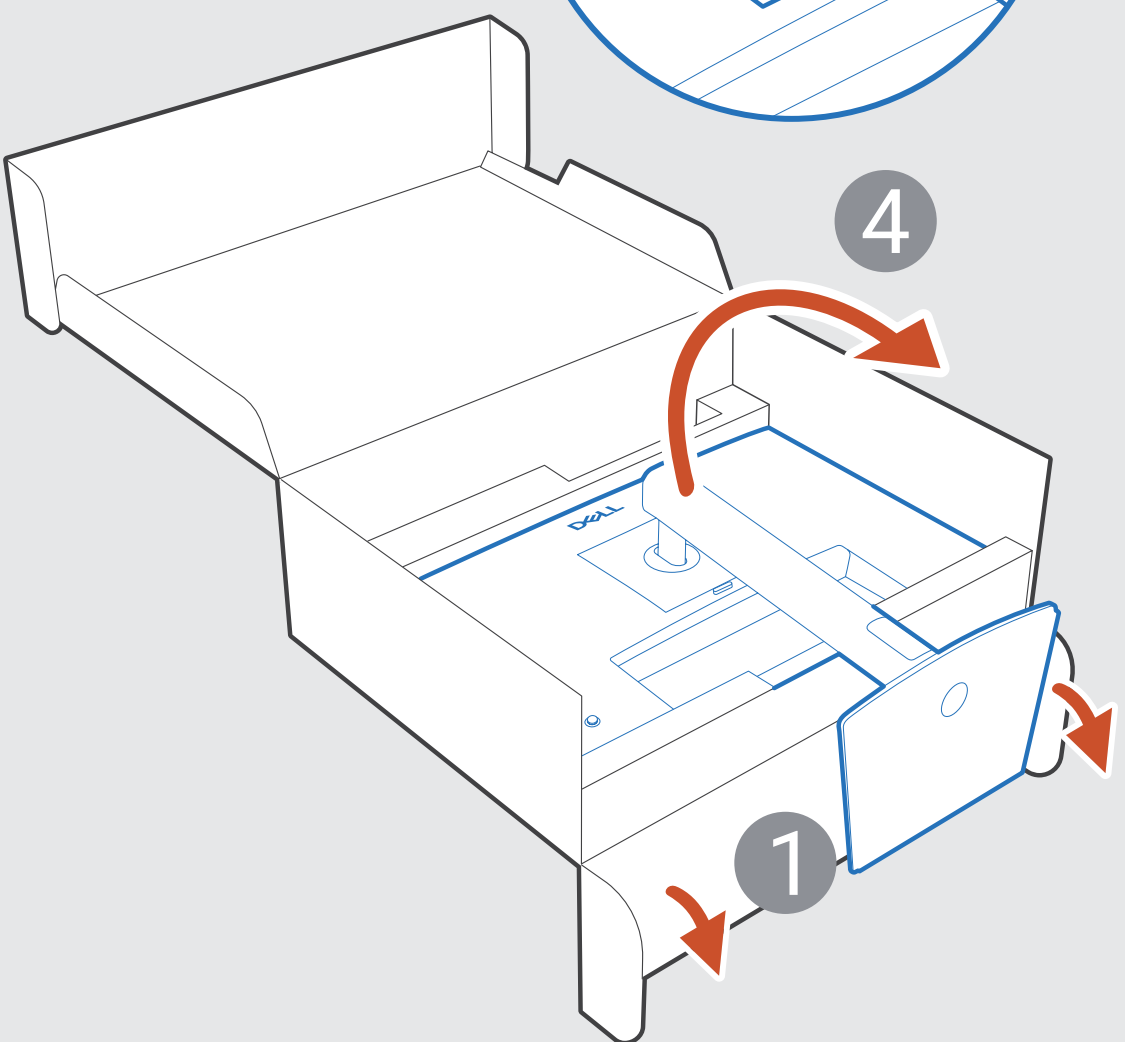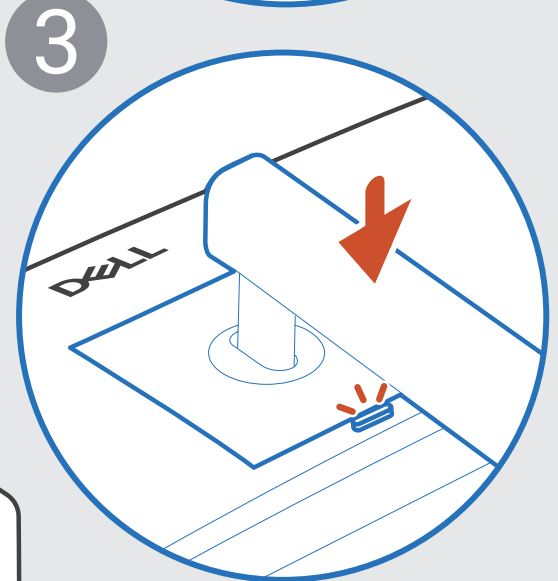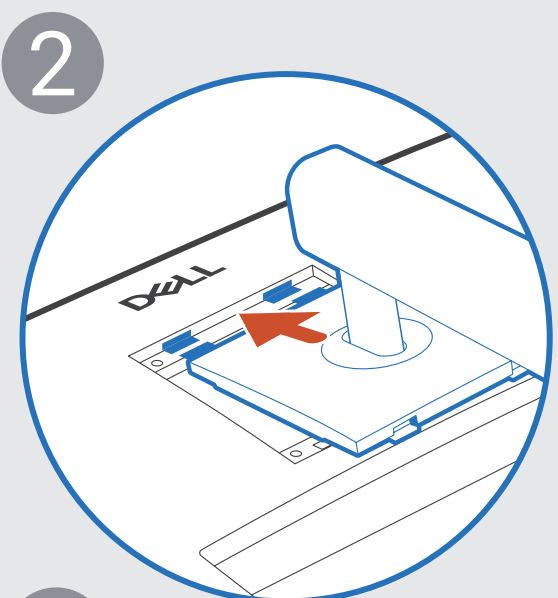


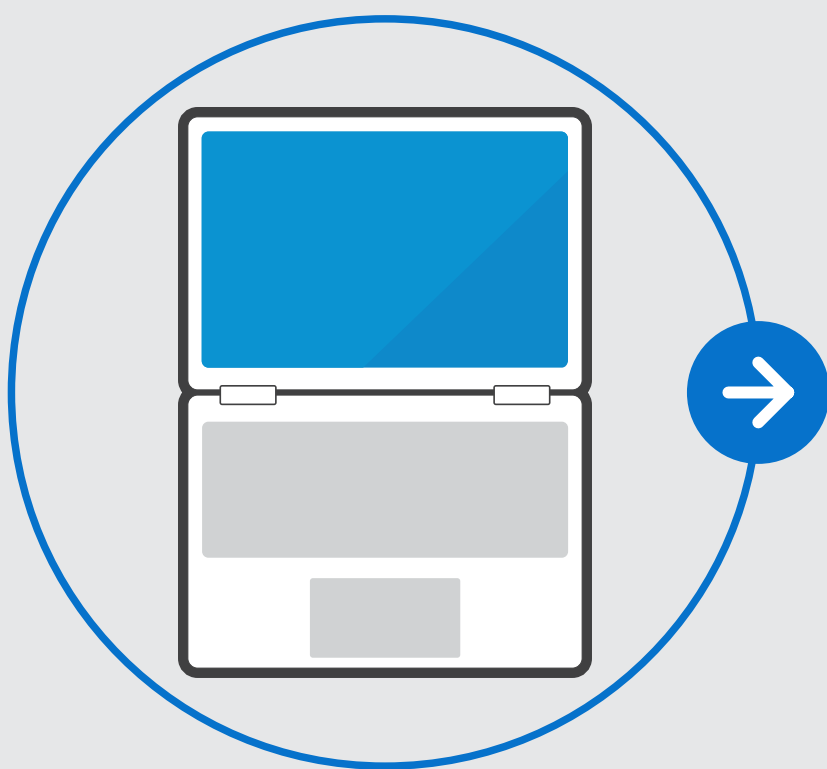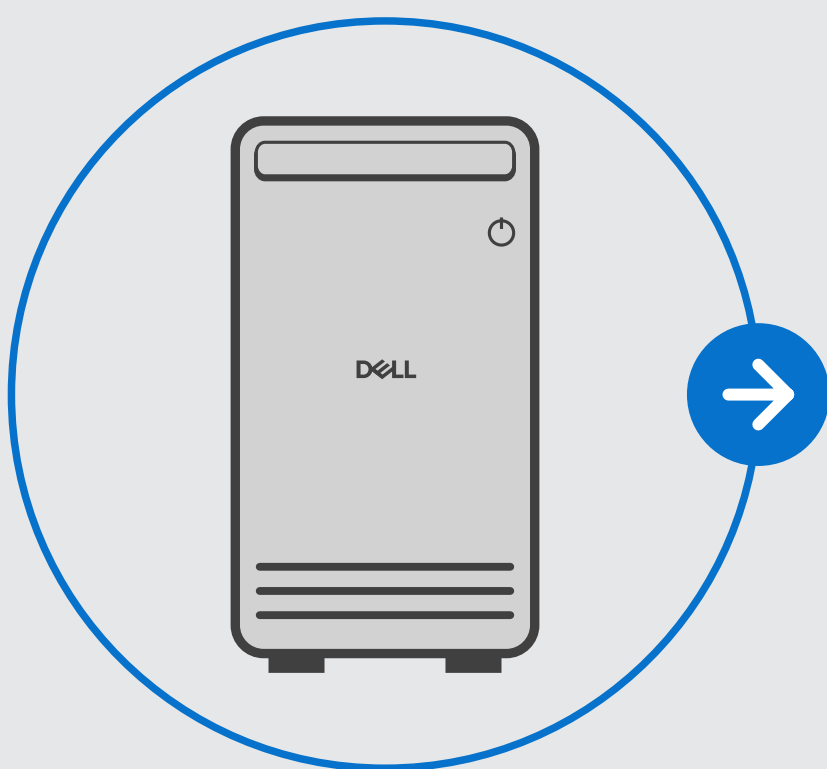

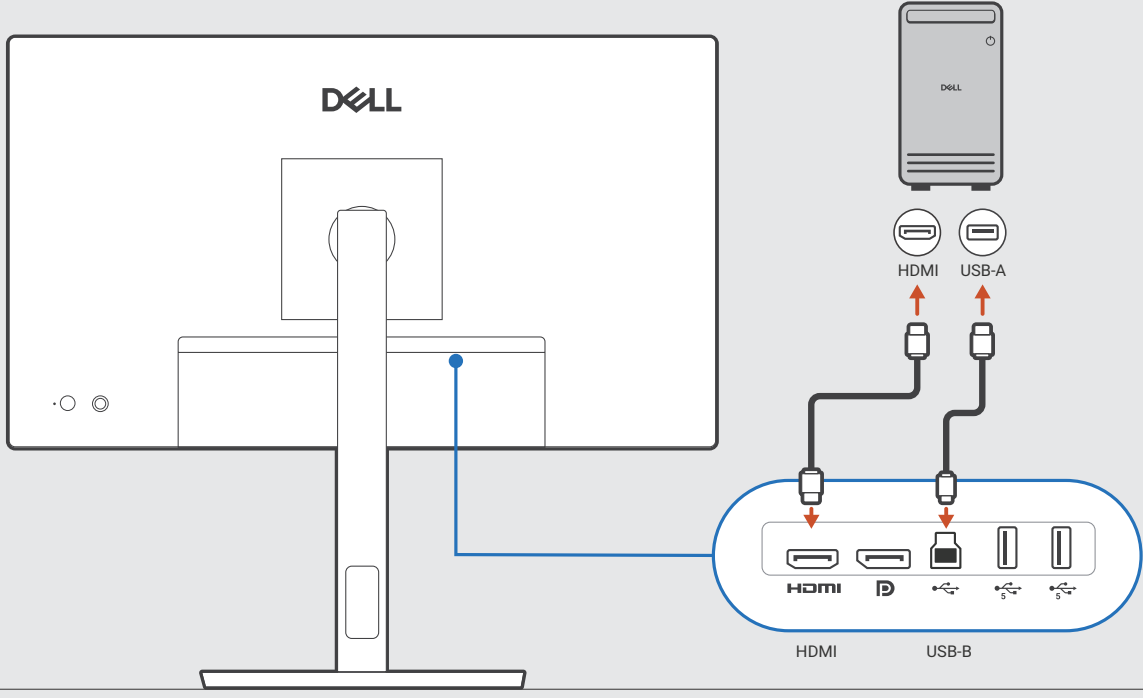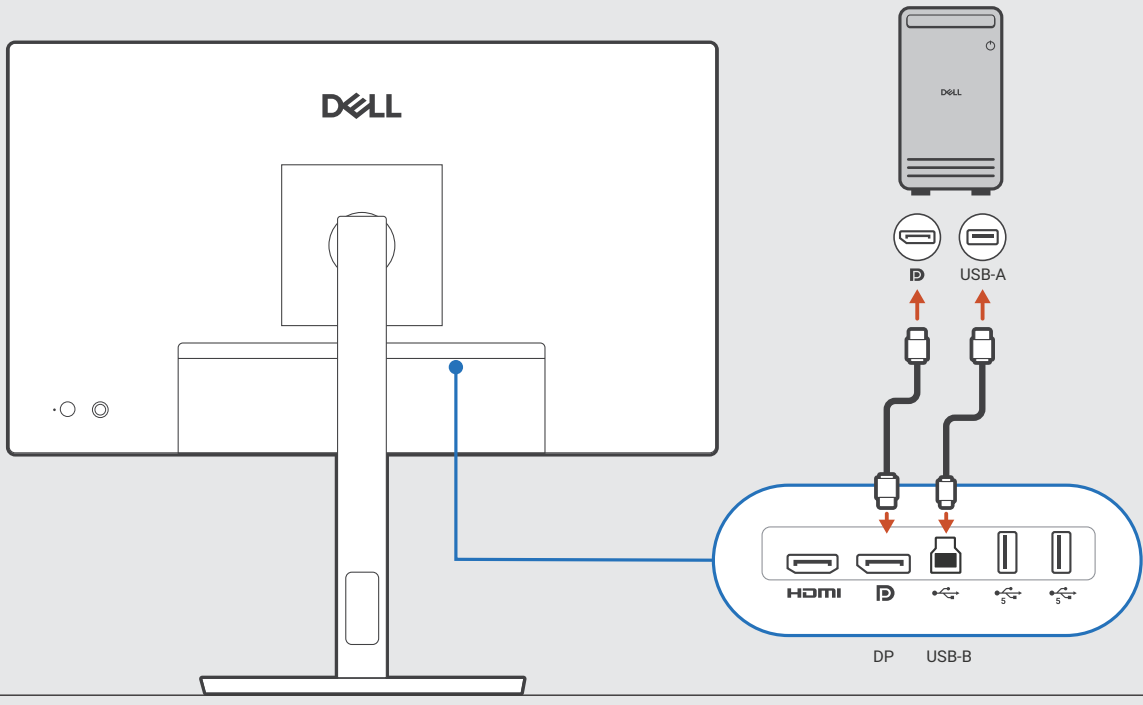


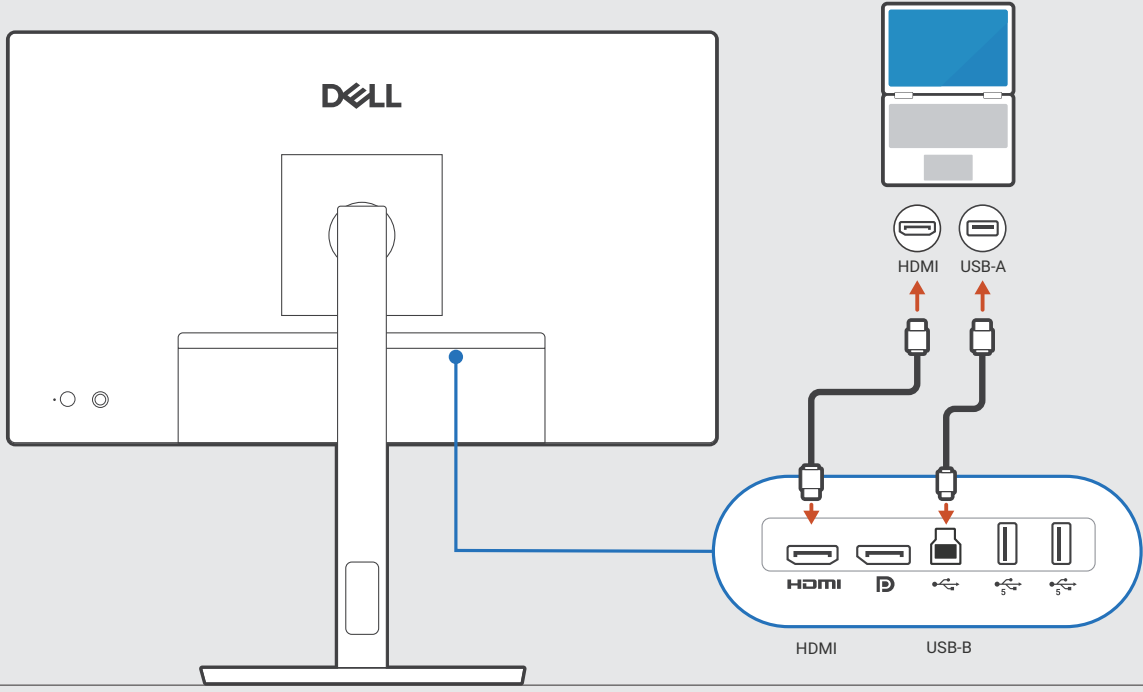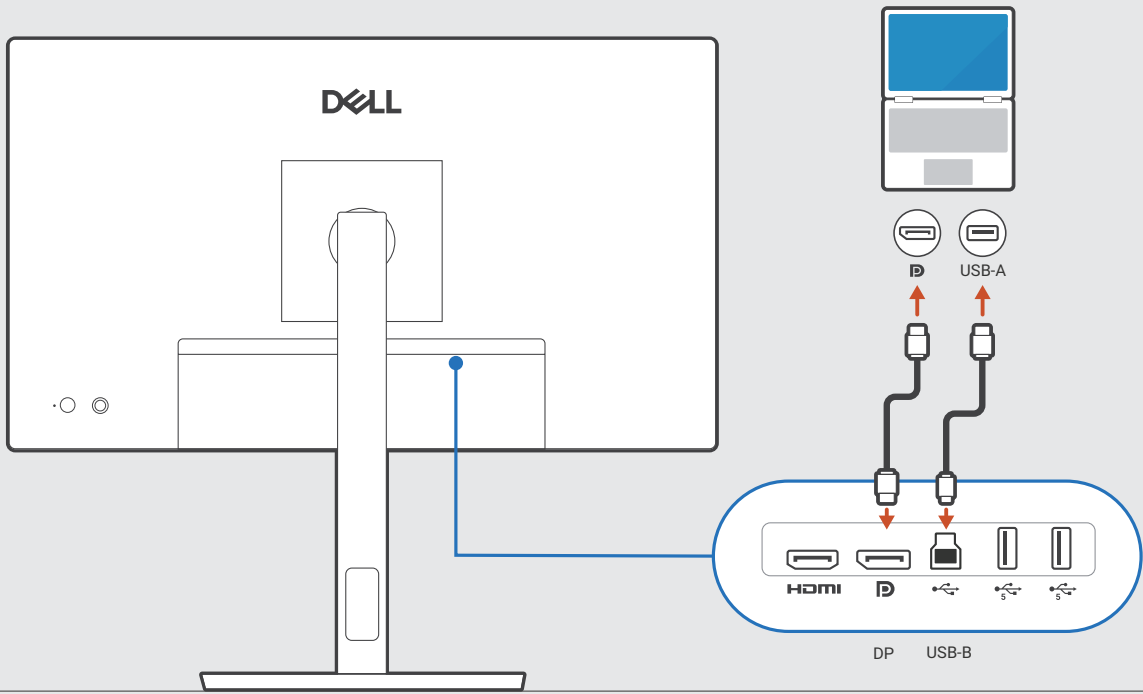

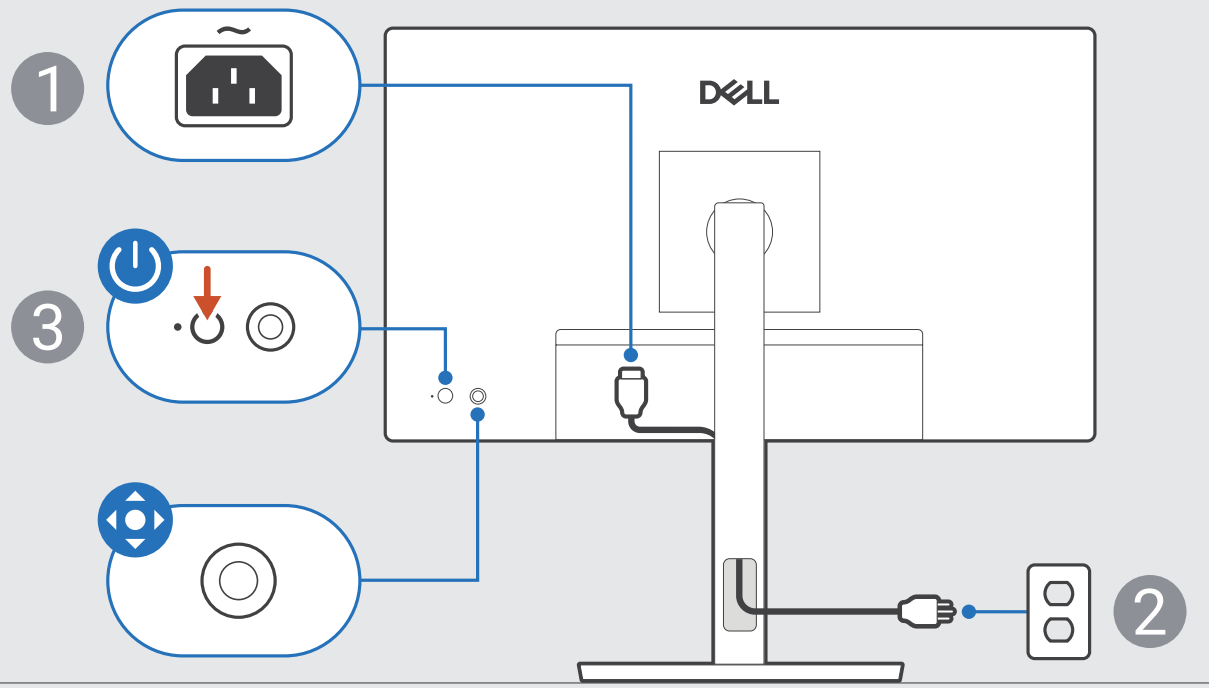


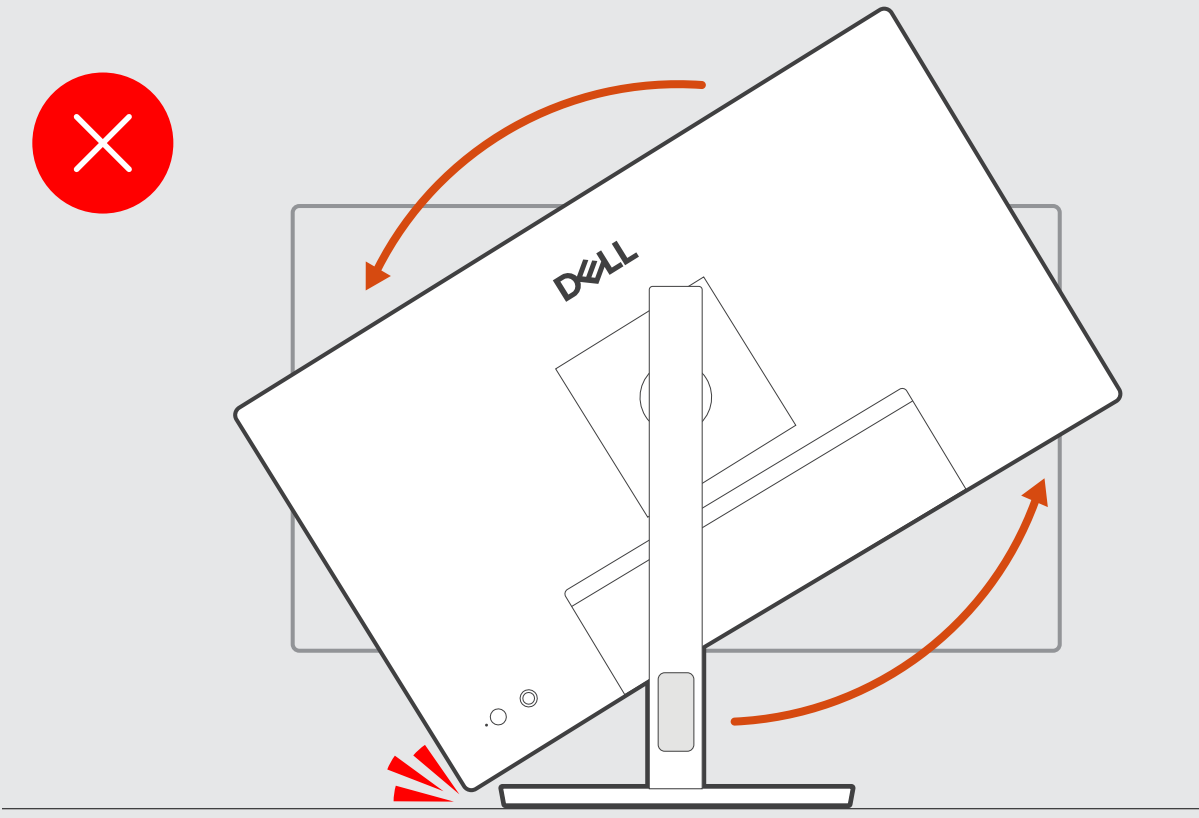


1

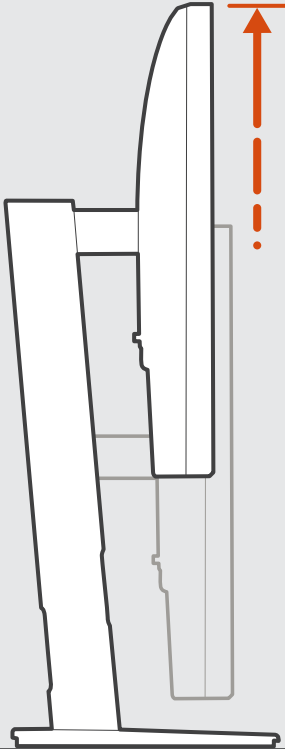


2

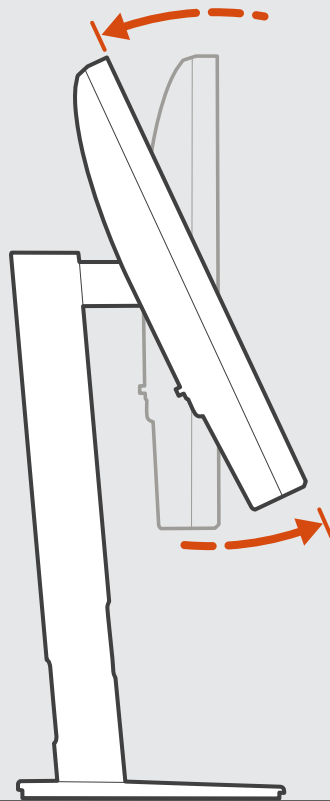


3

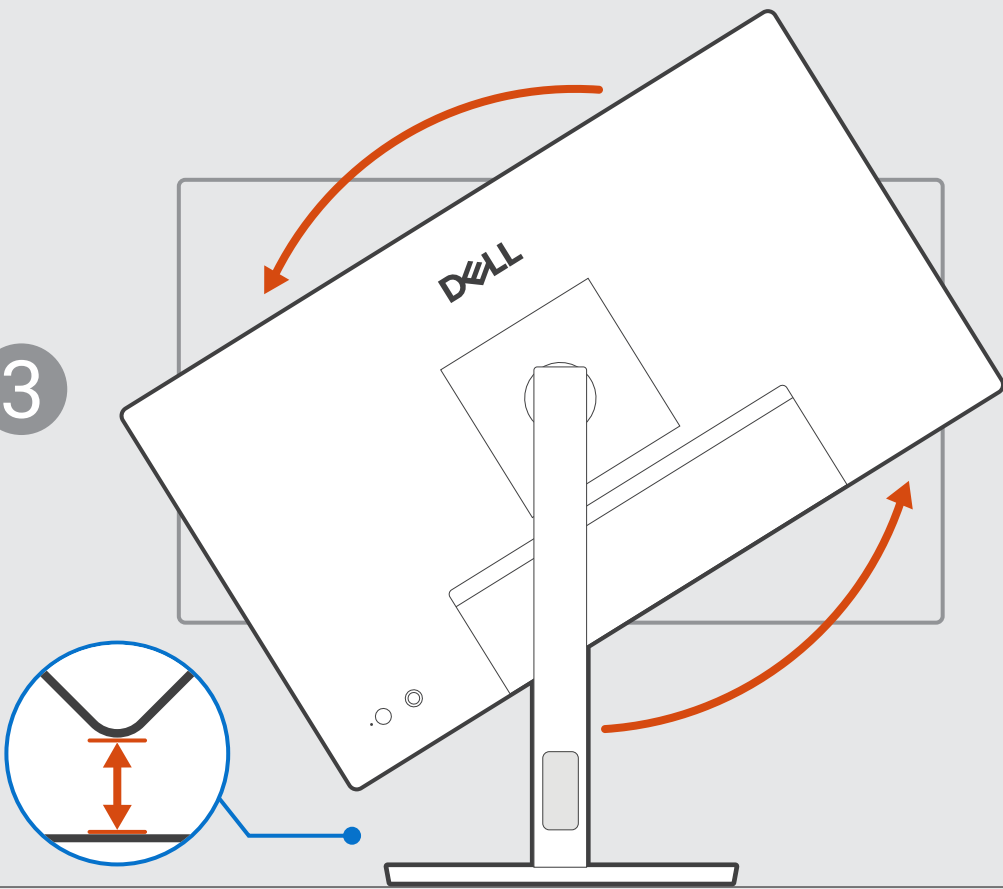

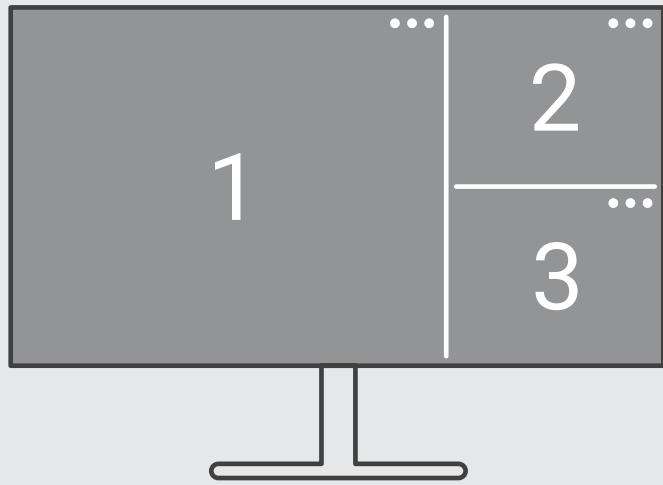

Dell Display and Peripheral Manager
Dell.com/support/ddpm

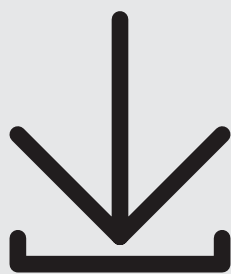

Dell.com/support/P2226H

Dell.com/support/P2426H

Dell.com/support/P2426

Dell.com/support/P2726H