



[Monitor Dell Pro P 22](#)

[P2226H](#)

[Monitor Dell Pro P 24](#)

[P2426H](#)

[Monitor Dell Pro P 24 16:10](#)







[P2426](#)

[Monitor Dell Pro P 27](#)


[P2726H](#)




[Guía de inicio rápido](#)





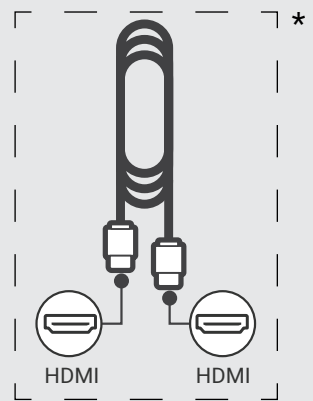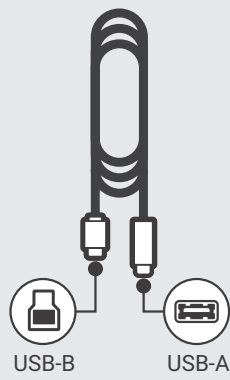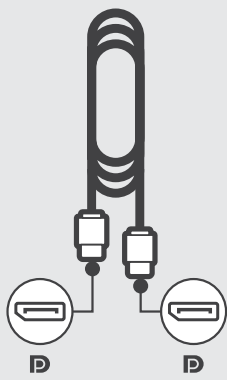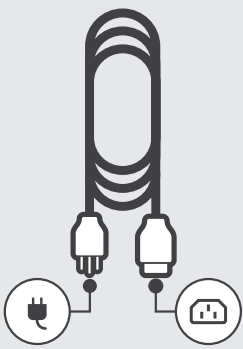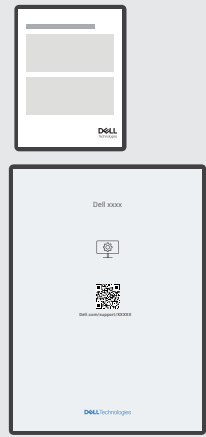
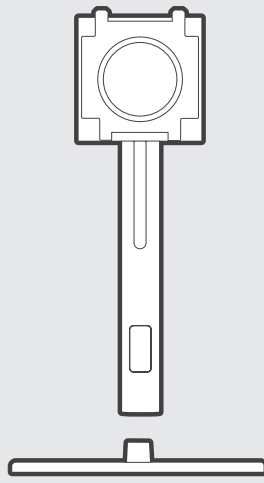




\*Solo para determinados países

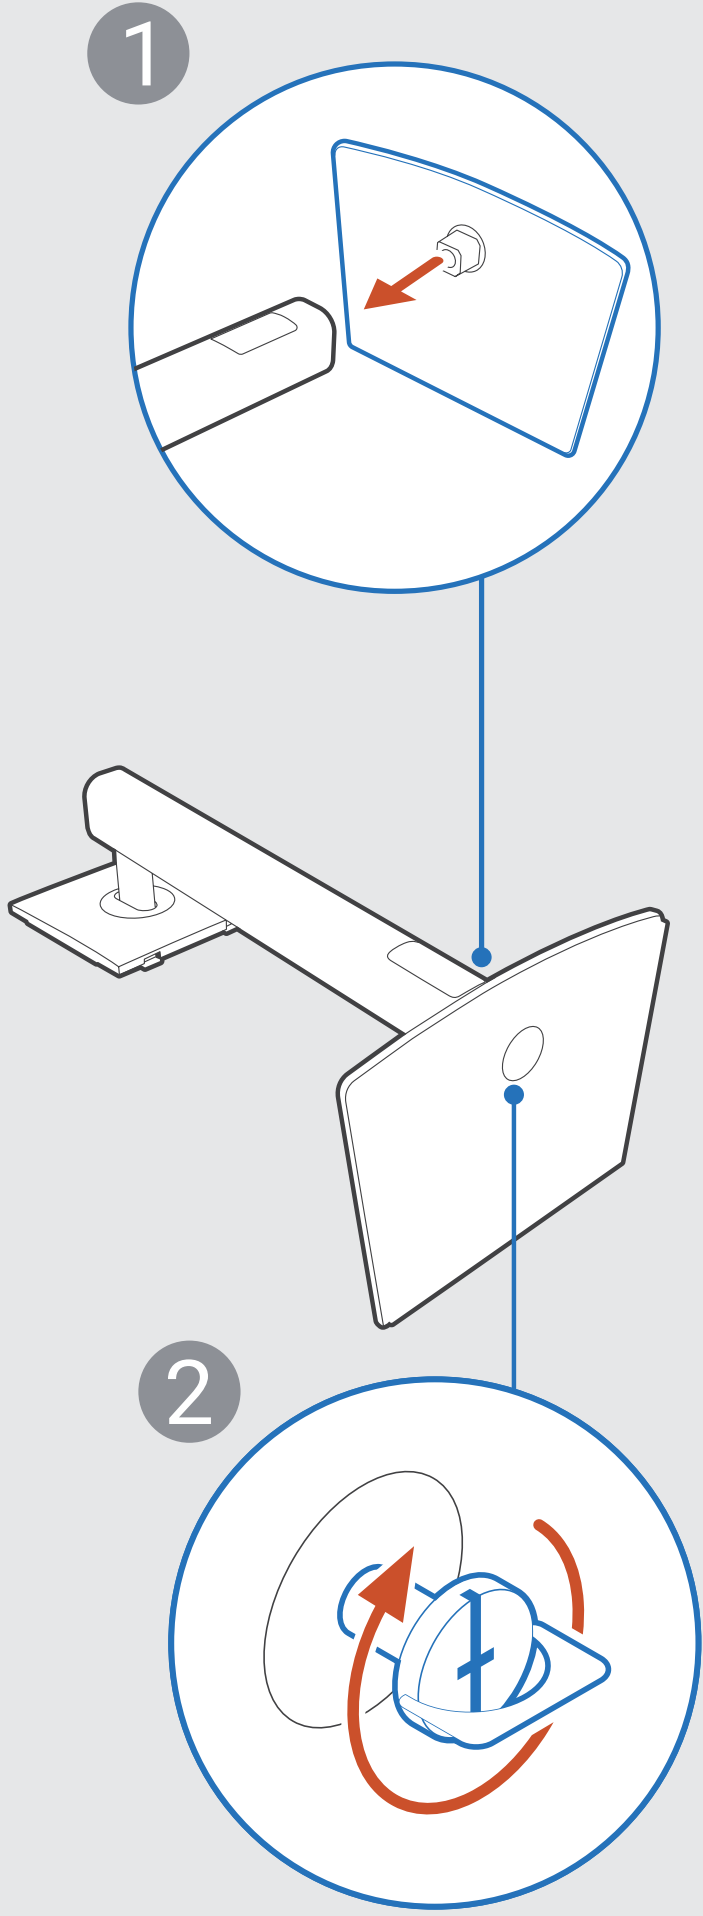


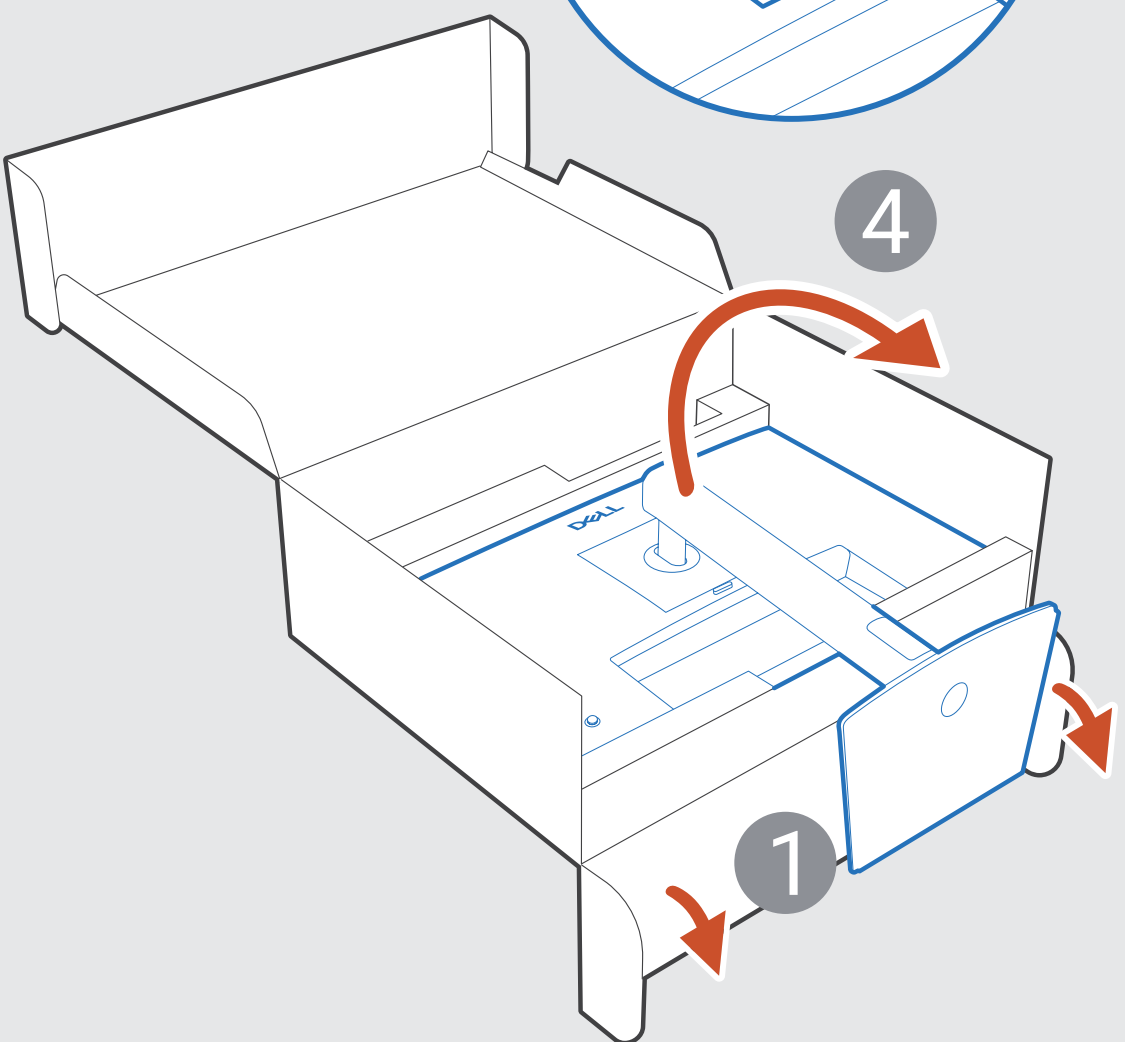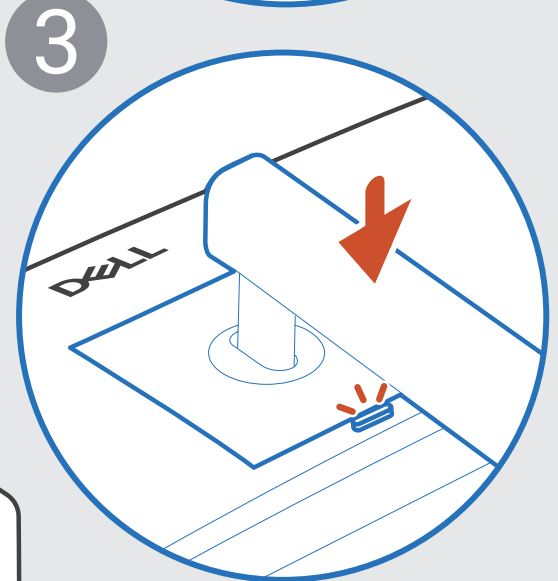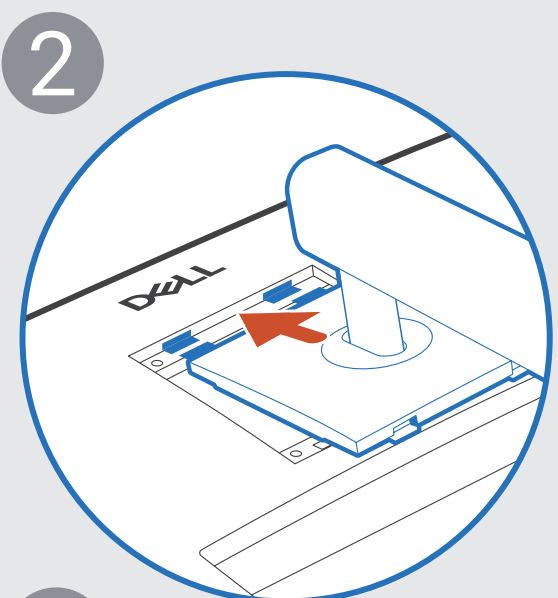


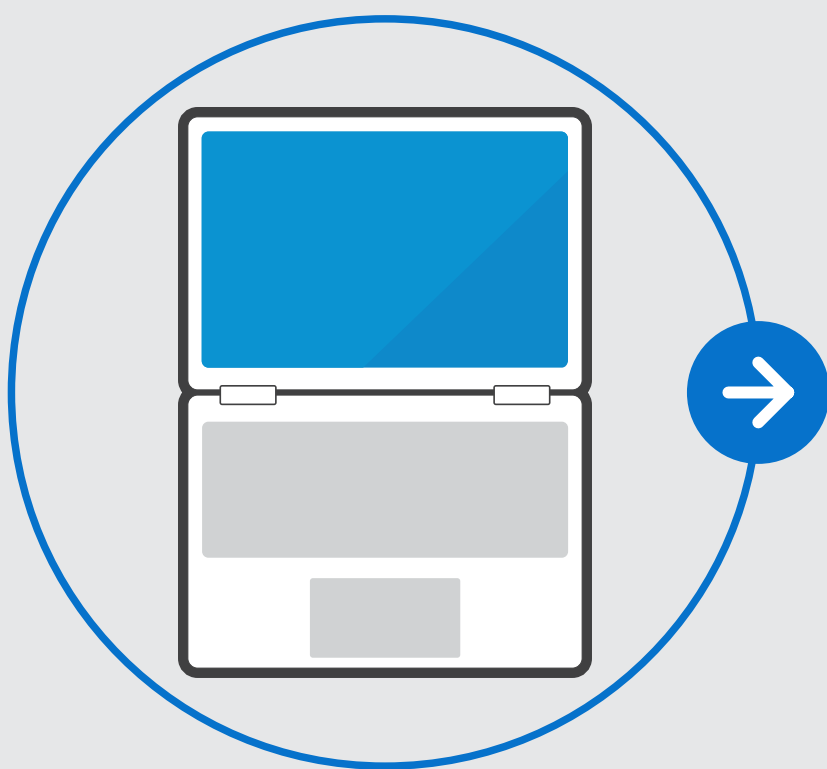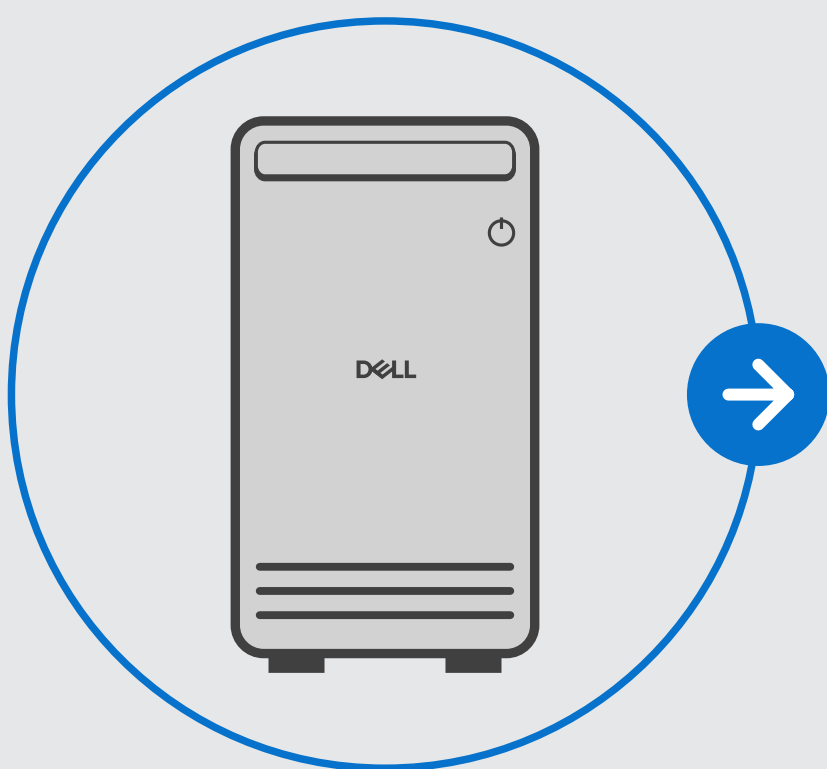

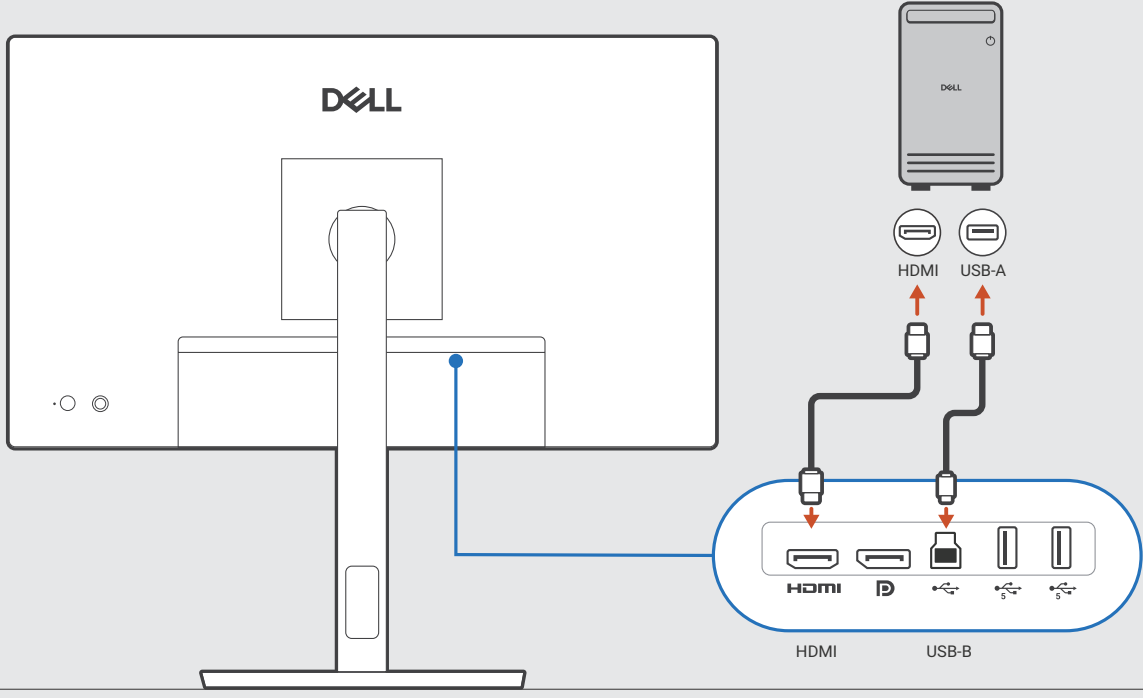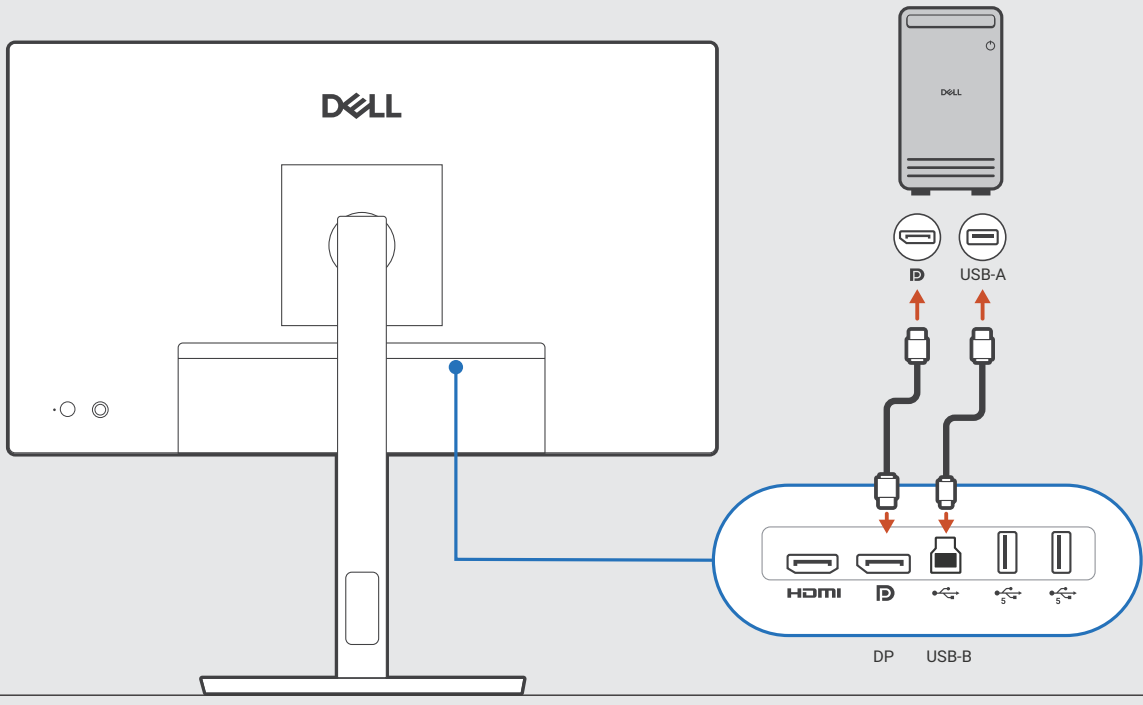


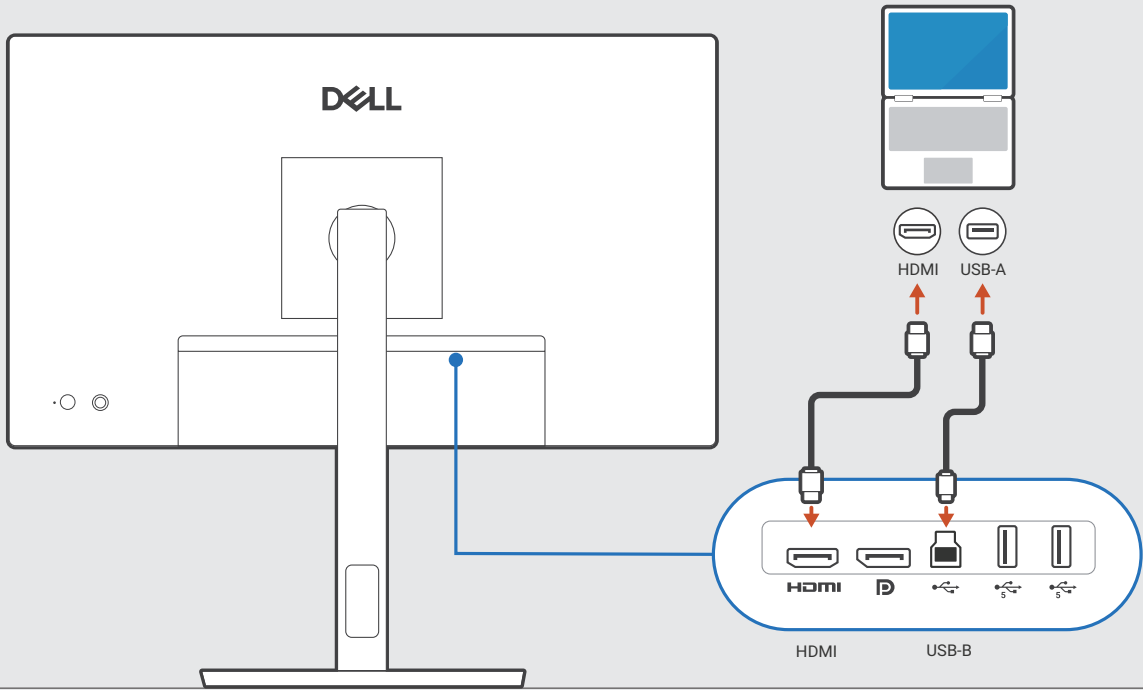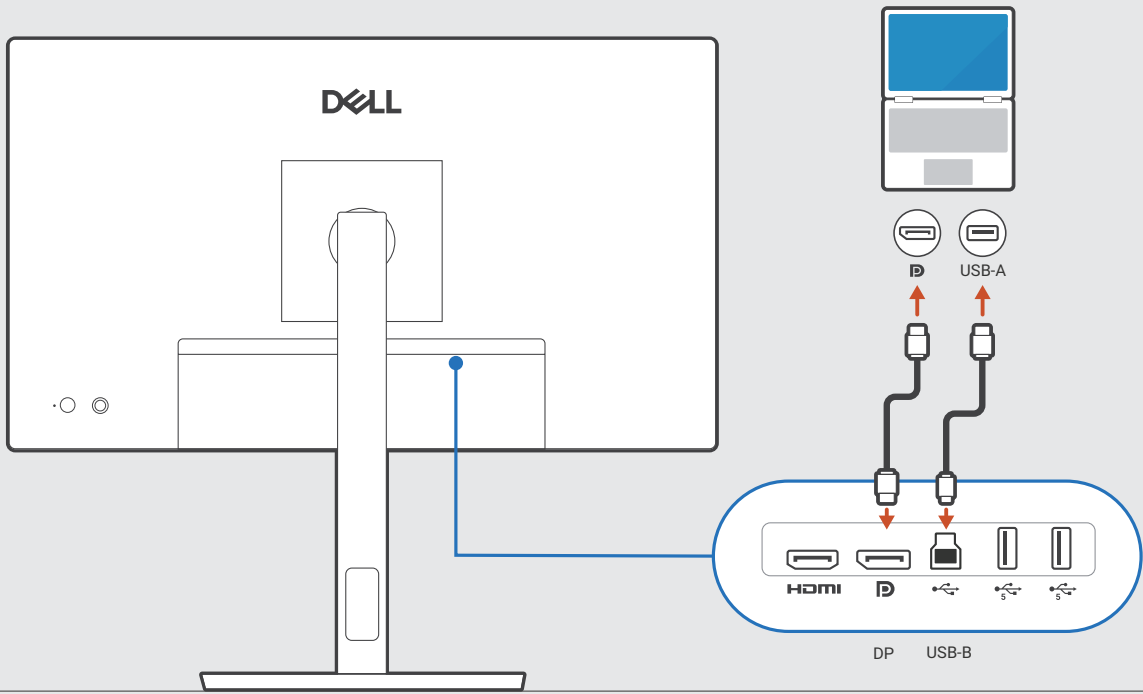

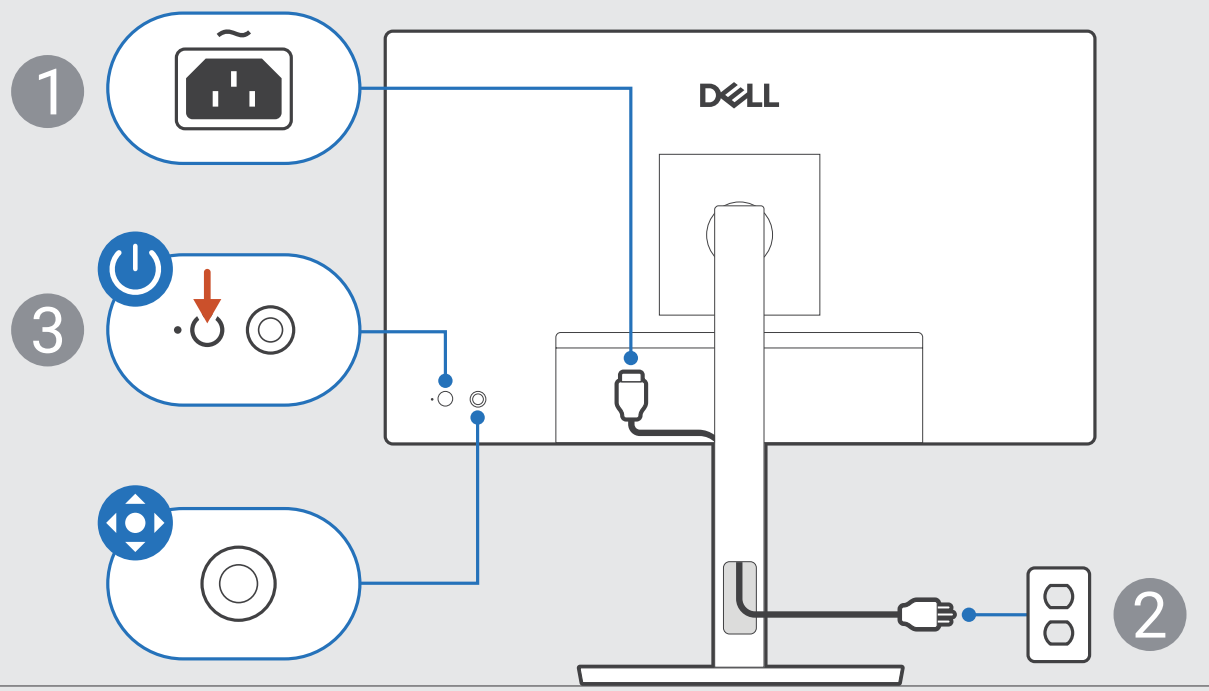


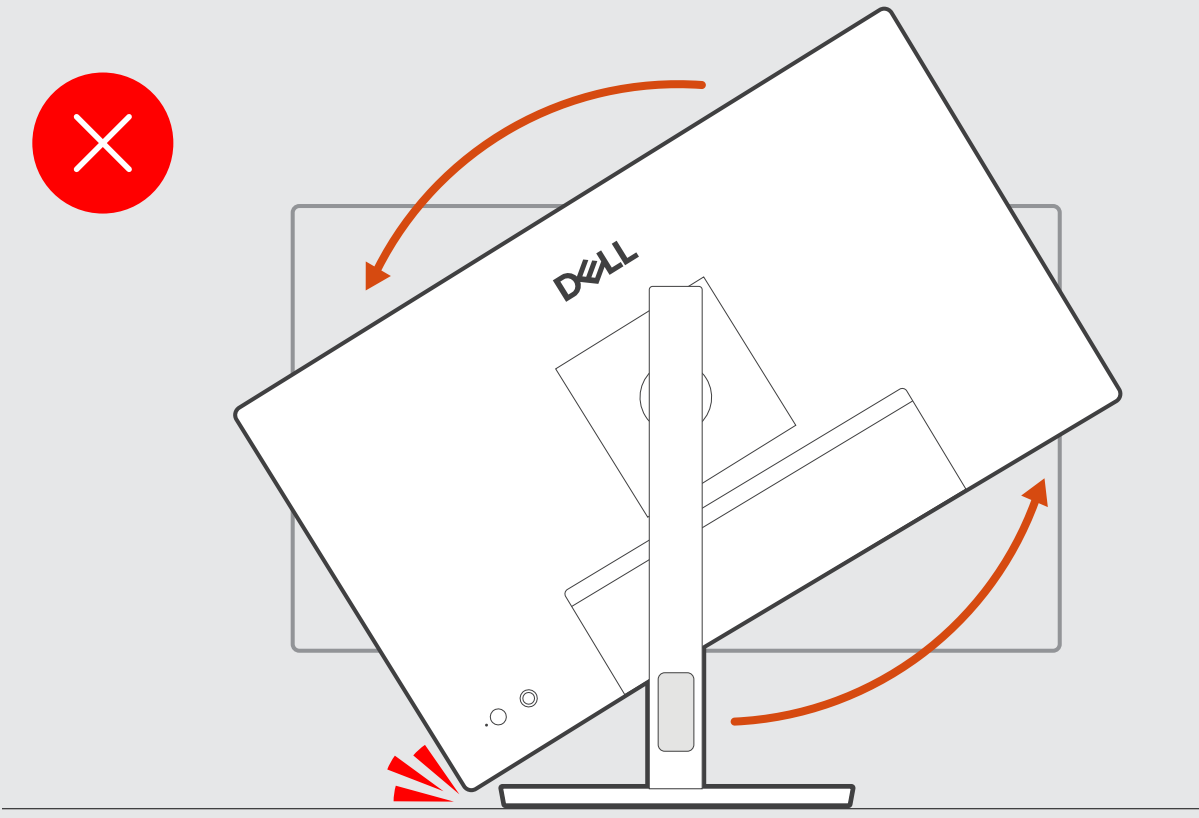


1

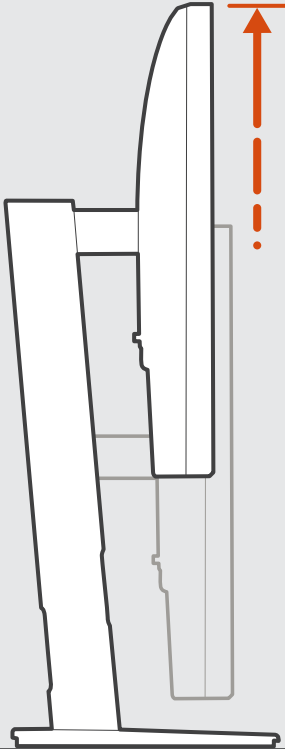


2

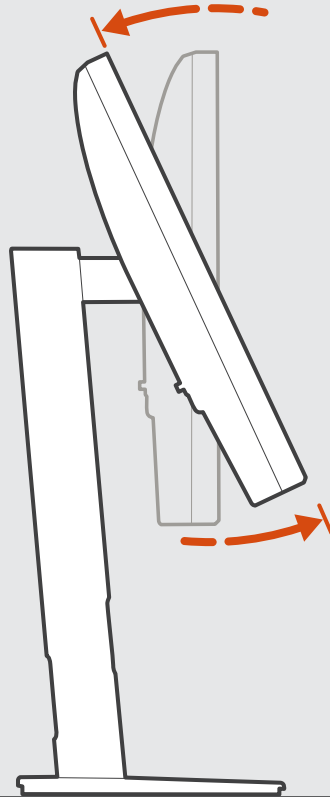


3

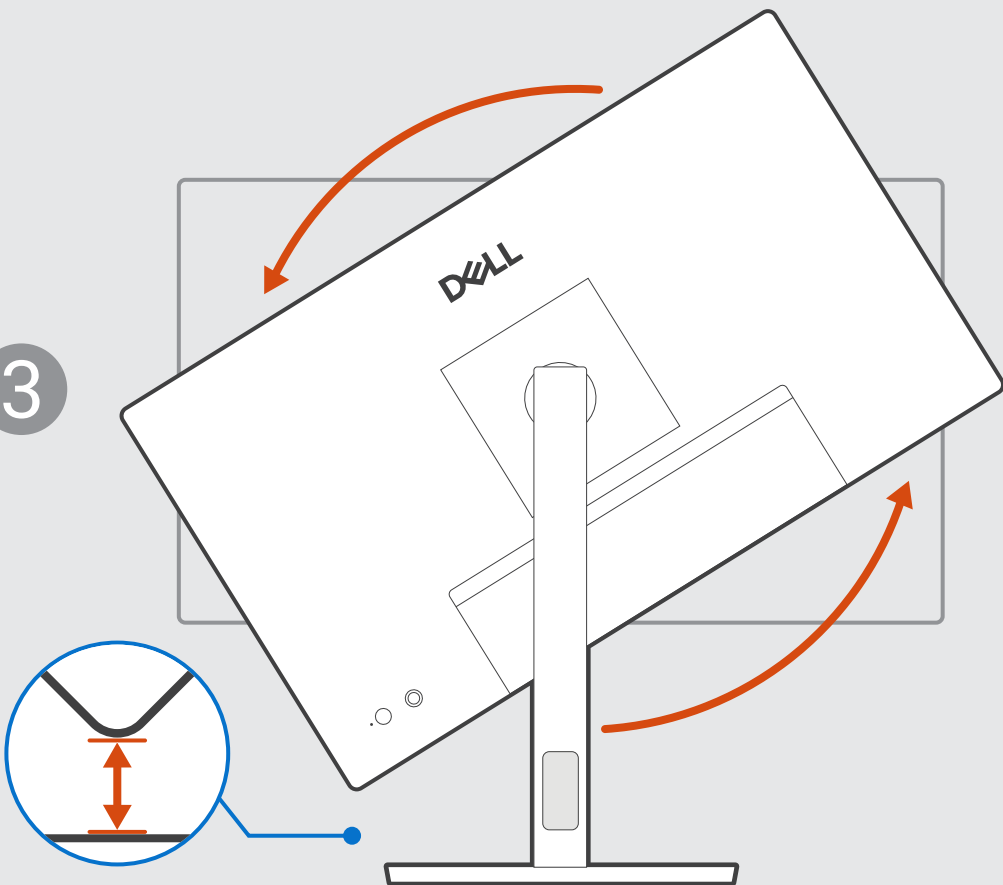

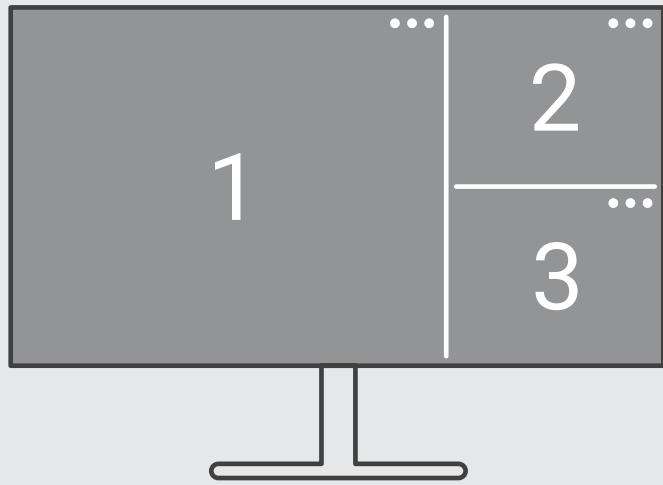

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://Dell.com/support/ddpm)

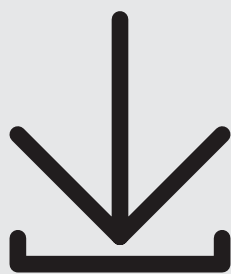

[Dell.com/support/P2226H](https://Dell.com/support/P2226H)

[Dell.com/support/P2426H](https://Dell.com/support/P2426H)

[Dell.com/support/P2426](https://Dell.com/support/P2426)

[Dell.com/support/P2726H](https://Dell.com/support/P2726H)