



Moniteur Dell Pro P 22

P2226H

Moniteur Dell Pro P 24

P2426H

Moniteur Dell Pro P 24 16:10







P2426

Moniteur Dell Pro P 27


P2726H

Guide de démarrage rapide




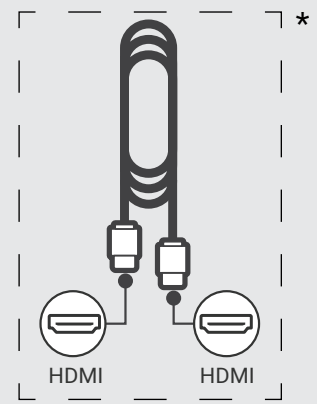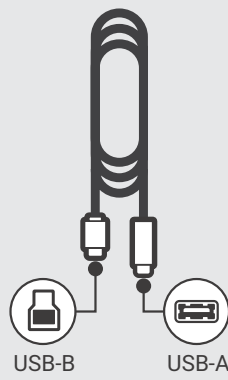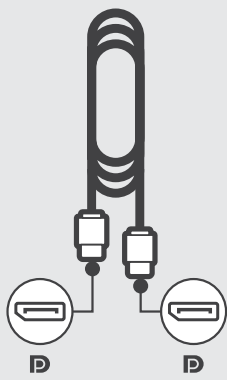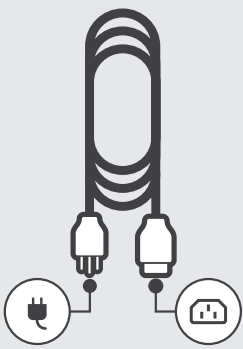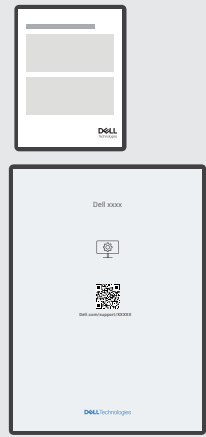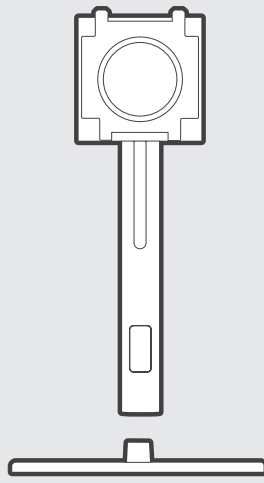


\*Pour certains pays uniquement

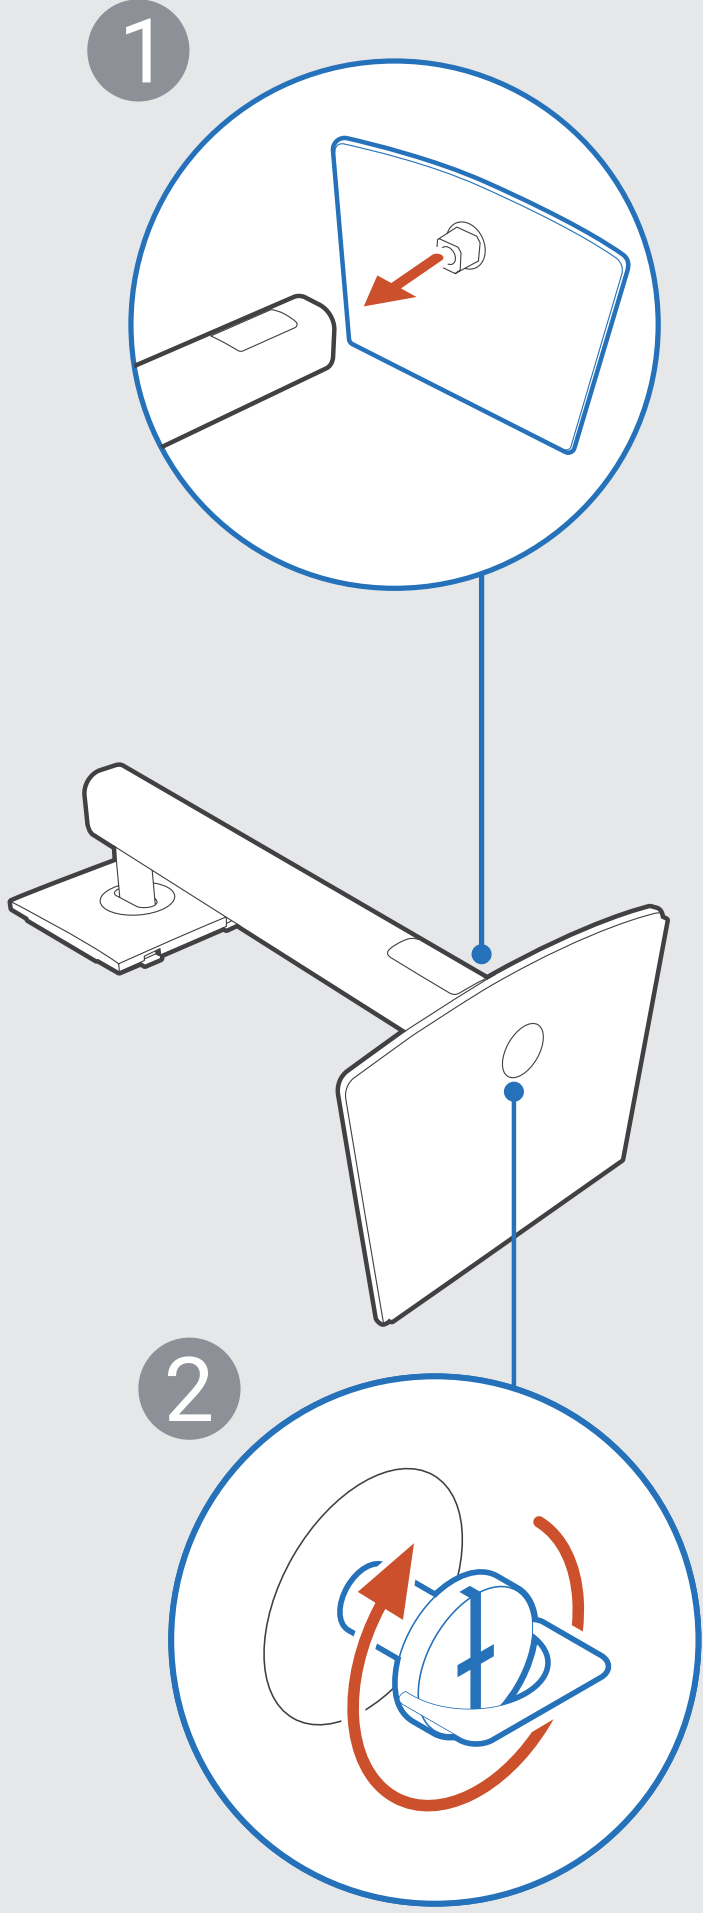


2

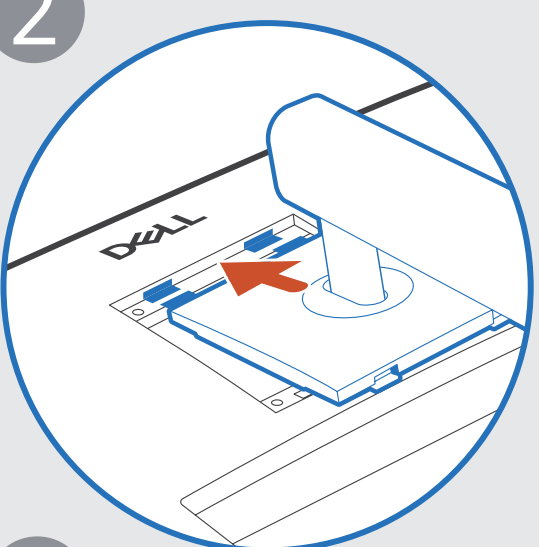

3


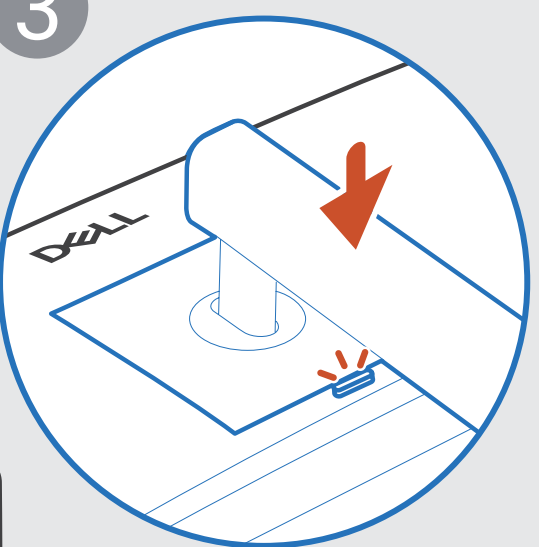




4


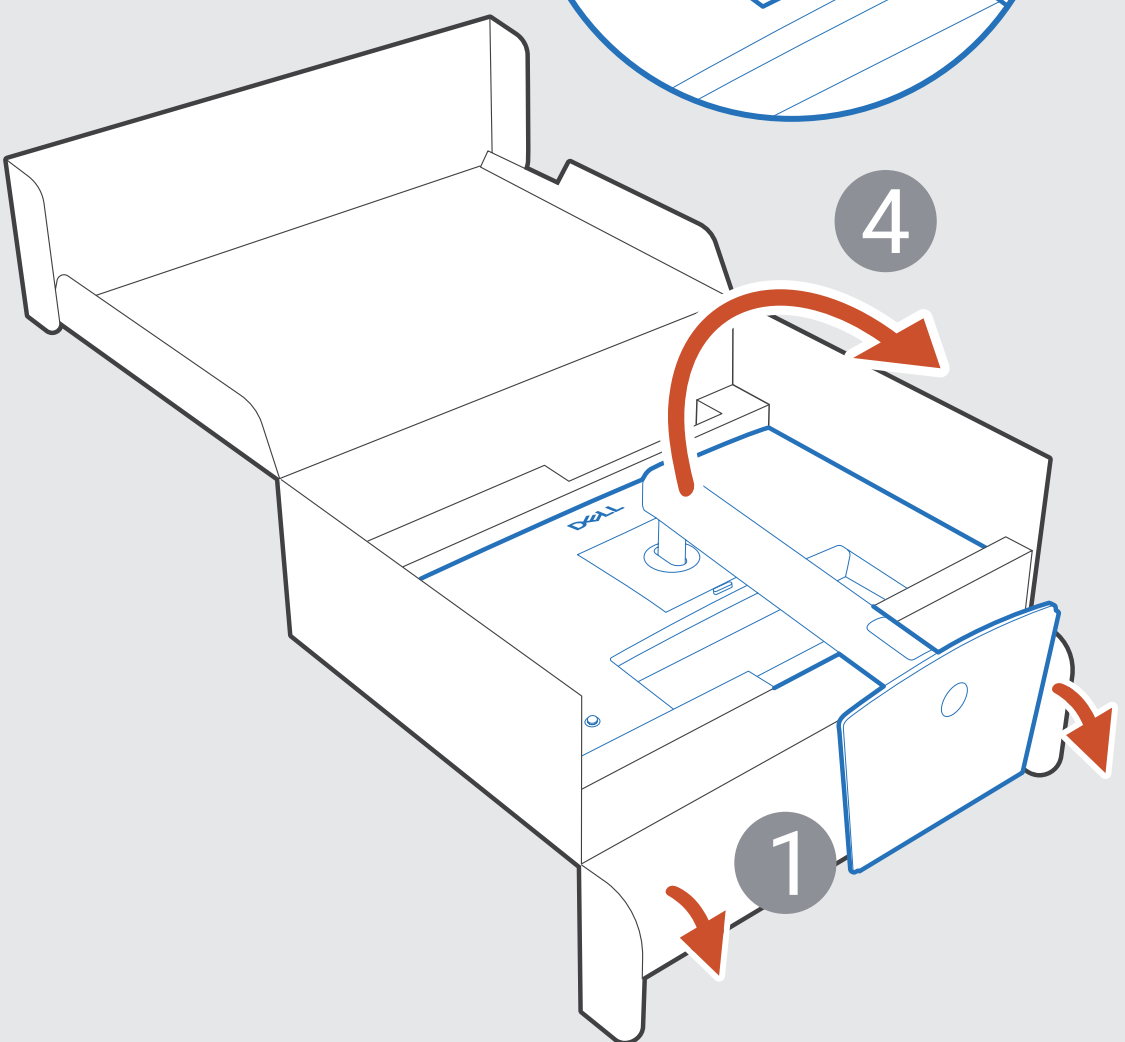



1




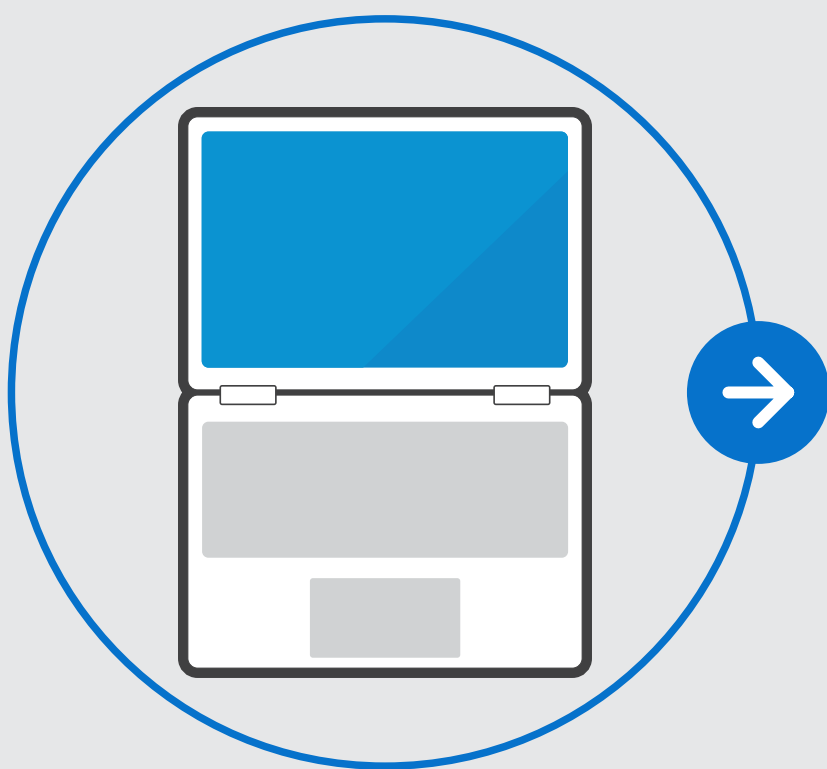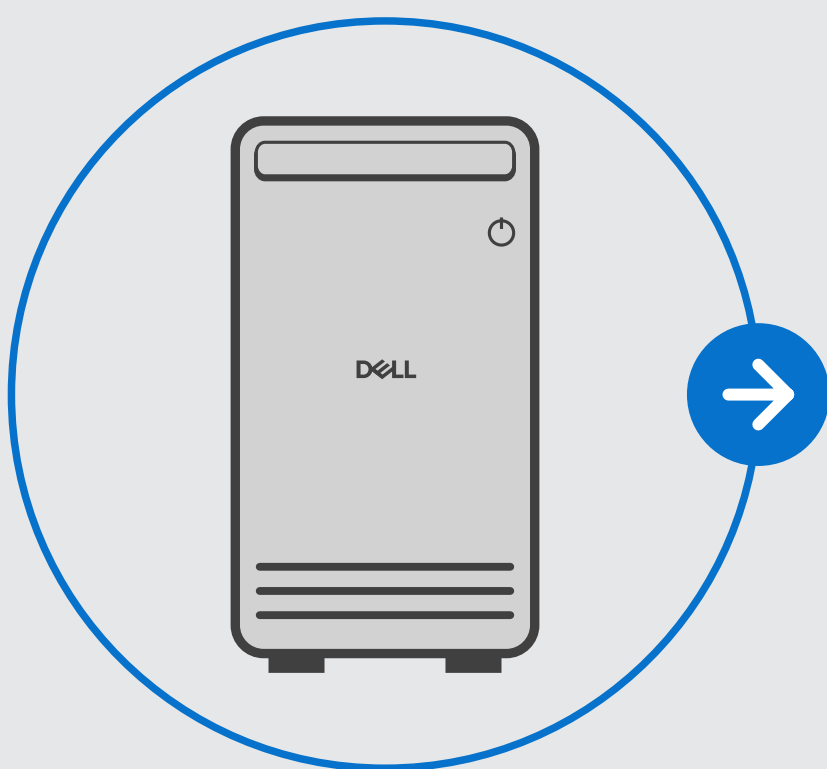

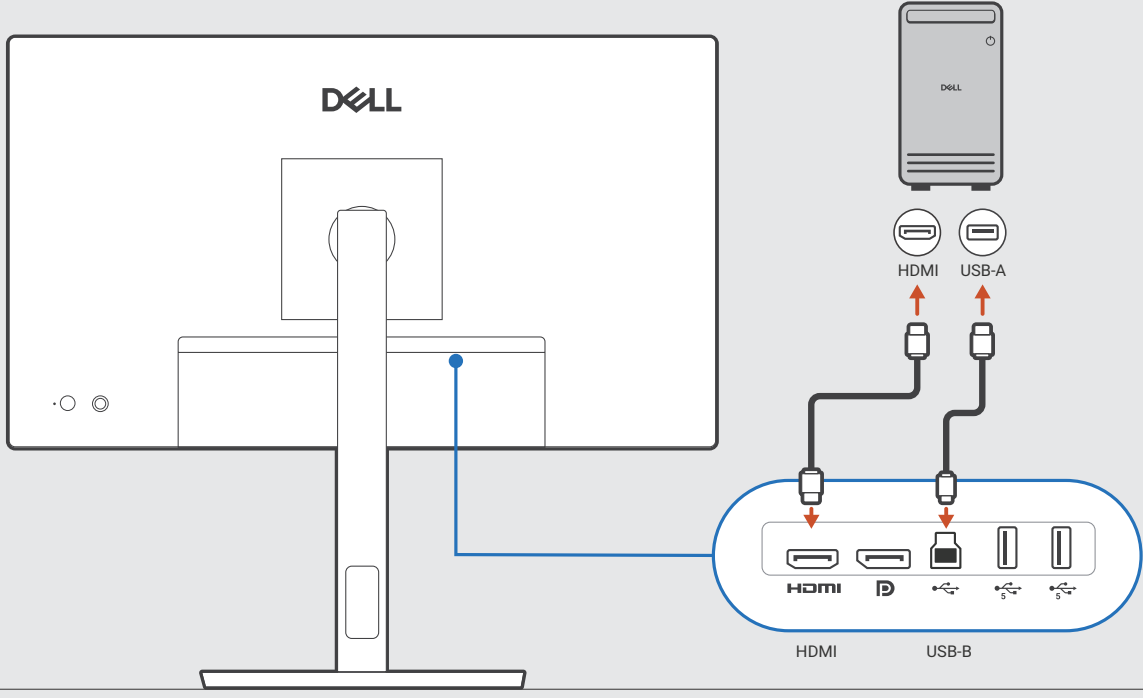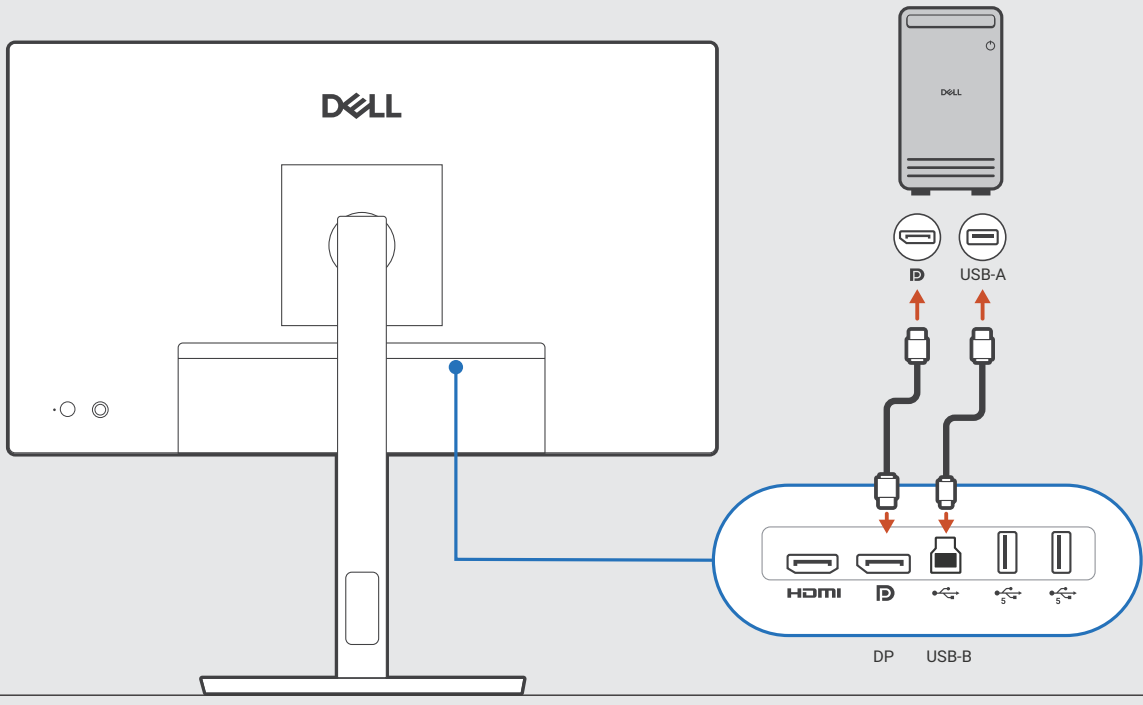


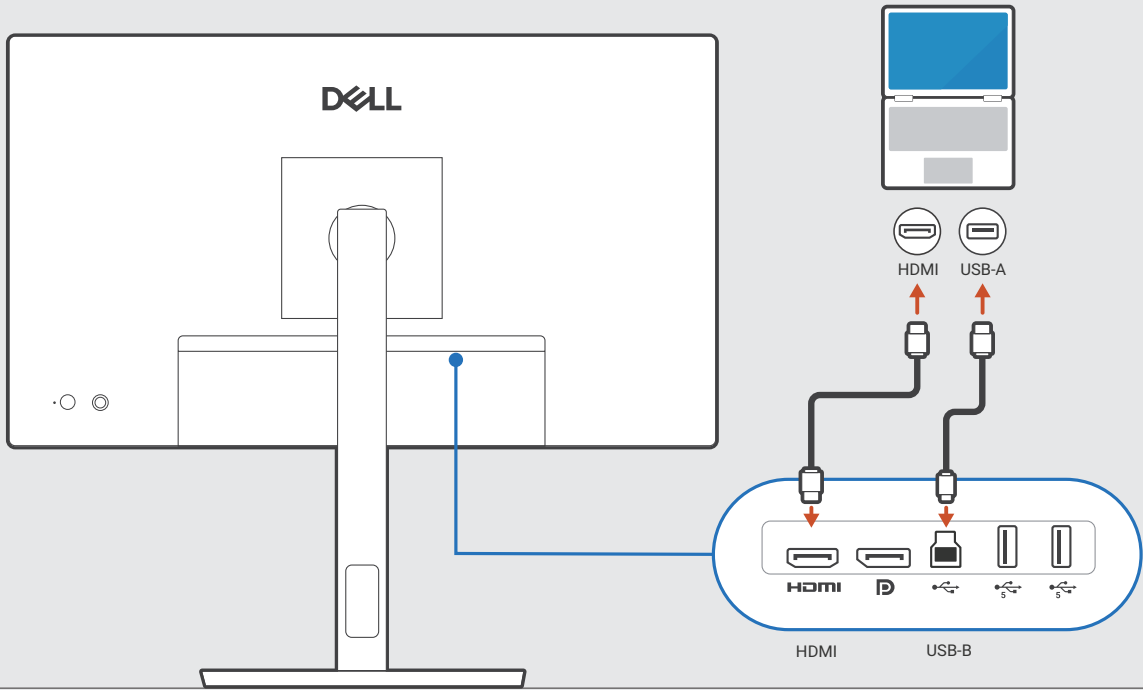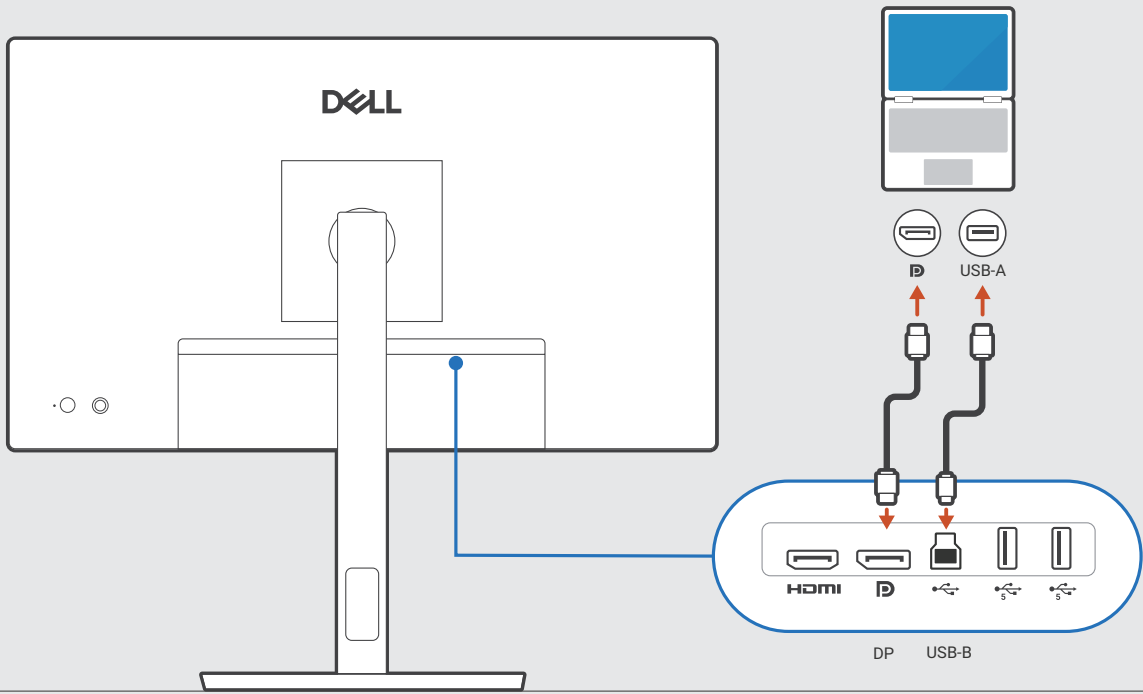

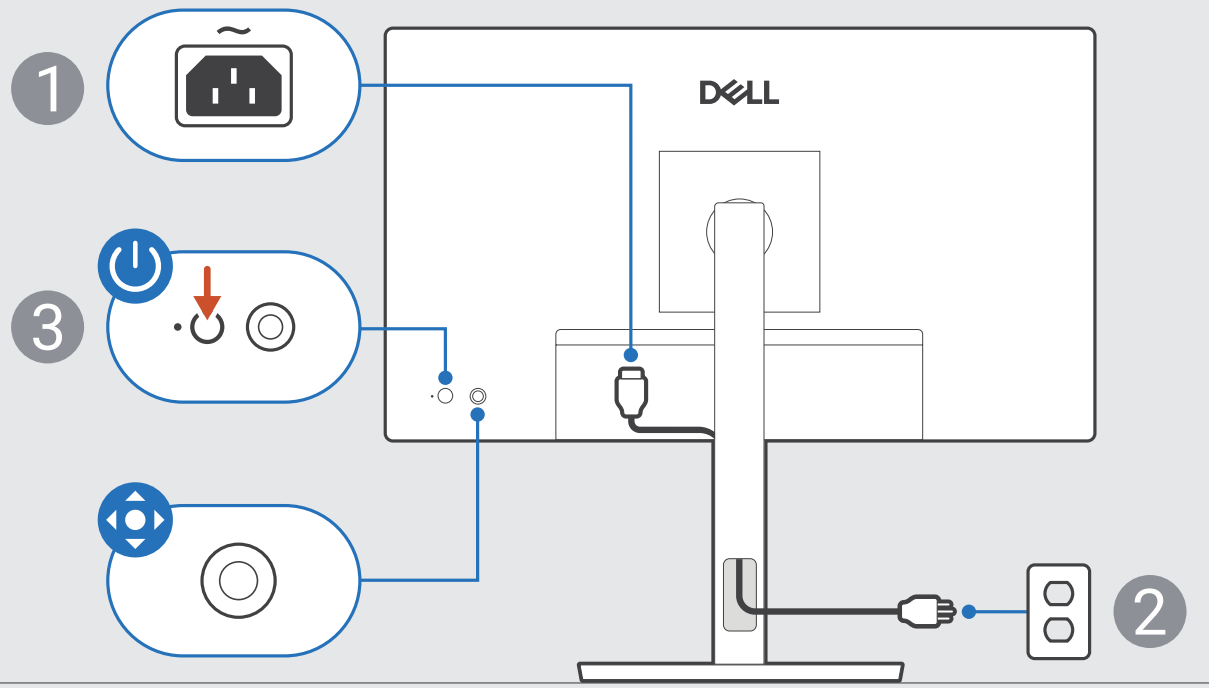


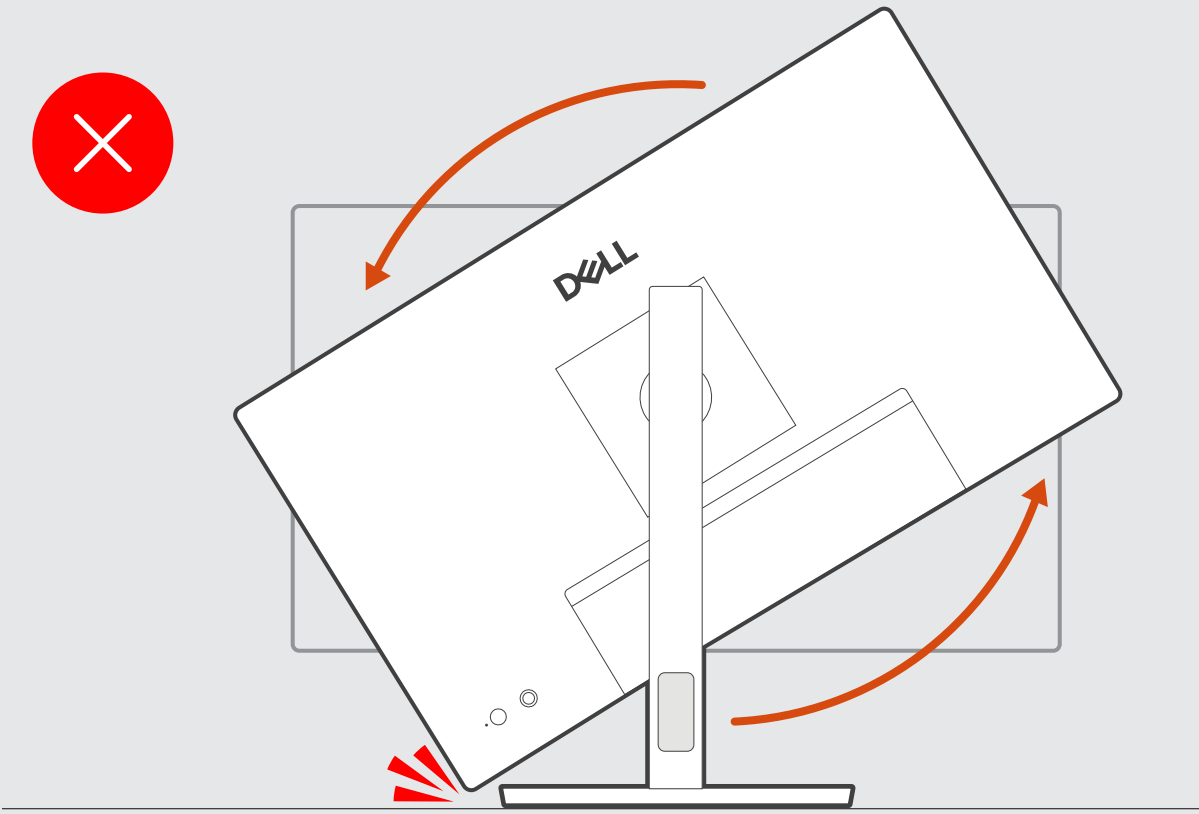


1

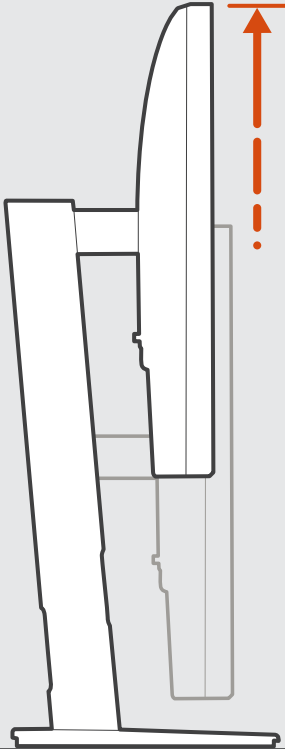


2

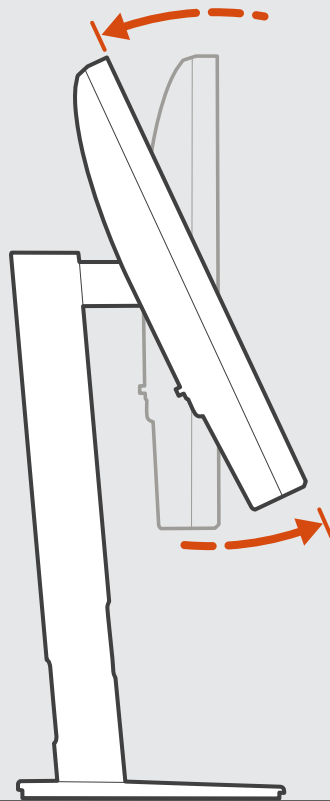


3

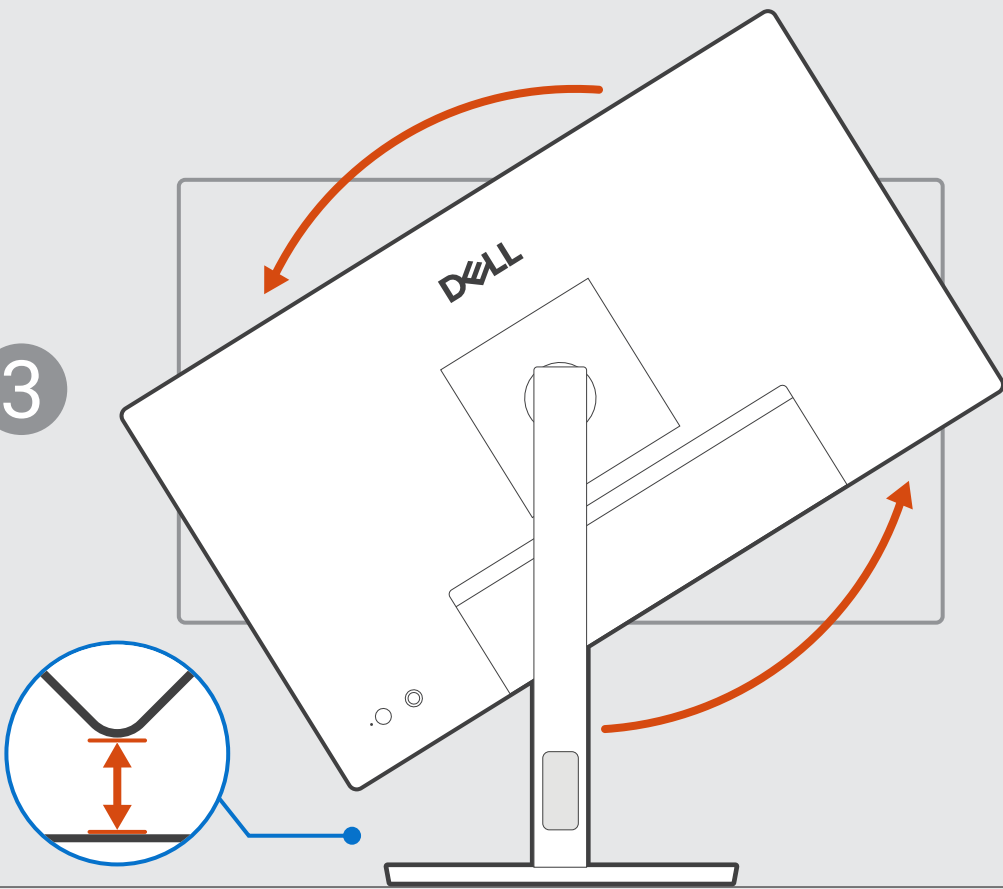

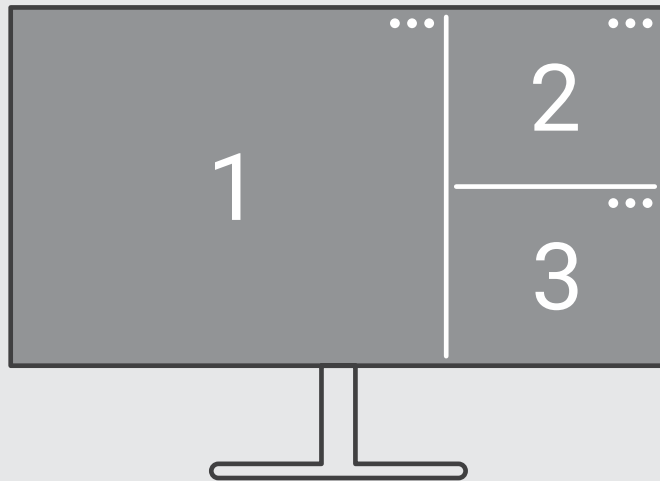

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://Dell.com/support/ddpm)

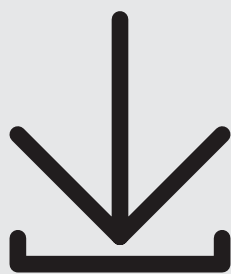

[Dell.com/support/P2226H](https://Dell.com/support/P2226H)

[Dell.com/support/P2426H](https://Dell.com/support/P2426H)

[Dell.com/support/P2426](https://Dell.com/support/P2426)

[Dell.com/support/P2726H](https://Dell.com/support/P2726H)