



Dell Pro P 22 beeldscherm

P2226H

Dell Pro P 24 beeldscherm

P2426H

Dell Pro P 24 16:10 beeldscherm







P2426

Dell Pro P 27 beeldscherm


P2726H




Snelstartgids





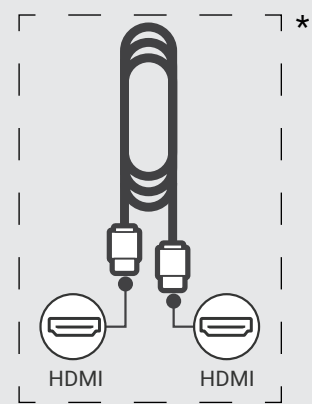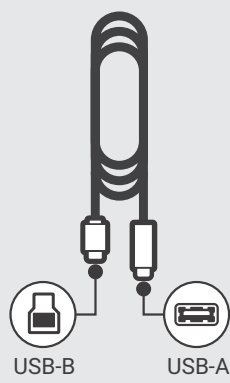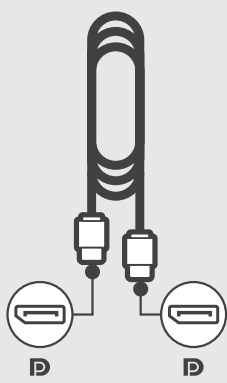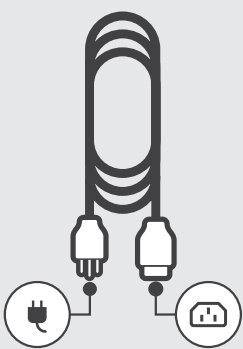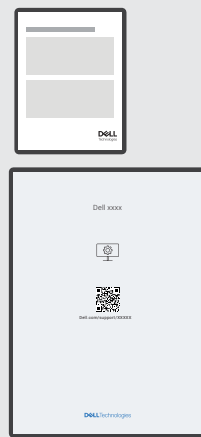
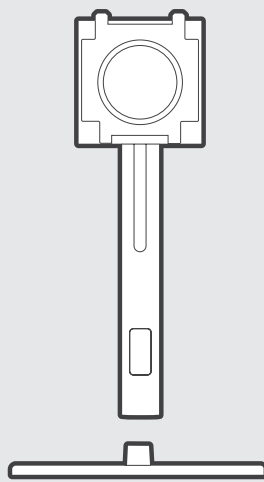




\*Alleen voor geselecteerde landen

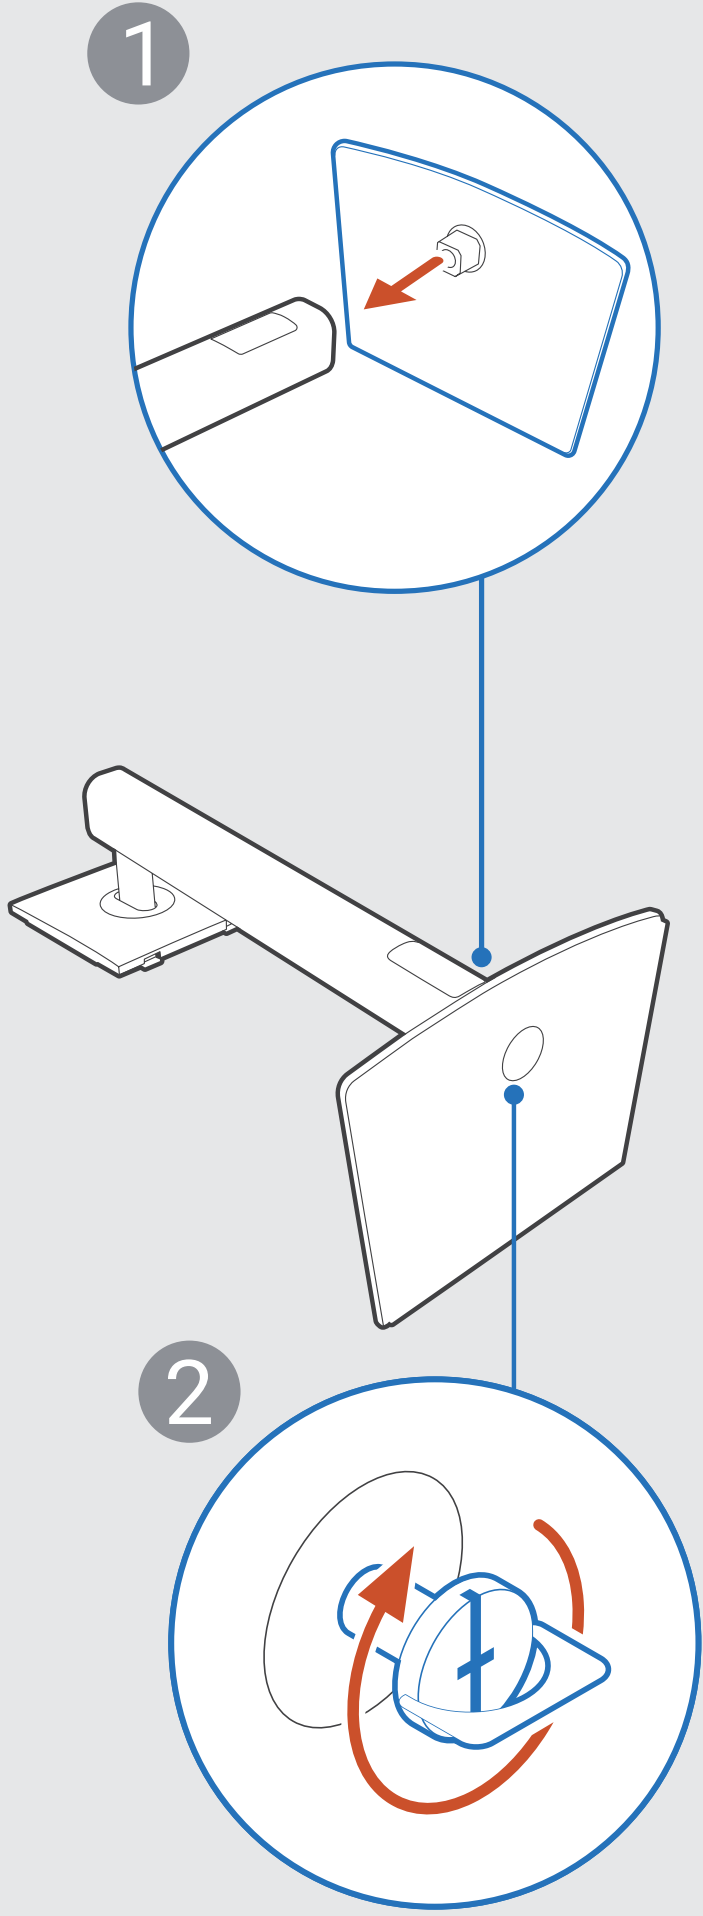


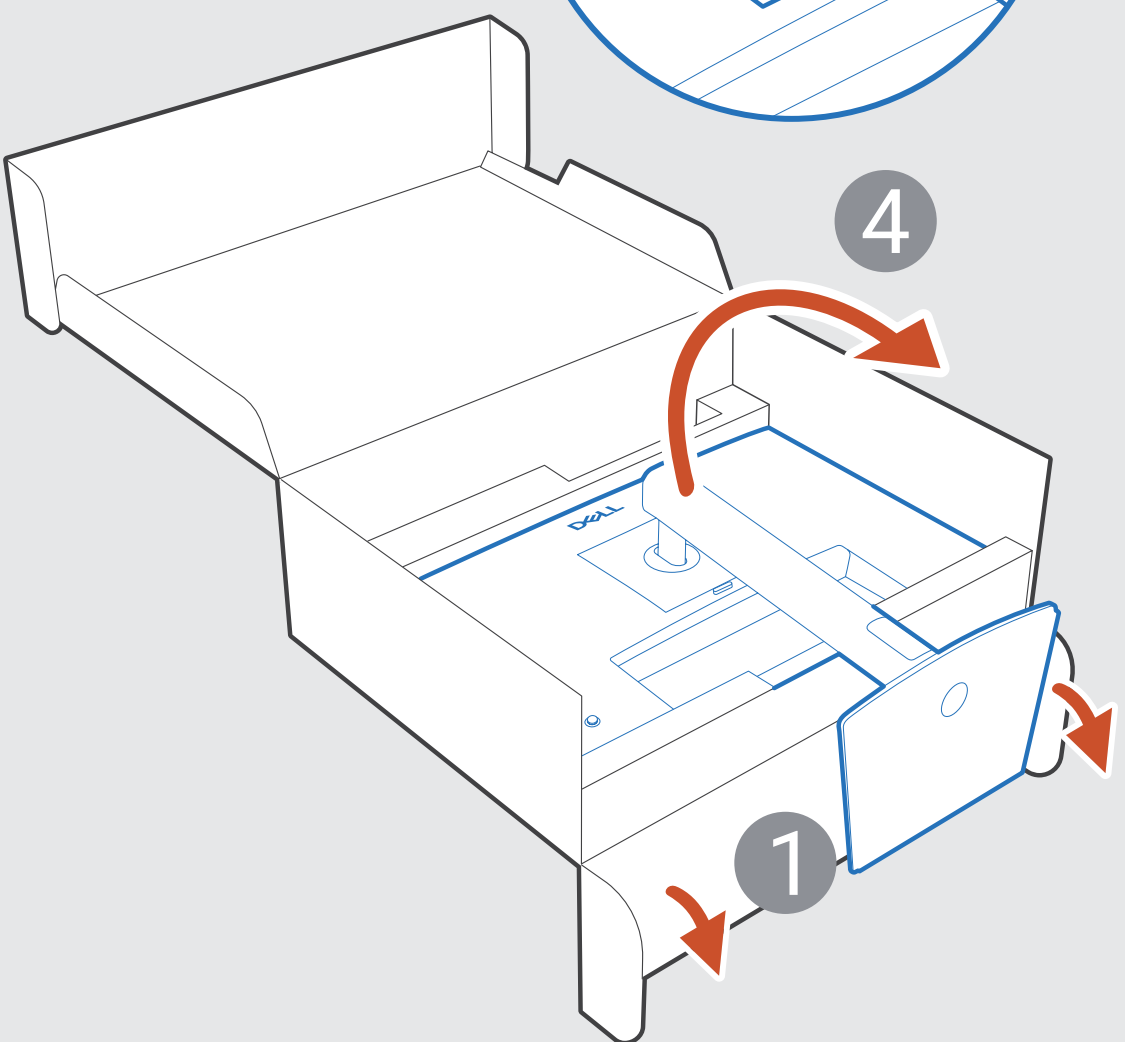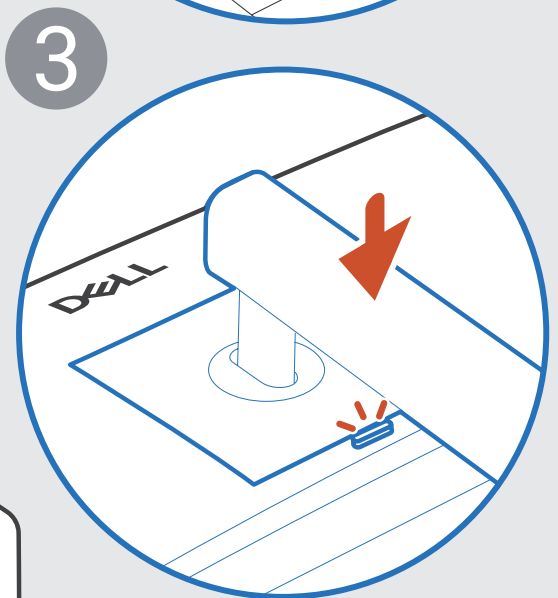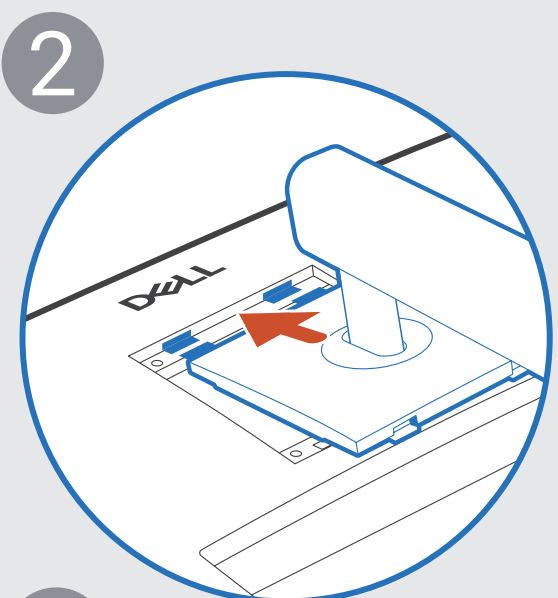


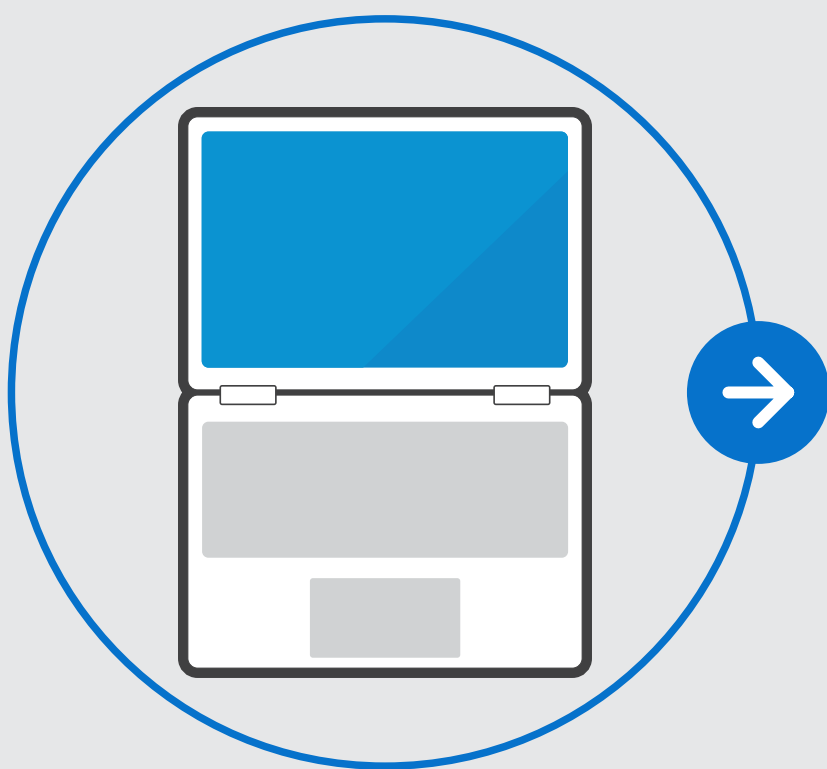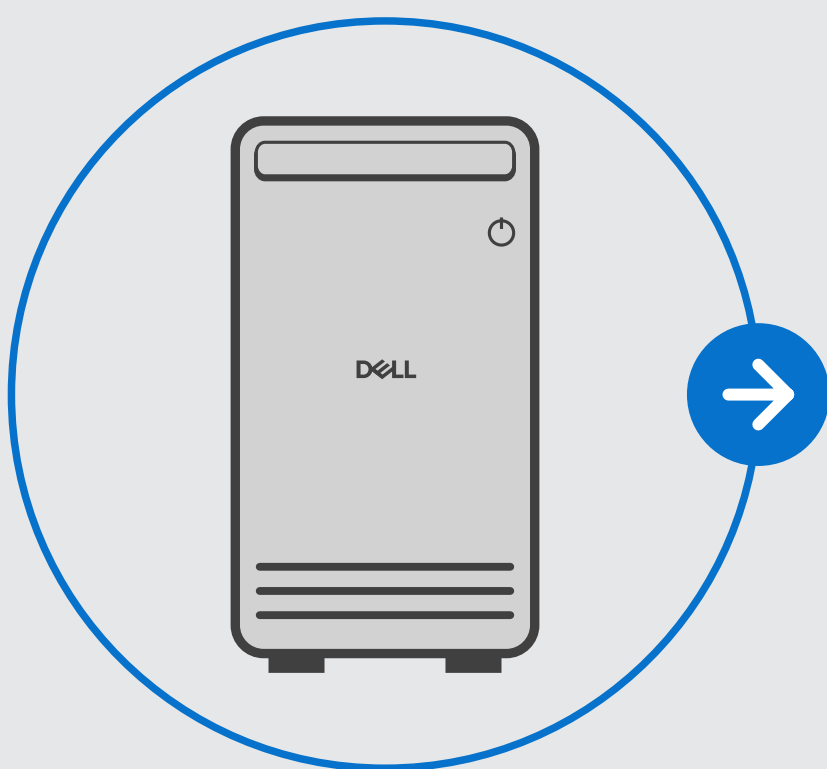

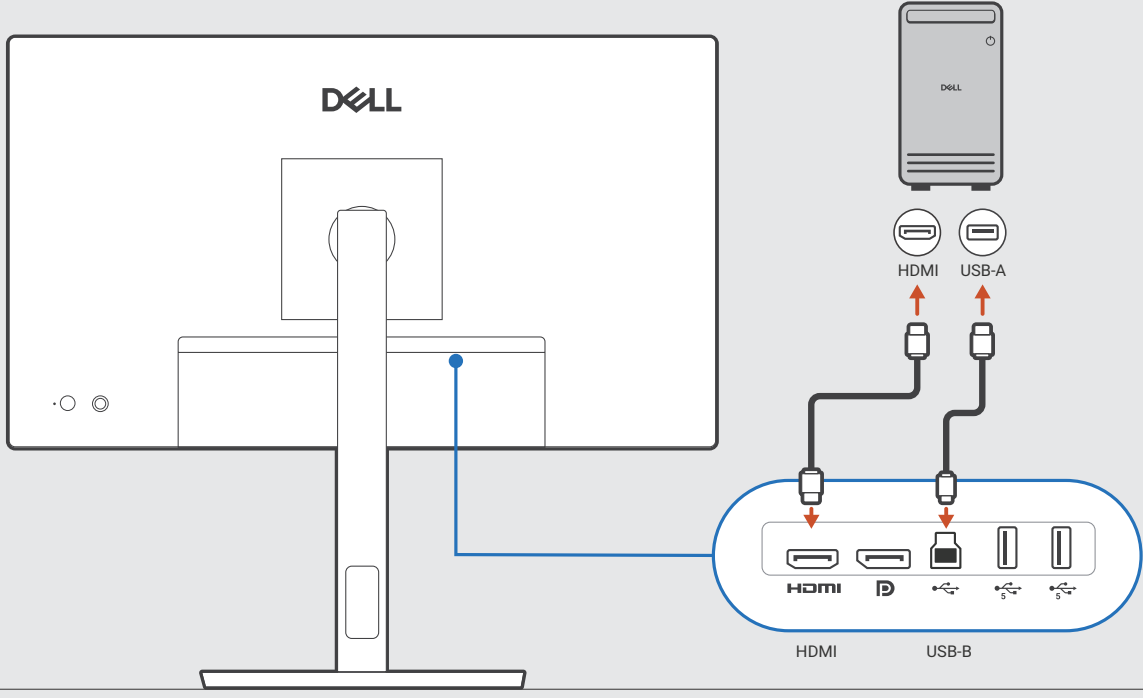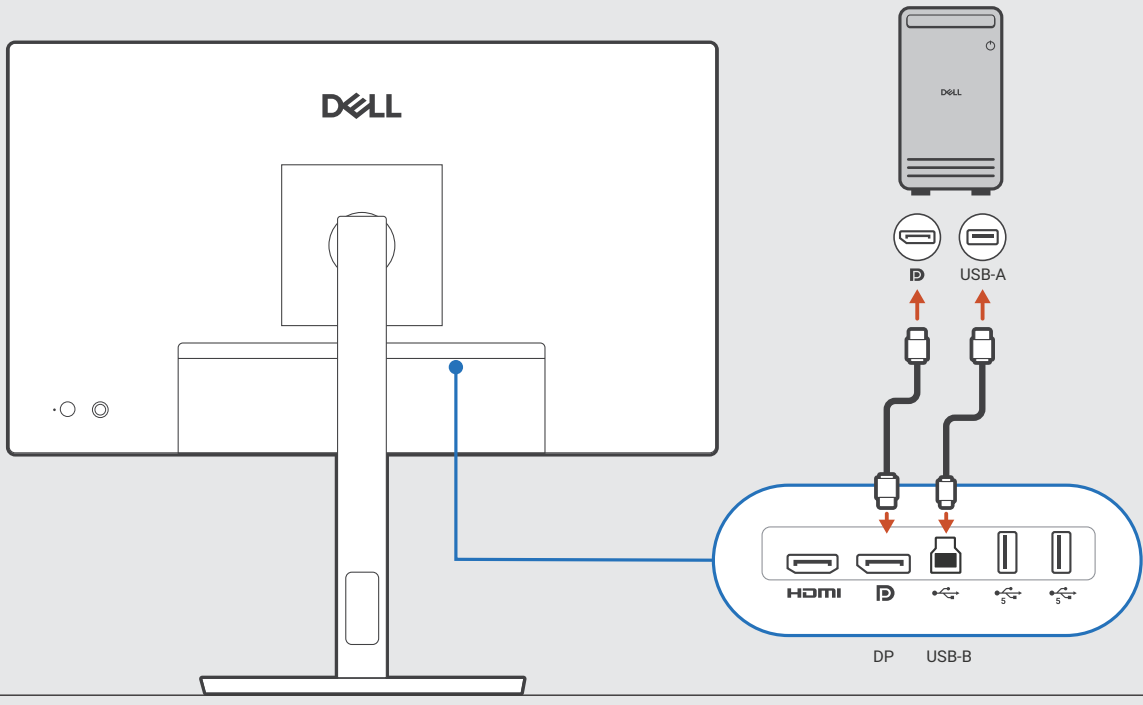


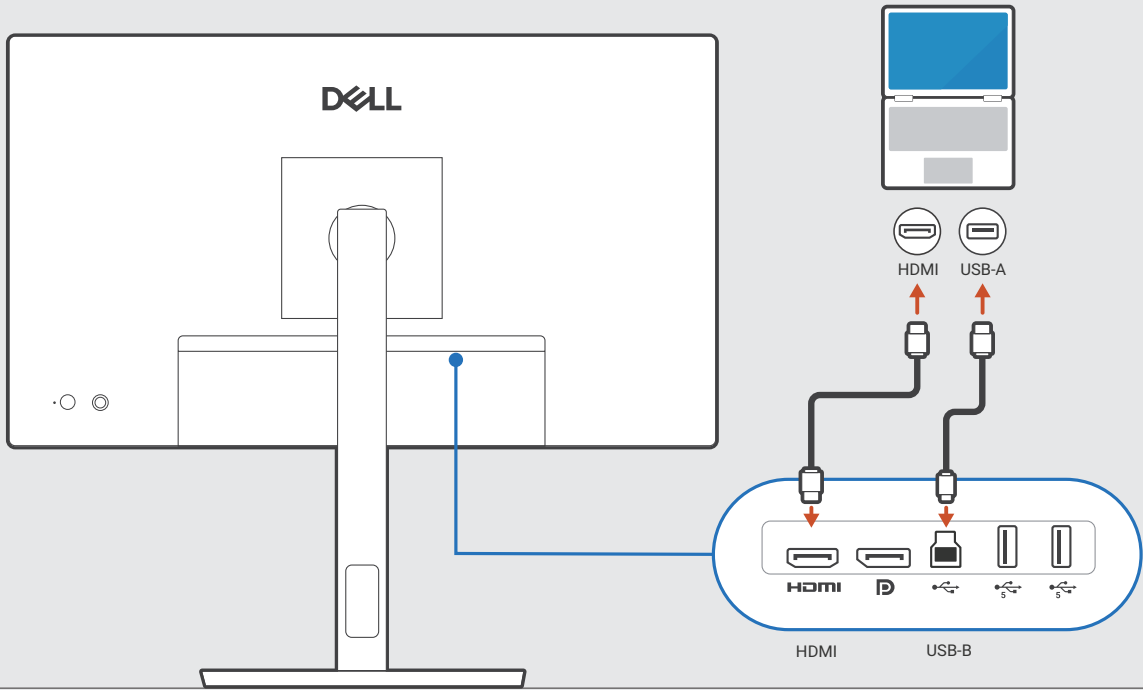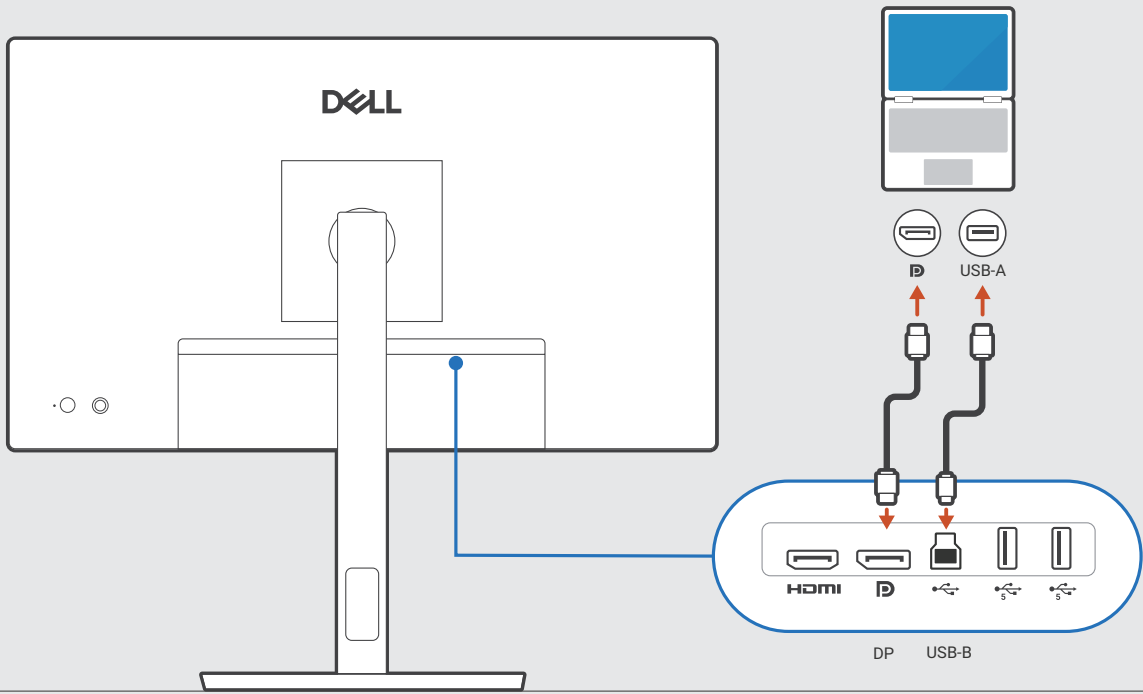

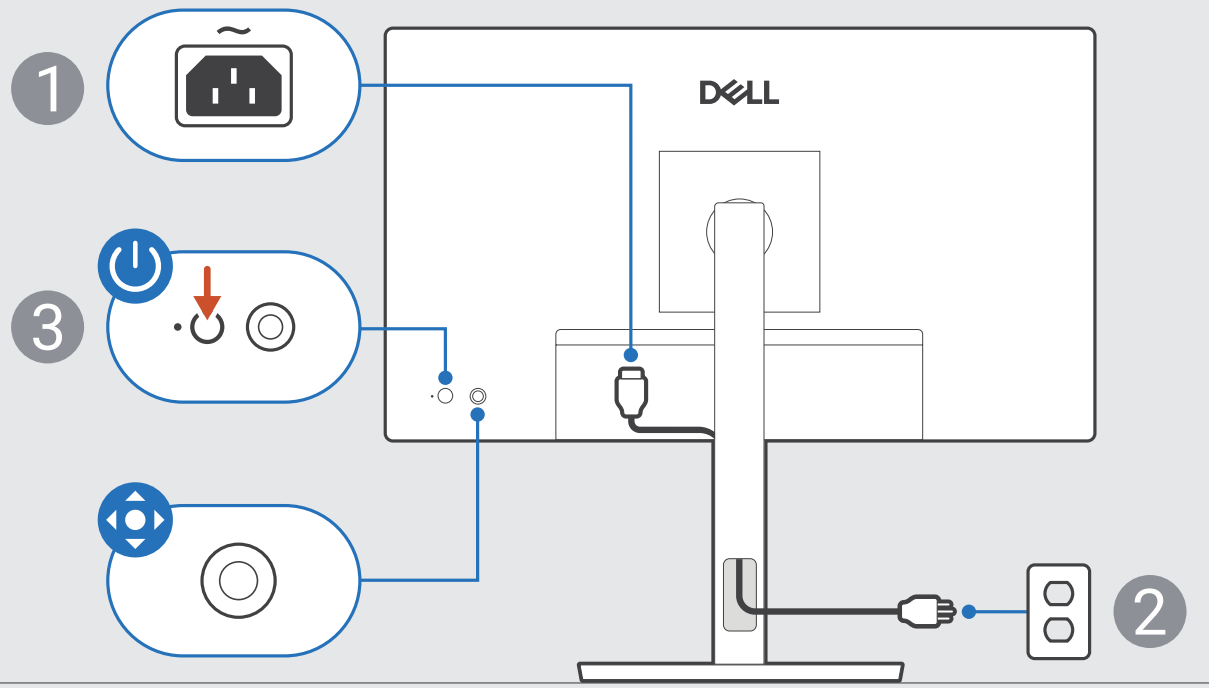


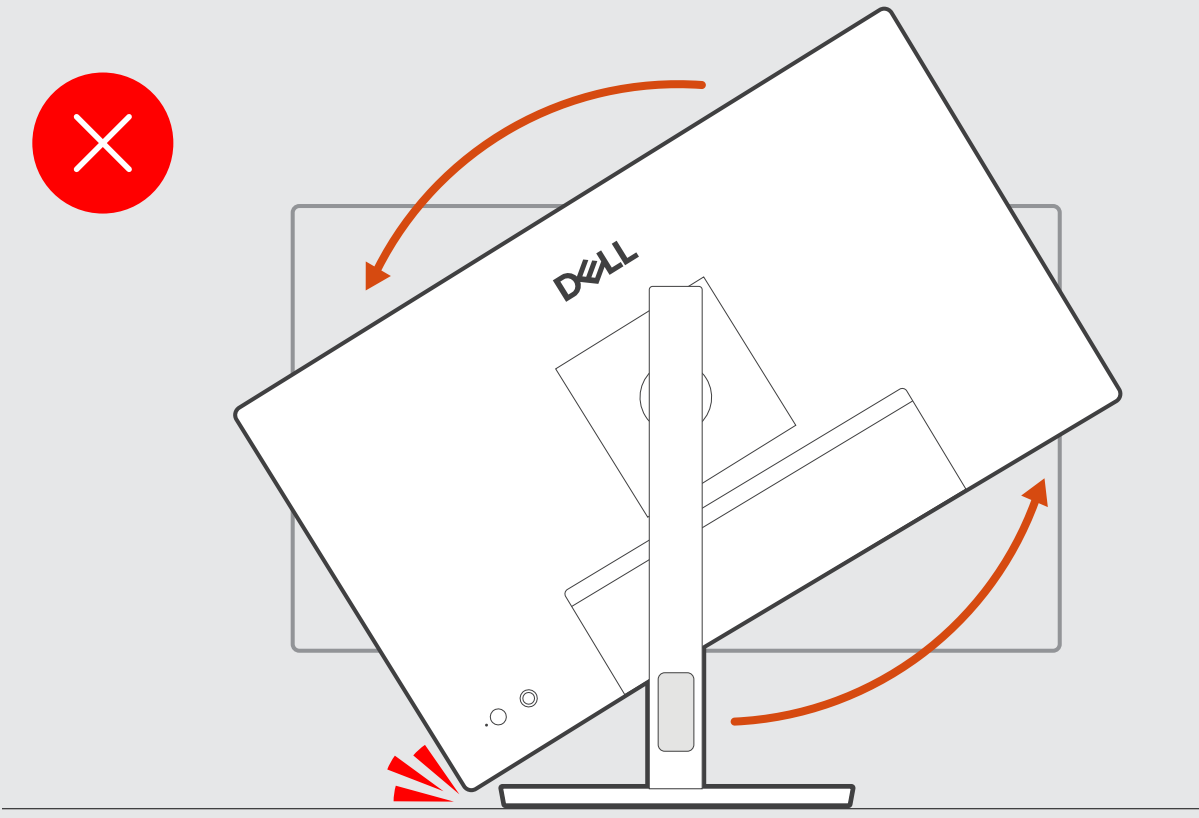



1

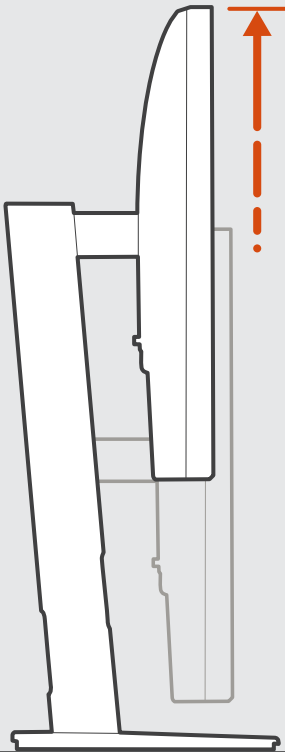


2

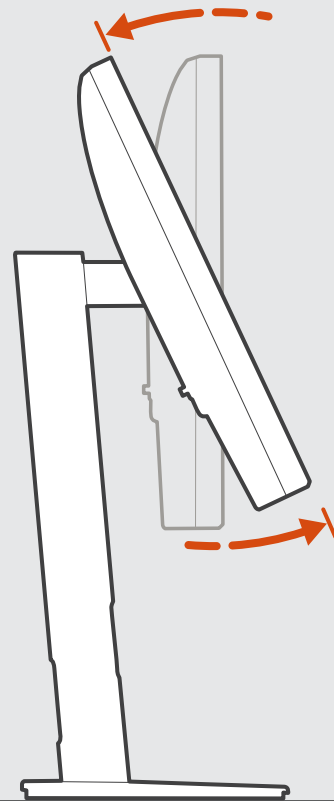


3

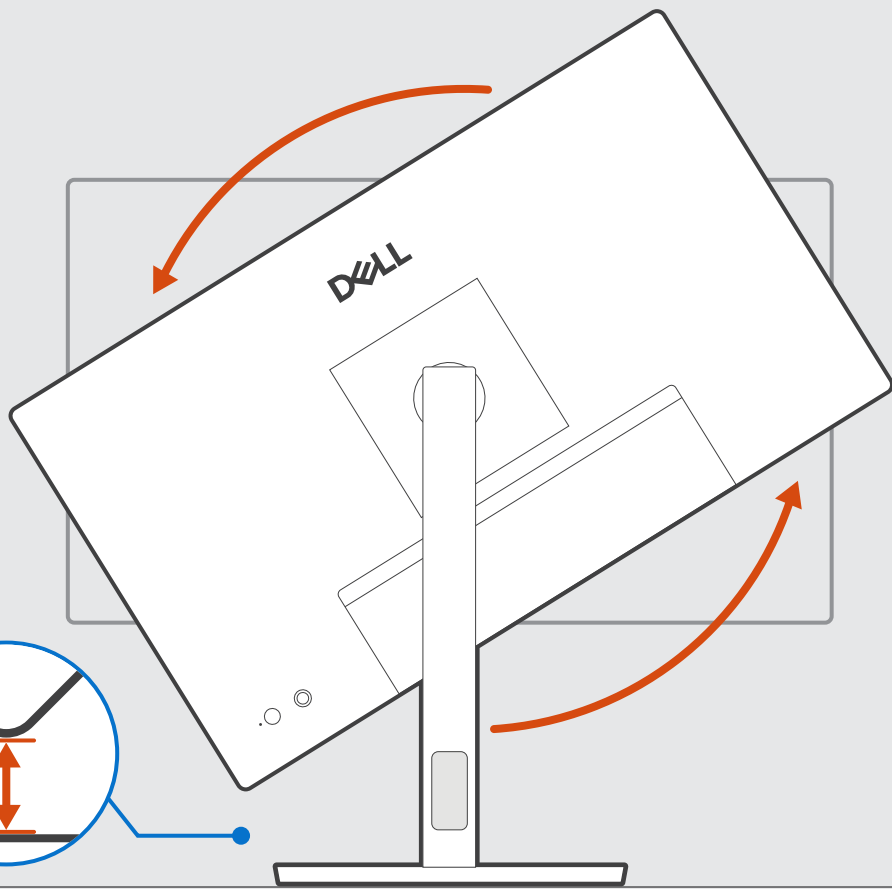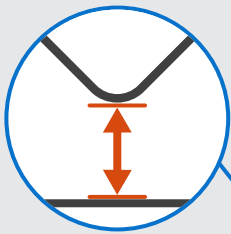

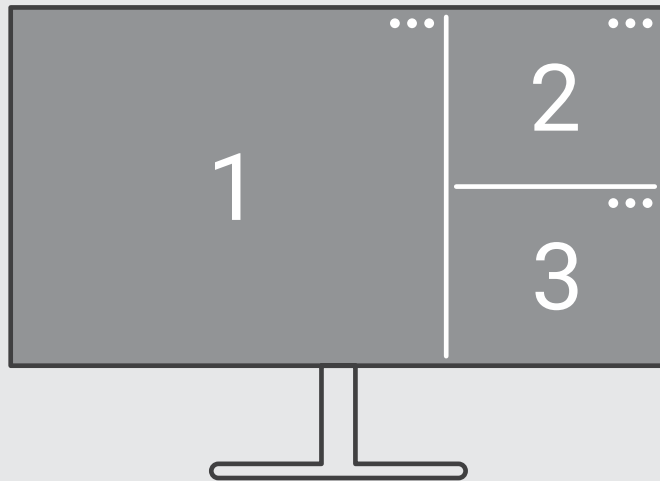

Dell Display and Peripheral Manager  
[Dell.com/support/ddpm](https://Dell.com/support/ddpm)

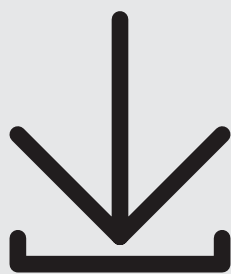

[Dell.com/support/P2226H](https://Dell.com/support/P2226H)

[Dell.com/support/P2426H](https://Dell.com/support/P2426H)

[Dell.com/support/P2426](https://Dell.com/support/P2426)

[Dell.com/support/P2726H](https://Dell.com/support/P2726H)