

Dell Pro Premium Collaboration Keyboard and Mouse – KM900

User's Guide

Regulatory model: KB900/MS900/UD2301



Notes, Cautions, and Warnings



NOTE: A NOTE indicates important information that helps you make better use of your device.



CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © Dell Inc. or its subsidiaries. All rights reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

February 2026


Rev. A03

Contents

- What’s in the box5
- Features6
 - Keyboard 6
 - Mouse7
- Dell Display and Peripheral Manager8
- Setting up your wireless keyboard 10
 - Charging the battery 10
 - Low battery indicator colors 11
 - Turning on the wireless keyboard 11
- Setting up your wireless mouse 12
 - Charging the battery 12
 - Battery indicator colors 13
 - Turning on the wireless mouse. 13
- Pairing your wireless keyboard and mouse 14
 - Download and install the Bluetooth driver. 14
 - Pairing your wireless keyboard and mouse using Swift Pair . 15
 - Pairing your wireless keyboard and mouse using Bluetooth . 16
 - Pairing device two using Bluetooth 18
 - Pairing with a Dell Secure Link USB receiver 20
 - Switching between paired devices. 22
- Collaboration touch controls23
- Intelligent backlighting26

Changing the scroll-speed on wireless mouse	28
Troubleshooting	29
Keyboard specifications	33
General	33
Electrical	33
Physical characteristics	34
Environmental	34
Wireless	34
Charging power requirement for keyboard	34
Mouse specifications	38
General	38
Electrical	38
Physical characteristics	39
Environmental	39
Wireless	39
Charging power requirement for mouse	39
Statutory Information	43
Warranty	43
Limited warranty and return policies	43
For U.S. customers	43
For European, Middle Eastern and African customers	43
For non-U.S. customers	43

What's in the box

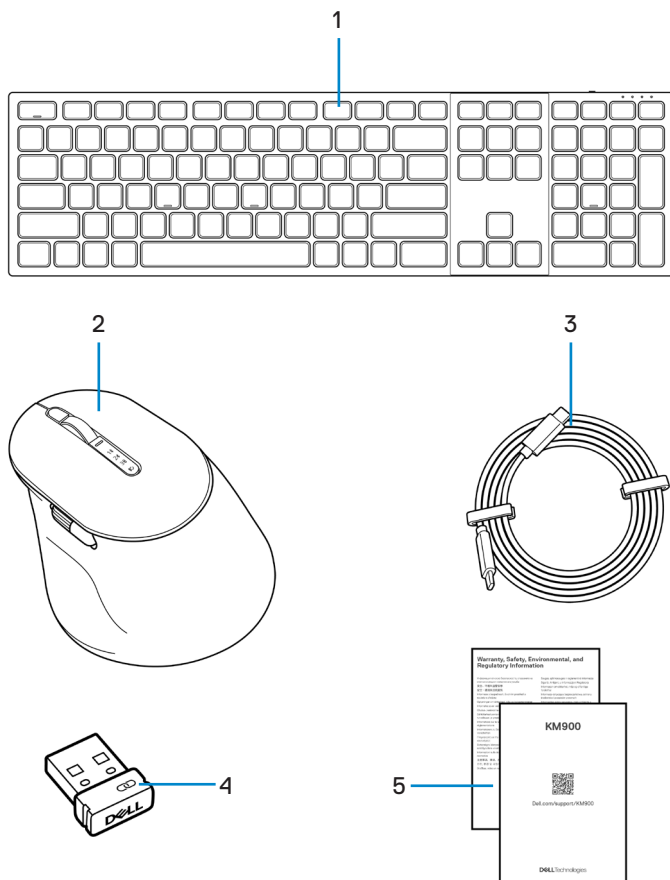

1. Keyboard

2. Mouse


3. USB-C to USB-C charging cable

4. Dell Secure Link USB receiver

5. Documents

Features

Keyboard

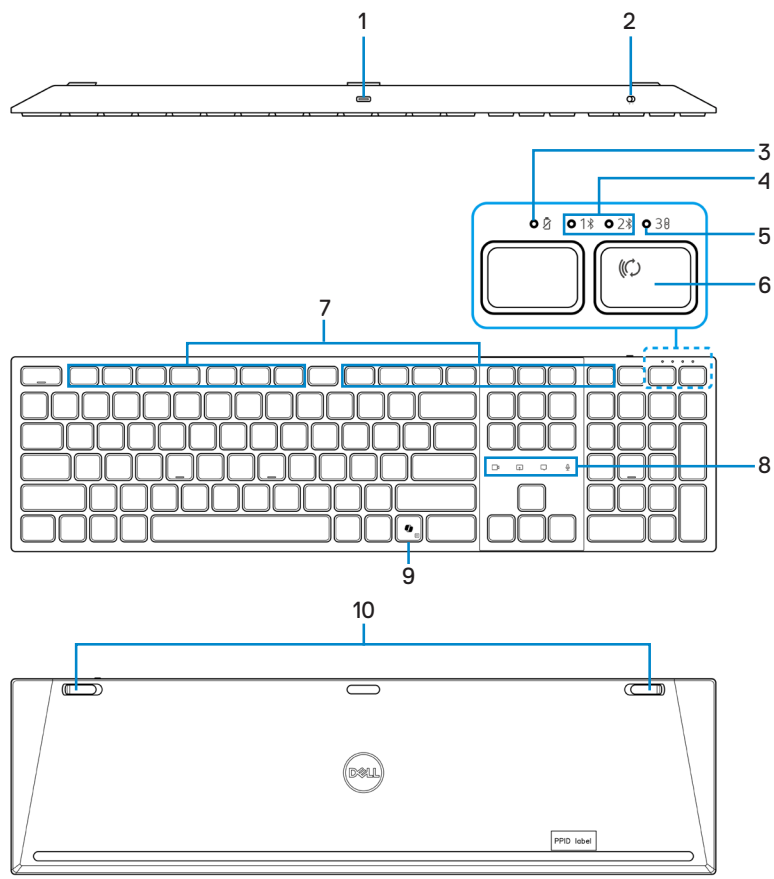


- | | |
|-----------------------------------|---------------------------------|
| 1. USB-C port | 2. Power switch |
| 3. Low battery LED indicator | 4. Bluetooth modes |
| 5. RF 2.4 GHz mode (USB receiver) | 6. Connection-mode button |
| 7. Programmable keys | 8. Collaboration touch controls |
| 9. Copilot key | 10. Adjustable tilt legs |

Launch Copilot in Windows

 **NOTE:** Use  key with supported Windows 11 devices; feature availability varies by device and market, see aka.ms/KeySupport.

 **NOTE:** Copilot in Windows is available only in approved markets.

Mouse

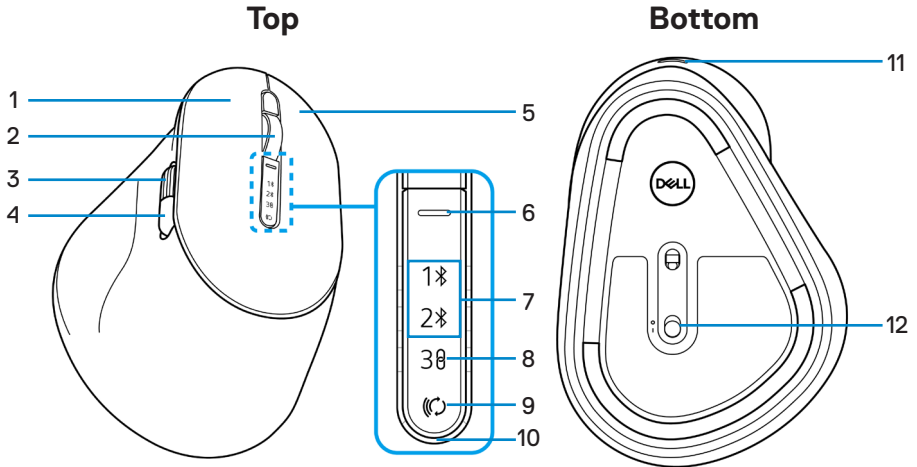


- | | |
|--|---|
| 1. Left button | 2. Vertical-scroll wheel |
| 3. Horizontal-scroll wheel (Default: Forward, programmable with Dell Display and Peripheral Manager) | 4. Side button (Default: Back, programmable with Dell Display and Peripheral Manager) |
| 5. Right button | 6. Scroll-speed toggle button |
| 7. Bluetooth modes | 8. RF 2.4 GHz mode (USB receiver) |
| 9. Connection-mode button | 10. Low battery LED indicator |
| 11. USB-C port | 12. Power switch |

Dell Display and Peripheral Manager

The Dell Display and Peripheral Manager is an app that helps you set up and configure your Dell monitors and peripherals. With this app you can:

- Assign shortcuts to programmable keys of your keyboard through the Key Customization tab (for keyboard only).
- Change settings of Collaboration touch controls (for keyboard only).
- Customise illumination for intelligent backlighting (for keyboard only).
- Configure DPI setting and set primary mouse button (for mouse only).
- Adjust mouse sensitivity through DPI setting (for mouse only).
- View device information such as firmware version and battery status.
- Upgrade to the latest firmware available.
- Pair or unpair with the RF dongle.

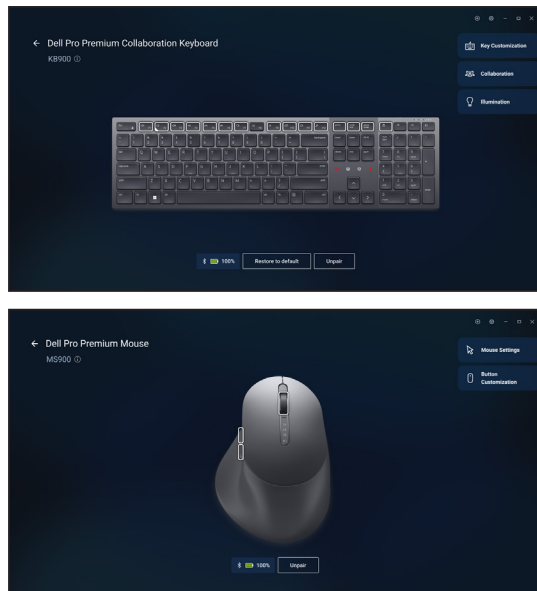

Installing Dell Display and Peripheral Manager

When you connect the device to your computer for the first time, you may be prompted to download and install the app.



NOTE: If the download prompt does not appear within a few minutes, you can manually install the software from the **Drivers & Downloads** tab at

www.dell.com/support/KM900.

For more information, see Dell Display and Peripheral Manager User's Guide in the Documentation tab.

Setting up your wireless keyboard

Charging the battery


European Union (EU) has a common charger requirement for wireless products that have embedded rechargeable battery. For more information about the EU charging power requirements, see the [Charging power requirement for keyboard](#).

 **NOTE:** Your wireless keyboard has a rechargeable battery. For best results, ensure that the battery is fully charged before using it for the first time.

 **NOTE:** To improve battery life, turn off the power switch when the wireless keyboard is not in use.

Connect one end of the USB-C charging cable to the USB-C port on the keyboard and the other end to an available USB-C port on your desktop, laptop, or compatible mobile device.

The low battery LED indicator starts blinking until the battery is fully charged or the USB-C charging cable is unplugged.

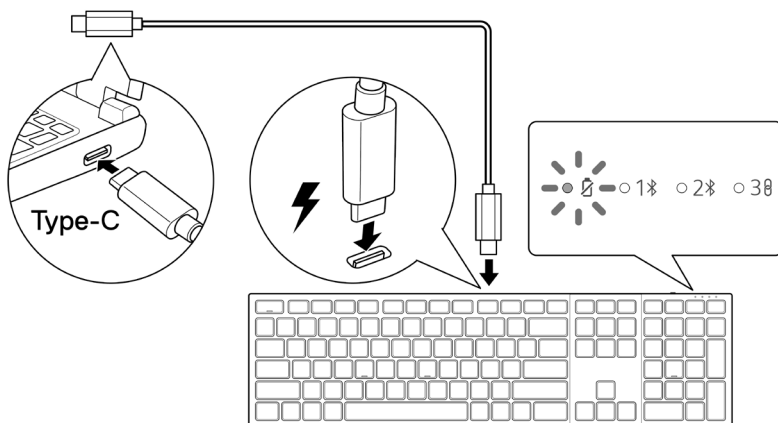

 **NOTE:** During charging, the low battery LED indicator will turn on even if the keyboard is turned off.

 **NOTE:** The USB-C charging cable can be used only for charging the keyboard. It does not support data transfer.


Low battery indicator colors

- **Low power ($\leq 5\%$):** Amber light breathing in a cycle of 10 seconds on and 50 seconds off.
- **Charging:** Breathing in white.
- **Fully charged:** Static white for 10 seconds and then turns off.

 **NOTE:** The keyboard backlight will turn off when the battery charge drops to the low level ($\leq 5\%$).

Turning on the wireless keyboard

Push the power switch to the right to turn on the wireless keyboard.

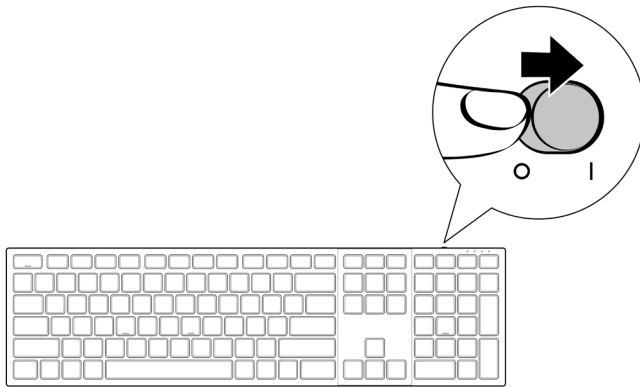

 **NOTE:** Ensure that the distance between your computer and the wireless keyboard is within ten meters.

Setting up your wireless mouse


Charging the battery

European Union (EU) has a common charger requirement for wireless products that have embedded rechargeable battery. For more information about the EU charging power requirements, see the [Charging power requirement for mouse](#).

 **NOTE:** Your wireless mouse has a rechargeable battery. For best results, ensure that the battery is fully charged before using it for the first time.

 **NOTE:** To improve battery life, turn off the power switch when the wireless mouse is not in use.

Connect one end of the USB-C charging cable to the USB-C port on the mouse and the other end to an available USB-C port on your computer, desktop, or compatible mobile device.

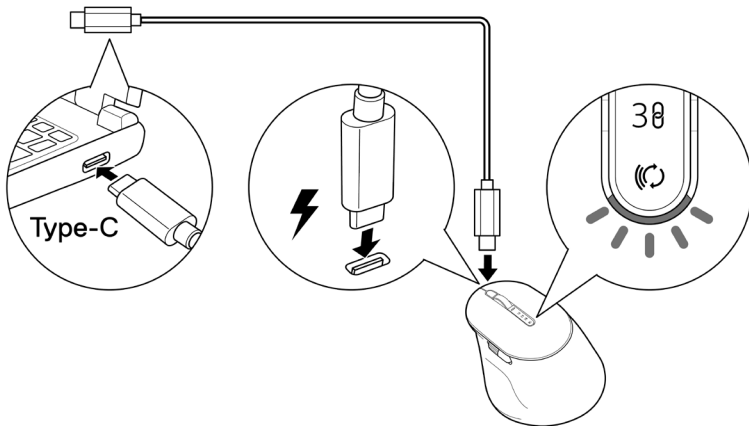

The white low battery LED indicator will breathe until the battery is fully charged or the USB charging cable is unplugged.

 **NOTE:** During charging, the low battery LED indicator will turn on even if the mouse is turned off.


 **NOTE:** The USB-C charging cable can be used only for charging the mouse. It does not support data transfer.

Battery indicator colors

- **Low power ($\leq 5\%$):** Amber pulsing for a period of 5 seconds regardless of the connection status.
- **Normal power ($> 5\%$):** Battery indicator will remain off when mouse is turned on.
- **Charging:** Breathing in white.
- **Fully charged:** Static white for 10 seconds and then dims off.

Turning on the wireless mouse

Push the power switch down to turn on the wireless mouse.

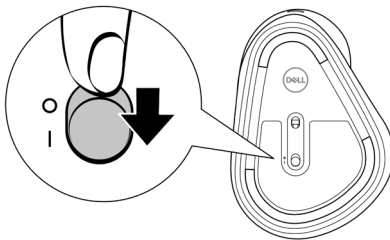

NOTE: Ensure that the distance between your computer and the wireless mouse is within ten meters.

Pairing your wireless keyboard and mouse

Your Dell wireless keyboard and mouse can be paired with devices using either the Dell Secure Link USB receiver or Bluetooth. You can pair and switch between a laptop, desktop, or any compatible mobile device.

Download and install the Bluetooth driver


Bluetooth Drivers come pre-installed on all Dell computers.

To manually download and install wireless Bluetooth Driver, see

Download and install wireless Bluetooth Driver.



Pairing your wireless keyboard and mouse using Swift Pair

1. In Windows Search, type Bluetooth.
2. Click **Bluetooth and other devices settings**. The **Settings** window appears.
3. Ensure that the **Show notifications to connect using Swift Pair** check box is selected.

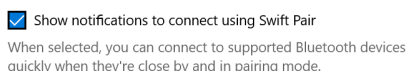

☒ Show notifications to connect using Swift Pair
When selected, you can connect to supported Bluetooth devices quickly when they're close by and in pairing mode.

4. Ensure that the Bluetooth is turned on.
5. Place your wireless keyboard and mouse near your computer. Then press the connection-mode button to switch to the first pairing mode (1⌘).
6. Press the connection-mode button for three seconds. Ensure that the first Bluetooth channel LED (1⌘) blinks white, indicating the Bluetooth pairing is initiated.
7. The **New Dell KB900 found** (for keyboard) and **New Dell MS900 found** (for mouse) window appears. Click **Connect** and confirm the pairing process of both wireless keyboard and mouse with your computer.

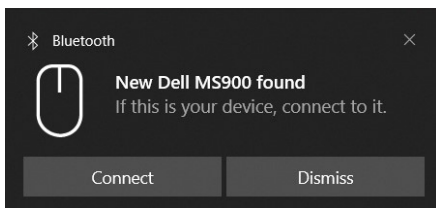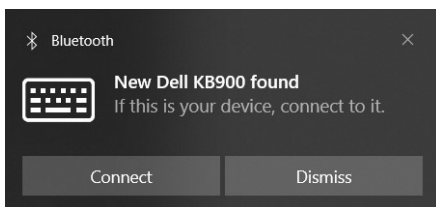

Pairing your wireless keyboard and mouse using Bluetooth


Your Dell wireless keyboard and mouse can be paired with your Bluetooth enabled computer. You can pair and switch between a laptop, desktop, and a compatible mobile device.

 **NOTE:** You can connect up to two devices with your wireless keyboard and wireless mouse using Bluetooth.

 **NOTE:** Before pairing your wireless keyboard or mouse using Bluetooth, ensure that you unpair the inactive devices on your computer, and update the Bluetooth driver on your Dell computer to the latest version. For more information, see [Drivers & Downloads at Dell.com/support](https://www.dell.com/support).

 **NOTE:** Ensure that the distance between your computer and keyboard or mouse is within the Bluetooth reception range.

1. Press the connection-mode button to switch to the first Bluetooth pairing mode (1⌘).
2. Press the connection-mode button for 3 seconds. Ensure that the first Bluetooth channel LED (1⌘) blinks white, indicating the Bluetooth pairing is initiated.

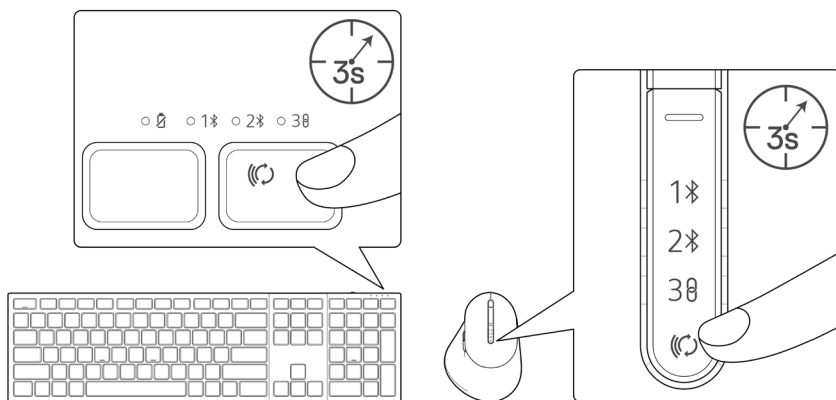


3. Pair your wireless keyboard or mouse with your Bluetooth-enabled computer.
 - 1) Select **Start > Settings > Bluetooth & other devices > Add Bluetooth or other device > Bluetooth**.
 - 2) Select **Dell KB900** (for keyboard) or **Dell MS900** (for mouse) and then **Done**.

 **NOTE:** If Dell KB900 or Dell MS900 is not listed, ensure that the pairing mode is enabled on the keyboard or mouse.

4. Confirm the pairing process on both wireless keyboard or mouse and your computer.

The first Bluetooth channel LED (1*) turns solid white for a few seconds to confirm the pairing, and then the light turns off. After your keyboard or mouse and computer pairing is completed, the keyboard or mouse connects to the computer automatically when the Bluetooth is enabled and both devices are within the Bluetooth range.

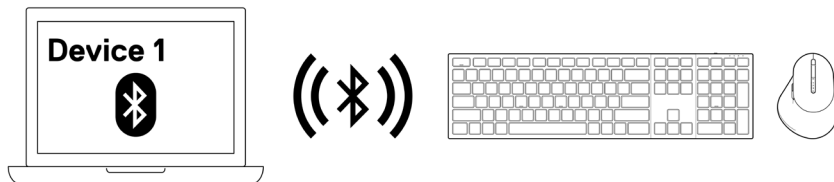

 **NOTE:** The above image indicates the first Bluetooth enabled device pairing.

Pairing device two using Bluetooth

 **NOTE:** You can connect up to two devices with your wireless keyboard and wireless mouse using Bluetooth.

 **NOTE:** Before pairing your wireless keyboard or mouse using Bluetooth, ensure that you unpair the inactive devices on your computer and update the Bluetooth driver on your Dell computer to the latest version. For more information, see [Drivers & Downloads at Dell.com/support](https://Dell.com/support).

 **NOTE:** Ensure that the distance between your computer and keyboard or mouse is within the Bluetooth reception range.



 **NOTE:** For Bluetooth pairing you can use Swift Pair or manual pair option.

1. In Windows Search, type Bluetooth.
2. Click **Bluetooth and other devices settings**. The **Settings** window appears.
3. Ensure that the **Show notifications to connect using Swift Pair** check box is selected.

☒ Show notifications to connect using Swift Pair
When selected, you can connect to supported Bluetooth devices quickly when they're close by and in pairing mode.

4. Ensure that the Bluetooth is turned on.
5. Place your wireless keyboard or mouse near your computer. Then press the connection-mode button to switch to the second pairing mode (2*)..
6. Press the connection-mode button for three seconds. Ensure that the second Bluetooth channel LED (2*) blinks white, indicating the Bluetooth pairing is initiated.


7. The **New Dell KB900 found** (for keyboard) and **New Dell MS900 found** (for mouse) window appears. Click **Connect** and confirm the pairing process of both wireless keyboard and mouse with your computer.

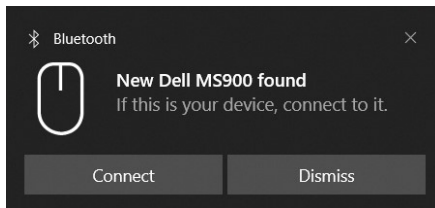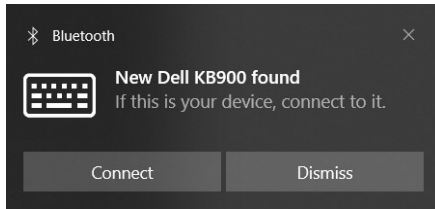


Pairing with a Dell Secure Link USB receiver

-  **NOTE:** You can connect a device to your wireless keyboard or mouse using the Dell Secure Link USB receiver.
-  **NOTE:** Use RF mode to enter the BIOS mode.
-  **NOTE:** Dell Secure Link USB Receiver is compatible with only KB900, MS900, and KM900.


1. Connect the Dell Secure Link USB receiver to the USB port on your computer.

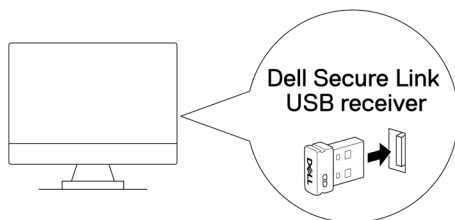

2. Toggle the connection-mode button on your keyboard or mouse until the RF mode LED (38) lights up while changing to the RF mode.

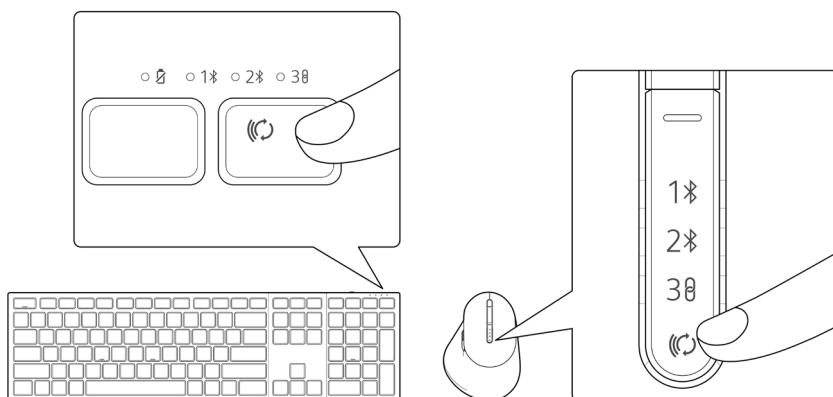

The keyboard or mouse is now paired with your USB device.

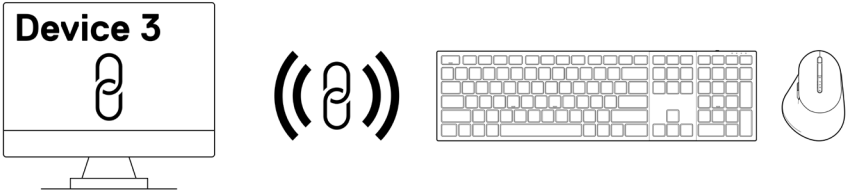


 **NOTE:** The above image indicates the RF enabled device pairing.

Switching between paired devices

Your wireless keyboard or mouse memorises the last connection mode. Every time you turn on the keyboard or mouse, the last connection-mode LED along with the low battery LED indicator turn on for 3 seconds.

If you want to connect to another paired device, toggle the connection-mode button until the respective connection-mode LED turns on.

For example, if you want to connect to the wireless keyboard or mouse using the Dell Secure Link USB receiver then press the connection-mode button until the connection-mode LED (30) turns solid white for 3 seconds.

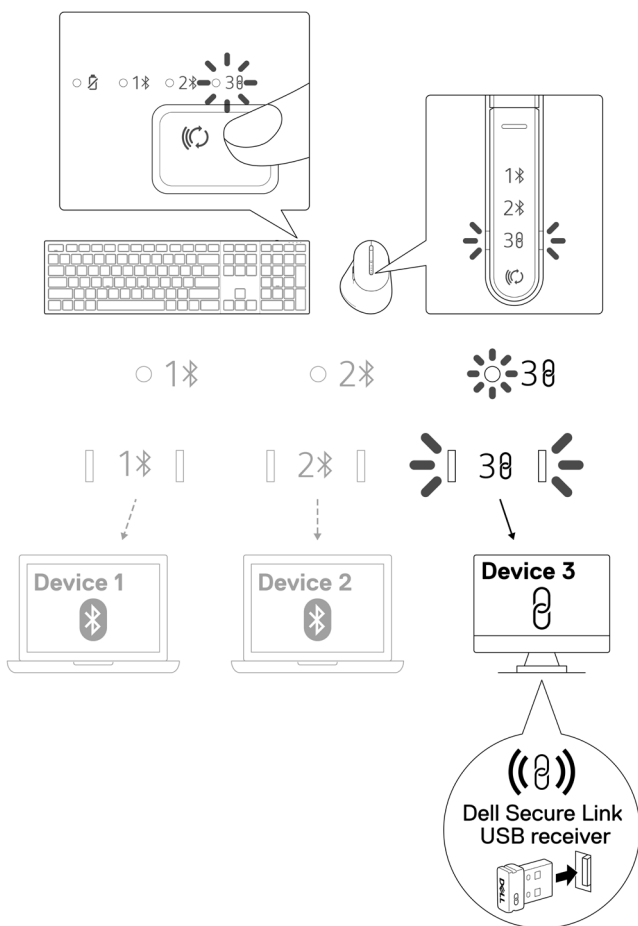

Collaboration touch controls

Your Dell wireless keyboard has dedicated keys to control video conference via the Zoom app.

Please follow the below steps to activate these touch controls:

Activating touch controls for Zoom:

These keys automatically illuminate after successfully joining the Zoom meeting and remain active during the video conference session.




Join Meeting

-  **NOTE:** Zoom touch controls only work with Zoom's desktop version 5.9.3 or later.
-  **NOTE:** If Zoom is not installed on your system, the Zoom touch controls will not work.
-  **NOTE:** Dell Display and Peripheral Manager is required to be installed and running to enable the touch control functions on the keyboard. If Dell Display and Peripheral Manager is uninstalled, then these functions will be disabled.

Managing touch controls:

-  **NOTE:** Swipe the icons from left to right or right to left to enable or disable the touch controls while in a Zoom meeting.
-  **NOTE:** Double tap the touch controls to perform the functions. You may also change the settings to single tap via Dell Display and Peripheral Manager.

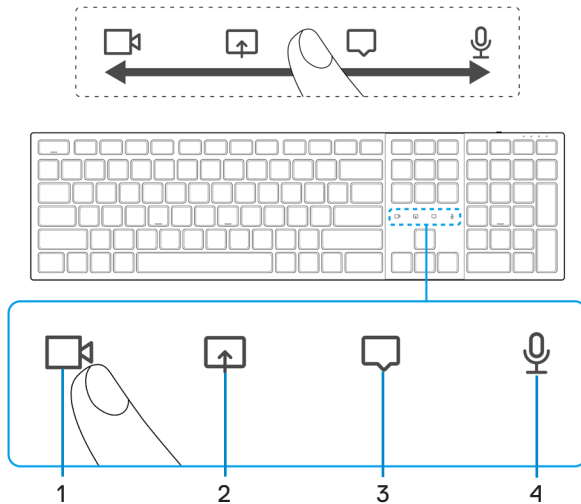


1. Video on/off icon
2. Share screen icon
3. Chat icon
4. Microphone on/off icon

-  **NOTE:** If the video and/or microphone icon turns red, this indicates the respective function is disabled.
-  **NOTE:** When you receive a chat message in the video conferencing app, the chat icon will light up and blink.

Dell KB900 keyboard comes with touch controls for video, share screen, chat notification and mic, compatible with Zoom. The touch control settings on Dell Display and Peripheral Manager allow you to toggle on and off the touch controls.

When activated, the touch controls will light up on the keyboard. The message icon will blink on receiving a chat message. The video & mic icon will turn red when video & mic are off.

Users can also choose to turn off the double tap option. With this they can instantly act by single tapping on the icon on the keyboard.


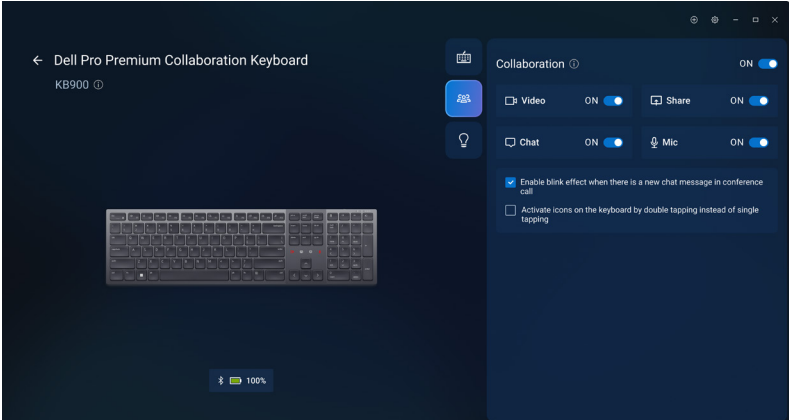


Intelligent backlighting

Your Dell wireless keyboard has embedded sensors to regulate the backlight.

The ambient light sensor adjusts the backlight brightness based on the environmental lighting conditions.

A proximity sensor lights the backlit keys when your hand is in close proximity to the keyboard.

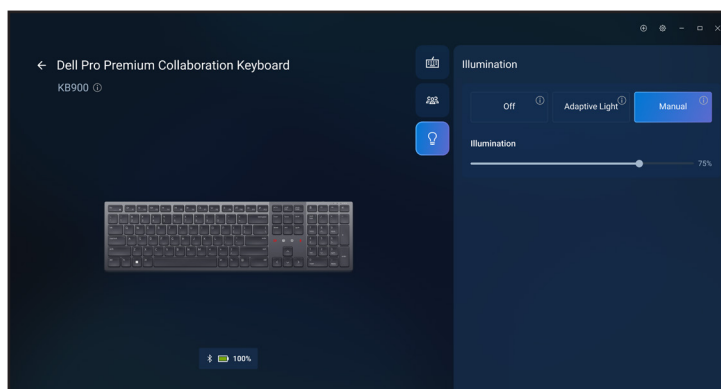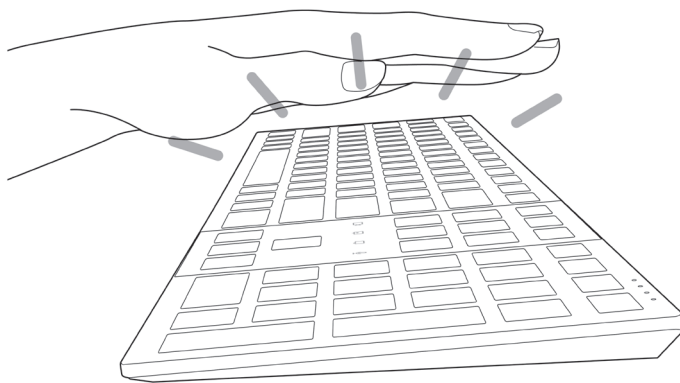

The backlight is turned on as described in the table below:



NOTE: If the ambient brightness detected in your environment is bright enough, then the backlight will not turn on to conserve battery life.




NOTE: While charging, the proximity sensor is disabled and the backlight is always turned on. The brightness of the backlight depends on the user setting or if no key is pressed within 30 seconds then the backlight will fade to the lowest brightness setting which is 25%. When you turn off the keyboard then the backlight will also turn off.


Action	Backlight status: On
Hand is detected (within detection range of 2-4cm)	On
Hand is detected (within detection range of 2-4cm), but no key is pressed for 30 seconds (Hands are resting on the keyboard).	Fade off after 30 seconds
Hand is no longer detected	Fade off after 5 seconds
Wireless keyboard is charging	On
Wireless keyboard is charging but no key is pressed within 30 seconds	On but after 30 seconds fade to the lowest brightness setting

Changing the scroll-speed on wireless mouse


Your Dell wireless mouse's vertical-scroll wheel can be shifted between two scrolling modes, such as notched and fast. To toggle between these modes, press the scroll-speed toggle button.

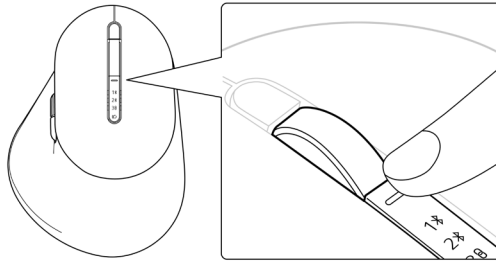

- Notched speed mode is suitable for scrolling precise items.

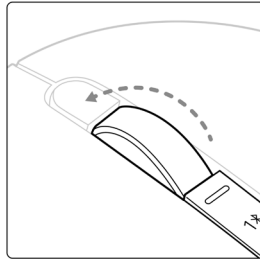

- Fast speed mode is best for scrolling through long web pages and files.

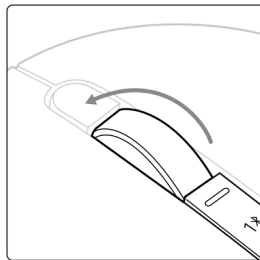

Troubleshooting

Problems	Possible solutions
Keyboard or mouse is not functioning	1. Ensure that the battery is fully charged. 2. Turn off the keyboard or mouse, and then turn it on.
Keyboard or mouse buttons do not work	1. Ensure that the battery is fully charged. 2. Turn off the keyboard or mouse, and then turn it on. 3. On your computer, turn the Bluetooth off and on. 4. Restart your computer. 5. Check for interference that may affect Bluetooth connectivity. For example, nearby Wi-fi or USB 3.0 devices. • Check for any wireless devices that are in close proximity such as wireless networking devices. For example, Bluetooth printer, USB 3.0 devices, and so on. • Move away from these devices.
Bluetooth pairing button does not work	1. Ensure that the battery is fully charged. 2. Turn off the keyboard or mouse, and then turn it on. 3. Ensure that the Bluetooth device is in pairing mode by pressing the Bluetooth pairing button for three seconds. The Bluetooth channel LED blinks white to indicate the Bluetooth pairing is initiated.

Problems	Possible solutions
Unable to pair the keyboard or mouse with the computer	1. Ensure that the battery is fully charged. 2. Turn off the keyboard or mouse, and then turn it on. 3. On your computer, turn the Bluetooth off and on. 4. Restart your computer. Check if you have the latest Bluetooth driver installed on your computer. Go to www.dell.com/support and update the correct Bluetooth driver. For more information, see Download and install the Bluetooth driver. 5. Check for interference that may affect Bluetooth connectivity. For example, nearby Wi-fi or USB 3.0 devices. • Check for any wireless devices that are in close proximity such as wireless networking devices. For example, Bluetooth printer, USB 3.0 devices, and so on. • Move away from these devices. 6. Ensure that the Bluetooth device is in pairing mode by pressing the connection-mode button for three seconds. The Bluetooth channel LED blinks white to indicate the Bluetooth pairing is initiated. 7. Check if your computer is included in the list of selected Dell computers compatible with the keyboard or mouse. For more information, see Dell.com/support.
Wireless connection is lost	1. Ensure that the battery is fully charged. 2. Turn off the keyboard or mouse, and then turn it on. 3. On your computer, turn the Bluetooth off and on. 4. Restart your computer. 5. Check if you have the latest Bluetooth driver installed on your computer. Go to www.dell.com/support and update the correct Bluetooth driver. For more information, see Download and install the Bluetooth driver.

Problems	Possible solutions
Wireless connection is lost	6. Check for interference that may affect Bluetooth or RF connectivity. For example, nearby Wi-fi or USB 3.0 devices. • Check for any wireless devices that are in close proximity such as wireless networking devices. For example, Bluetooth printer, USB 3.0 devices, and so on. • Move away from these devices. • Ensure that the distance between your laptop, desktop, or a compatible mobile device where the Dell Secure Link USB receiver is connected is within 1m. • Ensure that the USB-A port where the Dell Secure Link USB receiver is connected is not close to the USB-A port(s) where other devices are connected. • If necessary, connect the Dell Secure Link USB receiver to the dongle extender and check the wireless connection again.
• Keyboard key presses are lagging, auto-repeating, and erratic • Mouse movement and button clicks are lagging and erratic	Check for interference that may affect Bluetooth or RF connectivity. For example, nearby Wi-fi or USB 3.0 devices. • Check for any wireless devices that are in close proximity such as wireless networking devices. For example, Bluetooth printer, USB 3.0 devices, and so on. • Move away from these devices. • Ensure that the distance between your laptop, desktop, or a compatible mobile device where the Dell Secure Link USB receiver is connected is within 1m. • Ensure that the USB-A port where the Dell Secure Link USB receiver is connected is not close to the USB-A port(s) where other devices are connected. • If necessary, connect the Dell Secure Link USB receiver to the dongle extender and check the wireless connection again.

Problems	Possible solutions
Unable to pair using Swift Pair	1. Press the connection-mode button to switch to the first or second Bluetooth pairing mode. 2. Press the connection-mode button for three seconds until the selected Bluetooth channel LED starts blinking white. 3. Open Start > Settings > Bluetooth & other devices > Add Bluetooth or other device. 4. Select Add device > Bluetooth. 5. Select Dell KB900 (for keyboard) or Dell MS900 (for mouse) and add it. 6. If adding the wireless keyboard or mouse is not successful, restart the system and repeat the steps.
Dell Secure Link USB receiver not working	1. Disconnect and reconnect the Dell Secure Link USB receiver or connect it to another USB-A port. 2. Ensure that the third connection mode is selected (38). 3. If the Dell Secure Link USB receiver is still not working, restart the system or check the KB900 - Dell Display and Peripheral Manager or MS900 - Dell Display and Peripheral Manager for errors.
Zoom touch control icons on keyboard are not visible	1. Ensure that you have installed Zoom's latest desktop version (5.9.3 or later) to your device.  NOTE: Touch controls are not supported for the Zoom web browser version. 2. Swipe the touch control icons from left to right or right to left to ensure you have not accidentally disabled them. 3. Ensure that Dell Display and Peripheral Manager is installed and running.
Backlight on keyboard does not turn on	1. Ensure the keyboard is turned on. 2. If the ambient brightness detected in your environment is bright enough, then the backlight will not turn on to conserve battery life.
Dell Display and Peripheral Manager software features not working as intended.	The features supported by Dell Display and Peripheral Manager are dependent on the operating system and the processor of your computer. See documentation for Dell Display and Peripheral Manager at Dell Support Site for more information.

Keyboard specifications

General

Model number	KB900
Connection type	• Wireless (2.4 GHz RF with Dell Secure Link USB Receiver) • Bluetooth 5.1 LE (supports Microsoft Swift Pair)
System requirement	• Windows Server 2012; 2012 R2, 2016 (RF receiver only) • Windows 8.1, 32/64-bit • Windows 10, 32/64-bit • Windows 11 • Red Hat Enterprise Linux 9.1 • Android 11 • iOS 15.4 • MacOS 12.6 • Chrome 107.0.5304.110(64-Bit) • Linux (Red Hat Enterprise 8.0 /Ubuntu 18.4) • FreeDOS (RF receiver only)

Electrical

Operating voltage	5 V
Battery type	Polymer Li-ion Rechargeable Battery 3000 mAh
Battery life	• 20 days battery life with backlight • 34 months battery life without backlight and without zoom led • 1min charge Battery life -more than 1 day • 80% battery capacity for 1 hour charging by 5V/3A USB-C adapter  NOTE: Charging time varies based on the connected port and its rating.

Physical characteristics

Weight	730g ±30g (1.60 lb ±0.06g)
Dimensions:	
Length	439.55 ±0.5 mm (17.30 in.)
Width	121.5 ±0.5 mm (4.78 in.)
Height	20.7 ±0.5 mm (0.81 in.)

Environmental

Temperature:	
Operating	0°C to 40°C (32°F to 104°F)
Storage	-40°C to 65°C (-40°F to 149°F)
Storage humidity	20% to 90% relative humidity; non-condensing

Wireless


RF resolution	2.4 GHz RF
Operation distance	Up to 10-meter

Charging power requirement for keyboard

 **NOTE:** The information in this section is applicable only to the European Union (EU) countries.

Charging power requirement:

 The power delivered by the charger must be between minimum 3.25W required by the radio equipment, and maximum 15W in order to achieve the maximum charging speed.



Изискване за мощност на зареждане:

Мощността, осигурявана от зарядното устройство, трябва да е между минимум 3.25W, изисквана от радиооборудването, и максимум 15W, за да се постигне максимална скорост на зареждане.

Požadavek na nabíjecí výkon:

Aby bylo dosaženo maximální rychlosti nabíjení, musí být výkon dodávaný nabíječkou mezi minimem 3.25W požadovaným rádiovým zařízením a maximem 15W.

Strømkrav til opladning:

Den effekt, der leveres af opladeren, skal være mellem de minimale 3.25W, der kræves af radioudstyret, og maksimaleffekten på 15W for at opnå den maksimale opladningshastighed.

Charging power requirement:

The power delivered by the charger must be between minimum 3.25W required by the radio equipment, and maximum 15W in order to achieve the maximum charging speed.

Laadimisvõimsuse nõue:

Maksimaalse laadimiskiiruse saavutamiseks peab laadija tarnitav võimsus jääma raadioseadmete nõutava minimaalse võimsuse 3.25W ja maksimaalse võimsuse 15W vahele.

Lataustehovaatimus:

Laturin tuottaman tehon on oltava radiolaitteen vaatiman minimin 3.25W ja maksimin 15W välillä maksimilatausnopeuden saavuttamiseksi.

Puissance requise pour le chargement:

L'alimentation fournie par le chargeur doit être comprise entre la puissance minimale requise par l'équipement radio (3.25W) et la puissance maximale autorisée (15W) afin d'atteindre la vitesse maximale de chargement.

Ladeanforderungen:

Die vom Ladegerät bereitgestellte Leistung muss zwischen mindestens 3.25W für die Funkgeräte und maximal 15W liegen, um die maximale Ladegeschwindigkeit zu erreichen.

Απαίτηση ισχύος φόρτισης:

Η ισχύς που παρέχει ο φορτιστής πρέπει να κυμαίνεται μεταξύ των ελάχιστων 3.25W που απαιτούνται από τον ραδιοεξοπλισμού και των μέγιστων 15W, προκειμένου να επιτευχθεί η μέγιστη ταχύτητα φόρτισης.

Töltési teljesítményigény:

A maximális töltési sebesség eléréséhez a töltő által leadott teljesítménynek a rádióberendezés által megkövetelt minimális 3.25W és a maximális 15W között kell lennie.

Requisiti di alimentazione per la ricarica:

L'alimentazione fornita dal caricabatterie deve essere compresa tra i 3.25W minimi richiesti dall'apparecchiatura radio e i 15W massimi, al fine di raggiungere la velocità di ricarica massima.

Uzlādes jaudas prasība:

Lādētāja nodrošinātajai jaudai jābūt no min. 3.25W, kas nepieciešama radio aprīkojumam, un maks. 15W, lai sasniegtu maksimālo uzlādes ātrumu.

Įkrovimo galios reikalavimai:

Kad būtų pasiektas didžiausias įkrovimo greitis, įkroviklio galia pagal radijo įrangos reikalavimus turi būti ne mažesnė kaip 3.25W ir ne didesnė kaip 15W.

Rekwizit dwar il-potenza tal-iċċarġjar:

Il-potenza pprovduta miċ-ċarġer trid tkun bejn il-minimu ta' 3.25W meħtieġ mit-tagħmir tar-radju tiegħek, u l-massimu ta' 15W biex tinkiseb il-veloċità massima tal-iċċarġjar.

Vereiste oplaadstroom:

De stroom die door de oplader wordt geleverd, moet tussen minimaal 3.25W, vereist door de radioapparatuur, en maximaal 15W zijn om de maximale oplaadsnelheid te bereiken.

Wymaganie dotyczące zasilania:

Zasilanie dostarczane przez ładowarkę musi znajdować się w zakresie od wartości minimalnej 3.25W wymaganej przez urządzenie radiowe po wartość maksymalną 15W zapewniającą ładowanie z maksymalną szybkością.

Requisito de potência de carregamento:

A potência fornecida pelo carregador deve situar-se entre o mínimo de 3.25W exigido pelo equipamento de rádio e o máximo de 15W, a fim de atingir a velocidade máxima de carregamento.

Cerință de alimentare pentru încărcare:

Alimentarea furnizată de încărcător trebuie să fie între minimum 3.25W, valoare impusă de echipamentul radio, și maximum 15W pentru a obține viteza maximă de încărcare.

Požiadavky na napájanie:

Na dosiahnutie maximálnej rýchlosti nabíjania musí byť výkon dodávaný nabíjačkou medzi minimom 3.25W požadovaným rádiovým zariadením a maximom 15W.

Zahteve glede moči napajanja:

Za najhitrejše polnjenje mora napajalnik dovajati moč med najmanj 3.25W (kar zahteva radijska oprema) in največ 15W.

Requisito de carga:

La potencia suministrada a través del cargador debe de ser de entre 3.25W y 15W para obtener la velocidad de carga máxima en equipos de radio.

Strömförsörjningskrav för laddning:

Den ström som levereras av laddaren måste vara mellan minst 3.25W och högst 15W enligt radioutrustningens krav för att uppnå maximal laddningshastighet.

Требования к мощности для зарядки:

Зарядное устройство должно подавать мощность в диапазоне от 3.25Вт, согласно минимальному требованию для радиооборудования, до 15Вт для достижения максимальной скорости зарядки.

Mouse specifications

General

Model number	MS900
Connection type	• Wireless (2.4 GHz RF with Dell Secure Link Receiver) • Bluetooth 5.1 LE (supports Microsoft Swift Pair)
System requirement	• Windows Server 2012; 2012 R2, 2016 (RF receiver only) • Windows 8, 32/64-bit • Windows 10, 32/64-bit • Windows 11 • Android 11 • Chrome 107 • Mac OS 13 • Linux 6.x, Ubuntu 18 and Redhat 8 Enterprise • Free-DOS (RF receiver only)

Electrical

Operating voltage	5 V
Battery type	Polymer Li-ion Rechargeable Battery 500 mAh
Battery life	• Active mode by 0.72 hour, reset mode 1 by 0.48 hour, reset mode 2 by 1.2 hours, and sleep mode by 21.6 hours per day. • 5 days per week • 1min charge for half day usage model • 80% battery capacity for 1 hour charging  NOTE: Charging time varies based on the connected port and its rating.

Physical characteristics

Weight (without dongle)	140±3 g (0.308 lb)
Dimensions:	
Length	126.94 ±0.5 mm (4.99 in.)
Width	89.70 ±0.5 mm (3.53 in.)
Height	45.45 ±0.3 mm (1.78 in.)

Environmental

Temperature:	
Operating	0°C to 40°C (32°F to 104°F)
Storage	-40°C to 65°C (-40°F to 149°F)
Storage humidity	20% to 90% relative humidity; non-condensing

Wireless


RF resolution	2.4 GHz RF
Operation distance	Up to 10-meter

Charging power requirement for mouse

 **NOTE:** The information in this section is applicable only to the European Union (EU) countries.

Charging power requirement:

 The power delivered by the charger must be between minimum 2.5W required by the radio equipment, and maximum 2.5W in order to achieve the maximum charging speed.



Изискване за мощност на зареждане:

Мощността, осигурявана от зарядното устройство, трябва да е между минимум 2.5W, изисквана от радиооборудването, и максимум 2.5W, за да се постигне максимална скорост на зареждане.

Požadavek na nabíjecí výkon:

Aby bylo dosaženo maximální rychlosti nabíjení, musí být výkon dodávaný nabíječkou mezi minimem 2.5W požadovaným rádiovým zařízením a maximem 2.5W.

Strømkrav til opladning:

Den effekt, der leveres af opladeren, skal være mellem de minimale 2.5W, der kræves af radioudstyret, og maksimaleffekten på 2.5W for at opnå den maksimale opladningshastighed.

Charging power requirement:

The power delivered by the charger must be between minimum 2.5W required by the radio equipment, and maximum 2.5W in order to achieve the maximum charging speed.

Laadimisvõimsuse nõue:

Maksimaalse laadimiskiiruse saavutamiseks peab laadija tarnitav võimsus jääma raadioseadmete nõutava minimaalse võimsuse 2.5W ja maksimaalse võimsuse 2.5W vahele.

Lataustehovaatimus:

Laturin tuottaman tehon on oltava radiolaitteen vaatiman minimin 2.5W ja maksimin 2.5W välillä maksimilatausnopeuden saavuttamiseksi.

Puissance requise pour le chargement:

L'alimentation fournie par le chargeur doit être comprise entre la puissance minimale requise par l'équipement radio (2.5W) et la puissance maximale autorisée (2.5W) afin d'atteindre la vitesse maximale de chargement.

Ladeanforderungen:

Die vom Ladegerät bereitgestellte Leistung muss zwischen mindestens 2.5W für die Funkgeräte und maximal 2.5W liegen, um die maximale Ladegeschwindigkeit zu erreichen.

Απαιτήση ισχύος φόρτισης:

Η ισχύς που παρέχει ο φορτιστής πρέπει να κυμαίνεται μεταξύ των ελάχιστων 2.5W που απαιτούνται από τον ραδιοεξοπλισμού και των μέγιστων 2.5W, προκειμένου να επιτευχθεί η μέγιστη ταχύτητα φόρτισης.

Töltési teljesítményigény:

A maximális töltési sebesség eléréséhez a töltő által leadott teljesítménynek a rádióberendezés által megkövetelt minimális 2.5W és a maximális 2.5W között kell lennie.

Requisiti di alimentazione per la ricarica:

L'alimentazione fornita dal caricabatterie deve essere compresa tra i 2.5W minimi richiesti dall'apparecchiatura radio e i 2.5W massimi, al fine di raggiungere la velocità di ricarica massima.

Uzlādes jaudas prasība:

Lādētāja nodrošinātajai jaudai jābūt no min. 2.5W, kas nepieciešama radio aprīkojumam, un maks. 2.5W, lai sasniegtu maksimālo uzlādes ātrumu.

Įkrovimo galios reikalavimai:

Kad būtų pasiektas didžiausias įkrovimo greitis, įkroviklio galia pagal radijo įrangos reikalavimus turi būti ne mažesnė kaip 2.5W ir ne didesnė kaip 2.5W.

Rekwiżit dwar il-potenza tal-iċċarġjar:

Il-potenza pprovduta miċ-ċarġer trid tkun bejn il-minimu ta' 2.5W meħtieġ mit-tagħmir tar-radju tiegħek, u l-massimu ta' 2.5W biex tinkiseb il-veloċità massima tal-iċċarġjar.

Vereiste oplaadstroom:

De stroom die door de oplader wordt geleverd, moet tussen minimaal 2.5W, vereist door de radioapparatuur, en maximaal 2.5W zijn om de maximale oplaadsnelheid te bereiken.

Wymaganie dotyczące zasilania:

Zasilanie dostarczane przez ładowarkę musi znajdować się w zakresie od wartości minimalnej 2.5W wymaganej przez urządzenie radiowe po wartość maksymalną 2.5W zapewniającą ładowanie z maksymalną szybkością.

Requisito de potência de carregamento:

A potência fornecida pelo carregador deve situar-se entre o mínimo de 2.5W exigido pelo equipamento de rádio e o máximo de 2.5W, a fim de atingir a velocidade máxima de carregamento.

Cerință de alimentare pentru încărcare:

Alimentarea furnizată de încărcător trebuie să fie între minimum 2.5W, valoare impusă de echipamentul radio, și maximum 2.5W pentru a obține viteza maximă de încărcare.

Požiadavky na napájanie:

Na dosiahnutie maximálnej rýchlosti nabíjania musí byť výkon dodávaný nabíjačkou medzi minimom 2.5W požadovaným rádiovým zariadením a maximom 2.5W.

Zahteve glede moči napajanja:

Za najhitrejše polnjenje mora napajalnik dovajati moč med najmanj 2.5W (kar zahteva radijska oprema) in največ 2.5W.

Requisito de carga:

La potencia suministrada a través del cargador debe de ser de entre 2.5W y 2.5W para obtener la velocidad de carga máxima en equipos de radio.

Strömförsörjningskrav för laddning:

Den ström som levereras av laddaren måste vara mellan minst 2.5W och högst 2.5W enligt radioutrustningens krav för att uppnå maximal laddningshastighet.

Требования к мощности для зарядки:

Зарядное устройство должно подавать мощность в диапазоне от 2.5Вт, согласно минимальному требованию для радиооборудования, до 2.5Вт для достижения максимальной скорости зарядки.

Statutory Information

Warranty

Limited warranty and return policies

Dell-branded products carry a three-year limited hardware warranty. If purchased together with Dell system, it will follow the system warranty.

For U.S. customers

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at **Dell.com/terms**. This document contains a binding arbitration clause.

For European, Middle Eastern and African customers

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty – full details of the Dell end user contract and warranty terms can be found by going to **Dell.com/terms**, selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link for the end user terms or the “support” link for the warranty terms.

For non-U.S. customers

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty – full details of Dell's warranty terms can be found by going to **Dell.com**, selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link or the “support” link for the warranty terms.