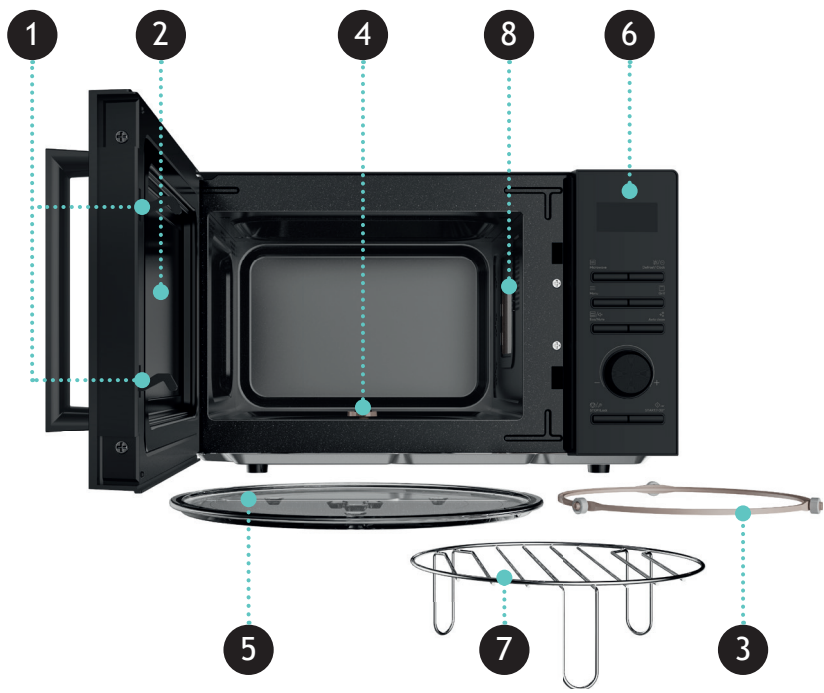 
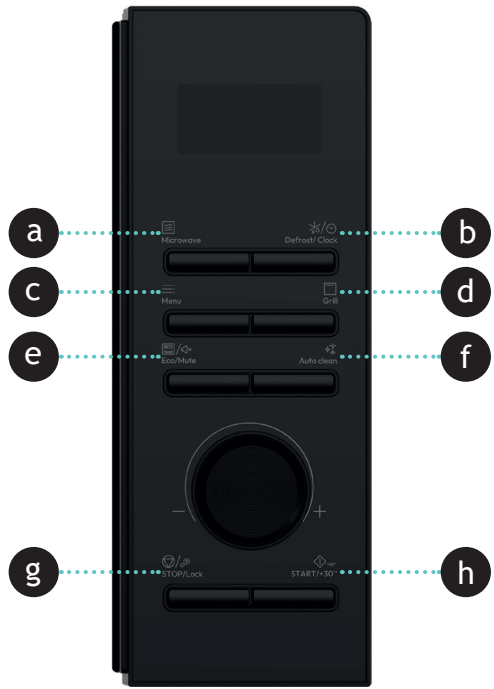 


# CANDY

## WAVE 500 MICROWAVE OVEN



User manual (GB) .....	P5
Manuel d'utilisation (FR) .....	P10
Benutzerhandbuch (DE) .....	P16
Manuale per l'utente (IT) .....	P22
Manual de instruções (PT) .....	P34
Manual de usuário (ES) .....	P40
دليل المستخدم (AR) .....	P106



# MENU

CATEGORY	PORTION	DISPLAY	TIME	POWER
POTATO A.1 △	250g	250 <sub>g</sub>	7m	800W
	500g	500 <sub>g</sub>	11m	
	750g	750 <sub>g</sub>	16m	
PASTA A.2 △	50g	50 <sub>g</sub>	15m	800W
	100g	100 <sub>g</sub>	19m	
	150g	150 <sub>g</sub>	23m	
PIZZA A.3 △	200g	200 <sub>g</sub>	3m	800W
	400g	400 <sub>g</sub>	6m 30s	
POPCORN A.4 △	100g	100 <sub>g</sub>	2m 30s	800W
VEGETABLE A.5 △	200g	200 <sub>g</sub>	3m 30s	800W
	400g	400 <sub>g</sub>	5m	
	600g	600 <sub>g</sub>	7m	
BEVERAGE A.6 △	1cup (250ml)	1	1m 30s	800W
	2cups (500ml)	2	2m 50s	
	3cups (750ml)	3	4m 10s	
MEAT A.7 △	200g	200 <sub>g</sub>	2m 30s	800W
	400g	400 <sub>g</sub>	4m 30s	
	600g	600 <sub>g</sub>	7m	
FISH A.8 △	200g	200 <sub>g</sub>	2m 20s	800W
	400g	400 <sub>g</sub>	4m 10s	
	600g	600 <sub>g</sub>	6m	
REHEAT A.9 △	200g	200 <sub>g</sub>	2m	800W
	400g	400 <sub>g</sub>	3m 20s	
	600g	600 <sub>g</sub>	4m 40s	
	800g	800 <sub>g</sub>	6m 20s	
	1000g	1000 <sub>g</sub>	7m 40s	
BREAD A.10 △	100g	100 <sub>g</sub>	35s	800W
	150g	150 <sub>g</sub>	55s	
	200g	200 <sub>g</sub>	1m 20s	
SOUP A.11 △	1 bowl (250g)	1	2m 20s	800W
	2 bowls (500g)	2	4m 20s	
	3 bowls (750g)	3	6m 20s	

# MENU

CATEGORY	PORTION	DISPLAY	TIME	POWER
BUTTER (MELT) R. 12 ▲	100g	100 <sub>g</sub>	1m 30s	400W
	200g	200 <sub>g</sub>	2m 10s	
	300g	300 <sub>g</sub>	3m 20s	
GRILLED CHICKEN R. 13 ▲	1000g	1000 <sub>g</sub>	33m	C-2 2/3 Total time flip over
	1200g	1200 <sub>g</sub>	36m	
GRILLED STEAK R. 14 ▲	200g	200 <sub>g</sub>	12m	C-2 (1/3 Total time) G (2/3 Total time) 2/3 Total time flip over
	300g	300 <sub>g</sub>	16m 30s	
	400g	400 <sub>g</sub>	21m	
	500g	500 <sub>g</sub>	25m 30s	
GRILLED CHICKEN WINGS R. 15 ▲	200g	200 <sub>g</sub>	15m	C-1 2/3 Total time flip over
	300g	300 <sub>g</sub>	18m	
	400g	400 <sub>g</sub>	21m	
	500g	500 <sub>g</sub>	24m	
ROASTED POTATO R. 16 ▲	200g	200 <sub>g</sub>	12m	C-2 2/3 Total time flip over
	300g	300 <sub>g</sub>	15m	
	400g	400 <sub>g</sub>	18m	
ROASTED BACON R. 17 ▲	50g	50 <sub>g</sub>	3m 20s	C-1
	80g	80 <sub>g</sub>	5m 20s	
	100g	100 <sub>g</sub>	6m 20s	
SAUSAGE R. 18 ▲	100g	100 <sub>g</sub>	8m	C-1 2/3 Total time flip over
	200g	200 <sub>g</sub>	10m	
	300g	300 <sub>g</sub>	12m	
SKEWERS R. 19 ▲	200g	200 <sub>g</sub>	12m	C-1 2/3 Total time flip over
	300g	300 <sub>g</sub>	15m	
	400g	400 <sub>g</sub>	18m	
	500g	500 <sub>g</sub>	21m	
GRILLED SALMON R. 20 ▲	200g	200 <sub>g</sub>	15m	C-2 (1/3 Total time) G (2/3 Total time) 2/3 Total time flip over
	300g	300 <sub>g</sub>	18m	
	400g	400 <sub>g</sub>	21m	
	500g	500 <sub>g</sub>	24m	

# HOW TO USE



# DEFROST BY WEIGHT



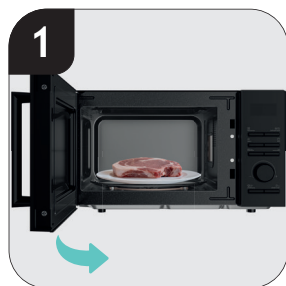 
# DEFROST BY TIME



# CLOCK



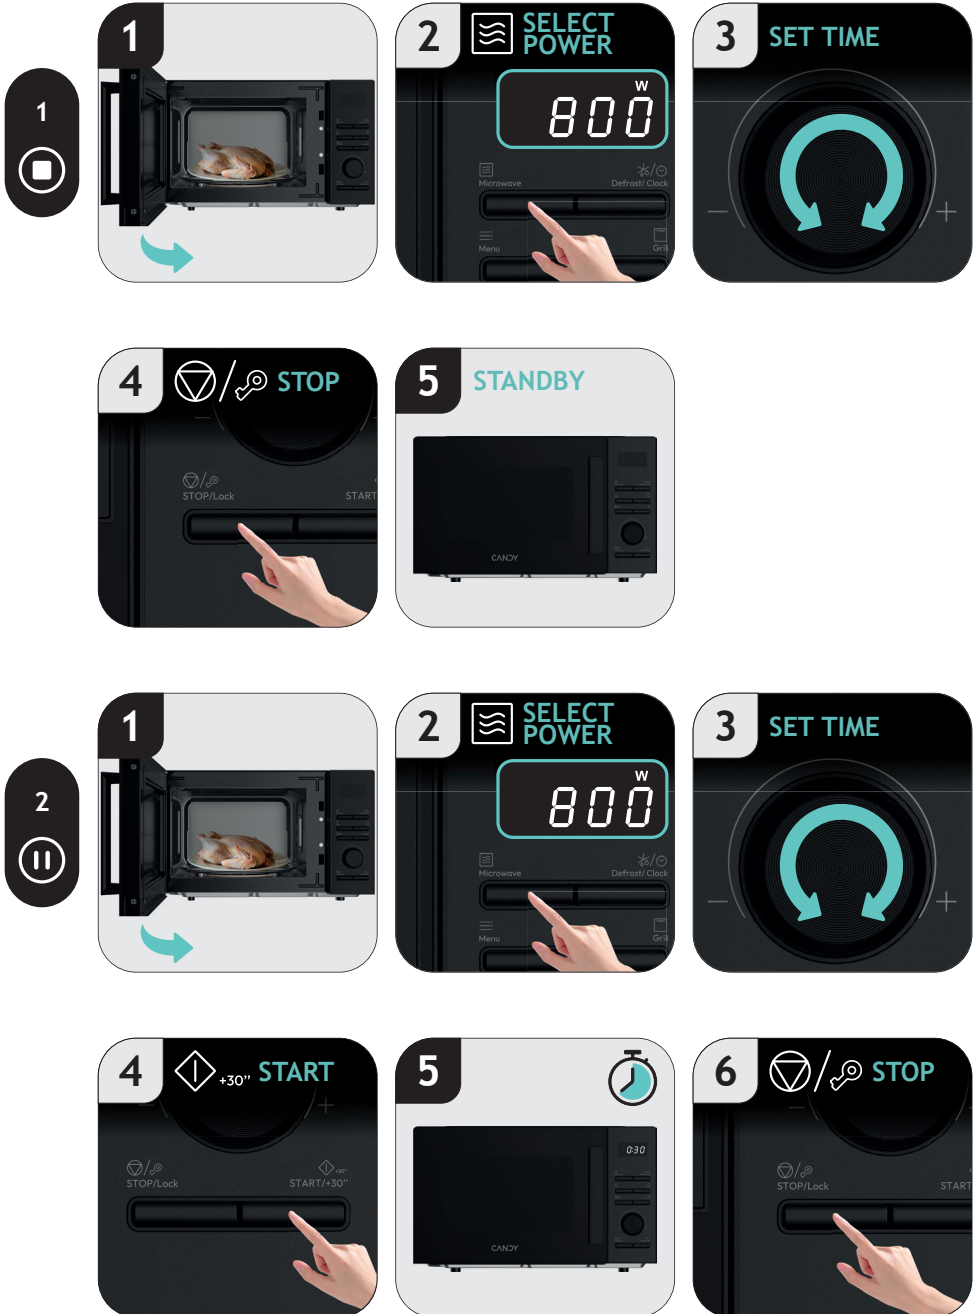 
# AUTO COOKING



# GRILL



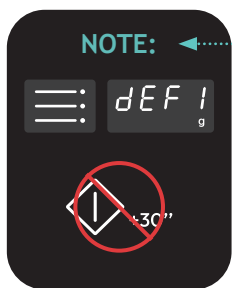 
# STOP/LOCK



# STOP/LOCK



# START/+30S



# EXPRESS



# ECO

---

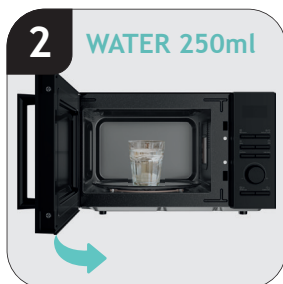 


# MUTE








---



 

 
# AUTO CLEAN



## CLEAN

METHOD COMPONENTS			
	✗	✗	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓

## GRILL MENU

GRILL MENU	MICROWAVE OUTPUT RATIO	GRILL OUTPUT RATIO	POWER
	/	100%	1000W
	30%	70%	940W
	55%	45%	890W

## INSTRUCTIONS FOR SAFE USE

---

IMPORTANT SAFETY INSTRUCTIONS  
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE  
HOUSEHOLD USE ONLY  
SAVE THESE INSTRUCTIONS

**WARNING:** If the door or door seals are damaged, the microwave oven must not be operated until it has been repaired by a trained person.

**WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

**WARNING:** Liquids or other food must not be heated in sealed containers since they are liable to explode.

01. Only use utensils that are suitable for use in microwave ovens.

02. Metallic containers for food and beverages are not allowed during microwave cooking.

**Microwave mode:**

Use only heat-resistant materials such as ceramic, glass, or plastic.

**Grill or grill combination mode:**

Use heat-resistant ceramic or

glass, and the grill rack.

03. When heating food in plastic or paper containers, keep an eye on the microwave oven due to the possibility of ignition.

04. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

05. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames. Microwave heating of beverages can result in delayed eruptive boiling, therefore pay attention when handling the container.

06. The contents of bottles and jars of baby food should be stirred or shaken, and the temperature should be checked before feeding to avoid burns.

07. Eggs in their shell and whole hard-boiled eggs shall

not be heated in microwave ovens since they may explode, even after microwave heating has ended.

08. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

09. The appliance must not be placed in a cabinet.

The free distance above the top surface shall be at least 20 cm. The installation height of the microwave oven to the ground should be at least 85 cm.

10. Pay attention not to displace the turntable when removing containers from the appliance.

11. The appliance shall not be cleaned with a steam cleaner.

**WARNING:** Children should only use the microwave oven under adult supervision due to the temperatures generated.



The surfaces are liable to get hot during use. Do not touch.

12. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a

similarly qualified person in order to avoid any hazards.

13. This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

14. Children shall not play with the appliance.

15. Cleaning and user maintenance shall not be made by children without supervision.

#### ⓘ CAUTION

The microwave oven should be cleaned regularly and any food deposits removed.

#### ⚠ WARNING

Unplug and remove the power cord from the wall outlet before cleaning. Clean the product after it has cooled down. Don't immerse the appliance in water or other fluids when cleaning. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous

situation.

Never use hard detergent, gasoline, abrasive powder or metal brush to clean any part of the appliance.

## TIPS FOR CLEANING

**Details for cleaning door seals, cavity and adjacent parts:**

**Exterior:**

Wipe the enclosure with a dampened soft cloth.

**Door:**

Using a dampened soft cloth, wipe clean the door and window.

Wipe the door seals and adjacent parts to remove any spill or spatter.

Wipe the control panel with a slightly dampened soft cloth.

**Details on how to clean the surfaces directly in contact with food:**

**Interior walls:**

Wipe clean the interior surfaces with a dampened soft cloth.

Wipe clean the waveguide cover to remove any food splashed.

**Turntable / Rotation ring:**

Wash with mild soap water. Rinse with clean water and allow drying thoroughly. Wash in the dishwasher.

**Rotation axis:**

Wipe clean the surfaces with a dampened soft cloth.

## ▲ WARNING

After use, wipe the waveguide cover with a damp cloth, followed by dry cloth to remove any food splashes and grease.

Built-up grease may overheat and cause smoke or catch fire.

16. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

17. Do not directly put the glass plate into cold water after use. It needs to cool down for at least 20 minutes, and then put it into the water to avoid cracking.

18. Group 2 Class B appliance Group 2 ISM equipment: group 2 contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for

the treatment of material, and EDM and arc welding equipment.

Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for

domestic purposes.

19.20 minutes after being plugged in and without further operation, or once the work is completed, the appliance enters standby mode. The power consumption in standby mode does not exceed 0.8W.

### Correct disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**C E** This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP SRL  
via Privata Eden Fumagalli snc  
20861 Brugherio (MB) - ITALY

## 2. GETTING TO KNOW YOUR MICROWAVE OVEN

### 1) Door lock

Microwave oven door must be properly closed in order to operate.

### 2) Viewing window

Allow users to monitor the cooking status.

### 3) Rotating ring

The glass turntable sits on its wheels; it supports the turntable and helps it to balance when rotating.

### 4) Rotating axis

The glass turntable sits on the axis; the motor underneath it drives the turntable to rotate.

### 5) Turntable

The food sits on the turntable, its rotation during operation helps to cook food evenly.

### ⚠ CAUTION

- Place the rotating ring first
- Fit the turntable onto the rotating axis and

make sure that it is geared in properly.

### 6) Control panel

- Microwave button
- Defrost/Clock button
- Menu button
- Grill button
- Eco/Mute button
- Auto clean button
- Stop/Lock button
- Start/+30s button

### 7) Grill rack

Used to place the food for roasting.

### 8) Waveguide cover

It is inside the microwave oven, next to the wall of the control panel.

### ⚠ WARNING

Never remove the waveguide cover.

## 3. BEFORE FIRST USE

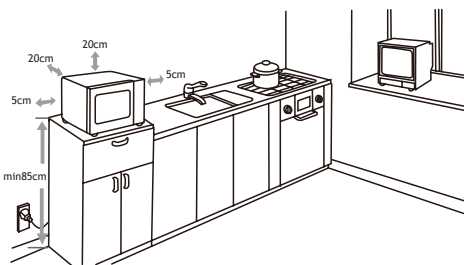 
1. Remove all packing materials. If there is a safe film over the microwave oven, tear it off before use. Check carefully for damage. If any, immediately notify dealer or send to the manufacturer's service center.

2. Microwave oven must be placed under dry and non-corrosiveness environments, kept away from heat and humidity, such as gas burner or water tank.

3. Place the appliance on a stable, horizontal level and heat-resistant surface to ensure sufficient ventilation. The distance of the back of microwave oven to the wall should be at least 20 cm, the side to the wall should be at least 5 cm, the free distance above the top surface at least 20 cm. The height of the microwave oven to the ground should be at least 85 cm.

4. The position of the microwave oven shall be such that it is far from the TV, Radio or antenna as picture disturbance or noise may occur. The distance should be more than 5m.

5. The appliance must be positioned so that the plug is accessible, and must ensure a good grounding in case of leakage, ground loop can be formed to avoid electric shock.



6. The microwave oven must be operated with the door closed.

7. The microwave oven must not be placed in a cabinet. The microwave oven is intended to be used freestanding.



8. As there is manufacturing residue or oil remained on the microwave oven cavity or heat element, it usually would smell the odor, even a slight smoke. It is normal and would not occur after several times use. Keep the door or window open to ensure good ventilation. It is strongly recommended to place a cup of water in the cavity and setting at high power and operate for several times before of first usage.

## 4. USING YOUR MICROWAVE OVEN

### 1. BEFORE COOKING

The display lights up when plugged into the power supply, then enters the standby state and display shows 1:00.

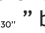 

### 2. MICROWAVE FUNCTION

Press the “” button and select the desired microwave power. Turn the knob to increase or decrease the cooking time: the selectable time range is from 0:10 to 60:00. After selecting the time, press the “” button to start working. A buzzing sound will notify when the operation has been completed.

There are five microwave power levels, 800W, 640W, 400W, 240W and 80W, respectively.

POWER LEVEL	POWER	APPLICATION
HIGH	800W	Applicable for quick and thorough cooking
M.High	640W	Applicable for medium express cooking
Med	400W	Applicable for steaming food
M.Low	240W	Applicable for defrosting food
LOW	80W	Applicable for keeping warm

### ⚠ CAUTION

- The max time which can be set is 60 minutes.
- Never use the grill rack during microwave cooking.
- Never operate the microwave oven empty.
- At the maximum microwave power, the microwave oven will automatically reduce the power after 9 mins to lengthen the service life.
- If you need to turn the food during operation, open the door, turn the food, and place it back. Then press the “” button once and the preset cooking procedure will continue.
- If you intend to remove the food before the preset time, you must press “” button once to cancel the preset procedure.

### OPERATION

- Connect the cord
  - Do not block the ventilation.

- Place the food on the glass turntable tray and close the door.

- Food must be contained in an utensil.
- Do not operate the microwave oven without load, otherwise it will cause damage to the microwave oven.

- Select the desired microwave power level.

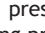 
- The microwave oven starts running. If pausing in midway is needed, just open the door at any time, and close it to resume operation.

- When it times out and cooking ends, the microwave oven produces a bell ring, the inside lamp will also be automatically turned off.

- It is recommended to wear gloves when removing the cooked food from microwave oven and be careful. Do not touch the innerwall of cavity.

### 3. DEFROST AND CLOCK

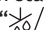 
#### 3.1 DEFROST

There are two defrost modes, dEF1 and dEF2, respectively. dEF1 is for defrost by weight and dEF2 is for defrost by time. Press this button once to select defrost by weight or twice to select defrost by time, and the display screen will display “dEF1” or “dEF2”. Turn the knob to select food weight or defrost time. The optional weight range of dEF1 is from 100g to 1500g, and the optional time range of dEF2 is from 0:10 to 60:00. After selecting the defrost by weight or time, press the “” button to start the defrosting process. A buzzing sound will notify when the operation has been completed. In the dEF1 defrost mode (by weight), the microwave oven will beep halfway through the cycle to prompt you to turn the food over.


### ⚠ CAUTION


- It is necessary to turn over the food during operation to obtain uniform cooking.
- Defrosting usually requires more time than cooking the food.
- If the food can be cut with a knife, the defrosting process can be considered completed.
- Defrosted food should be consumed as soon as possible. It is not recommended to put it back in the fridge or freeze it again.

#### 3.2 CLOCK (24-hour clock)

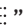 
In standby mode, press and hold the “” button for more than 3 seconds to


enter the clock setting interface. The display screen blinks in hours and there will be the beeping sound. The hour time can be set by turning the knob.

After setting the hour, press the “.30” button for a short time to confirm and switch to the setting minute mode. The display screen blinks in minutes. The minutes can be set by turning the knob.

After setting minutes, press the “.30” button again to confirm and the microwave oven will exit the clock setting mode automatically.

#### 4. AUTO COOKING

There are 20 automatic menus A.1-A.20, potato, pasta, pizza, popcorn, vegetable, beverage, meat, fish, reheat, bread, soup, butter (melt), grilled chicken, grilled steak, grilled chicken wings, roasted potato, roasted bacon, sausage, skewers and grilled salmon respectively. Press the “” button continuously to select the desired menu, the display screen shows A.1-A.20.

Turn the knob to select the portion size. After selecting the cooking portion size, press “.30” button to start working. A buzzing sound will notify when the operation has been completed.

Display	Menu	Method
A.1	Potato	The optional weights are 250g, 500g and 750g
A.2	Pasta	The optional weights are 50g, 100g and 150g
A.3	Pizza	The optional weights are 200g and 400g
A.4	Popcorn	The optional weight is 100g
A.5	Vegetable	The optional weights are 200g, 400g and 600g
A.6	Beverage	The optional portion sizes are 1 cup, 2 cups or 3 cups, each one about 250ml.
A.7	Meat	The optional weights are 200g, 400g and 600g

Display	Menu	Method
A.8	Fish	The optional weight are 200g, 400g and 600g
A.9	Reheat	The optional weights are 200g, 400g, 600g, 800g and 1000g
A.10	Bread	The optional weights are 100g, 150g and 200g
A.11	Soup	The optional portion sizes are 1 bowl, 2 bowls or 3 bowls, each one about 250g.
A.12	Butter (melt)	The optional weights are 100g, 200g and 300g
A.13	Grilled chicken	The optional weights are 1000g and 1200g
A.14	Grilled steak	The optional weights are 200g, 300g, 400g and 500g
A.15	Grilled chicken wings	The optional weights are 200g, 300g, 400g and 500g
A.16	Roasted potato	The optional weights are 200g, 300g and 400g
A.17	Roasted bacon	The optional weights are 50g, 80g and 100g
A.18	Sausage	The optional weights are 100g, 200g and 300g
A.19	Skewers	The optional weights are 200g, 300g, 400g and 500g
A.20	Grilled salmon	The optional weights are 200g, 300g, 400g and 500g


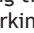 
#### ⚠ CAUTION

a. The temperature of food before cooking should be 20-25°C. Higher or lower

temperatures of the food before cooking would require increasing or decreasing the cooking time.

b. The temperature, weight and shape of food will largely influence the cooking results. If any of the listed factors differ from the menu above, adjust the cooking time accordingly for best results.

## 5. GRILL FUNCTION

There are three Grill modes: G., C-1 and C-2. They are grill, combination 1 of grill and microwave cooking and combination 2 of grill and microwave cooking. Press the “” button continuously, select the desired mode and the display screen will correspondingly display “G.”, “C-1” or “C-2”. Turn the knob to select the cooking time: the time range is from 0:10 to 60:00. After selecting the cooking time, press the “” button to start working. A buzzing sound will notify when the operation has been completed.

G.	In the grill mode, the heating element will be energized during operation time. It is applicable for rolling thin meats or pork, sausage, chicken wing as good brown color can be obtained.
C-1	Combination of grill and microwave cooking which is 30% microwave and 70% grill.
C-2	Combination of grill and microwave cooking which is 55% microwave and 45% grill.

## 6. ECO AND MUTE

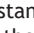 
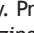 
### 6.1 ECO

In standby mode, press the button to enter ECO mode, and the display screen will shut down. In ECO mode, press any button to exit ECO mode and the display screen will light up.


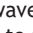 
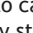 
### 6.2 MUTE

In standby mode, if the buzzer is sounding, press and hold down this button to turn off the buzzer sound. In standby mode, if the buzzer is silent, press and hold down this button to turn on the buzzer sound.


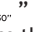 
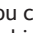 
## 7. AUTO CLEAN

Auto clean is an automatic cleaning function that facilitates users in cleaning the cavity. When in standby mode, press “” button to select the automatic cleaning function, and put 250ml of water (in a vessel) into the cavity. Press “” button to start working. A buzzing sound will notify when the operation has been completed. After the program has finished and the microwave oven has cooled down, wipe the microwave oven with a soft cloth.

## 8. STOP

Anytime during the cooking settings, press “” button to cancel the settings and return to standby state. In the process of microwave oven working, press “” button to pause. Press “” button once again to cancel the function and return to standby state.

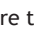 

## 9. START/+30s

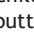 
After setting the cooking time or food weight, press the “” button to start the microwave oven immediately. If the microwave oven is in working state, except in the menu mode and weight defrosting mode, press “” button to increase time: each time you press this button, the time increases by 30s. In the menu mode and weight defrosting mode, the time has already been automatically set and cannot be adjusted. In paused state, you can press “” button to continue the cooking mode previously set.

## 10. CHILD LOCK FUNCTION

Use this feature to lock the control panel when cleaning or to prevent children from using the microwave oven unsupervised.

In this mode, all buttons are disabled.

1) Set lock: In standby mode, press and hold the “” button for more than 3 seconds to activate the child lock function. All buttons of the microwave oven cannot be operated except the “” button.

2) Disable lock: In the child lock state, press and hold the “” button for more than 3 seconds to cancel the child lock function. All the buttons of the microwave oven have been restored to normal functionality.

## 5. UTENSILS GUIDELINE

It is mandatory to use the containers which are suitable and safe for microwave cooking. The containers which are made of heat-resistant ceramic, glass or plastic are suitable for microwave cooking. Never use metal containers for microwave cooking and combination cooking as spark is likely to occur. You can take as reference the below table.

MATERIAL OF CONTAINER	MICROWAVE	GRILL	COMBI	NOTES
Heat-resistant ceramic	Yes	Yes	Yes	Never use ceramics decorated with metal rim or glazed. It is recommended to use ceramic, heat-resistant glass, and plastic containers that can withstand temperatures above 120°C
Heat-resistant plastic	Yes	No	No	Cannot be used for long time microwave cooking
Heat-resistant glass	Yes	Yes	Yes	
Plastic film	Yes	No	No	It should not be used when cooking meat or chops as excessive heating may damage the film
Grill rack	No	Yes	Yes	The grill rack can only be used in grill and combination mode
Metal container	No	No	No	It should not be used in microwave oven. Microwaves cannot pass through metal
lacquer	No	No	No	Poor heat-resistant. Can not be used for High-temperature cooking
Bamboo wood and paper	No	No	No	Poor heat-resistant. Can not be used for High-temperature cooking

## 6. CLEANING & MAINTENANCE

### CLEANING MICROWAVE OVEN CARE

#### ⚠ CAUTION

The microwave oven should be cleaned regularly and any food deposits removed.

#### ⚠ WARNING

a. Unplug and remove the power cord from the wall outlet before cleaning.

Clean the product after it has cooled down. Don't immerse the appliance in water or other fluids when cleaning.

b. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

c. Never use hard detergent, gasoline, abrasive

powder or metal brush to clean any part of the appliance.

d. Do not remove the waveguide cover.

e. When the microwave oven has been used for a long time, there may be some strange odors in, following 3 methods can get rid of them:

1) Place several lemon slices in a cup, then heat with high micro power for 2-3 mins.

2) Place a cup of black tea in the microwave oven, then heat with high micro power.

3) Put some orange peel in the microwave oven, and then heat them with high micro power for 1 minute.

f. When the product is not used, it should be placed in dry and ventilated area as well as possible.

## ⚠ WARNING

Details on how to clean the surfaces directly in contact with food:

After use, wipe the waveguide cover with a damp cloth, followed by a dry cloth to remove any food splashes and grease.

Built-up grease may overheat and cause smoke or catch fire.

### TIPS FOR CLEANING

Details for cleaning door seals, cavity and adjacent parts:

#### Exterior:

Wipe the enclosure with a dampened soft cloth.

#### Door:

Using a dampened soft cloth, wipe clean the door and window.

Wipe the door seals and adjacent parts to remove any spill or spatter.

Wipe the control panel with a slightly dampened soft cloth.

#### Interior walls:

Wipe clean the interior surfaces with a dampened soft cloth.

Wipe clean the waveguide cover to remove any food splashed.

#### Turntable / Rotation ring:

Wash with mild soap water.

Rinse with clean water and allow drying thoroughly.

Wash in the dishwasher.

#### Rotation axis:

Wipe clean the surfaces with a dampened soft cloth.

## 7. CONNECT TO “hOn” APP

1. You can connect this product with other products using the hOn app.
2. Scan the QR code, download and install hOn app. Users who have already installed hOn app will directly enter the device connection page.
3. If you don't have the hOn app, you can find it on your app store. Then you can download it and use. You can continue with the following “Open the home page of hOn app, click “ + ” in the upper right corner of the page and add devices as prompted by the app.”

#### Tips:

Due to the upgrade of hOn app, the actual operation may be slightly different from the above description.

Please follow the instructions in the current hOn app.



Scan the QR code,  
download and install hOn app

## 8. TECHNICAL DATA

Electrical Connection	230V- 50Hz
Microwave input Power	1280W
Microwave output Power	800W
Grill Power	1000W

## 9. TROUBLE SHOOTING

This list summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, you could contact the Candy's Customer Support.

Problem	Possible Cause	Solution
The microwave does not work.	The appliance is not plugged in.	Check if the plug is inserted in the wall socket.
The microwave oven is sparking	Metal products or cooking utensils touching the cavity wall; ceramic products with gold or silver powder edging can also cause spark splashing.	Do not use metal or metal edged cooking utensils.
Stop running during microwave cooking	Thermal fuse causes circuit (magnetron) to open; fan motor does not rotate.	Adjust the door switch or lock hook switch; replace the fan motor.
The light bulb inside the cavity goes out	Loose wire or bulb filament; improper adjustment of the locking hook switch; the first level locking hook switch is damaged.	Tighten the bulb wire or replace the bulb with a new one.

Please check the following before calling for services.

1. Place one cup of water (approx. 150ml) in a glass measure in the microwave oven and close the door securely. Oven lamp should go off if the door is closed properly. Let the microwave oven work for 1 min.

2. Does the lamp light?

3. Does the cooling fan work?

(Put your hand over the rear ventilation openings.)

4. Does the turntable rotate?

(The turntable can rotate clockwise or counter clockwise. This is quite normal.)

5. Is the water inside the oven hot?

If "NO" is the answer to any of the above questions, please check your wall socket and the fuse in your meter box.

If both the wall socket and the fuse are functioning properly, **CONTACT YOUR NEAREST SERVICE CENTER APPROVED.**

## 10. IMPORTANT INFORMATION

### SPARES AND CONSUMABLES

Always replace parts with genuine spares. These are available from your local dealer. When ordering parts always quote your model number.

### QUALITY

Factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001.

### YOUR GUARANTEE

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of

sale or receipt must be produced when making any claim under the terms of this guarantee.

EU 2023/826	
Power Consumption Off Mode	N.A.
Power Consumption StandBy Mode	0.8W
Power Consumption StandBy Mode with info display	N.A.
Power Consumption Networked StandBy	N.A.
Time to reach Off Mode/ StandBy/StandBy with display/ Networked StandBy	20 min

# CANDY

Part no.CMW523GDB01137400018A