# Always there to help you

Register your product and get support at www.philips.com/support





# User manual



**BT50** 

# Contents

1	Important	2
2	Your portable speaker Introduction What's in the box Overview of the speaker	3 3 3 3
3	Get started Charge the built-in battery Turn on/off	4 4 4
4	<b>Play from Bluetooth devices</b> Connect a device Disconnect a device Reconnect a device	5 5 6
5	Play from external devices	7
6	<b>Product information</b> Amplifier Speaker Bluetooth General information	8 8 8 8 8
7	<b>Troubleshooting</b> General About Bluetooth device	9 9 9
8	<b>Notice</b> Compliance Care of the environment Trademark notice	10 10 10 10

#### 1 Important



#### Warning

- Never remove the casing of this product.
- · Never lubricate any part of this product.
- · Never place this product on other electrical equipment.
- · Keep this product away from direct sunlight, naked flames or heat.
- Read these instructions. •
- Heed all warnings. •
- Follow all instructions. .
- Do not use this apparatus near water.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).



The type plate is located on the bottom of the apparatus.

# 2 Your portable speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

### Introduction

With this speaker, you can enjoy audio from Bluetooth-enabled devices or other external devices.

## What's in the box

Check and identify the contents of your package:

- Speaker
- USB cable for charging
- Short user manual
- Safety & notice leaflet

## Overview of the speaker



1 LED indicator

• Indicate battery or Bluetooth connection status.

#### 2 Source selector (OFF/AUDIO IN/ 0)

- Select Bluetooth or AUDIO IN source.
- Turn the speaker off.

#### 3 PAIRING

- Enter Bluetooth pairing mode.
- Disconnect Bluetooth connection.
- (4) DC IN
  - Recharge the built-in battery.
- 5 AUDIO IN
  - Connect an external audio device.

# 3 Get started

Always follow the instructions in this chapter in sequence.

# Charge the built-in battery

The speaker is powered by a built-in rechargeable battery.

- Note
- Before use, fully charge the built-in battery.
- The micro USB socket is for charging only.
- It takes you approximately two hours to fully charge the battery.
- Rechargeable battery has a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.



Connect the USB cable between

- the DC IN socket on the speaker, and
- a USB socket on a computer.

The LED indicator indicates the battery status.

	Under charging	Fully charged
"OFF"	Flashing white	Off
mode		
"AUDIO	Flashing white	Solid white
IN" mode	-	
"Bluetooth"	Flashing blue	Flashing blue
mode	or solid blue	or solid blue
	(depending	(depending
	on Bluetooth	on Bluetooth
	connection	connection
	status)	status)

## Turn on/off

• To turn the speaker on, slide the source selector to AUDIO IN or 0.



• To turn the speaker off, slide the source selector to **OFF**.

#### Switch to standby mode

The speaker switches to standby mode automatically in the following situations:

- In Bluetooth mode, the connection with Bluetooth device is invalid for 15 minutes; or
- In AUDIO IN mode, no audio input cable is connected for 15 minutes.

# 4 Play from Bluetooth devices

With this speaker, you can listen to audio from Bluetooth-enabled devices.

#### Note

- The speaker can memorize a maximum of four paired devices. The fifth paired device will replace the first one.
- Any obstacle between this speaker and a Bluetooth device can reduce the operational range.
- Keep away from any other electronic device that may cause interference.
- The operational range between this speaker and a Bluetooth device is approximately 10 meters (30 feet).
- Make sure that no audio input cable is connected to the AUDIO IN socket.

## Connect a device

Slide the source selector to Ø.

 $\mapsto$  The LED indicator flashes blue.



2 On your Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired (refer to the user manual of the device).

- 3 Select [Philips BT50] displayed on your device for pairing and connection. If necessary, input "0000" as the pairing password.
  - ➡ After successful pairing and connection, the speaker beeps twice, and the LED indicator turns solid blue.
  - If you cannot find [Philips BT50] on your device, press and hold PAIRING for more than three seconds until you hear triple beeps.
- 4 Play audio on the Bluetooth device.

### 🔆 Тір

• You can use your Bluetooth device to control play.

#### LED indicator (blue)

Indicator	Bluetooth connection status
Fast flashing (2Hz)	Pairing
Slow flashing (1Hz)	Connecting
Solid blue	Connected

## Disconnect a device

- Press and hold **PAIRING** for more than three seconds;
  - $\mapsto$  The speaker beeps for three times.
- Disable Bluetooth on your device; or
- Move the device beyond the communication range.
  - → The speaker beeps twice, and the LED indicator flashes blue.

#### - Note

 Before connecting another Bluetooth device, disconnect the current device first.

# Reconnect a device

When you turn on the speaker, it will reconnect the last connected device automatically; If not, select **[Philips BT50]** on your Bluetooth device to start connection.

# 5 Play from external devices

With this speaker, you can also listen to an external audio device such as an MP3 player.





- 1 Connect an audio input cable (not supplied) with a 3.5 mm connector on both ends to
  - the AUDIO IN socket on this speaker, and
  - the headphone socket on the external device.
- 2 Slide the source selector to AUDIO IN. → The LED indicator turns white.
- **3** Play audio on the external device (refer to its user manual).

# 6 Product information

#### - Note

• Product information is subject to change without prior notice.

# General information

5 V, 0.5 A		
micro USB socket)		
3.7 V, 365 mAh		
Battery		
Dimensions - Main Unit		
61 x 76 x 61 mm		
0.1 kg		

# Amplifier

Rated Output Power	1.5W RMS
Frequency Response	100 -16000 Hz, ±3dB
Signal to Noise Ratio	> 70 dBA
Audio-in Input	300 mV RMS

# Speaker

Speaker Impedance	4 ohm
Speaker Driver	4cm full range
Sensitivity	>82dB/m/W±
	3dB/m/W

# Bluetooth

V2.1 + EDR
A2DP
2.4GHz ~ 2.48GHz
10 m (Free space)

# 7 Troubleshooting

#### Warning

• Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

## General

#### No power

• Recharge your speaker.

#### No sound

- Adjust volume on the connected device.
- When you listen to audio through Bluetooth, make sure that no audio input cable is connected to the AUDIO IN socket.
- Make sure that your Bluetooth device is within the effective operational range.

#### No response from the speaker

Recharge the speaker.

## About Bluetooth device

The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

Fail to find [Philips BT50] on your device for pairing.

• Press and hold **PAIRING** for more than three seconds, and then try again.

#### Cannot connect with the device.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is already connected with another Bluetooth-enabled device.
  Disconnect that device and then try again.

# The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

# 8 Notice

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

# Compliance

# **€**0700

Hereby, WOOX Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.You can find the Declaration of Conformity on www.philips.com/support.

## Care of the environment

#### Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains a built-in rechargeable battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery.

Inform yourself about the local separate collection system for electrical and electronic products and rechargeable batteries. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.

#### Caution

• Removal of the built-in battery invalidates the warranty and may destroy the product.

Always bring your product to a professional to remove the built-in battery.



#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

# Trademark notice

# 🚯 Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by WOOX Innovations is under license.



2015 © WOOX Innovations Limited.All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

