

- 1 **Switch ON** your device (e.g. TV).



- 2 **Press and hold** the device selection button (e.g. **TV**) for **5 seconds** until the red Setup light remains lit.



- 3 Look up the 4-digit code for your brand in the 'Shortlist of brands' in this Quick Start Guide'.



Enter the 4-digit code using the digit buttons.



- 4 **Press and hold** the **POWER** button. Release it **immediately** as soon as the device switches off.

- This step normally takes between 5 and 60 seconds.



- 5 **Switch ON** the device. Try out the buttons you need for operating it.



If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works.

- 6 Press the device selection button **twice** to finish setup.



Press the appropriate device selection button (**TV**, **CBL**, **DVD** or **VCR**) to select the device you wish to operate.



## Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The red Setup light turns off.
- Restart from the beginning.


## Shortlist of brands

Brand .....	4-digit code
BUSH .....	0445
DAEWOO .....	0692
FUNAI .....	1056
ILO .....	1341
INSIGNIA .....	1368
JVC .....	1464
LG .....	1628
NEC .....	1950
OLEVIA .....	2067
PANASONIC .....	2153
PHILIPS MAGNAVOX .....	3715
PHILIPS .....	2195
PIONEER .....	2212
RCA .....	2351
SAMSUNG .....	2448
SEARS .....	2514
SHARP .....	2550
SONY .....	2679
TOSHIBA .....	3021
VIZIO .....	3211
ZENITH .....	3356

- If your brand is missing in this shortlist, look at the complete BRAND LIST at the end of the user manual.



- Use '9999' as 4-digit code in case you cannot find your brand in the BRAND LIST in the user manual. Note that '9999' may result in a long setup (up to 15 minutes).

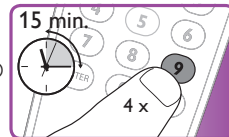

© 2011 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract. It is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number:

May 2011

www.philips.com

3139 235 5382 1 / SRP2104/27

RTP1811