



**1 User Manual**  
**2 Product Features**  
**3 Safety Instructions**  
**4 Symbols**  
**5 General Information**  
**6 Technical Data**  
**7 Troubleshooting**  
**8 Care and Cleaning**  
**9 Disposal**  
**10 Declaration of Conformity**  
**11 Philips Care**  
**12 Philips Support**

**PHILIPS**

Specifications are subject to change without notice  
All rights reserved.  
3140 EDS\_31107

**English**

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product online at [www.philips.com/welcome](http://www.philips.com/welcome).

**1 Important**

Please read the original booklet before you use the appliance. If you have any questions, please contact Philips or your local service center.

**2 Warning**

Do not use this appliance near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switch-off.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Always unplug the appliance after use.

If the mains cord is damaged, you must replace it by a repair center or service center authorized by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capability or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not clean or operate the appliance. Cleaning and user maintenance shall not be made by children without supervision.

**WARNING:** Do not use this appliance near children under 8 years old.

Unplug the appliance before use.

Only hold the main cord when you plug in or unplug the appliance.

Keep the main cord away from flammable objects and material when it is switched on.

Never cover the appliance with a cloth, a towel or clothing when it is in use.

Only use the appliance on dry hair. Do not operate the appliance with wet hands.

Keep the heating plates with the stand-on heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.

Always place the main cord from coming into contact with the hot parts of the appliance.

Keep the appliance away from flammable objects and material when it is switched on.

Never leave the appliance with a stand-on heat-resistant, stable flat surface.

Never leave the power cord after using Always unplug the appliance by holding the plug.

**Electromagnetic fields (EMF)**

The Philips hair dryer complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

**Environment**

The environmental impact that the product will have is not dependent on the energy consumption of the product. This device's country of origin is the source of the collection of electrical and electronic equipment. Please follow the local regulations concerning the disposal of the product when you no longer need it.

**2 Straighten your hair****Preparation for hair**

• Wash hair and condition.

• Dry hair completely and straight.

• Use a hairbrush.

• Remove cords.

• Use a hairdryer.

