

Mains cord



CRP766

To power the charger.

Find matching products on the specifications tab

The mains cord is designed to connect the HomeRun charger to your wall socket. When you need to replace your HomeRun's mains cord, this is the replacement that will fit your HomeRun's charger properly.

Specifications

Please note that this is a pre-sales leaflet. The contents of this leaflet reflect the best of our knowledge per date and country mentioned above. The contents of this leaflet are subject to change without notice. Philips does not accept any liability as to the contents of this leaflet.

Replaceable part

Fits product type: FC9910/01/A
FC9910/01/B

Suitable for

HomeRun FC9910/01/A
FC9910/01/B

PHILIPS