



## The main brush cleaning your floor.

Find matching products on the specifications tab

The roller brush is the main cleaning component of your HomeRun. When the bristles become worn out you can easily replace your brush with a new one.

Roller Brush CRP760/01

## Specifications

Replaceable part

Fits product type:: FC9910/01/A,

FC9910/01/B

Suitable for

HomeRun: FC9910/01/A, FC9910/01/B

© 2019 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2019-02-03 Version: 2.1.1

EAN: 08 71010 35974 76

www.philips.com

