Philips Brush retainer



CRP768

## Keeps the roller brush in place.

Find matching products on the specifications tab

The roller brush retainer keeps the roller brush in place in your HomeRun, without this bracket the roller brush will not stay fixed in the HomeRun. When this part gets damaged or broken, you can easily replace it.



Brush retainer

## **Specifications**

Replaceable part
• Fits product type:: FC9910/01/A, FC9910/01/B

## **Suitable for**

• HomeRun: FC9910/01/A, FC9910/01/B



Issue date 2023-04-13

© 2023 Koninklijke Philips N.V. All Rights reserved.

Version: 5.5.1

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

EAN: 87 10103 59755 1

www.philips.com