



Keeps the rollerbrush in place.

Find matching products on the specifications tab

The rollerbrush retainer keeps the rollerbrush in place in your HomeRun, without this bracket the rollerbrush will not stay fixed in the HomeRun. When this part gets damaged or broken, you can easily replace it.

Brush retainer CRP768/01

Specifications

Replaceable part

Fits product type :: FC9910/01/A,

FC9910/01/B

Suitable for

HomeRun: FC9910/01/A, FC9910/01/B

© 2019 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2019-02-12 Version: 1.0.1

