

# Quick start guide



**PHILIPS**



Be responsible  
Respect copyrights

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V.  
or their respective owners  
2007 © Koninklijke Philips Electronics N.V. All rights reserved.



SRS WOW is a Trademark of SRS Labs, Inc.  
WOW technology is incorporated  
under license from SRS Labs, Inc.

wk7265


Printed in China

## What's in the box



CD-ROM containing Windows Media Player 11, Philips Device Manager, MediaConverter for Philips, User Manual, Tutorials and Frequently Asked Questions

### Overview of control and selection

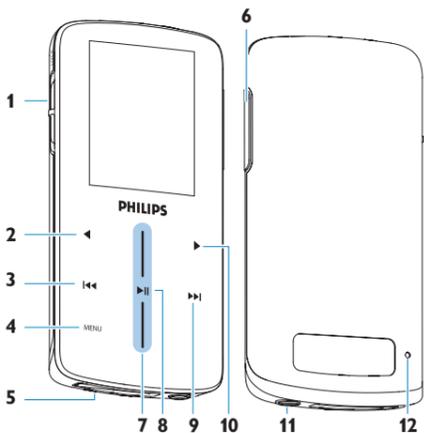

1 On / off / lock slider (key lock)	7 Vertical touch strip
2 Left / back key	8 Play / pause key
3 Rewind / previous key	9 Forward / next key
4 Menu key	10 Right / select key
5 Cable / dock / adaptor connector	11 Headphone plug
6 Volume up / down bar	12 Reset

Action	To
ON/OFF LOCK	Power On/Off (slide down and hold for about 1 second) Lock all touch control keys (slide up)
	Play/Pause songs/video
⏮	Move back to previous song/video Fast rewind
⏭	Jump to next song/video Fast forward
+ VOLUME -	Control volume
⏪	Return to previous menu/option
⏩	Select option Go to next option
Vertical touch strip	Scroll through lists
MENU	Access list of menu options

## 1 Install

**Important** This is critical to ensure the proper working of your player when connected to the PC.

### For Windows XP users

In order to run this software, you need to have **Windows XP Service Pack 2 (SP2)** installed on your PC. If you do not, you will be prompted to do so. When installation is completed, connect device to PC.

### For Vista N users in Europe

Install **Media Restore Pack** on your PC before using your device. This can be done by downloading and installing **Windows Media Player 11** for XP from the Microsoft website at the following link: <http://www.microsoft.com/windows/windowsmedia/download/AllDownloads.aspx> Select **Windows Media Player**, Version 11 for XP and the language of your choice."




- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the onscreen instructions to complete the installation of **Windows Media Player**, **Media Converter for Philips** and **Philips Device Manager**.
- 3 If the installation program does not start automatically, browse the CD contents via **Windows Explorer** and run the program by double clicking on the file ending with .exe.

## 2 Connect

### A Connect to PC

Your player will be charged when connected to the PC.

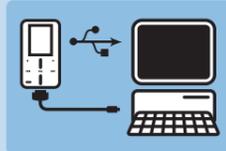

- 1 Turn on the player.
  - 2 Connect the player to PC as shown.
- > The screen of the player indicates the connection with PC.

## 3 Transfer

### A Transfer music and pictures with Windows Media Player 11

Download Windows Media Player11:  
<http://www.microsoft.com/windows/windowsmedia/player/11/default.aspx>




- 1 Start **Windows Media Player 11**.
- 2 Connect the player to your computer using the supplied USB cable.
- 3 Once the player is connected, the sync tab changes as shown ( ) and the device and its contents become visible in WMP11 (see figure above).
- 4 WMP11 will automatically start synchronizing the contents of your music library to your player.

For details on how to set synchronization options in WMP11, pls refer to the user manual.

### B Transfer video

**Important** MediaConverter for Philips cannot be used to transfer videos that come from online stores / services ( i.e. purchased, rental or subscription video that is DRM protected). You will need to use Windows Media Player 11 (or the software provided by the online service provider) for this purpose.

- 1 Connect your player to the PC using the supplied USB cable.
- 2 Start **Media Converter for Philips**.

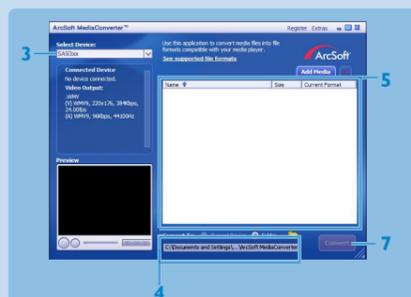

- 3 In the **Convert to:** option at the bottom of the screen, select **Current Device**, the content will be stored directly on the connected player.
- 4 Press **Add Media** to select the Video files to be transferred OR Drag and drop your video files from **Windows Explorer** into the white box shown.
- 5 Press **Convert**.

If needed, the files will first be converted to a format that the player can playback. The conversion takes time and please be patient.


> All the converted files will be transferred to the player.



6 The Progress of conversion and transfer is shown.

## 4 Enjoy


### A Main menu

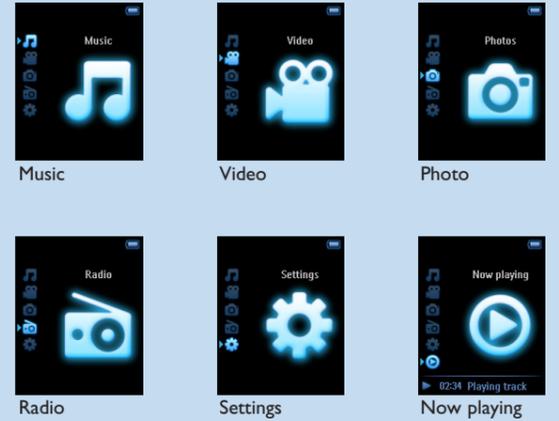

Menu	To
Music	Play your digital music tracks
Video	Watch your videos
Photo	View photos
Radio	Listen to FM radio
Settings	Customize the settings of your player
Now Playing	Go to the play screen

### B Vertical touch strip navigation

Your player has touch sensitive controls that respond to the touch of your fingers. The **Vertical touch strip** (see picture) is used to scroll through lists. It responds to the following finger movements.

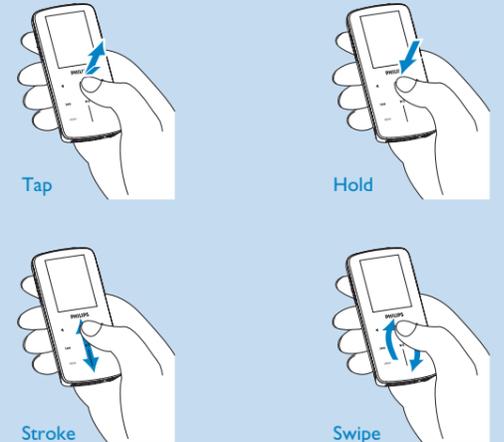

Action	Function
Tap the top or bottom of the strip	Move up or down step by step
Hold on the top or bottom of the strip	Scroll through a list at increasing speed
Stroke from top to bottom or bottom to top	Scroll through list
Swipe up or down	List will scroll quickly like a wheel (Fly wheel) and then slow down gradually
Tap in the middle	To stop list from spinning To Play/Pause music
Stroke and hold on the end of the strip	Scroll through list at constant speed and gradually increase the scroll speed. The scroll speed will decrease and stop when finger releases.
Continuous swipe	Add speed to the wheel or maintain the fast list scrolling speed if maximum scrolling speed is reached.

## Troubleshooting

### How do I reset my player?

Insert a pin or a sharp object into the reset hole located at the back of the player to reset it. You will need to power on the player after resetting it. Please refer to the user manual for more troubleshooting advice

## Need help?

### User Manual

See the user manual that came with your player.

### Online

Go to [www.philips.com/welcome](http://www.philips.com/welcome)