

Philips GoGear audio player **EN**

Quick start guide

SA2420BT SA2440BT
SA2421BT SA2441BT
SA2422BT SA2442BT
SA2425BT SA2445BT
SA2426BT SA2446BT
SA2427BT SA2447BT



PHILIPS

Charging the LUXE



- 1 Open Windows Explorer (the LUXE appears as a mass storage device).
- 2 Drag and drop your MP3 files into the LUXE.

Connect to a mobile phone with Bluetooth®



- 1 With the LUXE in 'off' mode, press **3** for 4 sec. (The blue LED blinks fast)
- 2 Enable Bluetooth® on your mobile (Pass code = **0000**).

The Bluetooth® LED of the red version LUXE is yellow instead of red.

On/off



Toggle LUXE on/off

- 1 Press **3** for 2 sec. to turn LUXE on/off. (The power LED flashes once.)

Toggle Bluetooth® connection on/off

- 1 Press **3** once to turn Bluetooth® connection on/off.

Select radio (FM), music (🎵), or music shuffle (🔄)



Connect earphones



When you have an incoming call



Accept call	Press
Reject call	Press and hold
End call	Press again
Transfer call back to phone	Press
Mute / unmute microphone	Press x 2

While you listen



- Press / to skip to previous / next title () / frequency ()
Press and hold / to skip faster.
- Press / 2x to skip to previous / next folder (if available).



- Press +/- to increase / decrease the volume.
Press +/- together to activate / deactivate FullSound™ ()

Press to toggle play/pause () and mute/unmute ()

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

Need help?

User Manual

See the user manual stored on this player.

Online

Go to www.philips.com/welcome



Be responsible
Respect copyrights



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2008 Koninklijke Philips Electronics N.V.
All rights reserved. www.philips.com

Disposal of your old product and the integrated battery

All our products are designed and manufactured with high quality materials and components, which can be recycled and reused.



The crossed-out wheel bin symbol on a product means that the product is subject to the European Directive 2002/96/EC. This symbol can also be used in combination with a chemical symbol, which means that the product complies with the environmental directive for that chemical.

Never dispose of your product with other household waste. Inform yourself or ask your dealer about local environmentally safe recycling regulations. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health.

Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

To safeguard the functionality and safety of your product, always bring your product to an official collection point or service centre where a professional can remove / replace the battery as shown in user manual.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



Printed in China
wk8413