

# Quick Start Guide



 
Step A **Connect**

Step B **Setup**

Step C **Enjoy**

## What's in the Box?

You should find these items upon opening the box.

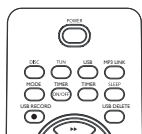

Remote Control



1 x MP3 link cable



Quick Start Guide



User Manual

**PHILIPS**

## Step A **Connect**

1

 
Connect the speaker cables.

2

Connect the AC power cord to the wall socket.

*Tip*

See the User Manual for how to connect other equipment to this system.

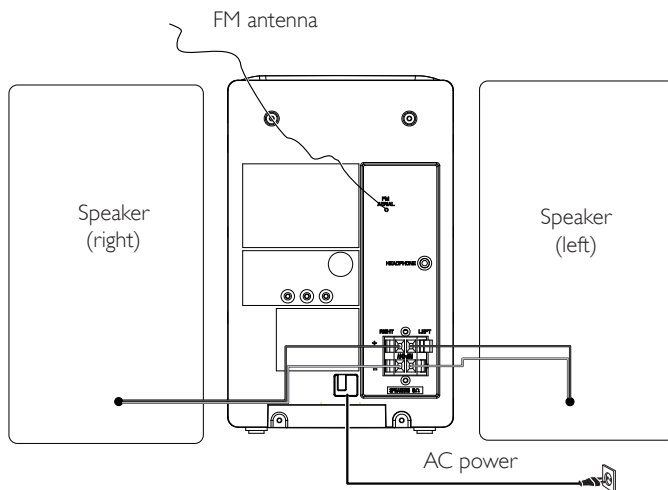

## Step B **Setup**

### Set clock

1

Press and hold **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to activate the clock setting mode.

2

Press **PROG** repeatedly to select 12 hour or 24 hour format.

3

Press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to confirm.  
→ The hour digits are displayed and begin to blink.

4

Press **◀▶** / **▶▶** (or **◀◀** / **▶▶** on the remote control) to set the hour.

5

 
Press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to confirm.  
→ The minute digits are displayed and begin to blink.

6

Press **◀▶** / **▶▶** (or **◀◀** / **▶▶** on the remote control) to set the minute.

7


Press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to confirm.

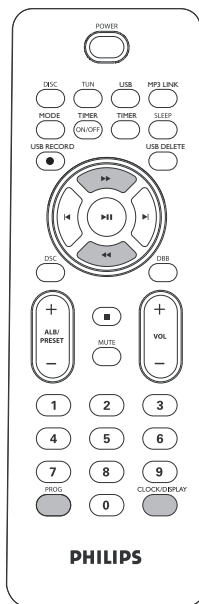

## Step C *Enjoy*

### *Play disc*

 - 1 Press **SOURCE** (or **DISC** on the remote control) to select the disc source.
- 2 Lift the lid of the CD compartment.
- 3 Insert a disc with the printed side facing up, then close the disc tray.
- 4 Press **▶||** to start play.
- 5 To stop play, press **■**.

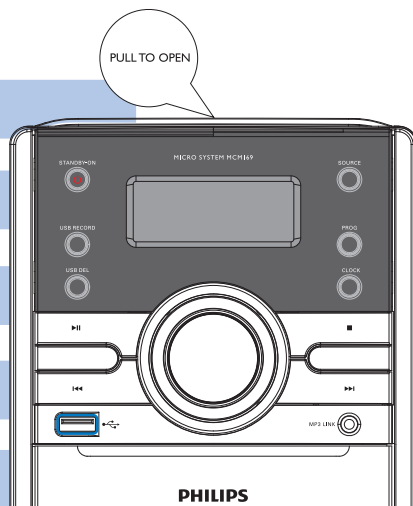

### *Play from USB*

 
With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the main unit.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

# Step C Enjoy

## Listen to radio

- 1 Press **SOURCE** (or **TUN** on the remote control) repeatedly to select FM or MW.
- 2 Press **PROG** for more than two seconds to program all available stations in order of waveband.
- 3 In tuner mode, press **PRESET/ALBUM +/-** (or **ABL/PRESET +/-** on the remote control) to select a preset number.

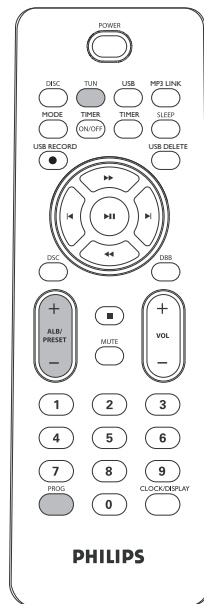

### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



© Royal Philips Electronics N.V. 2008  
All rights reserved.

<http://www.philips.com>

