

Refrigerator Compartment

- A. Control panel
- B. Fan and antibacterial and anti-odour filter (depending on the model)
- C. LED lights (depending on the model)
- D. Shelves
- E. Level covering fruit and vegetable drawer
- F. Fruit and vegetable drawer
- G. Rating plate (placed on the side of the fruit and vegetable drawer)
- O. Door shelves
- P. Bottle holder (if provided)
- Q. Bottle shelf

- Least cold zone
- Medium zone
- Coldest zone
- Fruit & vegetable zone

Freezer Compartment

- H. Stop Frost (if available)
- I. Upper drawer (area for storing frozen and deep frozen food)
- L. Middle drawer (area for storing frozen and deep frozen food)
- M. Lower drawer (freezing area)
- N. Ice cube trays (if provided)

Note: All of the drawers, door shelves and shelves can be removed.

The ideal storage temperatures for the food are pre-set in the factory.

Read the instructions carefully before using the appliance.

Features, technical data and images may vary according to the model.

Fan

The fan is pre-set to ON.

You can turn the fan on/off by pressing the buttons and at the same time for 3 seconds. The lit 6th Sense Fresh Control symbol indicates that the fan is on and therefore the 6th Sense Fresh Control function is on. If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised.

Note: the fan restarts automatically after a power cut or after turning off the appliance.

Fast Cool

Press the button for 3 seconds to quickly cool the refrigerator compartment or 6 hours before putting large quantities of food to freeze in the freezer compartment. When the function is turned on the icon lights up.

The function turns off automatically after 30 hours, or manually by pressing the button again for 3 seconds.

Note: do not put foods that are to be frozen in contact with others that are already frozen.

Stand-by

Press for 3 seconds to turn the appliance off. In Stand-by mode, none of the icons light up on the display and the light in the refrigerator compartment does not turn on. To turn the product on again, a brief press on the button is sufficient.

Note: this procedure does not disconnect the appliance from the electricity supply.

6th Sense Fresh Control Function

Enables the appliance to rapidly reach optimal storage conditions in terms of internal temperature and humidity. In order for it to function correctly, the fan must also be turned on.


Refrigerator compartment temperature

It is possible to set a different temperature by using the button.

There are five possible controls.

From a less cold temperature (left)

to a colder temperature (right)

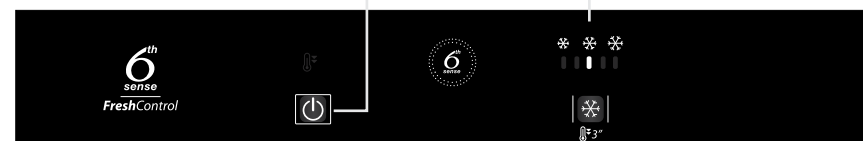

What to do if...	Possible reasons:	Solutions:
The control panel is switched off, the appliance does not work.	The appliance may be in Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on with the Stand-by button Check that: - there is not a power outage - the plug is properly inserted in the socket and any bipolar power switch is in the correct position (this enables the power supply to the appliance) - the household electrical system protection devices are efficient - the power cable is not broken.
The inside light does not work.	The light may need replacing. The appliance may be in Stand-by mode.	Models with a light bulb: disconnect the appliance from the electricity supply, check the light bulb and replace it with a new one if necessary (see section "Changing the light bulb or LED"). Models with LED lights: contact the authorised Technical Assistance Service. Turn the appliance on by using the Stand-by button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Solutions")	Check that: - the doors close properly - the appliance is not installed near a heat source - the set temperature is adequate - the circulation of air through the ventilation grilles on the base of the appliance is not obstructed.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrosting water drain (see section "Maintaining and cleaning the appliance")
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No solution is necessary.
The temperature indicators for the refrigerator compartment are flashing as shown in the figure:	Malfunction alarm The alarm indicates the malfunction of a technical component.	Call the authorized Technical Assistance Service.