

ENGLISH

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

This juicer has been designed to maximise the juice output while minimising the cleaning effort. It has been specifically developed to enable you to process a broad variety of ingredients and a wide range of recipes with confidence.

General Description (Fig. 1)

- 1 Pusher with pre-clean function
- 2 Berry funnel (HR1837/HR1833 only)
- 3 Feeding tube
- 4 Lid
- 5 Filter
- 6 Juice collector with sput
- 7 Integrated pulp container
- 8 Safety clamps
- 9 Control knob
- 10 Cord storage compartment
- 11 Driving shaft
- 12 Motor unit
- 13 Juice jug

Important
Read this important information carefully before you use the appliance and save it for future reference.

Danger
- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap.

Warning
- If the power cord is damaged, it must be replaced by Philips, its service agent or similarly qualified persons in order to avoid a hazard.

- Always disconnect the appliance from the mains if you leave it unattended or before you assemble, disassemble or clean it.

- Do not use the appliance if the sieve or the lid is damaged in any way or shows visible cracks and contact the nearest Philips service center.

- This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by children in hotels, motels, bed and breakfasts and other residential establishments.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised not to play with the appliance.

- Do not use the appliance if the plug, the mains cord or other components are damaged.

- Never reach into the feeding tube with your fingers or an object while the appliance is operating. Only use the pusher for this purpose. Do not insert other items than fruits, vegetables or the pusher into the feeding tube.

- Do not touch the small cutting blades in the base of the sieve. They are very sharp.

- Always place and use the appliance on a dry, stable and level surface.

- To ensure that the appliance stands stably, keep the surface on which the appliance stands and the bottom of the appliance clean.

- Do not eat the pulp or use for preparing dishes.

- Check if the voltage indicated on the base of the appliance corresponds to the local mains voltage before you connect the appliance.

- Never let the appliance operate unattended.

Caution
- Before you disassemble the appliance and before you clean it, set the control knob to off position and remove the plug from the wall socket. Then lower the locking arm to unlocked position.

- Only lower the locking arm to unlocked position after you have switched off the appliance and the sieve has stopped rotating.

- Always unplug the appliance after use.

- Do not hold the appliance by the locking arm when you carry it.

- Always unwind the power cord completely from the cord storage area before use.

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

- Make sure all parts are correctly assembled before you switch on the appliance.

- Only use the appliance when the locking arm is in locked position.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Fruit and vegetable facts

Depending on the ingredients used, you can prepare up to 1.5 litres of juice without emptying the integrated pulp container. When you juice hard ingredients such as carrots or beetroots, the maximum amount of juice that can be extracted depends on the quality of the ingredients you use.

Note: When the integrated pulp container has reached its maximum capacity, pulp ends up in the juice collector and on the inside of the lid.

If the integrated pulp container is overfilled, the appliance slows down. When this occurs, switch off the appliance and remove the pulp from the integrated pulp container.

Drip Stop

After you have processed all ingredients and the juice flow has stopped, turn the sputum clockwise by about 120° to activate the drip stop function.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Guarantee and service

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem

The appliance does not work.

The appliance stops operating during use.

The appliance slows down during use.

The appliance makes a lot of noise, gives off an unpleasant smell, is too hot to touch, smells of smoke etc.

The appliance is damaged.

The filter touches the feeding tube or vibrates strongly during processing.

It is very common for a new appliance to give off an unpleasant smell or emit some smoke the first few times you use it. This will stop after you have used the appliance a number of times. The appliance may also give off an unpleasant smell or emit some smoke if you process too many ingredients; if you process very large quantities of fruit, the temperature of the appliance operate too long. In these cases, switch off the appliance and let it cool down for 60 minutes. If the problem persists, contact the Philips Consumer Care Centre in your country.

Contact the Philips Consumer Care Centre in your country.

Switch off the appliance and unplug it. Check if the filter is placed properly in the juice collector.

The ribs in the bottom of the filter have to fit properly onto the driving shaft. Check if the filter is damaged. Cracks, crazes, a loose grating disc or any other irregularity may cause malfunction.

Read this important information carefully before you use the appliance and save it for future reference.

Amaran

Jika kord sesalur rosak, kord mestilah digantikan oleh Philips, ejen servis atau perkhidmatan yang serupa untuk mengelakkan bahaya.

Tanggalkan perkakas daripada bekalan kuasa jika perkakas dibarkan tanpa pengawasan dan sebelum memasang, menangalaukan bahagan atau membersihkan perkakas.

Jangan gunakan perkakas jika penyangnya atau tudung rosak atau kelihatan retak. Hubungi pusat servis Philips yang berdekatan.

Drainage system

Jika sistem drainase ini tidak berfungsi dengan betul, hubungi pusat servis Philips.

Hubungi pusat servis Philips.</p