

INSTALLATION INSTRUCTIONS

SSB-007, SSM-007, SLB-007 and SLM-007 Interface Brackets

SSB-007, SSM-007, SLB-007 and SLM-007 Interface Brackets are designed for use with Chief® Series Projector Mounts. See the specific installation instructions provided with the mount for additional installation information.


Unpack carton and verify kit contents. If any listed parts are missing, immediately contact a Chief Customer Service representative.



WARNING: IMPROPER INSTALLATION CAN LEAD TO EQUIPMENT FALLING CAUSING SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT substitute hardware. Use only hardware supplied by manufacturer!

- (1) Interface Bracket
- (5) 10 - 24 Thumb Nuts**
- (4) $\frac{1}{2}$ " x .190" x 3/8" Nylon Spacers
- (3) M3 -16mm Screws

- (3) M3 Flat washer
- (1) M4 -20mm Screws
- (1) M4 Flat washer
- (1) All-Points Security Kit

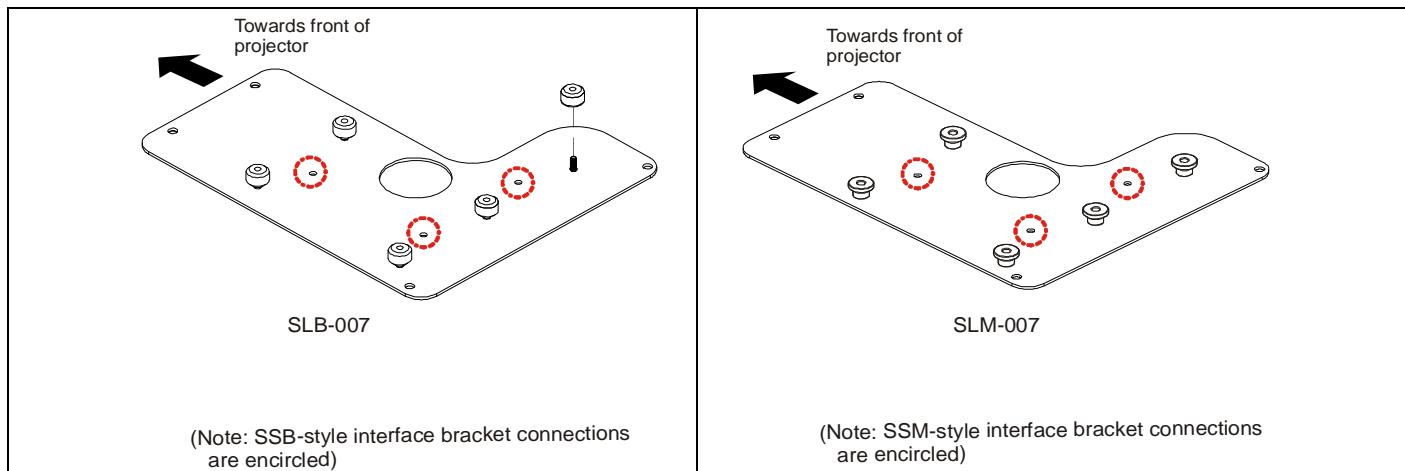

**Only used when installing SLB/SSB interface bracket.

NOTE: Specific to SSB-style and SSM-style interface bracket installation, all appropriate screws come pre-installed as reflected in the encircled locations above. DO NOT attempt to substitute and USE ONLY this pre-installed hardware for SSB-style and SSM-style interface bracket installation.

Installation Instructions



WARNING: OVER TIGHTENING OF SCREWS CAN DAMAGE PARTS AND CAN LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT over tighten screws when installing Interface bracket.

NOTE: Step 1 is only required when installing an SLB/SSB interface bracket. If an SLM/SSM bracket is being installed, proceed to step 2.

1. Screw thumb screws onto 10-24 x 5/8" Phillips pan head screws. DO NOT fully tighten thumb screws at this time.
2. Turn projector upside down.
3. Remove the rear black hard plastic foot from the projector using a small flat screw driver and pry it up from the projector housing. This foot is held on by two-face tape.
4. Remove the screw under the black plastic foot.
5. Remove the rear adjustable foot from the projector.
6. Remove the two small screws in the front of the bottom of the projector housing.
7. Place the four 3/8" nylon spacers over the four threaded inserts in the bottom of the projector over each screw hole previously removed.
8. Place the interface bracket onto the four $\frac{1}{2}$ " nylon spacers on the bottom of the projector and align the four mounting holes in the bracket with the four nylon spacers.
9. Place the M4 x 20mm screw and flat washer into the rear adjustable foot hole location. Place the remaining three M3 x 16mm screws, and flat washers into the remaining holes. Tighten all fasteners at this time, securing the bracket to the projector.

NOTE: Security screws can be substituted when mounting interface bracket to projector by using the parts and installation instructions in the All-Points Security Kit.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.