

INSTALLATION INSTRUCTIONS

SSB-557, SSM-557, SLB-557 and SLM-557 Interface Brackets

SSB-557, SSM-557, SLB-557 and SLM-557 Interface Brackets are designed for use with Chief® Series Projector Mounts. See the specific installation instructions provided with the mount for additional installation information.


Unpack carton and verify kit contents. If any listed parts are missing, immediately contact a Chief Customer Service representative.



WARNING: IMPROPER INSTALLATION CAN LEAD TO EQUIPMENT FALLING CAUSING SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT substitute hardware. Use only hardware supplied by manufacturer!

- (1) Interface Bracket
- (4) 10 - 24 Thumb Nuts**
- (1) All-Points Security Kit
- (2) 10 - 24 Nylock Nuts

- (1) U-Form Bracket
- (4) Felt Squares
- (2) M4 x 10mm
- (2) #10 Flat Washers
- (2) M4 Flat Washers

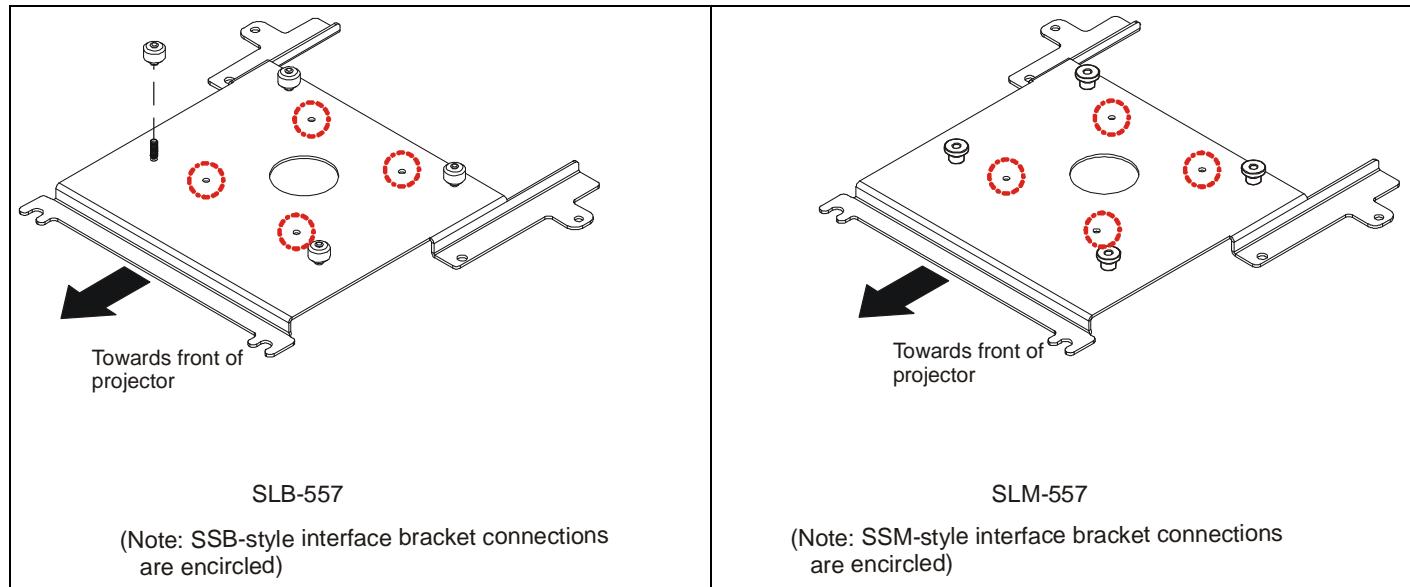

**Only used when installing SLB/SSB interface brackets.

NOTE: Specific to SSB-style and SSM-style interface bracket installation, all appropriate screws come pre-installed as reflected in the encircled locations above. DO NOT attempt to substitute and USE ONLY this pre-installed hardware for SSB-style and SSM-style interface bracket installation.

Installation Instructions



WARNING: OVER TIGHTENING OF SCREWS CAN DAMAGE PARTS AND CAN LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT over tighten screws when installing interface bracket.

NOTE: Step 1 is only required when installing an SLB/SSB interface bracket. If an SLM/SSM bracket is being installed, proceed to step 2.

1. Screw thumb screws onto 10-24 x 5/8" Phillips pan head screws. DO NOT fully tighten thumb screws at this time.
2. Turn projector upside down on a flat surface.
3. Raise the front adjustable feet and place interface bracket onto projector.
4. Ensure the front slots are around the adjustable feet and the rear holes in the bracket are aligned with the inserts in the rear of the projector.
5. Install the two M4 screws in the rear holes and tighten. Lower and fit the two front adjustable feet against the plate.
6. Attach the U-Form bracket around the projector and up through the holes in the bracket plate.
7. Using the two #10 flat washers and 10-24 Nylock nuts, secure interface bracket to projector and tighten all fasteners at this time.

NOTE: Felt squares are provided to protect projector shell, if desired. They can be attached to the projector or wrapped around the U-Form rod. Security screws can be substituted when mounting interface bracket to projector by using the parts and installation instructions in the All-Points Security Kit.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.