


PROGRAMME CHART

- A.** Programme selector
B. Temperature, Time
C. “Delay Timer” button 
D. Programme sequence indicator
E. “Spin” button (incl. Rinse hold) 
F. “Start/Pause” button 
G. “Reset/Drain” button 
H. “Temperature” button 
I. “Soil level” button 
J. Child lock button combination 
K. Detergent overdosage indication 
L. “Door locked” indication 

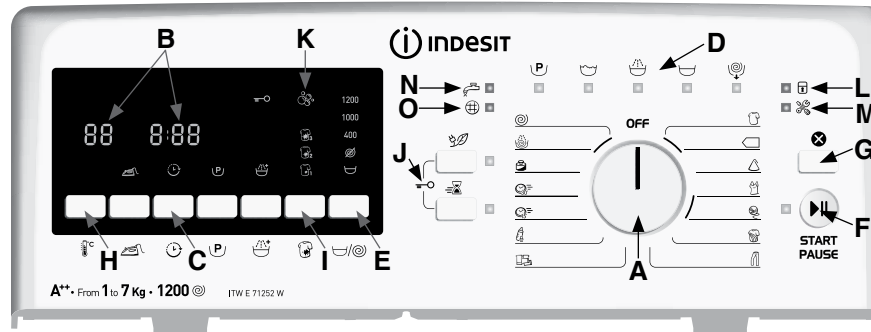

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- M.** “Service” indication 
N. “Water tap closed” indication 
O. “Clean pump” indication 

Programme		Care Labels	Max. Load kg	Type of wash / Notes - for temperature selection, respect the manufacturer's recommendations on the care label	Detergents and Additives			Special options							Max. Spin Speed rpm	
					Pre-wash 	Main Wash 	Softener 	Easy Ironing 	Delay Timer 	Pre-wash 	Extra Rinse 	Soil Level 	Rinse Hold / Spin Speed 	Energy Saver 		Time Saver
Cotton <i>cold - 95°C</i>			7.0	Normally to heavily soiled bed linen, table linen, towels and garments made of cotton and/or linen.	*	Yes	*	*	*	*	*	*	*	*	*	max.
Eco Cotton <i>40 - 60°C</i>			7.0	Normally soiled cotton laundry. At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.	–	Yes	*	–	*	–	*	*	*	–	–	max.
Synthetics <i>cold - 60°C</i>			3.0	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon).	*	Yes	*	*	*	*	*	*	*	*	*	max.
Delicates <i>cold - 40°C</i>			1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	–	*	*	–	*	*	*	–	1000 ¹⁾
Wool <i>cold - 40°C</i>			1.0	Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable	–	Yes	*	–	*	–	–	*	*	*	–	1000 ¹⁾
Mix Colored <i>cold - 60°C</i>			3.0	Lightly to normally soiled textiles made of cotton and/or synthetics.	–	Yes	*	*	*	–	*	*	*	*	–	max.
Jeans <i>cold - 60°C</i>			4.0	Normally soiled cotton jeanswear and garments made of jeanslike material such as trousers and jackets.	*	Yes	*	–	*	*	*	*	*	*	*	1000 ¹⁾
Home Mix <i>cold - 95°C</i>			3.5	White or coloured bed linen made of cotton and synthetic fibers, or blends of both. Reduces microbes and gently cleans, also delicate bed linen. A thorough rinse phase helps to prevent detergent and pollen residues. Prefer powder detergent for this programme.	*	Yes	*	*	*	*	*	*	*	*	–	max.
New Born <i>cold - 60°C</i>			4.0	Normally soiled baby clothes made of cotton and/or linen. The suds are rinsed out even more thoroughly, which helps to protect sensitive baby skin.	*	Yes	*	–	*	*	*	*	*	*	*	1000 ¹⁾
15' Refresh <i>cold - 30°C</i>			3.0	Briefly worn clothing made of cotton, artificial fibers and blends with cotton. Refresh programme. Use lowest recommended detergent amount.	–	Yes	*	–	*	–	–	–	*	*	–	max.
Express 30' <i>cold - 30°C</i>			3.0	Shortly worn clothing made of cotton, polyester, polyamide and blends with cotton. Brief programme to refresh your laundry	–	Yes	*	–	*	–	–	–	*	*	–	max.
Mini & Fast <i>cold - 30°C</i>			1.0	Cotton and/or synthetic laundry made of stable fabric types. Ideal programme to wash a small load of laundry in an economic way. Pre-treatment of stains recommended. Not appropriate for very delicate laundry.	–	Yes	*	–	*	–	*	–	*	*	–	max.
<i>Rinse & Spin</i>		–	7.0	Rinse and intensive spin programme. Same as the last rinse and the final spin in the “Cotton” programme.	–	–	*	–	*	–	*	–	*	–	–	max.
<i>Spin</i>		–	7.0	In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme.	–	–	–	–	*	–	–	–	–/*	–	–	max.

Yes = dosing required / * = optional

1) For improved garment care, spin speed is restricted in these programmes.

CONSUMPTION DATA

Power consumption in off-mode 0.11 W / in left-on mode 0.11 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy without "Time Saver" (kWh)	Approx. Programme Duration ☺ (hrs : min)		🐼 %
					without "Time Saver"	with "Time Saver"	
Cotton	95	7.0	58*	2.10	2:35	2:00	57
Cotton	60	7.0	52	1.33	2:30	1:45	
Cotton	40	7.0	52	0.80	2:25	1:30	
Eco Cotton ☐**	60	7.0	50	1.05	3:40	-	53
Eco Cotton ☐**	60	3.5	35	0.84	2:45	-	
Eco Cotton ☐**	40	3.5	35	0.65	2:00	-	
Synthetics	60	3.0	50*	0.90	2:05	1:14	40
Synthetics	40	3.0	40	0.50	1:50	0:59	
Delicate	40	1.5	50	0.55	0:45	-	
Delicate	30	1.5	50	0.50	0:41	-	
Wool	40	1.0	40	0.55	0:35	-	
Wool	20	1.0	40	0.10	0:30	-	
Mix Colored	40	3.0	40	0.45	1:00	-	61
Jeans	40	4.0	52	0.58	1:30	1:10	
Home Mix	60	3.5	55	1.10	2:00	-	
New Born	60	4.0	57	0.90	1:30	1:10	
15' Refresh	30	3.0	30	0.15	0:15	-	
Express 30	30	3.0	42	0.25	0:30	-	
Mini & Fast	30	1.0	25	0.22	0:45	-	

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

🐼 Approximate remaining moisture content (%). After programme end and spinning with maximum selectable spin speed, in default programme setting. To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference Programmes for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

PREPARATION OF THE WASH CYCLE

- 1. Load the washing machine, close the drum door and check that it is closed properly.
- 2. Pour in the detergent and any additives, as described overleaf and in the instruction manual.
- 3. Close the lid.
- 4. Turn the **programme selector** to the desired programme. The display shows the duration of the selected programme (in hours and minutes), and the indicator for the **"Start/Pause"** button flashes. The temperature and spin speed can be changed by pressing the **"Temperature"** and **"Rinse Hold/ Spin Speed"** buttons. After the end of a programme, or when a programme is selected but not yet started, the washing machine will therefore switch off automatically after about a quarter of an hour. To switch the washing machine on again, turn the programme selector to "Off" and afterwards to the desired programme again

SELECT ANY DESIRED OPTION

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Easy Ironing" button

- Reduces creasing by an increased water quantity and a very gentle spin.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

- "Extra Rinse" button**
- More water is added and rinse cycle is prolonged.
 - This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.
- "Soil Level" button**
- Adapts the programme duration to the soil level of your laundry. Also influences the detergent quantity. ☺=lightly soiled - 🐼=normally soiled - 🐼=heavily soiled.
 - Not all soil levels are selectable for each programme.
- "Rinse Hold/ Spin Speed" button**
- Every programme has a predefined spin speed.
 - Press the button to set another spin speed.
 - If you select spin speed "0", the final spinning is cancelled and the water is drained out only. However, intermediate spin phases remain during the rinse.
 - If you select "Rinse hold", the laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing and prevent colours from changing. To activate the "Rinse hold", press the "Spin" button repeatedly until the "Rinse hold" symbol on the display lights up.
 - The wash programme stops to "Rinse hold" when the "Rinse hold" symbol on the display blinks; the light of **"Start/Pause"** button also blinks.
 - To terminate the "Rinse hold" by spinning the laundry, press **"Start/Pause"** - the laundry will be spun with the default spin speed. You can also select another spin speed with the "Spin" button before you start the spin cycle by pressing **"Start/Pause"**.
 - To terminate the "Rinse hold" by draining the water without spinning, press the "Spin" button until spin speed "0" appears on the display; then press **"Start/Pause"** to start the draining. Do not leave the laundry to soak for too long in the "Rinse hold" (especially silk).

- "Energy Saver" button**
- Saves energy used for water heating while maintaining good wash result.
 - Recomentable for lightly soiled laundry without stains.
 - Make sure that your detergent is suitable for cold wash temperatures (15 or 20 °C).
 - Mainly selectable on the lowest temperature step of the programmes.
- "Time Saver" button**
- Enables quicker washing by shortening the programme duration.
 - Recommendable for small loads or only lightly soiled laundry.

DELAY TIMER 🕒

- The "Delay Timer" button allows the user to run the machine at his convenience, for example at night when electricity is cheaper.
- Do not use liquid detergent when activating this function.
 - Select programme, spin speed and options.
 - Press the "Delay Timer" button several times to select a delay time by 1 to 23 hours.
 - Start the programme (see "Programme Start"). The indication lamp over the "Delay Timer" button lights up and goes off when the programme starts.
 - Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. The time delay indication on the display disappears when the programme starts and is replaced by the remaining time.
 - After the **"Start/Pause"** button has been pressed, the number of hours preselected can be reduced by pressing again the "Delay Timer" button.

- To cancel the "Delay Timer"**
- ..before you press the "Start/Pause" button:**
- Turn the programme selector to another position or press the **"Reset/Drain"** button.
- ..after having pressed the "Start/Pause" button:**
- Press the **"Reset/Drain"** button for at least 3 second. The start delay indicator light goes off.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The blinking light next to the **"Start/Pause"** button becomes constant. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phrase is finished, the corresponding indication goes out.

"DOOR LOCKED" INDICATION 🔒

After start of a program the lamp lights up to indicate that the lid can not be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

CHILD LOCK BUTTONS 🔒🔒

- You can lock the buttons of the control panel against improper use (e.g. by children).
- Press both of the child lock buttons simultaneously and hold them for at least 3 seconds. The key symbol on the display lights up.
 - To unlock the buttons again: proceed in the same way.

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed" - 🚰
No or not sufficient inlet water.

"Service" - 🛠️
Failure or malfunction of an electrical component.

"Clean pump" - 🌀
Waste water is not pumped out.

Spin speed on display blinks: unbalance during spinning

PROGRAMME END

- The "Door locked" indication lights off and the display shows "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.
1. Turn the programme selector to the "Off" position.
 2. Close the water tap.
 3. Open lid and drum and unload the machine.
 4. Leave the lid open for some time to allow the interior of the machine to dry.

DETERGENT OVERDOSAGE INDICATION 🧼

The symbol will light up at the end of the programme if you used too much detergent. use less detergent next time. If the symbol lights up and the display shows "Fod", too much foam interrupted the wash process; refer to the "Troubleshooting Guide" in your Instructions for use.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

- The **"Reset/Drain"** button cancels a programme before the end.
- Press the **"Reset/Drain"** button for at least 3 seconds. The water is drained out; it may last a while until you can open the lid.