E10613 Revised Edition V2 July 2015




ASUSPRO Ultra Docking Station

User Guide


Hardware features



BC

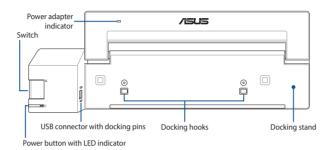


Bottom View

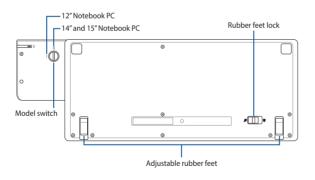

Rear View

 ۲



Left Side







Safety notices for your ASUSPRO Ultra Docking Station

WARNING!

The bottom of the ASUSPRO Ultra Docking Station can get warm to hot while in use or while charging the battery pack. When working on your ASUSPRO Ultra Docking Station, do not place it on surfaces that can block the vents.

CAUTION!

۲

- This ASUSPRO Ultra Docking Station should only be used in environments with ambient temperatures between 5°C (41°F) and 35°C (95°F).
- Refer to the rating label on the bottom of your ASUSPRO Ultra Docking Station and ensure that your power adapter complies with this rating.
- The power adapter may become warm to hot while in use. Do not cover the adapter and keep
 it away from your body while it is connected to a power source.







۲



Docking your Notebook PC

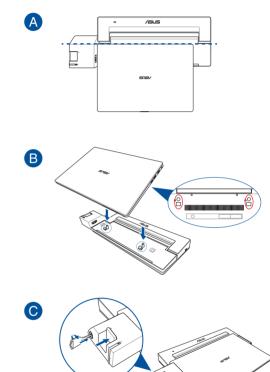

Using the docking stand

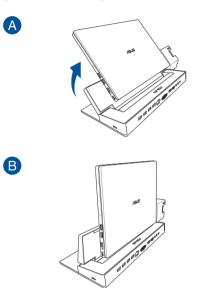

IMPORTANT! Ensure that nothing is placed beneath the docking stand when the Notebook PC is angled to a 90-degree position.


Adopting your Notebook PC

1. Use a tool or coin to rotate the switch to I (12") or II (14" and 15").




 A. Slide to unlock the rubber feet lock and adjust the rubber feet to the appropriate place for the size of your Notebook PC.

B. Slide the lock back to secure the rubber feet.

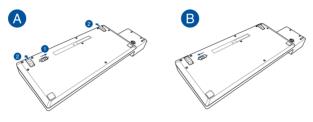

Connecting to a power outlet

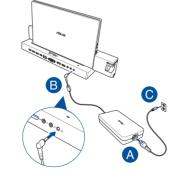

IMPORTANT!

- The socket outlet must be near to the unit and easily accessible.
- Locate the input/output rating label on your ASUSPRO Ultra Docking Station and ensure that it matches the input/ output rating information on your power adapter.
- Power adapter information:
 Input voltage: 100-240Vac
 Input frequency: 50-60Hz
 Rating output current: 3.42A (65W)
 Rating output voltage: 19V

Copyright Information

۲

۲

You acknowledge that all rights of this Manual remain with ASUS. Any and all rights, including without limitation, in the Manual or website, are and shall remain the exclusive property of ASUS and/or its licensors. Nothing in this Manual intends to transfer any such rights, or to vest any such rights to you.

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND. SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS.

Limitation of Liability

Circumstances may arise where because of a default on ASUS part or other liability, you are entitled to recover damages from ASUS. In each such instance, regardless of the basis on which you are entitled to claim damages from ASUS, ASUS is liable for no more than damages for bodily injury (including death) and damage to real property and tangible personal property; or any other actual and direct damages resulted from omission or failure of performing legal duties under this Warranty Statement, up to the listed contract price of each product.

ASUS will only be responsible for or indemnify you for loss, damages or claims based in contract, tort or infringement under this Warranty Statement.

This limit also applies to ASUS' suppliers and its reseller. It is the maximum for which ASUS, its suppliers, and your reseller are collectively responsible.


UNDER NO CIRCUMSTANCES IS ASUS LIABLE FOR ANY OF THE FOLLOWING: (1) THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES; (2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR (3) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF ASUS, ITS SUPPLIERS OR YOUR RESELLER IS INFORMED OF THEIR POSSIBILITY.

Service and Support

For multi-language manuals, please refer to ASUS web site:

http://www.asus.com/support/

۲

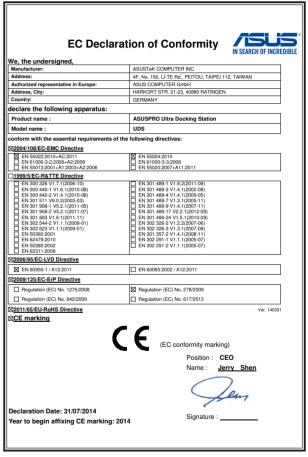

Copyright © 2015 ASUSTeK COMPUTER INC. All Rights Reserved.