



Thinking of you
Electrolux



EHH8945FOG

EN HOB

USER MANUAL

CONTENTS

1. SAFETY INFORMATION	3
2. PRODUCT DESCRIPTION	5
3. DAILY USE	6
4. HELPFUL HINTS AND TIPS	9
5. CARE AND CLEANING	11
6. TROUBLESHOOTING	12
7. INSTALLATION	14
8. TECHNICAL INFORMATION	16
9. ENVIRONMENT CONCERNS	16

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com



Register your product for better service:
www.electrolux.com/productregistration



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts.

When contacting Service, ensure that you have the following data available.
The information can be found on the rating plate. Model, PNC, Serial Number.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.

1. SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Do not let children play with the appliance.
- Keep all packaging away from children.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.
- If the appliance has a child safety device, we recommend that you activate it.

1.2 Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Keep the minimum distance from the other appliances and units.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Seal the cut surfaces with a sealant to prevent moisture to cause swelling.
- Protect the bottom of the appliance from steam and moisture.

- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware to fall from the appliance when the door or the window is opened.
- If the appliance is installed above drawers make sure that the space, between the bottom of the appliance and the upper drawer, is sufficient for air circulation.
- Make sure that the ventilation space of 5 mm, between the worktop and the front of the below unit, is free. The warranty does not cover damages caused by the lack of an adequate ventilation space.
- The bottom of the appliance can get hot. We recommend to install a non-combustible separation panel under the appliance to prevent access to the bottom.

Electrical connection



WARNING!

Risk of fire and electrical shock.

- All electrical connections must be made by a qualified electrician.
- Before every wiring make sure the main terminal of the appliance is not live.
- Make sure the appliance is installed correctly. Loose and incorrect plug and socket can make the terminal become too hot.
- Make sure that a shock protection is installed.
- Do not let the electricity bonds touch the appliance or hot cookware, when you connect the appliance to the near sockets.
- Do not let the electricity bonds tangle.
- Use a strain relief clamp on cable.
- Use the correct mains cable.
- Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service or an electrician to change a damaged mains cable.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.

- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contractors.

1.3 Use



WARNING!

Risk of injury, burns or electric shock.

- Use this appliance in a household environment.
- Do not change the specification of this appliance.
- Do not use an external timer or a separate remote-control system to operate the appliance.
- Do not let the appliance stay unattended during operation.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not put cutlery or saucepan lids on the cooking zones. They can become hot.
- Set the cooking zone to "off" after each use. Do not rely on the pan detector.
- Do not use the appliance as a work surface or as a storage surface.
- If there is a crack on the surface, disconnect power supply to prevent the electrical shock.
- Users with a pacemaker must keep a distance of minimum 30 cm from the induction cooking zones when the appliance is in operation.



WARNING!

Risk of fire or explosion.

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.

- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not try to extinguish a fire with water. Disconnect the appliance and cover the flame with a lid or a fire blanket.



WARNING!

Risk of damage to the appliance.

- Do not keep hot cookware on the control panel.
- Do not let cookware to boil dry.
- Be careful not let objects or cookware fall on the appliance. The surface can be damaged.
- Do not activate the cooking zones with empty cookware or without cookware.
- Do not put aluminium foil on the appliance.
- Cookware made of cast iron, aluminium or with a damaged bottom can cause scratches on the glass ceramic. Always lift these objects up when you have to move them on the cooking surface.

1.4 Care and Cleaning



WARNING!

Risk of damage to the appliance.

- Clean regularly the appliance to prevent the deterioration of the surface material.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

1.5 Disposal




WARNING!

Risk of injury or suffocation.


- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.

2. PRODUCT DESCRIPTION

2.1 General overview

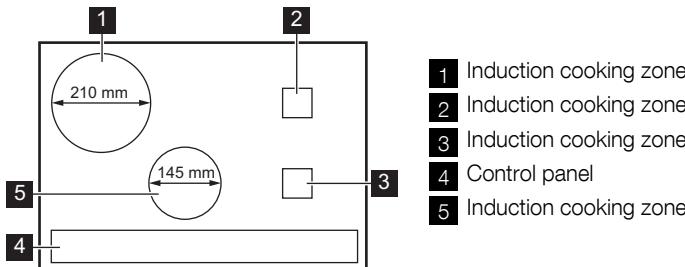

2.2 Control panel layout

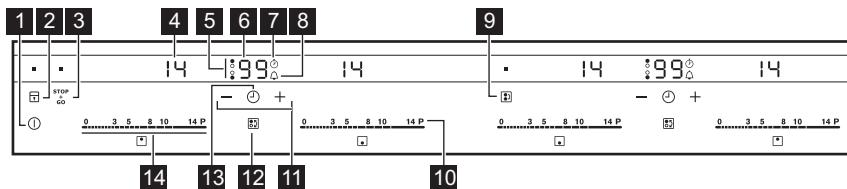

Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

sensor field	function
1	To activate and deactivate the appliance.
2	To lock/unlock the control panel.
3	To activate and deactivate the STOP+GO function.
4	A heat setting display
5	Timer indicators of cooking zones
6	Timer display
7	To show that the Count Up operates (1 to 59 minutes).
8	To show that the Count Down Timer operates (1 to 99 minutes) or show that Minute Minder operates.
9	To activate and deactivate the Bridge function.
10	To activate and deactivate the Power function.

	sensor field	function
11	+	To increase or decrease the time.
12	82	To set the cooking zone for the Timer function.
13	10	To set the Timer functions.
14	Control bar	To set the heat setting.

2.3 Heat setting displays

Display	Description
0	The cooking zone is deactivated.
1 - 14	The cooking zone operates.
u	The ^{STOP} _{GO} function operates.
A	The Automatic Heat Up function operates.
P	Power function operates.
E + digit	There is a malfunction.
3 / 2 / 1	OptiHeat Control (3 step Residual heat indicator) : continue cook / stay warm / residual heat.
L	Lock/The Child Safety functions operates.
F	Not correct cookware or too small or no cookware on the cooking zone.
-	The Automatic Switch Off function operates.

2.4 OptiHeat Control (3 step Residual heat indicator)



WARNING!

 The risk of burns from residual heat!

OptiHeat Control shows the level of the residual heat. The induction cooking zones make the heat necessary for cooking directly in the bottom of the cookware. The glass ceramic is hot from the heat of the cookware.

3. DAILY USE

3.1 Activation and deactivation

Touch  for 1 second to activate or deactivate the appliance.

3.2 Automatic Switch Off

The function deactivates the appliance automatically if:


- All cooking zones are deactivated ().
- You do not set the heat setting after you activate the appliance.

- You spill something or put something on the control panel for more than 10 seconds, (a pan, a cloth, etc.). An acoustic signal sounds some time and the appliance deactivates. Remove the object or clean the control panel.
- The appliance becomes too hot (e.g. when, a saucepan boils dry). Before you use the appliance again, wait for the cooking zone to cool down.

- You use incorrect cookware. The symbol  comes on and the cooking zone deactivates automatically after 2 minutes.
- You do not deactivate a cooking zone or change the heat setting. After some time  comes on and the appliance deactivates. See below.
- The relation between heat setting and times of the Automatic Switch Off function:
 -  ,  -  — 6 hours
 -  -  — 5 hours
 -  -  — 4 hours
 -  -  — 1.5 hours

3.3 The heat setting

Touch the control bar at the heat setting. Change to the left or the right, if it is necessary. Do not release before you have a correct heat setting. The display shows the heat setting.

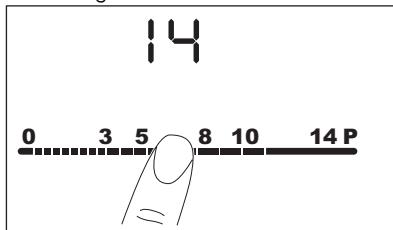

3.4 Bridge function

The Bridge function connects two cooking zones and they operate as one.

First set the heat setting for one of the cooking zone.

To activate the Bridge function touch  . To set or change the heat setting touch one of the control sensors.

To deactivate the Bridge function touch  . The cooking zones operate independently.

When you use only one zone cooking zone of the pair we recommend that you use the rear cooking zone. Also when you use large cookware we recommend that you put it near to the rear cooking zone.

3.5 Automatic Heat Up


You can get a necessary heat setting in a shorter time if you activate the Automatic

Heat Up function. This function sets the highest heat setting for some time (see the diagram), and then decreases to the necessary heat setting.

To start the Automatic Heat Up function for a cooking zone:

1. Touch  ( comes on in the display).
2. Immediately touch the necessary heat setting. After 3 seconds  comes on in the display.

To stop the function change the heat setting.

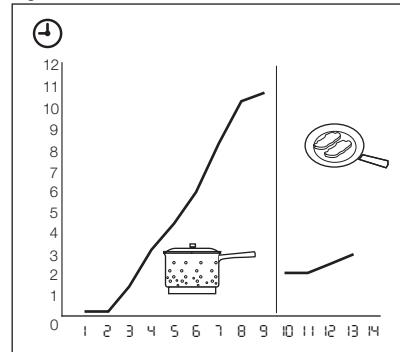


3.6 Power function

The Power function makes more power available to the induction cooking zones. The Power function can be activated for a limited period of time (see Technical information chapter). After that, the induction cooking zone automatically sets back to highest heat setting. To activate, touch  ( comes on). To deactivate, change the heat setting.

3.7 Power management

The power management divides the power between two cooking zones in a pair (see the illustration). The power function increases the power to the maximum level for one cooking zone in the pair. The power in the second cooking zone automatically decreases. The heat setting display for the reduced zone changes between two levels.

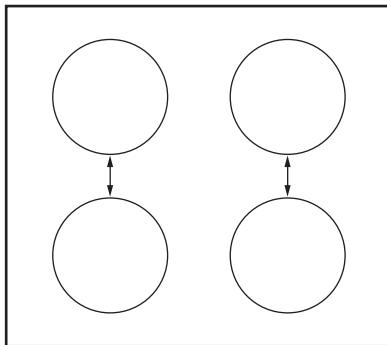

3.8 The Timer

The Count Down Timer.

Use the Count Down Timer to set how long the cooking zone operates for only this one time.

Set the Count Down Timer after the selection of the cooking zone.

i The selection of Timer function is possible for cooking zones that are active and the heat setting is set.

- **To set the cooking zone:** touch again and again until the indicator of a necessary cooking zone comes on.

When this function is activated, comes on.

- **To activate the Count Down Timer:** touch of the timer to set the time (00 - 99 minutes). When the indicator of the cooking zone starts to flash slow, the time counts down.

- **To see the remaining time:** set the cooking zone with . The indicator of the cooking zone starts to flash quickly. The display shows the remaining time.

- **To change the Count Down Timer:** set the cooking zone with touch or .

- **To deactivate the Count Down Time:** set the cooking zone with . Touch . The remaining time counts back to 00. The indicator of the cooking zone goes out.

When the timer countdown comes to an end, the sound operates and flashes. The cooking zone deactivates.

- **To deactivate the sound:** touch

The Count up timer

Use the Count up timer to monitor how long the cooking zone operates.

- **The selection of the cooking zone (if more than 1 cooking zone operates):** touch again and again until the indicator of a necessary cooking zone comes on.

When this function is activated, comes on.

- **To activate the Count up timer:**

Touch

The symbol goes out and comes on.

- **To see how long the cooking zone operates:** set the cooking zone with . The indicator of the cooking zone starts to flash quickly. The display shows the time that the zone operates. The display shows the time of the cooking zone that operates for longer period of time.

- **To deactivate the Count up timer:** set the cooking zone with and touch or to deactivate the timer. The symbol goes out and comes on.

i When the two Timer functions operate at the same time, the display shows the Count Up Timer first.

The Minute minder.

You can use the timer as a **minute minder** while the cooking zones do not operate.

Touch .

Touch or of the timer to set the time. When the time comes to an end, the sound operates and flashes.

- **To stop the sound:** touch

3.9 STOP+GO

The function sets all cooking zones that operate to the lowest heat setting ().

When operates, you cannot change the heat setting.

The  function does not stop the timer function.

- **To activate** this function touch  . The symbol  comes on.
- **To deactivate** this function touch  . The heat setting that you set before comes on.

3.10 Lock

When the cooking zones operate, you can lock the control panel, but not  . It prevents an accidental change of the heat setting.

First set the heat setting.

To start this function touch  . The symbol  comes on for 4 seconds.

The Timer stays on.

To stop this function touch  . The heat setting that you set before comes on.

When you stop the appliance, you also stop this function.

3.11 The child safety device

This function prevents an accidental operation of the appliance.

To activate the child safety device

- Activate the appliance with  . **Do not set the heat settings.**
- Touch  for 4 seconds. The symbol  comes on.
- Deactivate the appliance with  .

To deactivate the child safety device

- Activate the appliance with  . **Do not set the heat settings.** Touch  for 4 seconds. The symbol  comes on.
- Deactivate the appliance with  .

To override the child safety device for only one cooking time

- Activate the appliance with  . The symbol  comes on.
- Touch  for 4 seconds. **Set the heat setting in 10 seconds.** You can operate the appliance.
- When you deactivate the appliance with  , the child safety device operates again.

3.12 OffSound Control

(Deactivation and activation of the sounds)

Deactivation of the sounds

Deactivate the appliance.

Touch  for 3 seconds. The displays come on and go out. Touch  for 3 seconds.  comes on, the sound is on.

Touch  ,  comes on, the sound is off. When this function operates, you can hear the sounds only when:

- you touch 
- the Minute Minder comes down
- the Count Down Timer comes down
- you put something on the control panel.

Activation of the sounds

Deactivate the appliance.

Touch  for 3 seconds. The displays come on and go out. Touch  for 3 seconds.  comes on, because the sound is off. Touch  ,  comes on. The sound is on.

4. HELPFUL HINTS AND TIPS



INDUCTION COOKING ZONES

For induction cooking zones a strong electro-magnetic field creates the heat in the cookware very quickly.

4.1 Cookware for induction cooking zones



Use the induction cooking zones with correct cookware.

Cookware material

- **correct:** cast iron, steel, enamelled steel, stainless steel, the bottom made of multi-layer (with correct mark from a manufacturer).
- **not correct:** aluminium, copper, brass, glass, ceramic, porcelain.

Cookware is correct for an induction hob if ...

- ... some water boils very quickly on a zone set to the highest heat setting..
- ... a magnet pulls on to the bottom of the cookware.



The bottom of the cookware must be as thick and flat as possible.

4.2 Use of the cooking zones



IMPORTANT

Put the cookware on the square which is on the surface that you cook. Cover the square fully. The magnetic part of the bottom of the cookware must be 125 mm minimum. Induction cooking zones adapt to the dimension of the bottom of the cookware automatically. You can cook with the large cookware on two cooking zones at the same time.

4.3 The noises during operation

If you can hear

- crack noise: cookware is made of different materials (Sandwich construction).
- whistle sound: you use one or more cooking zones with high power levels and the cookware is made of different materials (Sandwich construction).
- humming: you use high power levels.
- clicking: electric switching occurs.
- hissing, buzzing: the fan operates.

The noises are normal and do not refer to appliance malfunction.

4.4 Energy saving



How to save energy

- If it is possible, always put the lids on the cookware.
- Put cookware on a cooking zone before you start it.
- Use the residual heat to keep the food warm or to melt it.



The cooking zone efficiency

The cooking zone efficiency is related to the diameter of the cookware . The cookware with a smaller diameter than the minimum receives only a part of the power generated by the cooking zone. For the minimum diameters see the Technical data chapter.

4.5 Öko Timer (Eco Timer)



To save energy, the heater of the cooking zone deactivates before the count down timer sounds. The difference in the operation time depends on the heat setting level and the length of the cooking operation.

4.6 The Examples of cooking applications

The relation between the heat setting and the cooking zone consumption of power is not linear.

When you increase the heat setting it is not proportional to the increase of the cooking zone consumption of power.

It means that the cooking zone with the medium heat setting uses less than a half of its power.



The data in the table is for guidance only.

He at set tin g	Use to:	Time	Hints	Nominal power con- sumption
1	Keep warm the food you cooked	as required	Put a lid on a cook-ware	3 %
1 - 3	Hollandaise sauce, melt: butter, chocolate, gelatine	5 - 25 min	Mix from time to time	3 - 8 %
1 - 3	Solidify: fluffy omelettes, baked eggs	10 - 40 min	Cook with a lid on	3 - 8 %
3 - 5	Simmer rice and milk-based dishes, heating up ready-cooked meals	25 - 50 min	Add the minimum twice as much liquid as rice, mix milk dishes part procedure through	8 - 13 %
5 - 7	Steam vegetables, fish, meat	20 - 45 min	Add some table-spoons of liquid	13 - 18 %
7 - 9	Steam potatoes	20 - 60 min	Use max. 1/4 l water for 750 g of potatoes	18 - 25 %
7 - 9	Cook larger quantities of food, stews and soups	60 - 150 min	Up to 3 l liquid plus ingredients	18 - 25 %
9 - 12	Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	as necessary	Turn halfway through	25 - 45 %
12 - 13	Heavy fry, hash browns, loin steaks, steaks	5 - 15 min	Turn halfway through	45 - 64 %
14	Boil water, cook pasta, sear meat (goulash, pot roast), deep-fry chips			100 %
P	Boil large quantities of water. Power management is activated.			

Information on acrylamides

Important! According to the newest scientific knowledge, if you brown food (specially the one which contains starch),

acrylamides can pose a health risk. Thus, we recommend that you cook at the lowest temperatures and do not brown food too much.

5. CARE AND CLEANING

Clean the appliance after each use.
Always use cookware with clean bottom.



Scratches or dark stains on the glass-ceramic cause no effect on how the appliance operates. To remove the dirt:

- – **Remove immediately:** melted plastic, plastic foil, and food with sugar. If not, the dirt can cause damage to the appliance.
- **Remove after the appliance is sufficiently cool:** limescale rings, water rings, fat stains, shiny metallic discolourations. Use a special cleaning agent for glass ceramic.
- The surface of the hob has horizontal grooves. Clean the appliance with a moist cloth and some detergent with a smooth movement **from left to right**.
- At the end **rub the appliance dry with a clean cloth.**

6. TROUBLESHOOTING

Problem	Possible	Remedy
You cannot activate the appliance or operate it.		Activate the appliance again and set the heat setting in less than 10 seconds.
	You touched 2 or more sensor fields at the same time.	Touch only one sensor field.
	The Stop+Go function operates.	Refer to the chapter "Operating instructions".
	There is water or fat stains on the control panel.	Clean the control panel.
An acoustic signal sounds and the appliance deactivates.	You put something on one or more sensor fields.	Remove the object from the sensor fields.
An acoustic signal sounds when the appliance is deactivated.		
The appliance deactivates.	You put something on the sensor field ① .	Remove the object from the sensor field.

Problem	Possible	Remedy
The residual heat indicator does not come on.	The cooking zone is not hot because it operated only for a short time.	If the cooking zone operated sufficiently long to be hot, speak to the service centre.
The Automatic Heat Up function does not operate.	The cooking zone is hot.	Let the cooking zone become sufficiently cool.
	The highest heat setting is set.	The highest heat setting has the same power as the Automatic Heat Up function.
The heat setting changes between two levels.	The Power management is activated.	Refer to "Power management".
The sensor fields become hot.	The cookware is too large or you put it too near to the controls.	Put large cookware on the rear cooking zones if necessary.
There is no signal when you touch the panel sensor fields.	The signals are deactivated.	Activate the signals (refer to "OffSound control").
<input type="checkbox"/> comes on.	The Automatic Switch Off operates.	Deactivate the appliance and activate it again.
<input type="checkbox"/> L comes on.	The Child Safety Device or the Lock function operates.	Refer to the chapter "Operating instructions".
<input type="checkbox"/> F comes on.	No cookware is on the cooking zone.	Put cookware on the cooking zone.
	The cookware is incorrect.	Use the correct cookware.
	The diameter of the bottom of the cookware is too small for the cooking zone.	Use cookware with correct dimensions.
	The cookware does not cover the square.	Cover the square fully.
<input type="checkbox"/> E and a number come on.	There is an error in the appliance.	Disconnect the appliance from the electrical supply for some time. Disconnect the fuse from the electrical system of the house. Connect it again. If <input type="checkbox"/> E comes on again, speak to the service centre.
<input type="checkbox"/> EE comes on.	The electrical connection is incorrect. The supply voltage is out of range.	Speak to a qualified electrician to check the installation.

Problem	Possible	Remedy
[E4] comes on.	There is an error in the appliance because a cookware boils dry. The over-heating protection for the cooking zones and the Automatic Switch Off operate.	Deactivate the appliance. Remove the hot cookware. After approximately 30 seconds, activate the cooking zone again. If the cookware was the problem, the error message goes out of the display, but the residual heat indicator can stay. Let the cookware become sufficiently cool and refer to "Cookware for the induction cooking zone" to see if your cookware is compatible with the appliance.
[E7]	The cooling fan is blocked.	Check if objects block the cooling fan. If the error message comes on again, speak to the service center.
[E8] comes on.	The electrical connection is incorrect. The appliance is connected only to one phase.	Connect the appliance as you see it on the connection illustration.

If you tried the above solutions and cannot repair the problem, speak to your dealer or the customer service. Give the data from the rating plate, three digit letter code for the glass ceramic (it is in the corner of the glass surface) and an error message that comes on.

Make sure, you operated the appliance correctly. If not the servicing by a customer service technician or dealer will not be free of charge, also during the warranty period. The instructions about the customer service and conditions of guarantee are in the guarantee booklet.

7. INSTALLATION



WARNING!

Refer to "Safety information" chapter.



Before the installation

Before the installation of the appliance, record the information below from the rating plate. The rating plate is on the bottom of the appliance casing.

- Model
- PNC
- Serial number

7.1 Built-in appliances







- Only use the built-in appliances after you assemble the appliance into correct built-in units and work surfaces that align to the standards.

7.2 Connection cable


- Use the correct mains cable of type H05BB-F Tmax 90°C (or higher) for a single phase or two phase connection.
- Replace the damaged mains cable with a special cable (type H05BB-F Tmax

90°C or higher). Speak to your local Service Centre.

7.3 Assembly

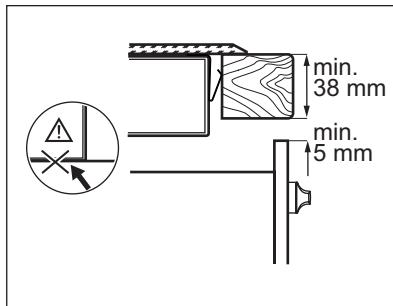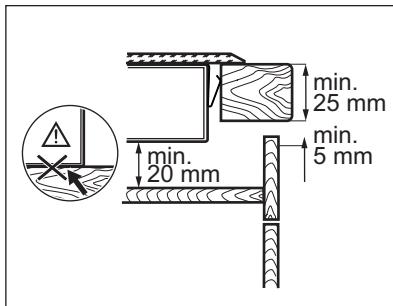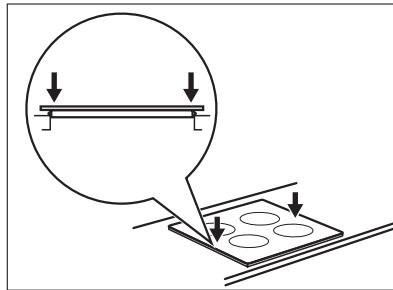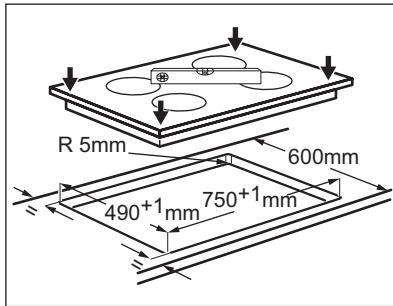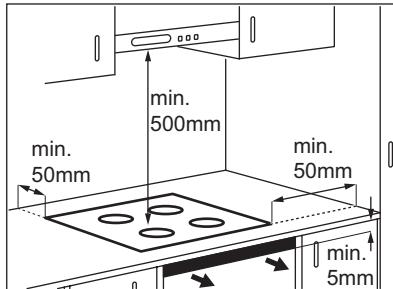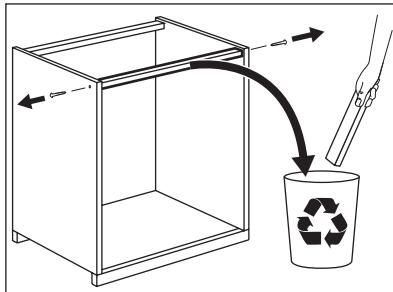

If you use a protection box (an additional accessory¹⁾), the front air-flow space of 5 mm and protective floor directly below the appliance are not necessary. You can not use the protection box if you install the appliance above an oven.

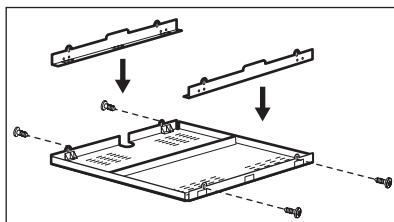

¹⁾ The protection box accessory may not be available in some countries. Please contact your local supplier.

8. TECHNICAL INFORMATION

Modell EHH8945FOG	Prod.Nr. 949 596 088 00
Typ 58 GBD CD AU	220-240 V 50-60 Hz
Induction 7.4 kW	Made in Germany
Ser.Nr.	7.4 kW
ELECTROLUX	

Cooking zones power

Cooking zone	Nominal Power (Max heat setting) [W]	Power Function activated [W]	Power function maximum duration [min]	Minimum cookware diameter [mm]
Right rear	2300 W	3200 W	10	125
Right front	2300 W	3200 W	10	125
Left rear – 210 mm	2300 W	3700 W	10	180
Left front – 145 mm	1400 W	2500 W	4	125

The power of the cooking zones can be different in some small range from the data in

the table. It changes with the material and dimensions of the cookware.

9. ENVIRONMENT CONCERNS

Recycle the materials with the symbol  . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical

and electronic appliances. Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.electrolux.com/shop



892951780-B-092012

CE