

CONTENTS

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS.....	4
3. INSTALLATION.....	7
4. PRODUCT DESCRIPTION.....	11
5. BEFORE FIRST USE.....	11
6. DAILY USE.....	12
7. CLOCK FUNCTIONS.....	13
8. USING THE ACCESSORIES.....	13
9. ADDITIONAL FUNCTIONS.....	14
10. HINTS AND TIPS.....	14
11. CARE AND CLEANING.....	18
12. TROUBLESHOOTING.....	20
13. TECHNICAL DATA.....	22
14. ENERGY EFFICIENCY.....	22

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com/webselfservice



Register your product for better service:
www.registerelectrolux.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information

 General information and tips

 Environmental information

Subject to change without notice.

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts may become hot during use.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- Only a qualified person must install this appliance and replace the cable.

- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Always use oven gloves to remove or put in accessories or ovenware.
- Before carrying out any maintenance, disconnect the appliance from the power supply.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- Do not use the appliance before installing it in the built-in structure.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.

2. SAFETY INSTRUCTIONS

This appliance is suitable for the following markets: IT

2.1 Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not pull the appliance by the handle.
- Install the appliance in a safe and suitable place that meets installation requirements.
- Keep the minimum distance from other appliances and units.
- Before mounting the appliance, check if the oven door opens without restraint.
- Do not operate the appliance without the cavity bottom cover. It is a functional safety component.
- The appliance is equipped with an electric cooling system. It must be operated with the electric power supply.

Cabinet minimum height (Cabinet under the worktop minimum height)	590 (600) mm
---	--------------

Cabinet width	560 mm
Cabinet depth	550 (550) mm
Height of the front of the appliance	594 mm
Height of the back of the appliance	576 mm
Width of the front of the appliance	595 mm
Width of the back of the appliance	559 mm
Depth of the appliance	569 mm
Built in depth of the appliance	548 mm
Depth with open door	1022 mm
Ventilation opening minimum size. Opening placed on the bottom rear side	560x110 mm
Ventilation opening minimum size. Opening placed on the upper rear side	560x50 mm
Mains supply cable length. Cable is placed in the right corner of the back side	1500 mm
Mounting screws	4x25 mm

2.2 Electrical connection



WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.

- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Do not let mains cables touch or come near the appliance door or the niche below the appliance, especially when it operates or the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- This appliance is supplied only with a main cable.

Cable types applicable for installation or replacement for Europe:

H05 V2V2-F (T90), H05 BB-F

For the section of the cable refer to the total power on the rating plate. You can also refer to the table:

Total power (W)	Section of the cable (mm ²)
maximum 1380	3 x 0.75
maximum 2300	3 x 1
maximum 3680	3 x 1.5

The earth cord (green / yellow cable) must be 2 cm longer than phase and neutral cables (blue and brown cables).

2.3 Gas connection

- All gas connections must be made by a qualified person.
- Before installation, make sure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible.
- Make sure that there is air circulation around the appliance.
- The information about the gas supply is on the rating plate.
- This appliance is not connected to a device, which evacuates the products of combustion. Make sure to connect the appliance according to current installation regulations. Follow the requirements for adequate ventilation.

2.4 Use



WARNING!
Risk of injury, burns and electric shock or explosion.

- This appliance is for household use only.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface or as a storage surface.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.

- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.



WARNING!
Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
 - do not put aluminium foil directly on the bottom of cavity of the appliance.
 - do not put water directly into the hot appliance.
 - do not keep moist dishes and food in the appliance after you finish the cooking.
 - be careful when you remove or install the accessories.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.
- This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.
- Always cook with the oven door closed.
- If the appliance is installed behind a furniture panel (e.g. a door) make sure the door is never closed when the appliance is in operation. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the appliance, the housing unit or the floor. Do not close the furniture panel until the appliance has cooled down completely after use.

2.5 Care and cleaning



WARNING!
Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

- Make sure the appliance is cold. There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Authorised Service Centre.
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use any abrasive products, abrasive cleaning pads, solvents or metal objects.
- If you use an oven spray, follow the safety instruction on it's packaging.
- Do not clean the catalytic enamel (if applicable) with any kind of detergent.

2.6 Internal lighting



WARNING!
Risk of electric shock.

- The type of light bulb or halogen lamp used for this appliance is for

household appliances only. Do not use it for house lighting.

- Before replacing the lamp, disconnect the appliance from the power supply.
- Only use lamps with the same specifications.

2.7 Service

- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.

2.8 Disposal



WARNING!
Risk of injury or suffocation.

- Contact your municipal authority for information on how to discard the appliance correctly.
- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Flat the external gas pipes.

3. INSTALLATION




WARNING!
Refer to Safety chapters.

3.1 Gas connection

The gas supply ramp is on the back of the oven.

Do not use rubber flexible pipes.

1. Before the gas connection, disconnect the oven from the mains.
2. Close the primary valve of the gas supply.
3. Do not fully put the oven into the built-in cabinet, leave approximately 30 cm gap.
4. Connect gas supply.

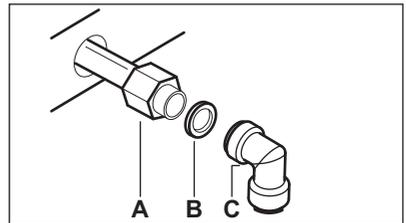

- A. Gas supply ramp, end of shaft with ramp
- B. Washer
- C. Elbow
5. Put the supplied gasket between the pipe and the gas supply ramp. Turn the pipe to the 1/2" gas supply ramp.
6. Use a 22 mm spanner to tighten the nuts. Keep the gas supply ramp in the correct position. Gently handle the gas supply circuit.



WARNING!
Do not use flame to check for leaks.

7. Fully move the oven into the built-in cabinet.



WARNING!

Do not squeeze the gas supply ramp and the pipe when you move the oven into the built-in cabinet.

8. Seal the connection correctly. Use a leak detection to control it.

3.2 Adjustment to different types of gas

Only a qualified technician is authorized to handle adjustment of different types of gas.

The oven is set for different types of gas, you can switch between liquid gas and natural gas with the correct injectors.

The gas rate is adjusted to suit.




WARNING!


Before you replace the injectors, make sure that the gas knobs are in the off position. Disconnect the oven from the mains. Wait until the oven is cold. There is a risk of injury.

3.3 Oven injector replacement


1. Remove the bottom plate of the oven cavity (A) to get access to the oven burner (B).

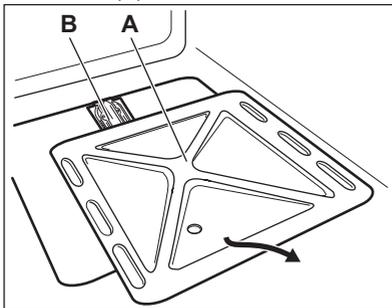

2. Release the screw (C), which keeps the burner in position.

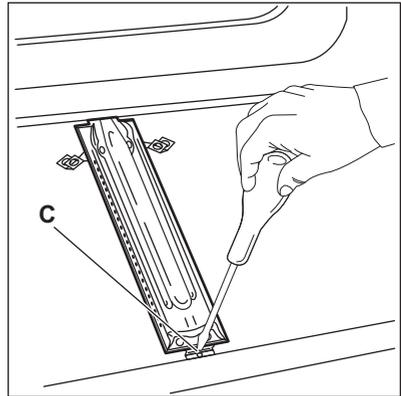

3. Carefully move the burner off the injector support (D).

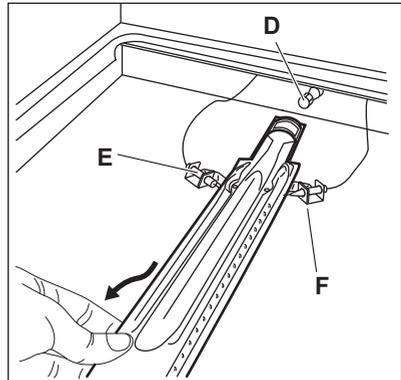

4. Slowly move it to the left side. Do not apply force to the wire of the spark plug connector (F) and to the thermocouple conductor (E).
5. Release the burner injector (D) with a 7 mm socket spanner and replace it with a different one, which is necessary for the type of gas you use.
Refer to "Technical data" chapter.
6. Assemble the burner in a reverse sequence.

Replace the gas type sticker near the gas supply ramp with the one related to the new gas type.


The gas oven burner does not need any primary gas regulation.

i Make sure that the gas supply pressure of the appliance is in line with the recommended values.

i If the supply gas pressure is changeable or different than the necessary pressure, you must fit an applicable pressure adjuster on the gas supply pipe.

3.4 Minimum level adjustment of the oven burner

1. Disconnect the oven from the mains.
2. Turn the knob for the gas control to the minimum position and remove it.
3. Adjust the adjustment screw (A) with a thin-bladed screwdriver.

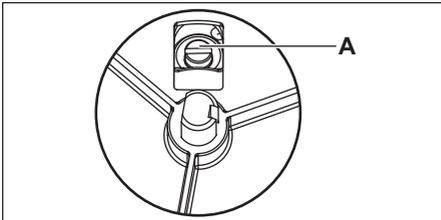

Change of the type of gas	Adjustment of the adjustment screw
From natural gas to liquid gas	Fully tighten the adjustment screw in.

From liquid gas to natural gas	Release the adjustment screw approximately 1/3 of a turn.
--------------------------------	---

4. Attach the knob for the gas control.
5. Connect the oven to the mains.



WARNING!

Only put the mains plug into the mains socket when all parts are back into their initial position. There is a risk of injury.

6. Light the gas oven burner. Refer to "Daily use" chapter.
7. Set the knob for the gas control to the maximum position and let the oven heat for at least 10 minutes.
8. Turn the knob for the gas control from the maximum to the minimum position.



Control the flame. If the flame goes out, do the procedure again. There must be a small regular flame on the oven burner crown.

The manufacturer objects liability if you do not obey to this safety measures.

3.5 Building In

Only set up the appliance in a kitchen or in a kitchen-dining room. Do not set up the appliance in a bathroom or a bedroom.

You can install the appliance "built-in" or "built-under". The dimensions of the built-in cabinet must agree with the related illustrations.

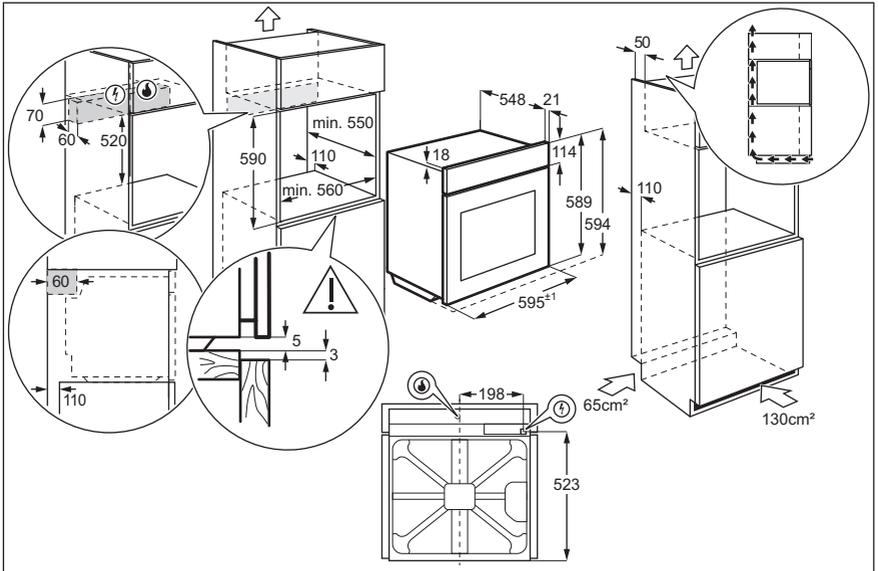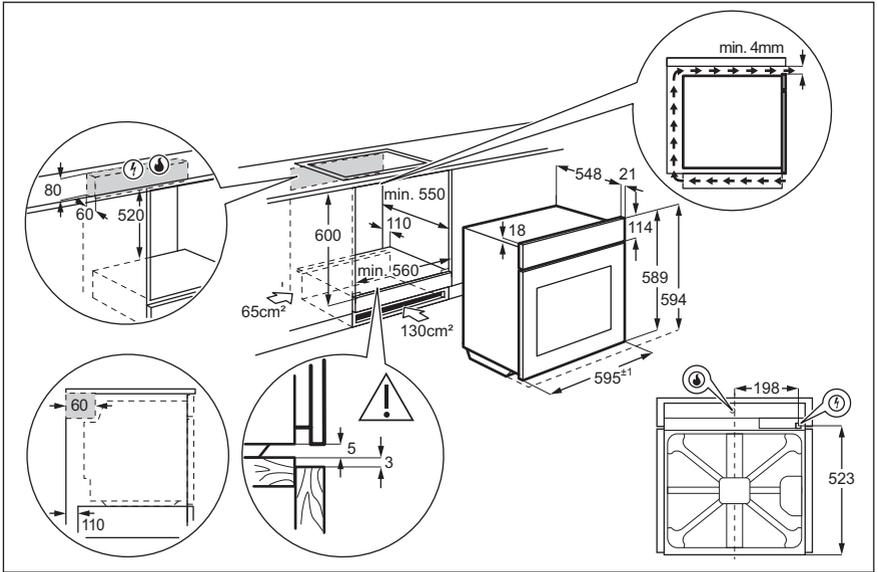

There must be a clearance of minimum 4 mm between the top surface of the appliance and the inner top of the cabinet.

When you install the appliance "built-under" (below a hob), install the hob before the oven unit.

The materials must be resistant to a temperature increase of minimum 60 °C above the ambient temperature.

There must be a continuous air supply around the oven in order to not have the oven become too hot.


For correct operation, the oven cabinet must have a minimum opening of 130 cm² in the front or on the sides (a minimum of 65 cm² for each side). The manufacturer recommends a 130 cm² opening in the front for a brick cabinet and a 65 cm² opening for each side for a wooden cabinet.

When you install a hob above the oven, make different electrical connections for the hob and for the oven.

Only make connections with correct cables for the power supplied.


- i** Make sure that after the installation there is easy access to the appliance if repairs or maintenance are necessary.

3.6 Securing the oven to the cabinet

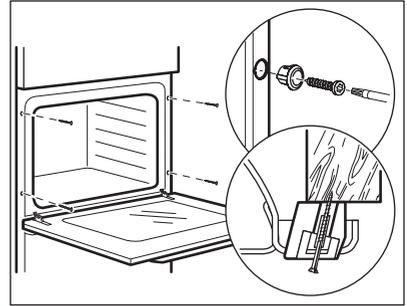

4. PRODUCT DESCRIPTION

4.1 General overview

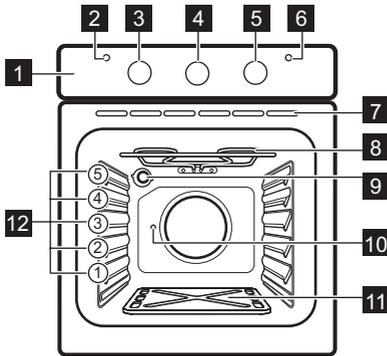

- 1 Control panel
- 2 Grill indicator
- 3 Knob for the heating functions
- 4 Knob for the Minute Minder
- 5 Knob for the gas control
- 6 Power indicator
- 7 Air vents for the cooling fan
- 8 Heating element
- 9 Lamp
- 10 Turnspit hole
- 11 Oven cavity bottom plate
- 12 Shelf positions

4.2 Accessories

- **Wire shelf**
For cookware, cake tins, roasts.
- **Aluminium baking tray**
For cakes and biscuits.
- **Grill- / Roasting pan**

- To bake and roast or as pan to collect fat.
- **Turnspit**
For roasting larger joints of meat and poultry.

5. BEFORE FIRST USE



WARNING!
Refer to Safety chapters.

5.1 Oven cavity bottom plate

When you buy the oven, at first the oven cavity bottom plate is together with the accessories. Before you use the oven for the first time, put the bottom plate with the hole on its front part in the burner area, as shown in "Product description" chapter.

5.2 Initial Cleaning

Remove all accessories from the oven.



Refer to "Care and cleaning" chapter.

Clean the oven and the accessories before first use.

Put the accessories back to their initial position.

6. DAILY USE



WARNING!
Refer to Safety chapters.

6.1 Ignition of oven gas burner



Oven safety device:
The gas oven has a thermocouple. It stops the gas flow if the flame goes out.

1. Press the knob for the gas control and turn it to .
2. Keep the knob for the gas control pushed for 15 seconds or less to let the thermocouple warm up. Do not release the knob until the flame ignites, otherwise the gas flow is interrupted.

Do not keep the knob for the gas control pushed for more than 15 seconds. If the oven burner does not ignite after 15 seconds, release the knob for the gas control, turn it into off position, open the oven door. Wait minimum 1 minute, close the oven door and try to ignite the oven burner again.

5.3 Preheating

Preheat the empty oven before first use.

1. Set the function . Set the maximum temperature.
2. Let the oven operate for 1 hour.
3. Set the function . Set the maximum temperature.
4. Let the oven operate for 15 minutes.
5. Turn off the oven and let it cool down.

Accessories can become hotter than usual. The oven can emit an odour and smoke. Make sure that the airflow in the room is sufficient.

6.2 After igniting the oven gas burner

1. Release the knob for the gas control.
 2. Turn the knob for the gas control to set the temperature.
- Control the flame through the holes in the cavity bottom plate.

6.3 Knob for the gas control

Symbol	Function
 Off position	The oven burner is off.
150 °C - 250 °C	Range of temperature adjustment.

6.4 Oven functions

Oven function	Application
 Off position	The oven is off.

Oven function	Application
 Light	To turn on the lamp with- out a cooking function.
 Grilling + Turnspit	To grill meat, including kebabs and smaller pieces of meat. To roast larger pieces of meat on the turnspit.
 Range of Temperature Adjustment	To adjust the tempera- ture for the electric grill in the cavity centre, from a minimum of about 50 °C to a maximum of about 200 °C.

i You cannot use the gas oven and the function Grill + Turnspit at the same time.

7. CLOCK FUNCTIONS

7.1 Minute Minder

Use it to set a countdown time for an oven function.

i This function has no effect on the operation of the appliance.

6.5 Using the grill

1. Turn the knob for the oven functions clockwise to  and set the maximum temperature.
2. Adjust the grill and the deep pan runner position to fit in different portions of food.

Refer to "Hints and Tips" chapter, Grilling.

6.6 Grill indicator

The grill indicator turns on when the grill cooking function is selected. It turns off when the oven reaches the correct temperature. It then cycles on and off to show the temperature changes.

Turn the knob for the timer as far as it goes, then turn it to necessary time period.

After the time period is completed, an acoustic signal sounds.


8. USING THE ACCESSORIES

! **WARNING!**
Refer to Safety chapters.

8.1 Using the turnspit


! **WARNING!**
Be careful when you use the turnspit. The forks and the spit are sharp. There is a risk of injury.

! **WARNING!**
Use oven gloves when you remove the turnspit. The turnspit and the grill are hot. There is a risk of burns.

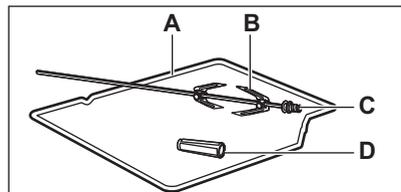


- A. Turnspit frame
B. Forks

- C. Spit
- D. Handle
- 1. Put the turnspit handle into the spit.
- 2. Put the deep pan on the lowest shelf position.
- 3. Put the spit frame on the third shelf position from the bottom.

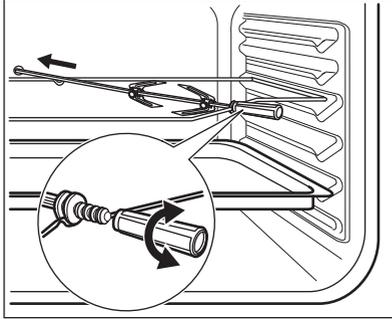

- 4. Install the first fork on the spit, then put the meat on the turnspit and install the second fork.

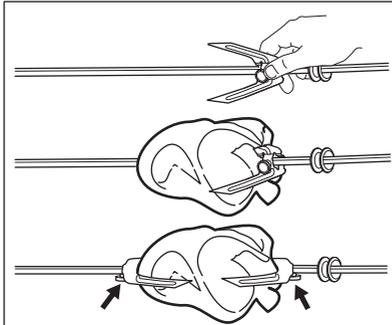

- 5. Use the screws to tighten the forks.
- 6. Put the tip of the spit into the turnspit hole.
- 7. Lay the back side of the spit on the turnspit frame.

9. ADDITIONAL FUNCTIONS

9.1 Cooling fan

When the oven operates, the cooling fan turns on automatically to keep the


surfaces of the oven cool. If you turn off the oven, the cooling fan can continue to operate until the oven cools down.

- 8. Remove the turnspit handle.
- 9. Select a function with the turnspit position. The turnspit rotates.
- 10. Set the necessary temperature. Refer to the cooking tables.

8.2 Inserting the accessories


Wire shelf:

Push the shelf between the guide bars of the shelf support and make sure that the feet point down.

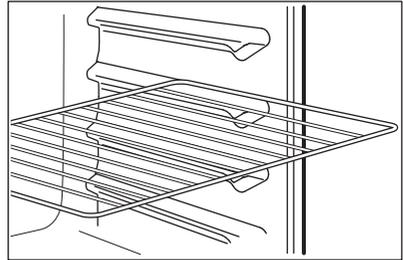

Baking tray/ Deep pan:

Push the baking tray / deep pan between the guide bars of the shelf support.

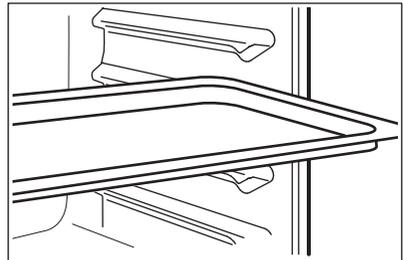

10. HINTS AND TIPS



WARNING!
Refer to Safety chapters.

i The temperature and baking times in the tables are guidelines only. They depend on the recipes and the quality and quantity of the ingredients used.

10.1 Cooking recommendations

The oven has five shelf positions.

Count the shelf positions from the bottom of the oven floor.

Your oven may bake or roast differently to the oven you had before. The below tables provide you with the standard settings for temperature, cooking time and shelf position.

If you cannot find the settings for a special recipe, look for the similar one.

Baking cakes

Do not open the oven door before 3/4 of the set cooking time is up.

Grilling

Put the food close to the top heating element for faster cooking and further away for more gentle cooking.

Place most types of food on the wire shelf in the grill-/roasting pan to enable maximum circulation of air and to lift the food out of the fats and juices.

If you prefer, you may place food such as fish, liver and kidneys directly on the grill-/roasting pan.

To minimise splashing, you should dry food before grilling. Apply a little oil or melted butter on lean meats and fish to keep them moist during cooking.

You can place accompaniments such as tomatoes and mushrooms underneath the grid when grilling meats.

You should turn over the food during cooking, as you require.

Cooking meat and fish

Use a deep pan for very fatty food to prevent the oven from stains that can be permanent.

Leave the meat for approximately 15 minutes before carving so that the juice does not seep out.

To prevent too much smoke in the oven during roasting, add some water into the deep pan. To prevent the smoke condensation, add water each time after it dries up.

Cooking times

Cooking times depend on the type of food, its consistency, and volume.

Initially, monitor the performance when you cook. Find the best settings (heat setting, cooking time, etc.) for your cookware, recipes and quantities when you use this appliance.

10.2 Gas oven cooking

Meat & Poultry

Preheat the empty oven for 10 minutes before cooking.

Use the wire shelf.

Put a deep pan on the second shelf position.

Use the third shelf position.

Food	Temperature (°C)	Time (min)
Bone-in beef, 1.0 kg	min.	40 - 50
Boneless beef, 1.0 kg	190	50
Lamb, 1.0 kg	min.	40 - 50
Pork, 1.0 kg	180 - 190	75 - 85
Chicken / Rabbit, 1.2 kg	220 - 230	75 - 85
Duck, 1.0 kg	190	80 - 90
English roast beef - rare	220	44 - 50
English roast beef - medium	220	51 - 55
English roast beef - well done	220	56 - 60

Turkey

Preheat the empty oven for 10 minutes before cooking.

Use the deep pan.

Use the second shelf position.

Food	Temperature (°C)	Time (min)
Turkey, 4.5 - 5.5 kg	160	210 - 240

Pastry

Preheat the empty oven for 10 minutes before cooking.

Use the aluminium baking tray if no other cookware specified below.

Use the fourth shelf position.

Food	Temperature (°C)	Time (min)
Fruit tart in a 26 cm round cake mould on the wire shelf	165	40 - 50
Fruit pie in a 26 cm round cake mould on the wire shelf	min.	40 - 50
Sausage rolls	180	20 - 30
Choux pastry	190	25 - 30
Vol au vent	170	15 - 20
Jam tart in a 30 cm round cake mould on the wire shelf	165	40 - 50

Pudding

Preheat the empty oven for 10 minutes before cooking.

Use 9 ceramic ramekins.

Pour 2 cm of water into the deep pan.

Use the third shelf position.

Food	Temperature (°C)	Time (min)
Egg Custard in a bain-marie	min.	60 - 75

Cakes

Preheat the empty oven for 10 minutes before cooking.

Use the aluminium baking tray if no other cookware specified below.

Use the fourth shelf position.

Food	Temperature (°C)	Time (min)
Rich fruit cake in a 20 cm cake mould on the wire shelf	min.	150 - 170
Rich fruit cake in a 20 cm cake mould on the wire shelf	min.	150
Madeira cake in a 20 cm cake mould on the wire shelf	min.	105 - 120
Small cakes	min. - 170	35 - 50
Ginger bread	min.	35 - 45

Bread

Preheat the empty oven for 10 minutes before cooking.

Use the aluminium baking tray.

Use the fourth shelf position.

Food	Temperature (°C)	Time (min)
Bread loaves, 0.5 kg	180 - 190	40 - 50
Bread loaves, 1.0 kg	180 - 190	50 - 60
Rolls and buns	180 - 190	15 - 20

10.3 Grilling

Preheat the empty oven for 3 minutes before cooking.

Use the fourth shelf position.

Maximum temperature is the default value for all types of food.

Food	Piec es	Time (min)	
		1st side	2nd side
Fillet steaks, 0.8 kg	4	12 - 15	12 - 14
Beef steaks, 0.6 kg	4	10 - 12	6 - 8
Sausages	8	12 - 15	10 - 12
Pork chops, 0.6 kg	4	12 - 16	12 - 14
Chicken (cut in 2), 1.0 kg	2	30 - 35	25 - 30
Kebabs	4	10 - 15	10 - 12
Chicken breast, 0.4 kg	4	12 - 15	12 - 14
Hamburger, 0.6 kg	6	13 - 15	12 - 14
Fish fillet, 0.4 kg	4	12 - 14	10 - 12

Food	Piec es	Time (min)	
		1st side	2nd side
Toasted sandwiches	4 - 6	5 - 7	-
Toast	4 - 6	2 - 4	2 - 3

10.4 Turnspit

Preheat the empty oven for 3 minutes before cooking.

Use the third shelf position.

Food	Tem- pera- ture (°C)	Time (min)
Poultry, 1.0 - 1.2 kg	max.	75 - 85
Roasts, 0.8 - 1.0 kg	max.	75 - 85

10.5 Information for test institutes

Tests according to IEC 60350-1.

Food	Function	Acces- sories	Shelf posi- tion	Tem- pera- ture (°C)	Time (min)	Comments
Small cake	Conventional Cooking	Alumi- nized baking tray	4	150 - 170	35 - 55	Put 20 small cakes per one baking tray. Preheat the oven for 10 minutes.
Apple pie	Conventional Cooking	Wire shelf	4	170	80 - 90	Use 2 tins (20 cm diameter), diagonally shifted. Preheat the oven for 10 minutes.

Food	Function	Accessories	Shelf position	Temperature (°C)	Time (min)	Comments
Sponge cake	Conventional Cooking	Wire shelf	4	170	50 - 60	Use a cake mould (26 cm diameter). Preheat the oven for 10 minutes.
Short bread	Conventional Cooking	Aluminized baking tray	4	160 - 170	25 - 40	Preheat the oven for 10 minutes.
Toast 4 - 6 pieces	Grilling	Wire shelf	4	max.	2 - 3 minutes first side; 2 - 3 minutes second side	Preheat the oven for 3 minutes.
Beef burger 6 pieces, 0.6 kg	Grilling	Wire shelf and dripping pan	4	max.	20 - 30	Put the wire shelf on the fourth level and the dripping pan on the third level of the oven. Turn the food halfway through the cooking time. Preheat the oven for 3 minutes.

11. CARE AND CLEANING



WARNING!

Refer to Safety chapters.

11.1 Notes on cleaning

Clean the front of the oven with a soft cloth with warm water and a mild cleaning agent.

To clean metal surfaces, use a dedicated cleaning agent.

Clean the oven interior after each use. Fat accumulation or other food remains may result in a fire. The risk is higher for the grill pan.

Clean all accessories after each use and let them dry. Use a soft cloth with warm water and a cleaning agent. Do not clean the accessories in the dishwasher.

Clean stubborn dirt with a special oven cleaner.

If you have nonstick accessories, do not clean them using aggressive agents, sharp-edged objects or a dishwasher. It can cause damage to the nonstick coating.

Moisture can condense in the oven or on the door glass panels. To decrease the condensation, operate the oven for 10 minutes before cooking. Clean the moisture from the cavity after each use.

11.2 Stainless steel or aluminium ovens

Clean the oven door with a damp cloth or sponge only. Dry it with a soft cloth.

Do not use steel wool, acids or abrasive materials as they can damage the oven surface. Clean the oven control panel with the same precautions.

11.3 Cleaning the door gasket

Regularly do a check of the door gasket. The door gasket is around the frame of the oven cavity. Do not use the oven if the door gasket is damaged. Contact an Authorised Service Centre.

To clean the door gasket, refer to the general information about cleaning.


11.4 Removing and installing door

The oven door has three glass panels. You can remove the oven door and the internal glass panels to clean them. Read the whole "Removing and installing door" instruction before you remove the glass panels.


i The oven door may close if you try to remove the glass panels before you remove the oven door.

! **CAUTION!**
Do not use the oven without the glass panels.


1. Open the door fully and hold both hinges.

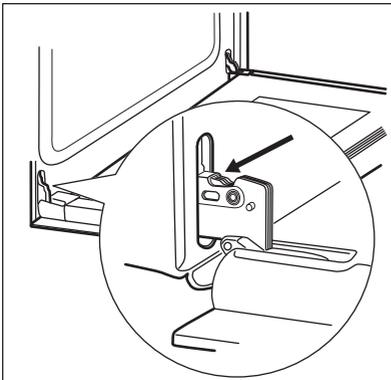


2. Lift and turn the levers fully on both hinges.

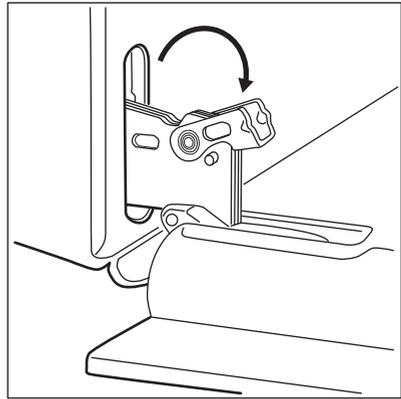

3. Close the oven door halfway to the first opening position. Then lift and pull forward and remove the door from its seat.

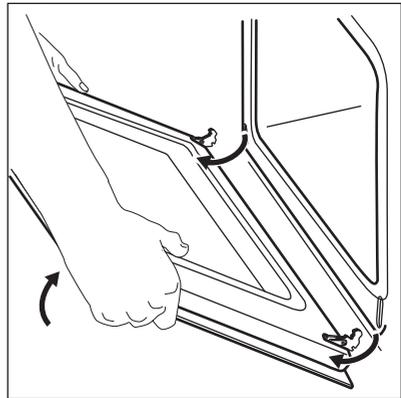


4. Put the door on a soft cloth on a stable surface.
5. Hold the door trim (B) on the top edge of the door at the two sides and push inwards to release the clip seal.

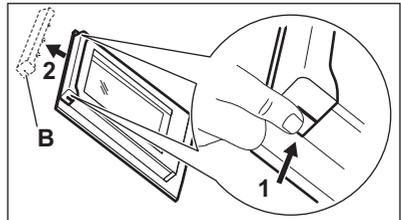

6. Pull the door trim to the front to remove it.
7. Hold the door glass panels by their top edge and carefully pull them out one by one. Start from the top panel.

Make sure the glass slides out of the supports completely.

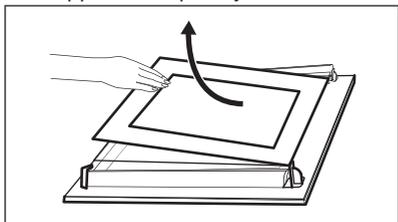


8. Clean the glass panels with water and soap. Dry the glass panels carefully. Do not clean the glass panels in the dishwasher.

When the cleaning is completed, install the glass panels and the oven door.

Make sure that you put the glass panels (A and B) back in the correct sequence. Check for the symbol / printing on the side of the glass panel, each of the glass panels looks different to make the disassembly and assembly easier.

When installed correctly the door trim clicks.

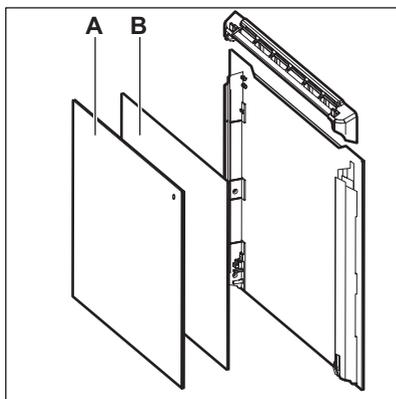


12. TROUBLESHOOTING



WARNING!
Refer to Safety chapters.

Make sure that you install the middle panel of glass in the seats correctly.

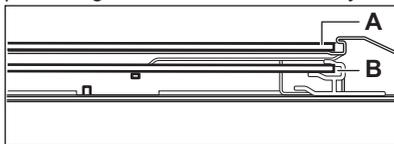

11.5 Replacing the lamp



WARNING!
Risk of electric shock.
The lamp can be hot.

1. Turn off the oven.
Wait until the oven is cooled down.
2. Disconnect the oven from the mains.
3. Put a cloth on the bottom of the cavity.



CAUTION!
Always hold the halogen lamp with a cloth to prevent grease residue from burning on the lamp.

The back lamp

1. Turn the lamp glass cover to remove it.
2. Clean the glass cover.
3. Replace the lamp with a suitable 300 °C heat-resistant lamp.
4. Install the glass cover.

12.1 What to do if...

Problem	Possible cause	Remedy
The oven does not heat up.	The oven is off.	Turn on the oven.
The oven does not heat up.	The fuse is blown.	Make sure that the fuse is the cause of the malfunction. If the fuse problem recurs, contact a qualified electrician.
The oven does not work.	The automatic ignition does not work.	Light the burner with a long match. Hold the flame near the hole in the bottom of the oven cavity. At the same time push the knob for the gas control and turn it counterclockwise to the maximum temperature. When the flame lights, keep the knob for the gas control pushed for 15 seconds or less to warm up the thermocouple. Otherwise the gas flow is interrupted.
The lamp does not work.	The lamp is broken.	Replace the lamp.
Steam and condensation settle on the food and in the oven cavity.	A dish was left in the oven for too long.	Food should not be left in the oven for longer than 15-20 minutes after cooking.
The flame extinguishes immediately after ignition.	The thermocouple is not heated up.	After the flame lights, keep the knob for the gas control pushed for 15 seconds or less.
The turnspit does not rotate.	The turnspit is not correctly installed into the turnspit hole.	Refer to "Using the accessories" chapter, Using the turnspit.

12.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating

plate is on the front frame of the oven cavity. Do not remove the rating plate from the oven cavity.

We recommend that you write the data here:	
Model (MOD.)
Product number (PNC)
Serial number (S.N.)

13. TECHNICAL DATA

13.1 Technical data

TOTAL POWER:	Electric:	1.77 kW
	Gas original:	G20 (2H) 20 mbar = 2.6 kW
	Gas replacement:	G30 28-30 mbar = 196 g/h G31 37 mbar = 193 g/h
Electric supply:	220 - 240 V ~ 50 - 60 Hz	
Appliance category:	II2H3+	
Gas connection:	G 1/2"	
Appliance class:	3	

13.2 Gas oven burner

Gas type	NOMINAL GAS POWER (kW)	NOMINAL GAS FLOW (g/h)	Reduced gas power (kW)	BY-PASS NEEDLE (1/100 mm)	INJECTOR MARK (1/100 mm)
G20 (2H) 20 mbar	2.6	-	0.7	Regulated	112 
G30 28-30 mbar	2.7	196	0.7	43	80
G31 37 mbar	2.7	193	0.7	43	80

14. ENERGY EFFICIENCY

14.1 Product information according to EU 65-66/2014

Supplier's name	Electrolux
Model identification	FR13GG 949713360
Energy Efficiency Index	81.6
Energy efficiency class	A+
Energy consumption with a standard load, conventional mode	1.49 kWh/cycle 5.36 MJ/cycle

Number of cavities	1
Heat source	Gas
Volume	69 l
Type of oven	Built-In Oven
Mass	29.0 kg

EN 15181 Measuring method of the energy consumption of gas fired ovens.

14.2 Energy saving



The oven contains features which help you save energy during everyday cooking.

General hints

Make sure that the oven door is closed properly when the oven operates. Do not open the door too often during cooking. Keep the door gasket clean and make sure it is well fixed in its position.

Use metal dishes to improve energy saving.

When possible, do not preheat the oven before you put the food inside.

When the cooking duration is longer than 30 minutes, reduce the oven temperature to minimum 3 - 10 minutes before the end of the cooking time, depending on the duration of the cooking. The residual heat inside the oven will continue to cook.

Use the residual heat to warm up other dishes.

Keep breaks between baking as short as possible when you prepare few dishes at one time.

Keep food warm

Choose the lowest possible temperature setting to use residual heat and keep a meal warm.

15. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.electrolux.com/shop



867348265-G-372019

