

# DAILY REFERENCE GUIDE



## THANK YOU FOR PURCHASING A WHIRLPOOL PRODUCT

To receive more comprehensive help and support, please register your product at [www.whirlpool.eu/register](http://www.whirlpool.eu/register)



 
You can download the Safety Instructions and the Use and Care Guide by visiting our website [docs.whirlpool.eu](http://docs.whirlpool.eu) and following the instructions on the back of this booklet.



**Before using the appliance carefully read the Health and Safety guide.**

## PRODUCT DESCRIPTION

### APPLIANCE

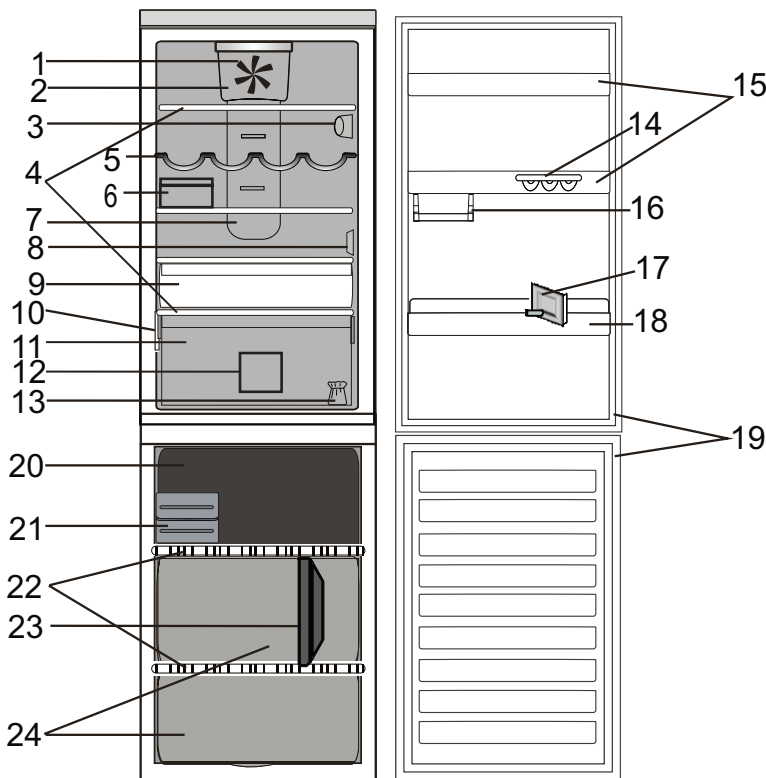


#### Refrigerator compartment

1. Fan
2. Fan cover and antibacterial filter area
3. Electronic control panel / light unit
4. Shelves
5. Bottle rack (if present)
6. Cheese box + Lid (if present)
7. Multi-flow cold air area
8. Sensor cover
9. Fresh Zone 0° compartment (best for meat and fish)
10. Rating plate with commercial name
11. Fruits and vegetables crisper
12. Fridge drawer divider (if present)
13. Door reversibility kit
14. Egg tray (if present)
15. Door trays
16. Small items half balcony (if present)
17. Bottle separator (if present)
18. Bottle balcony
19. Door seal

#### Freezer compartment

19. Door seals
20. Upper drawer: coolest zone best for freezing fresh food
21. Quick Ice / Eutetics
22. Shelves
23. Freezer drawer divider (if present)
24. Freezer drawers

 
### CONTROL PANEL

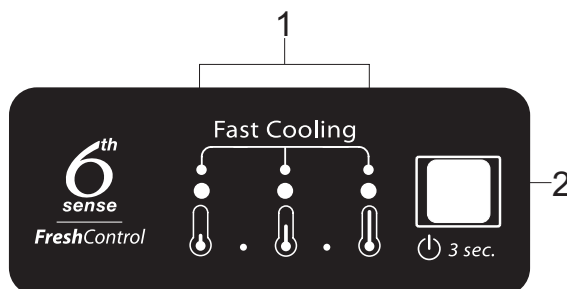


1. Indicator Leds  
(to display the current temperature setpoint or the Fast Cooling function)
2. On/Stand-By Button / Temperature Button

ACCESSORIES (if present)

 
EGG TRAY

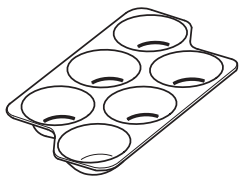


CHEESE BOX

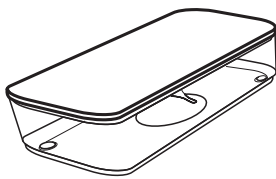 


BOTTLE RACK

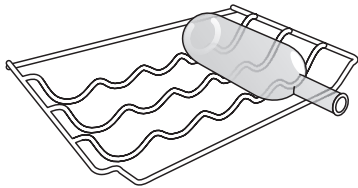 


BOTTLE SEPARATOR

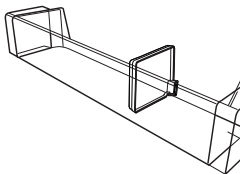 


FREEZER DRAWER DIVIDER

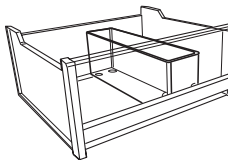 


FRIDGE DRAWER DIVIDER

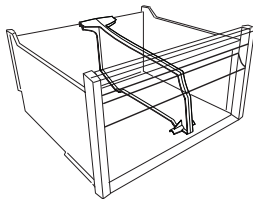 

QUICK ICE COMPARTMENT

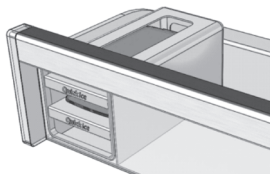 

EUTETICS/QUICK ICE TRAYS

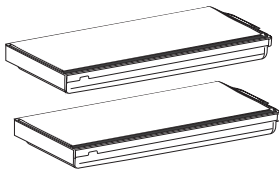 

FIRST TIME USE

HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically.  
After starting the appliance, wait at least 4-6 hours before placing food into the fridge and into the freezer compartment.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

# DAILY USE

See Use and Care Guide for more details on functions /  
see last page for information on how to obtain the Use and Care Guide

## FUNCTIONS

### ON/STANDBY FUNCTION

To put the product in Stand-by, **press and hold the On/Stand By button for 3 seconds**. All the indicators turn off except On/Standby indicator.

Press again to reactivate the appliance.

### TEMPERATURE SETTING

**Press the Temperature button** on the control panel to adjust the temperature from the warmest through the lower to the coldest level. Pressing the Temperature button, the temperature setting will change cyclically.

At first plug-in of appliance temperature setpoint is present at medium position (factory setting).

Following table shows temperature setpoints:

	<b>HIGH TEMP.</b>
	<b>MED-HIGH TEMP.</b>
	<b>MEDIUM TEMP.</b>
	<b>MED-LOW TEMP.</b>
	<b>LOW TEMP.</b>
	<b>FAST COOLING</b>



Led on Led off

*Note:* Displayed set points correspond to the average temperature throughout the whole refrigerator.

### 6TH SENSE FRESH CONTROL

This function automatically works to ensure the optimal conditions to preserve the stored food.

### FAST COOLING FUNCTION

The use of the Fast Cooling function is recommended to increase the cooling/freezing capacity of the refrigerator/freezer compartment when placing a very high quantity of food within it.

To activate the Fast Cooling function, **press the Temperature button cyclically** on the control panel till all the 3 LEDs blink and remain on.



The function is automatically deactivated after 12 hours and return to previous selected set point.

The function can be manually deactivated by pressing the Temperature button on the control panel.

### FRESH ZONE 0°

The Fresh Zone 0° compartment guarantees a temperatures operating range from -2°C to 3°C depending on chosen fridge temperature setting which is ideal to:

- store meat, fish and delicate food;
- rapid cooling of hot foods;
- low temperature defrosting (it inhibits the proliferation of microorganisms)

You can get the 0°C temperature, in standard conditions, when the fridge compartment temperature is set for minimum temperature.

Remember that by changing the fridge temperature you change the Fresh Zone 0° compartment temperature as well. Keep in mind that Fresh Zone 0° compartment is a mechanical feature operating all the time, it cannot be switched off.

### REFRIGERATOR LIGHT

 
The light system inside the refrigerator compartment uses LEDs light, allowing a better lightning as well as a very low energy consumption. If the LED light system does not work, please contact the Service to replace it.

*Important:* The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more then 8 minutes the light will be automatically switched off.

### FAN + ANTIBACTERIAL FILTER

The Fan improves temperature distribution inside the refrigerator compartment, allowing better preservation of stored food. If the appliance has the Fan it can be equipped with the antibacterial filter. Remove it from the box placed in the crisper drawer and insert into the fan cover - as in the picture.


The replacement procedure is included in the filter box.

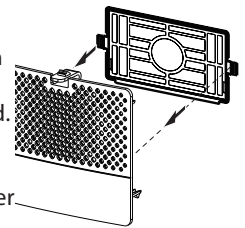

## ALARM TABLE

ALARM TYPE	SIGNAL	CAUSE	CURE
Door open alarm	Refrigerator Light blinks.	The door has remained open for more than 3 minutes.	Close the door
Door open alarm	Refrigerator Light OFF.	The door has remained open for more than 4 minutes.	Close the door
Malfunction	Any temperature indicators blinks.	Product malfunction.	Contact the After-sales Service

 
# HOW TO STORE FOOD AND BEVERAGE

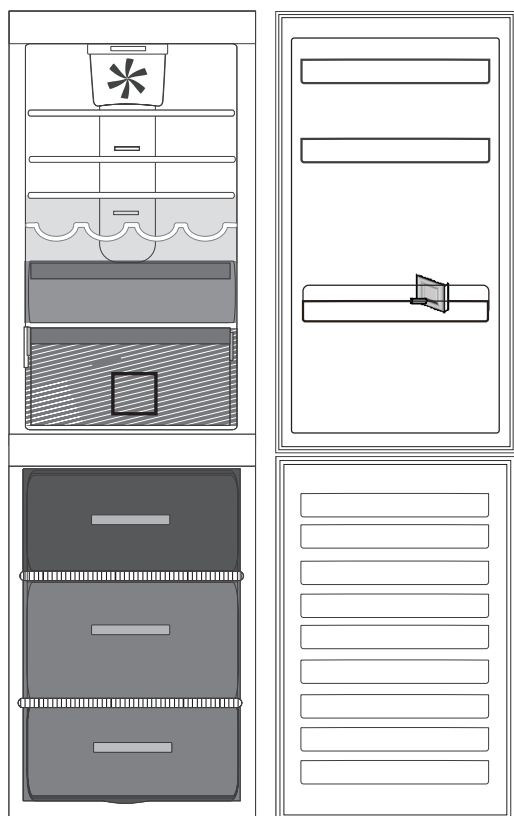

## Legend



 **TEMPERATE ZONE** Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam



**COOL ZONE** Suggested for storage of cheese, milk, daily food, delicatessen, yogurt



**COOLEST ZONE** Suggested for the storage of for the storage of fish, meat, cold cuts.



**FRUIT & VEGETABLE DRAWER**



**FREEZING ZONE DRAWER**  
(MAX COOL ZONE) Suggested to freeze fresh/cooked food.



**NORMAL FREEZER DRAWERS**

*Note: The Grey tone of the legend doesn't match with the color of drawers*

## FRIDGE COMPARTMENT

Use recyclable plastic, metal, aluminum and glass containers and cling film to wrap foods.

Always use closed containers for liquids and for food that may give off or be tainted by odor or flavor transfer or cover them.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment.

Foods which give off a large amount ethylene gas and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be separated or wrapped so as not to reduce the storage life; for example do not store tomatoes together with kiwi fruits or cabbage.

To avoid bottles falling over, you can use the bottle holder (available on selected models).

Do not store food too close together to enable sufficient air circulation.

## FREEZER COMPARTMENT

The freezer is the ideal storage location for store frozen food, make ice cubes and freeze fresh food in the freezer compartment.

The maximum number of kilograms of fresh food that can be frozen within a 24-hour period is indicated on the rating plate (... kg/24h).

If you have a little quantity of food to store in the freezer, we recommend to use the middle area.

## PRODUCT FICHE

📄 The product fiche inclusive of energy data for this appliance can be downloaded from our website [docs.whirlpool.eu](https://docs.whirlpool.eu)

## HOW TO OBTAIN THE USE AND CARE GUIDE

> 📄 Download the Use and Care Guide from our website [docs.whirlpool.eu](https://docs.whirlpool.eu) (you can use this QR Code) specifying the product's commercial code.

 
> Alternatively, contact our Client After-Sales Service



## CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual

When contacting our Client After-sales Service, please state the codes provided on your product's identification plate.

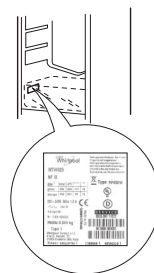

400010883785

Printed in Italy