



## Non-destructive disassembly Guide for NZ84J9770EK

Before disassembling the Cooktop, unplug the power cord from the wall outlet. Repairs must be carried out by trained professional. For any repairs, please contact our service provider or independent qualified professional.


### Disassembly the Assy Top Plate.






### Disassembly of the Assy Control Panel.



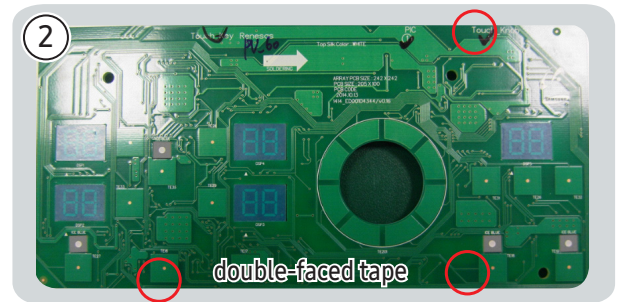
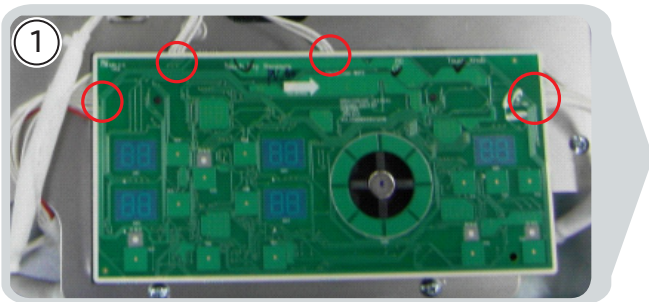






### Disassembly of the Working Coil.

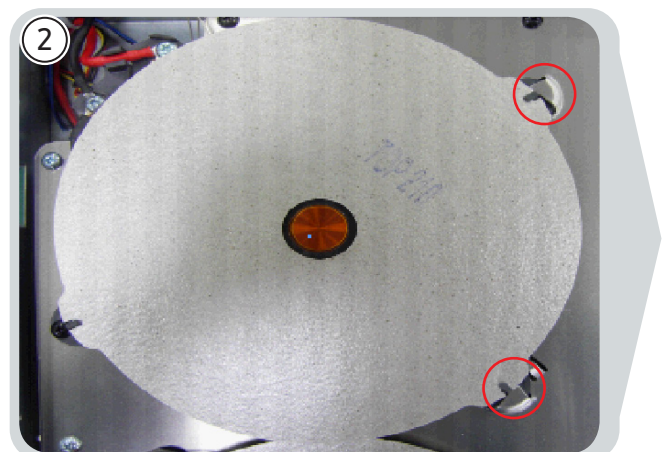

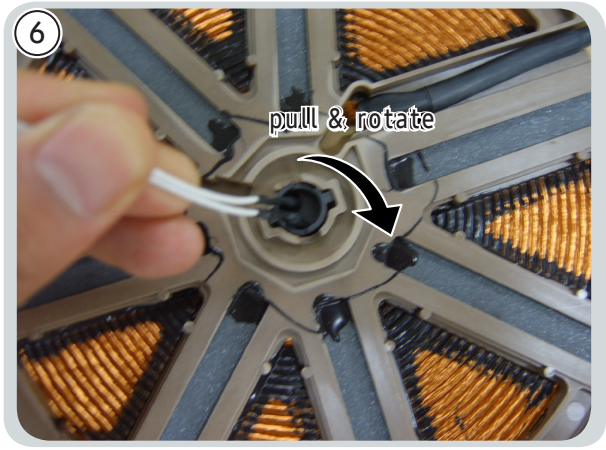
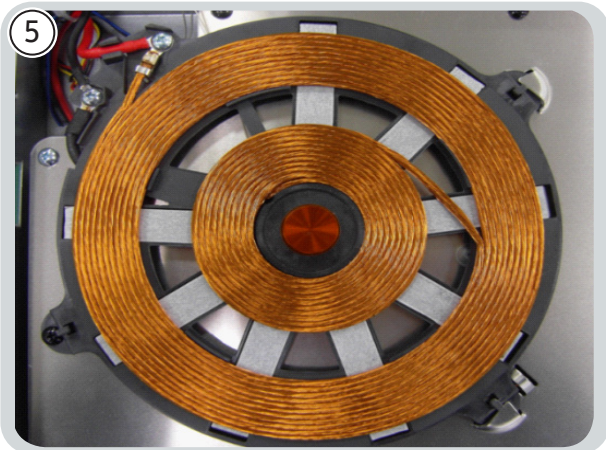
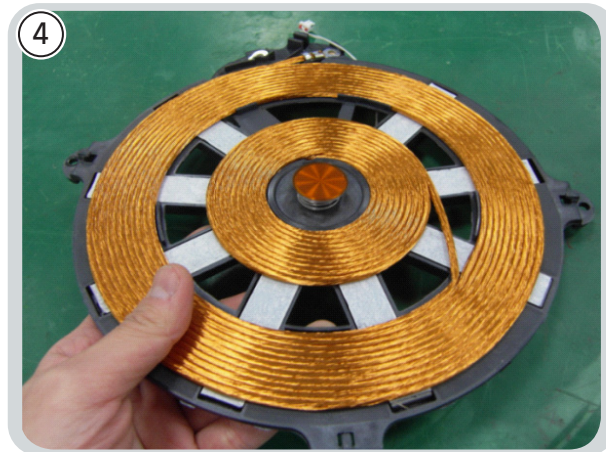


Disassembly of the the PBA.

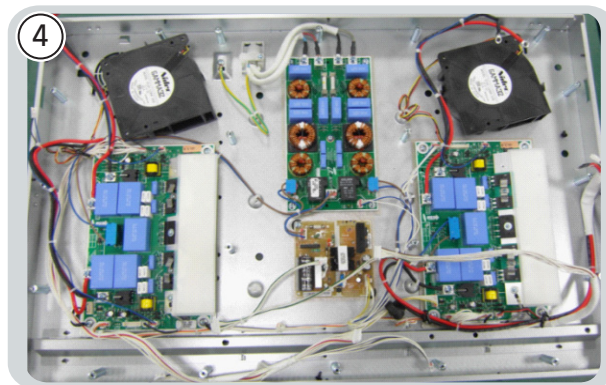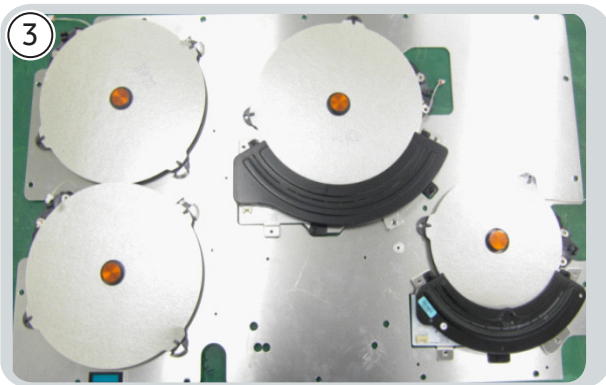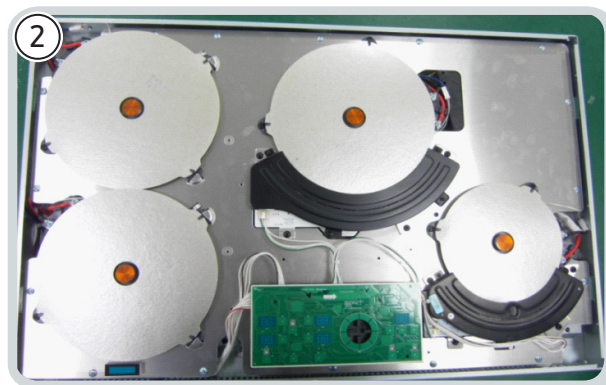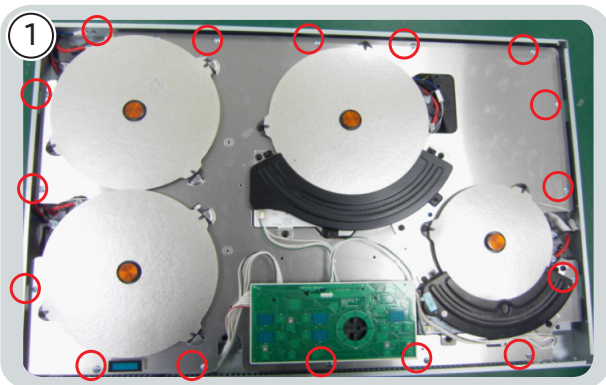

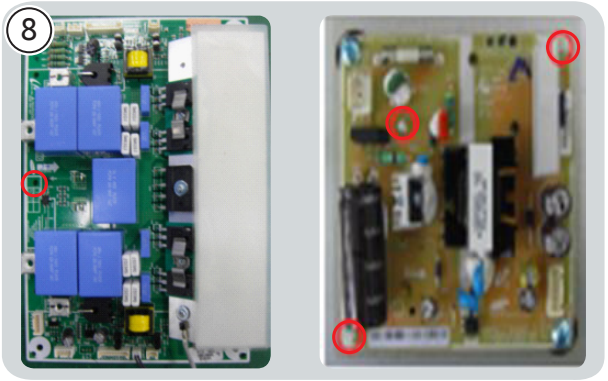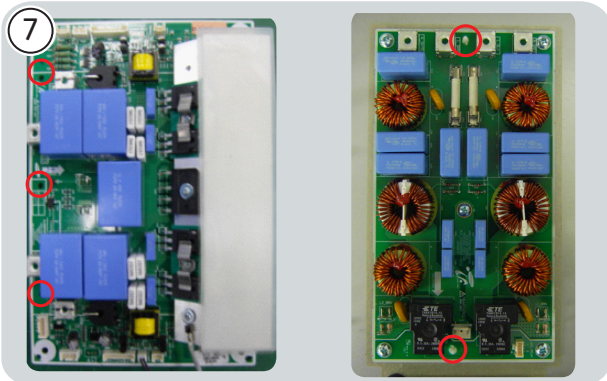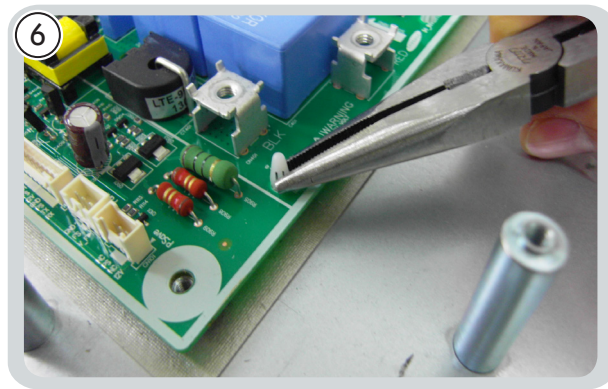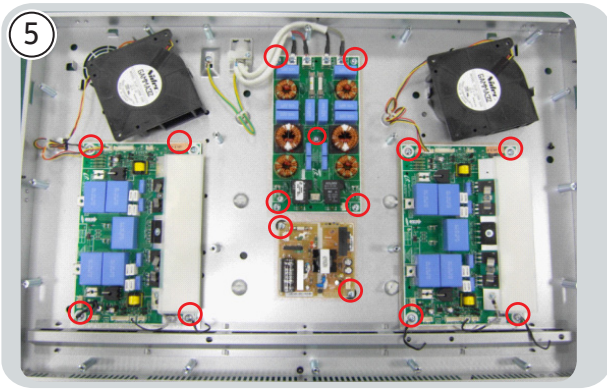

## Disassembly of the POWER CABLE.

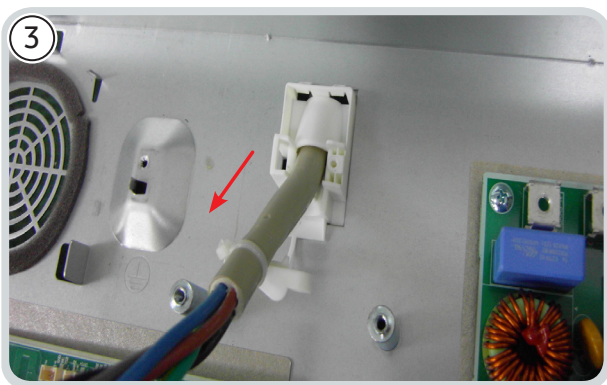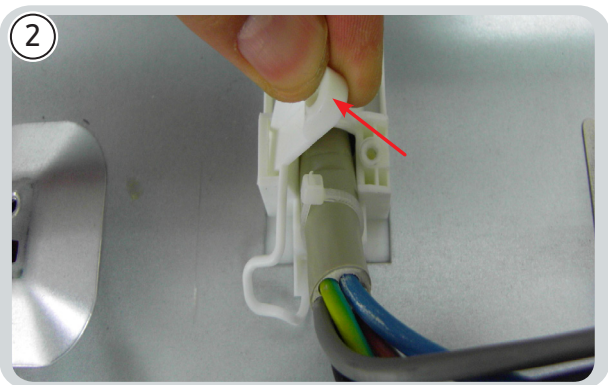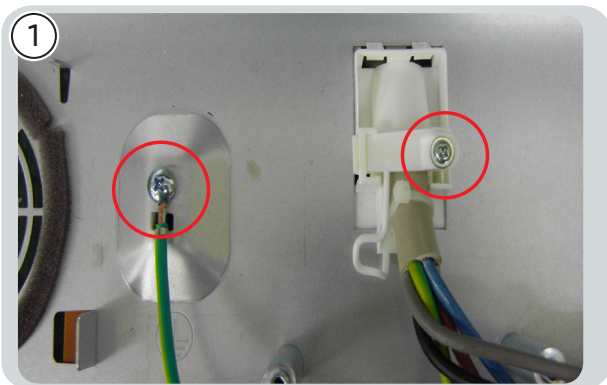

**Disassembly of holder cable.**

