

# DAILY REFERENCE GUIDE



**THANK YOU FOR BUYING A HOTPOINT - ARISTON PRODUCT.**

In order to receive a more complete assistance, please register your appliance on [www.whirlpool.eu/register](http://www.whirlpool.eu/register)




You can download the Safety Instructions and the Use and Care Guide by visiting our website [www.whirlpool.eu](http://www.whirlpool.eu) and following the Instructions on the back of this booklet.



**Before using the appliance carefully read *Health and Safety* guide.**

## PRODUCT DESCRIPTION

### APPLIANCE

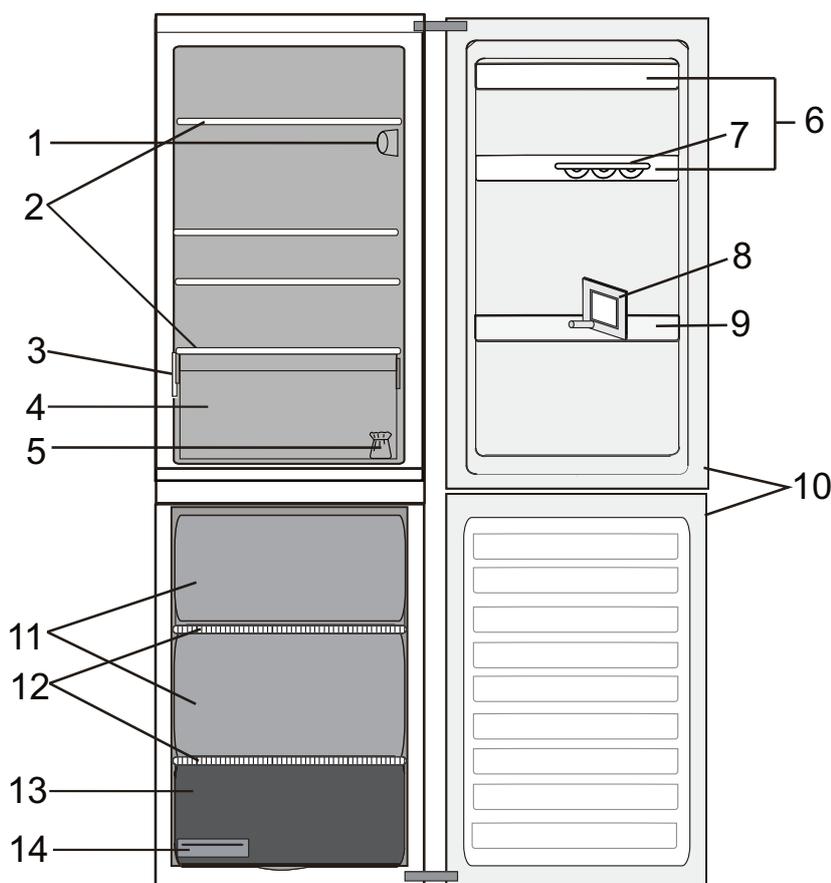


#### Refrigerator compartment

1. Electronic control panel / light unit
2. Shelves
3. Rating plate with commercial name
4. Fruits and vegetables crisper
5. Door reversibility kit
6. Door trays
7. Egg tray
8. Bottle separator
9. Bottle balcony
10. Door seal

#### Freezer compartment

10. Door seals
11. Freezer drawer
12. Shelf
13. Bottom drawer: coolest zone best for freezing fresh food
14. Ice tray (if present)


### CONTROL PANEL

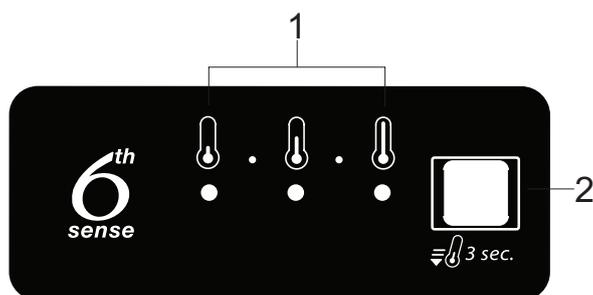


1. Indicator Leds (to display the current temperature setpoint or the Fast Cooling function)
2. Fast Cooling Button / Temperature Button

## ACCESSORIES


### EGG TRAY

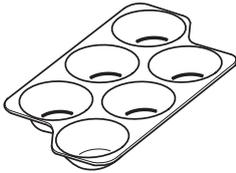

### BOTTLE SEPARATOR

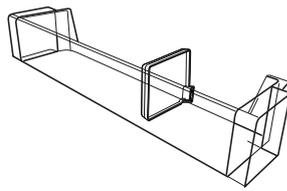

### ICE TRAY

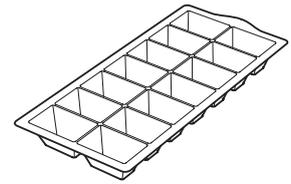

## FIRST TIME USE

### HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the fridge and into the freezer compartment.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

## DAILY USE


See Use and Care Guide for more details on functions / see last page for information on how to obtain the Use and Care Guide

### FUNCTIONS

#### TEMPERATURE SETTING

Press the **Temperature button** on the control panel to adjust the temperature from the warmest through the lower to the coldest level. Pressing the Temperature button, the temperature setting will change cyclically. At first plug-in of appliance temperature setpoint is present at medium position (factory setting).

Following table shows temperature setpoints:

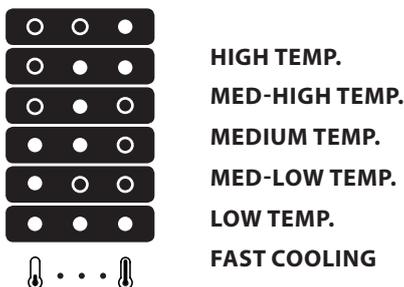

● Led on ○ Led off

Note: Displayed set points correspond to the average temperature throughout the whole refrigerator.

#### 6TH SENSE

This function automatically works to ensure the optimal conditions to preserve the stored food. The "6th Sense" function is automatically activated when:

- a large amount of food is loaded into the refrigerator
- the refrigerator door is left open for a long time

- a prolonged power failure takes place, causing the internal temperature of the appliance to increase to values that cannot guarantee safe storage of food.

#### FAST COOLING

The use of the Fast Cooling function is recommended to increase the cooling capacity of the refrigerator compartment when placing a very high quantity of food within it.

To activate the Fast Cooling function, **press and hold for 3 seconds the Temperature button** on the control panel till all the 3 LEDs will turn on. The function is automatically deactivated after 24 hours and return to previous selected set point.



The function can be manually deactivated by pressing and holding for 3 seconds the Temperature button on the control panel.

#### REFRIGERATOR LIGHT

The light system inside the refrigerator compartment uses LEDs light, allowing a better lightning as well as a very low energy consumption. If the LED light system does not work, please contact the Service to replace it.

*Important:* The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more than 8 minutes the light will be automatically switched off.

### ALARM TABLE

#### ALARM TYPE

#### SIGNAL

#### CAUSE

#### CURE

Door open alarm

Refrigerator Light blinks

The door has remained open for more than 5 minutes.

Close the door

Door open alarm

Refrigerator Light OFF

The door has remained open for more than 8 minutes.

Close the door

Malfunction


Any temperature indicators blinks

Product malfunction.

Contact the After-sales Service

## SOME OF THE FUNCTIONAL SOUNDS YOU MIGHT HEAR

A hissing sound when switching on the appliance for the first time or after a long pause.

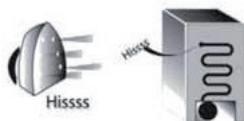

A gurgling sound when refrigerant fluid enters into the pipes.



BRRR sound is from the compressor running.



Buzzing sound when water valve or fan start working.



A cracking sound when compressor starts.



The CLICK is from the thermostat which adjusts how often the compressor is running.



## TROUBLESHOOTING GUIDE

### Problem

#### THE APPLIANCE TEMPERATURE IS TOO HIGH

### Possible Cause

There could be various causes (see "Solutions")

### Solution

- › Make sure that the condenser (back the appliance) is free of dust and fluff.
- › Make sure that the door properly closed.
- › Make sure that the door seals properly fitted.
- › On hot days or if the room is warm, the motor naturally runs longer.
- › If the appliance door has been left open for a while or if large amounts of food have been stored, the motor will run longer in order to cool down the interior of the appliance.

#### THE MOTOR SEEMS TO RUN TOO MUCH

Motor running time depends on different things: number of door openings, amount of food stored, temperature of the room, setting of the temperature controls.


- › Make sure that the appliance controls are correctly set.
- › Check if there is not a large amount of food been added to the appliance.
- › Check that the door is not opened too often.
- › Check that the door close properly.

#### THE DOORS DO NOT OPEN AND CLOSE PROPERLY

There could be various causes (see "Solutions")

- › Check that food packages are not blocking the door.
- › Check that the internal parts or automatic ice maker are not out of position.
- › Check that the door seals are not dirty or sticky.
- › Ensure the appliance is level.

# HOW TO STORE FOOD AND BEVERAGE

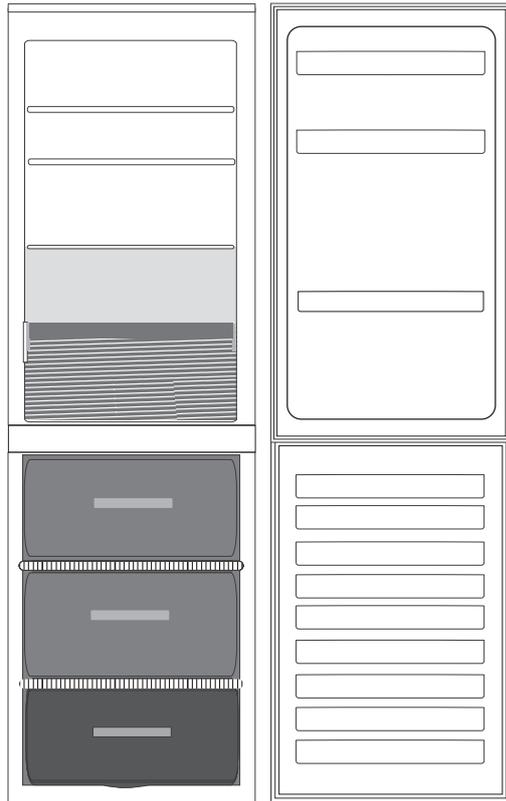

## Legend



**TEMPERATE ZONE** Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam



**COOL ZONE** Suggested for storage of cheese, milk, daily food, delicatessen, yogurt, cold cuts, desserts



**FRUIT & VEGETABLE DRAWER**



**FREEZING ZONE DRAWER (MAX COOL ZONE)** Suggested to freeze fresh/cooked food.



**NORMAL FREEZER DRAWER**

*Note:* The Grey tone of the legend doesn't match with the color of drawers

## FRIDGE COMPARTMENT

Use recyclable plastic, metal, aluminum and glass containers and cling film to wrap foods.

Always use closed containers for liquids and for food that may give off or be tainted by odor or flavor transfer or cover them.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment.

Foods which give off a large amount ethylene gas and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be separated or wrapped so as not to reduce the storage life; for example do not store tomatoes together with kiwi fruits or cabbage.

To avoid bottles falling over, you can use the bottle holder (available on selected models).

Do not store food too close together to enable sufficient air circulation.

## FREEZER COMPARTMENT

The freezer is the ideal storage location for store frozen food, make ice cubes and freeze fresh food in the freezer compartment.

The maximum number of kilograms of fresh food that can be frozen within a 24-hour period is indicated on the rating plate (... kg/24h).

If you have a little quantity of food to store in the freezer, we recommend to use the coldest areas of your freezer compartment, corresponding to the bottom area.

## PRODUCT FICHE

[www](http://www.whirlpool.eu) The product sheet inclusive of energy data for this appliance can be downloaded from the website [www.whirlpool.eu](http://www.whirlpool.eu)

## HOW TO OBTAIN THE USE AND CARE GUIDE


> [www](http://www.whirlpool.eu) Download the Use and Care Guide from the website [www.whirlpool.eu](http://www.whirlpool.eu) (it is possible to use this QR Code) indicating the product code.

> As an alternative, contact the After-Sales Service



## CONTACTING AFTER-SALES SERVICE

The contact information can be found in the warranty manual. When you contact the After-Sales Service, please supply the code found on the product's identification label.

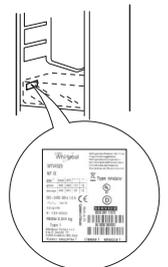

**400010867956**

Printed in Italy



SENSING THE DIFFERENCE