

DAILY REFERENCE GUIDE

 


THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.
In order to receive a more complete assistance,
please register your appliance on www.whirlpool.com

Before using the appliance carefully read
Health and Safety and *Use and Care*
guides.

PRODUCT DESCRIPTION

APPLIANCE

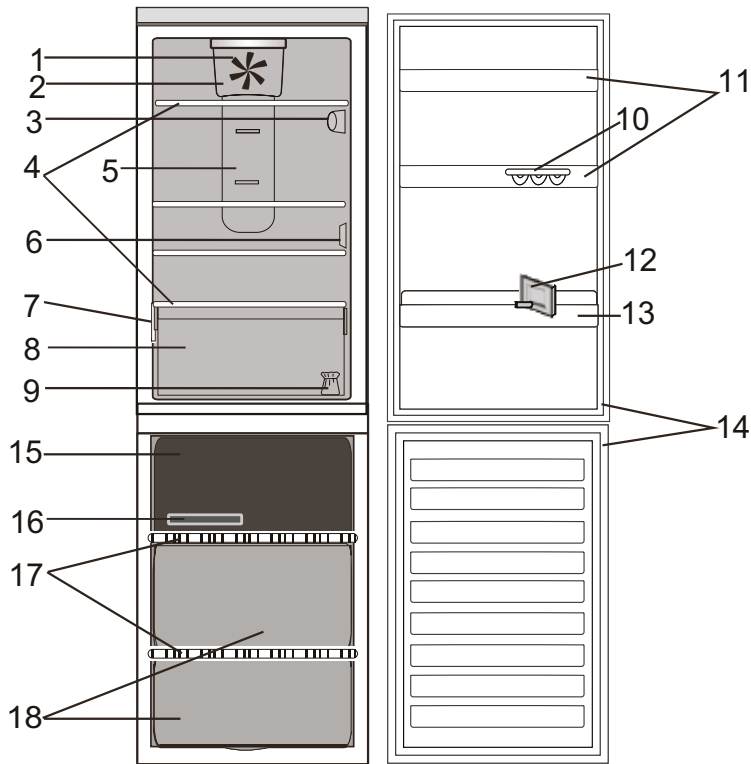


Refrigerator compartment

1. Fan
2. Fan cover and antibacterial filter area
3. Electronic control panel / light unit
4. Shelves
5. Multi-flow cold air area
6. Sensor cover
7. Rating plate with commercial name
8. Fruits and vegetables crisper
9. Door reversibility kit
10. Egg tray
11. Door trays
12. Bottle separator
13. Bottle balcony
14. Door seal

Freezer compartment

14. Door seals
15. Upper drawer: coolest zone best for freezing fresh food
16. Ice tray
17. Shelves
18. Freezer drawers

 
CONTROL PANEL

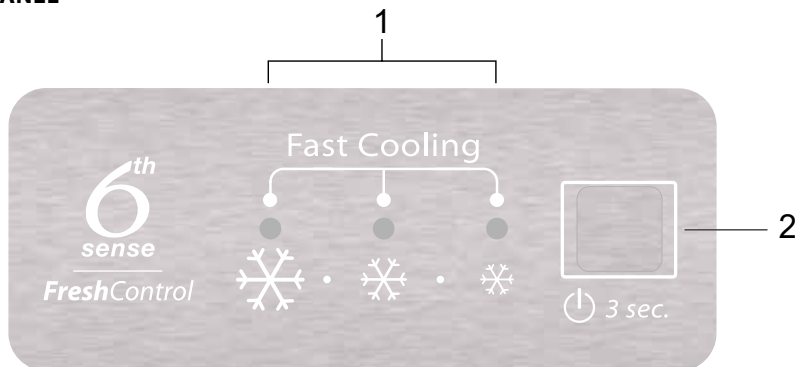


1. Indicator Leds
(to display the current temperature setpoint or the Fast Cooling function)
2. On/Stand-By Button / Temperature Button

ACCESSORIES

 
EGG TRAY

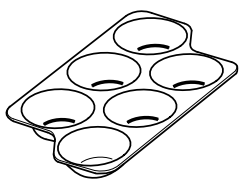

BOTTLE SEPARATOR ICE TRAY

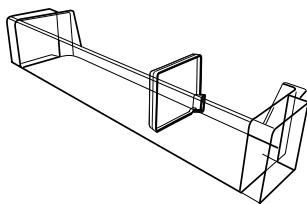 

ICE TRAY

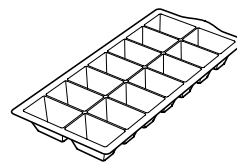 

FIRST TIME USE

HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically.

After starting the appliance, wait at least 4-6 hours before placing food into the fridge and into the freezer compartment.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

DAILY USE

See Use and Care Guide for more details on functions /
see last page for information on how to obtain the Use and Care Guide

FUNCTIONS

ON/STANDBY FUNCTION

To put the product in Stand-by, **press and hold the On/Stand By button for 3 seconds**. All the indicators turn off except On/Standby indicator.

Press again to reactivate the appliance.

TEMPERATURE SETTING

Press the Temperature button on the control panel to adjust the temperature from the warmest through the lower to the coldest level.

Pressing the Temperature button, the temperature setting will change cyclically.

At first plug-in of appliance temperature setpoint is present at medium position (factory setting).

Following table shows temperature setpoints:

	HIGH TEMP.
	MED-HIGH TEMP.
	MEDIUM TEMP.
	MED-LOW TEMP.
	LOW TEMP.
	FAST COOLING

. . .

☒ Led on ☐ Led off

Note: Displayed set points correspond to the average temperature throughout the whole refrigerator.

6TH SENSE FRESH CONTROL

This function automatically works to ensure the optimal conditions to preserve the stored food.

FAST COOLING FUNCTION

The use of the Fast Cooling function is recommended to increase the cooling/freezing capacity of the refrigerator/freezer compartment when placing a very high quantity of food within it.

To activate the Fast Cooling function, **press the Temperature button cyclically** on the control panel till all the 3 LEDs blink and remain on.



The function is automatically deactivated after 12 hours and return to previous selected set point.

The function can be manually deactivated by pressing the Temperature button on the control panel.

REFRIGERATOR LIGHT

The light system inside the refrigerator compartment uses LEDs light, allowing a better lightning as well as a very low energy consumption.

If the LED light system does not work, please contact the Service to replace it.

 
Important: The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more than 4 minutes the light will be automatically switched off.

FAN + ANTIBACTERIAL FILTER

The Fan improves temperature distribution inside the refrigerator compartment, allowing better reservation of stored food.

If the appliance has the Fan it can be equipped with the antibacterial filter. Remove it from the box placed in the crisper drawer and insert into the fan cover - as in the picture.


The replacement procedure is included in the filter box.

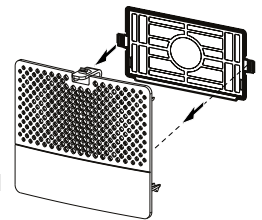

ALARM TABLE

ALARM TYPE	SIGNAL	CAUSE	CURE
Door open alarm	Refrigerator Light blinks.	The door has remained open for more than 3 minutes.	Close the door
Door open alarm	Refrigerator Light OFF	The door has remained open for more than 4 minutes.	Close the door
Malfunction	Any temperature indicators blinks	Product malfunction.	Contact the After-sales Service

 
HOW TO STORE FOOD AND BEVERAGE

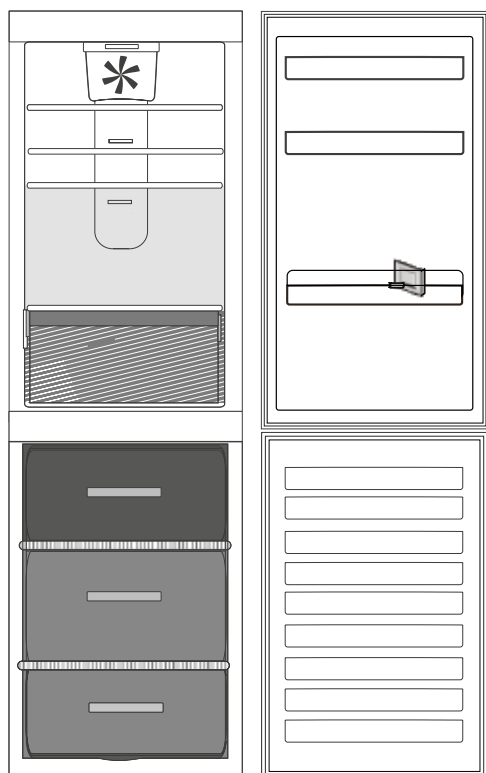

Legend



 TEMPERATE ZONE Suggested For the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam



COOL ZONE Suggested for storage of cheese, milk, daily food, delicatessen, yogurt, cold cuts, desserts



FRUIT & VEGETABLE DRAWER



FREEZING ZONE DRAWER
(MAX COOL ZONE) Suggested to freeze fresh/cooked food.



FREEZER DRAWERS

Note: The Grey tone of the legend doesn't match with the color of drawers

FRIDGE COMPARTMENT

Use recyclable plastic, metal, aluminum and glass containers and cling film to wrap foods.

Always use closed containers for liquids and for food that may give off or be tainted by odor or flavor transfer or cover them.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment.

Foods which give off a large amount ethylene gas and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be separated or wrapped so as not to reduce the storage life; for example do not store tomatoes together with kiwi fruits or cabbage.

To avoid bottles falling over, you can use the bottle holder (available on selected models).

Do not store food too close together to enable sufficient air circulation.

FREEZER COMPARTMENT

The freezer is the ideal storage location for store frozen food, make ice cubes and freeze fresh food in the freezer compartment. The maximum number of kilograms of fresh food that can be frozen within a 24-hour period is indicated on the rating plate (... kg/24h).

If you have a little quantity of food to store in the freezer, we recommend to use the middle area.

MAINTENANCE AND CLEANING AND PROBLEM SOLVING

For maintenance and cleaning and for Problem Solving see the **Use and Care Guide**.

The **Use and Care Guide** can be obtained by:
> After-Sales Service; phone number see in warranty booklet.> download from Whirlpool Website
<http://docs.whirlpool.eu>



CONTACTING AFTER-SALES SERVICE

Provide both numbers shown on the service sticker when contacting the After-Sales Service team. <http://www.whirlpool.com>

The technical information are situated in the rating plate on the internal side of the appliance.



Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies -
© Copyright Whirlpool Europe s.r.l. 2014. All rights reserved - <http://www.whirlpool.eu>

