

Dell Networking S6000-Open Networking (ON) Installation Guide

Publication Date: April 2014



Notes, Cautions, and Warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Information in this publication is subject to change without notice.

Copyright © 2014 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

April 2014

Contents

- 1 About this Guide
 - Related Publications 7

- 2 The S6000-Open Networking (ON) System
 - Introduction 9
 - Features 10
 - Physical Dimensions 11
 - Chassis Ports 11
 - Determine System Status 11
 - LED Displays 11
 - Basic Installation Requirements 12
 - Orderable S6000-ON Components 13

- 3 Site Location and Preparation
 - Site Selection 15
 - Cabinet Placement 16
 - Rack Mount 16
 - Ground 16
 - Fans and Airflow 16
 - Fan Combinations 16
 - Power 17
 - Storing Components 17




- 4 Install the S6000-ON
 - Unpack the S6000-ON System 19
 - Package Contents 19
 - Unpacking Steps 20
 - Install Rack or Cabinet Hardware 20
 - Rack Mount Safety Considerations 20
 - Installing the Dell ReadyRails System 21
 - Configuring a Two-Post Flush-Mount 22
 - Configuring a Two-Post Center-Mount 23
 - Configure a Four-Post Thread 24
 - Installing the S6000-ON System 25
 - Installing a 1U Front-Rack 25
 - Attaching the Ground Cable 26
 - Installing an AC Power Supply 27
 - Installing QSFP+ Optics 29
 - Removing QSFP+ Optics 29

Power Up the S6000-ON System	29
Power Up Sequence	30
5 Power Supplies	
Components	31
Installing an AC Power Supply	32
Replacing an AC Power Supply	33
After Installing the S6000-ON	33
6 Fans	
Components	35
Installing a Fan Module	36
Replacing a Fan Module	36
7 Management Ports	
Accessing the RS-232 Console Port	37
Accessing the Console Port	38
Accessing the USB-B Console Port	38
8 Specifications	
Chassis Physical Design	41
Environmental Parameters	41
Power Requirements	42
AC Input Specification	42
IEEE Standards	42
Agency Compliance	42
Network Equipment Building Systems (NEBS) Compliance	42
USA Federal Communications Commission (FCC) Statement	43
Canadian Department of Communication Statement	43
European Union EMC Directive Conformance Statement	43
Japan: VCCI Compliance for Class A Equipment	44
Korean Certification of Compliance	44
Safety Standards and Compliance Agency Certifications	45
Electromagnetic Compatibility (EMC)	45
Product Recycling and Disposal	46
9 Technical Support	
The iSupport Website	47
Accessing iSupport Services	47
Contacting the Technical Assistance Center	48


Requesting a Hardware Replacement	48
---	----

About this Guide

This guide provides site preparation recommendations, step-by-step procedures for rack mounting and desk mounting, and connecting to a power source.


-  **CAUTION:** To avoid electrostatic discharge (ESD) damage, wear grounding wrist straps when handling this equipment.
-  **WARNING:** Only trained and qualified personnel can install this equipment. Read this guide before you install and power up this equipment. This equipment contains two power cords. Disconnect both power cords before servicing.
-  **WARNING:** This equipment contains optical transceivers, which comply with the limits of Class 1 laser radiation.



-  **WARNING:** When no cable is connected, visible and invisible laser radiation may be emitted from the aperture of the optical transceiver ports. Avoid exposure to laser radiation and do not stare into open apertures.

Related Publications

For more information about the S6000-ON system, refer to the *S6000-Open Networking (ON) Getting Started Guide*.

-  **NOTE:** For the most recent documentation and software, visit iSupport at <http://www.dell.com/support>.


The S6000-Open Networking (ON) System

This chapter contains general features, capabilities, and physical configurations the S6000-ON supports.

Introduction

The S6000-ON is a fully featured switch/router one rack unit (RU) system where you require 10Gb and/or 40Gb connections. It contains 32 ports of 40G that you can use to create a configuration of 96 ports of 10G small form-factor pluggable plus (SFP+) (using breakout cables) and eight ports of 40G quad small form-factor pluggable plus (QSFP+). The S6000-ON power supply unit (PSU) side ([Figure 2-1](#)) contains the PSU and fan modules.

Figure 2-1. S6000-ON PSU-Side View

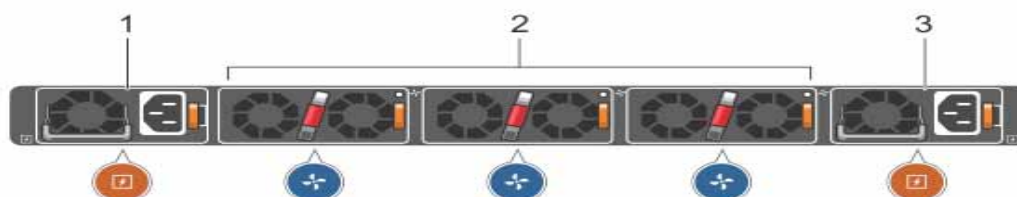


1 - PSU 1

2 - Fan Modules 1-3

3 - PSU 2

The S6000-ON input/output (I/O) side ([Figure 2-2](#)) includes:

- Thirty-two fixed QSFP+ ports
- One USB 2.0 port
- One USB-B serial console port
- One RS-232 serial console port
- One 10/100/1000BaseT (RJ-45) Ethernet management port

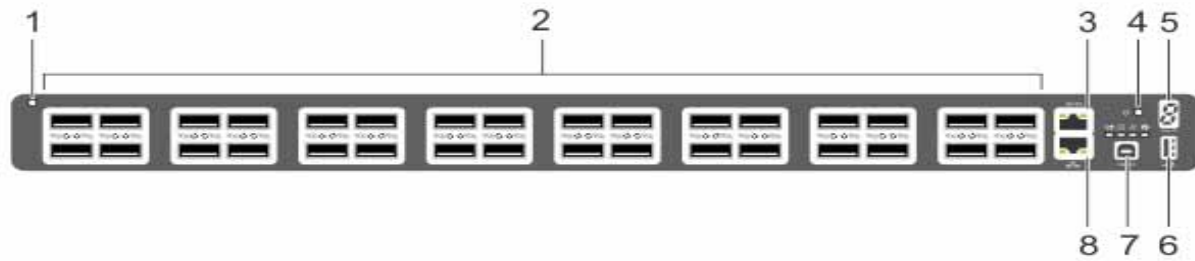Figure 2-2. S6000-ON I/O-Side View

- 1 - System LED
- 2 - Thirty-two QSFP+ Ports
- 3 - Serial Console
- 4 - Reset
- 5 - Stack ID
- 6 - USB-A
- 7 - USB-B Console
- 8 - Management



NOTE: The system light emitting diodes (LEDs) are on the I/O side. The fan tray power indicators are on the PSU side.

Features

The S6000-ON has the following features:

- One universal serial bus (USB-A) port
- One USB-B console port
- Thirty-two 40Gbps QSFP+ ports
- On-board central processing unit (CPU) system
- Temperature monitoring
- Software-readable thermal monitor
- Real time clock (RTC) support
- Hot-plugging redundant power supply
- Current monitoring for power management
- Removable fan
- Standard 1U chassis high

Physical Dimensions

The S6000-ON has the following physical dimensions:

- 434 x 460 x 43.5 mm (W x D x H)
- 17.09 x 18.11 x 1.71 inches (W x D x H)

Chassis Ports

The following is a list of the standard ports located on each S6000-ON chassis:

- Serial RS-232 port (RJ-45 type)
- Out of band (OOB) Ethernet management port (RJ-45 type)
- Thirty-two 40Gbps QSFP+ ports
- One universal serial bus port (USB Type-A)


Determine System Status

You can view S6000-ON status information with the system LEDs.

LED Displays


As shown in [Figure 2-3](#), the S6000-ON includes LED displays on both the I/O and PSU side of the chassis. For LED information, refer to your third-party operating software documentation.

Figure 2-3. PSU and Fan Tray LEDs

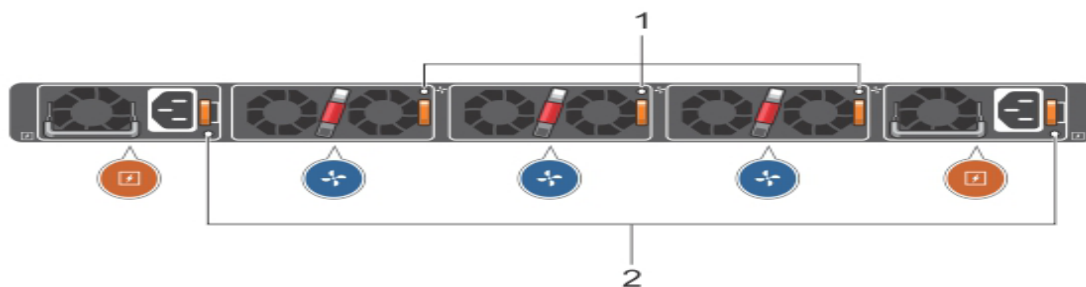

1- Fan Tray 1-3 LEDs

2 - PSU 1-2 LEDs

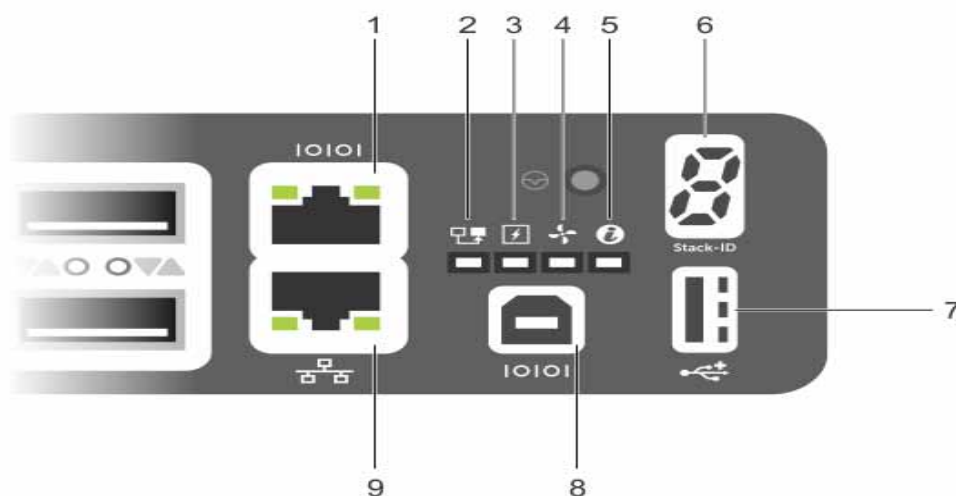

- 1 - Serial Console
- 2 - Master LED
- 3 - Power LED
- 4 - Fan Status LED
- 5 - Locator LED
- 6 - Stack ID
- 7 - USB-A
- 8 - USB-B Console
- 9 - Management

Basic Installation Requirements

Detailed installation instructions for the S6000-ON are provided in [Site Location and Preparation](#) and [Install the S6000-ON](#). However, here is an initial list of components required for a successful installation of the S6000-ON:

- S6000-ON chassis
- AC cables to connect the AC power source to each of the chassis' AC power supplies (country/regional configured)
- Mounting brackets for rack installation (included)
- Screws for rack installation and #1 and #2 Phillips screwdrivers (not included)
- Ground cable (not included, optional)
- Ground cable screws (included)
- Copper/fiber cables

Optional components for installation:

- Additional power supply units
- Additional fan modules
- Additional mounting brackets (if installing in a 4-post rack or cabinet)

Orderable S6000-ON Components

You can order the S6000-ON system in several different configurations. Also, you can order optional modules and optics separately.

The following is a list of different configurations and modules:

- S6000-ON AC Normal Airflow: thirty-two 40Gbps QSFP+ ports, two AC power supplies, and three fan subsystems (airflow from the I/O side to the PSU side)
- S6000-ON AC Reverse Airflow: thirty-two 40Gbps QSFP+ ports, two AC power supplies, and three fan subsystems Fan with airflow from the I/O side to the PSU side
- Fan with airflow from the PSU side to the I/O side
- AC Power supply with airflow from the I/O side to the PSU side
- AC Power supply with airflow from the PSU side to the I/O side


Site Location and Preparation

The S6000-ON is suitable for installation as part of a common bond network (CBN). It can be installed in:

- Network telecommunication facilities
- Data centers
- Other locations where the national electric code (NEC) applies

This chapter contains the following sections:

- [Site Selection](#)
- [Cabinet Placement](#)
- [Rack Mount \(Optional\)](#)
- [Ground \(Optional\)](#)
- [Fans and Airflow](#)
- [Power](#)
- [Storing Components](#)

 **NOTE:** Install the S6000-ON system into a rack or cabinet before installing any optional components.

Site Selection

Install the S6000-ON in an restricted access area. A restricted access area is one in which service personnel can only gain access using a special tool, lock, key, or other means of security and access is controlled by the authority responsible for the location.

Ensure that the area where the S6000-ON system is installed meets the following safety requirements:

- Near an adequate power source. Connect the system to the appropriate branch circuit protection as defined by your local electrical codes.
- Environmental temperature between 32° to 113°F (0° to 45°C).
- Relative humidity that does not exceed 90 percent non-condensing.
- In a dry, clean, well-ventilated and temperature-controlled room, away from heat sources such as hot air vents or direct sunlight.
- Away from sources of severe electromagnetic noise.
- Positioned in a rack or cabinet, or on a desktop with adequate space in the front, rear, and sides of the S6000-ON for proper ventilation and access.

Cabinet Placement

Install the S6000-ON only in indoor cabinets designed for use in a controlled environment as described in [Site Selection](#). Do not install the S6000-ON in outside plant cabinets.

The cabinet must meet the following:

- Minimum cabinet size and airflow are according to the Electronic Industries Alliance (EIA) standard.

Rack Mount (Optional)

When you prepare your equipment rack, ensure that the rack is earth ground. Ground the equipment rack to the same ground point used by the power service in your area. The ground path must be permanent.

Ground (Optional)

Use the S6000-ON in a CBN. Connect the grounding cables as described in [Install the S6000-ON](#).

Fans and Airflow

The S6000-ON fans support two airflow options. Be sure to order the fans suitable to support your site's ventilation. Use a single type of airflow fan in your system. Do not mix reverse and normal airflows in a single S6000-ON chassis.

Fan Combinations

The S6000-ON has stock keeping units (SKUs) that support the following configurations. Installation of the fans is done as part of the factory install based on SKU type.

- AC PSU with fan airflow from I/O to PSU
- AC PSU with fan airflow from PSU to I/O

All fans and PSUs in a configuration must be in the same airflow direction.

The S6000-ON supports three fan trays with airflow directions from the I/O to the utility or the utility to the I/O.


For proper ventilation, position the S6000-ON in an equipment rack (or cabinet) with a minimum of 5 inches (12.7cm) of clearance around the exhaust vents. When you install two S6000-ON systems near each other, position the two chassis at least 5 inches (12.7cm) apart to permit proper airflow. The fan speed increases when the internal temperature reaches 72°C and decreases to normal speed when the temperature falls to 58°C. The S6000-ON never intentionally turns off the fans.


Power

To connect the chassis to the applicable power source, use the appropriate power cord with the S6000-ON system. An AC power cord (country/region specific) is included with the system.

When installing AC systems, follow the requirements of the National Electrical Code, ANSI/NFPA 70 where applicable.

The system is powered-up as soon as the power cord is connected between the system and the power source.

 **CAUTION:** Always disconnect the power cable before you service the power supply slots.


 **CAUTION:** Use the power supply cord as the main disconnect device on the AC system. Make sure that the socket-outlet is located/installed near the equipment and is easily accessible.

Storing Components

If you do not install your S6000-ON and components immediately, Dell Networking recommends properly storing the system and all optional components until you are ready to install them.

Follow these storage guidelines:

- Storage temperature must remain constant ranging from -4° to 158° F (from -20°C to 70° C).
- Store on a dry surface or floor, away from direct sunlight, heat, and air conditioning ducts.
- Store in a dust-free environment.

 **WARNING:** ESD damage can occur when components are mishandled. Always wear an ESD-preventive wrist or heel ground strap when handling the S6000-ON and its accessories. After you remove the original packaging, place the S6000-ON and its components on an anti-static surface.


Install the S6000-ON

To install the S6000-ON system, Dell Networking recommends completing the installation procedures in the order presented in this chapter.

Always handle the S6000-ON and its components with care. Avoid dropping the system or its field replaceable units (FRUs).

This chapter describes the installation procedures as follows:

- [Unpack the S6000-ON System](#)
- [Install Rack or Cabinet Hardware](#)
 - [Installing the Dell ReadyRails System](#)
 - [Configuring a Two-Post Flush-Mount](#)
 - [Configuring a Two-Post Center-Mount](#)
 - [Configure a Four-Post Thread](#)
- [Installing the S6000-ON System](#)
 - [Installing a 1U Front-Rack](#)
 - [Attaching the Ground Cable \(Optional\)](#)
 - [Installing an AC Power Supply](#)
- [Installing QSFP+ Optics](#)
- [Power Up the S6000-ON System](#)

 **WARNING:** ESD damage can occur if components are mishandled. Always wear an ESD-preventive wrist or heel ground strap when handling the S6000-ON and its components. As with all electrical devices of this type, take all the necessary safety precautions to prevent injury when installing this system.

Unpack the S6000-ON System

 **NOTE:** Before unpacking the system, inspect the container and immediately report any evidence of damage.

Package Contents

When unpacking the S6000-ON switch, make sure that the following items are included:

- One S6000-ON switch
- One RJ-45 to DB-9 female cable
- Two sets of rail kits (no tools required)
- Two PSUs


- At least one AC power cord (country/region specific)
- *Getting Started Guide*
- *Safety and Regulatory Information*
- *Warranty and Support Information*


Unpacking Steps

- 1 Place the container on a clean, flat surface and cut all straps securing the container.
- 2 Open the container or remove the container top.
- 3 Carefully remove the switch from the container and place it on a secure and clean surface.
- 4 Remove all packing material.
- 5 Inspect the product and accessories for damage.

Install Rack or Cabinet Hardware

You may either place the switch on the rack shelf or mount the switch directly into a 19" wide, EIA-310-E- compliant rack (four-post, two-post, or threaded methods). The Dell ReadyRails™ system is provided for one 1U front-rack and two-post installations. The ReadyRails system includes two separately packaged rail assemblies and two rails that are shipped attached to the sides of the switch.

 **WARNING:** This is a condensed reference. Read the safety instructions in your Safety, Environmental, and Regulatory information booklet before you begin.

 **NOTE:** The illustrations in this document are not intended to represent a specific switch.

 **NOTE:** Do not use the mounted Ready-Rails as a shelf or a workplace.

Rack Mount Safety Considerations

- **Rack loading** — Overloading or uneven loading of racks may result in shelf or rack failure, causing damage to the equipment and possible personal injury. Stabilize racks in a permanent location before loading begins. Mount the components beginning at the bottom of the rack, then work to the top. Do not exceed your rack load rating.
- **Power considerations** — Connect only to the power source specified on the unit. When multiple electrical components are installed in a rack, ensure that the total component power ratings do not exceed the circuit capabilities. Overloaded power sources and extension cords present fire and shock hazards.
- **Elevated ambient temperature** — If installed in a closed rack assembly, the operating temperature of the rack environment may be greater than the room ambient temperature. Use care not to exceed the 40°C maximum ambient temperature of the switch.
- **Reduced air flow** — Install the equipment in the rack so that the amount of airflow required for safe operation of the equipment is not compromised.


- Reliable earthing — Maintain reliable earthing of rack-mounted equipment. Pay particular attention to the supply connections other than the direct connections to the branch circuit, for example: use of power strips.
- Do not mount the equipment with the rear panel facing in the downward position.

Installing the Dell ReadyRails System

The ReadyRails rack mounting system is provided to easily configure your rack for installation of your S6000-ON system. You can install the ReadyRails system using the 1U tool-less method or one of three possible 1U tooled methods (two-post flush mount, two-post center mount, or four-post threaded).

Step	Task
1	With the ReadyRails flange ears facing outward, place one rail between the left and right vertical posts. Align and seat the rear flange rail pegs in the rear vertical post flange. In Figure 4-1 , item 1 and its extractions show how the pegs appear in both the square and non-threaded round holes.

Figure 4-1. 1U Tool-less Configuration

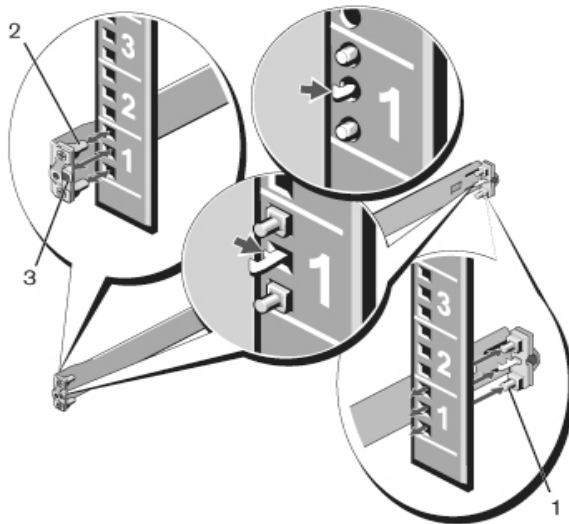


2	Align and seat the front flange pegs in the holes on the front side of the vertical post. Refer to Figure 4-1 , item 2.
3	Repeat this procedure for the second rail.
4	To remove each rail, pull on the latch release button on each flange ear and unseat each rail. Refer to Figure 4-1 , item 3.

Configuring a Two-Post Flush-Mount

Step	Task
1	For this configuration, remove the castings from the front side of each ReadyRails assembly. Refer to Figure 4-2 , item 1. To remove the two screws from each front flange ear (on the switch side of the rail) and remove each casting, use a Torx driver. Retain the castings for future rack requirements. It is not necessary to remove the rear flange castings.

Figure 4-2. Two-Post Flush-Mount Configuration

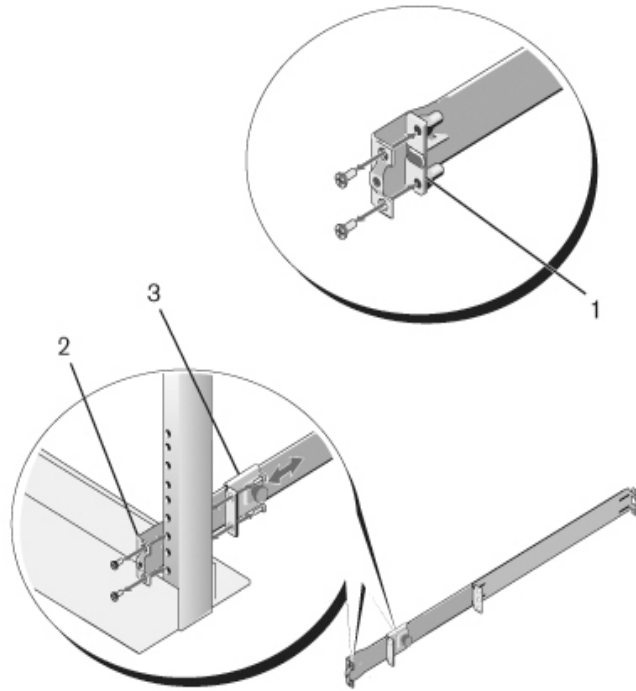


2	Attach one rail to the front post flange with two user-supplied screws. Refer to Figure 4-2 , item 2.
3	Slide the plunger bracket forward against the vertical post and secure the plunger bracket to the post flange with two user-supplied screws. Refer to Figure 4-2 , item 3.
4	Repeat this procedure for the second rail.

Configuring a Two-Post Center-Mount

Step	Task
1	Slide the plunger bracket rearward until it clicks into place and secure the bracket to the front post flange with two user-supplied screws. Refer to Figure 4-3 , item 1.

Figure 4-3. Two-Post Center-Mount Configuration

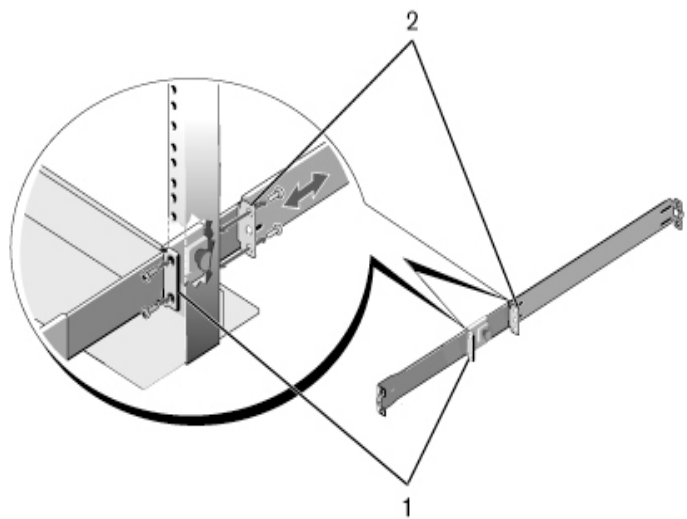


2	Slide the back bracket towards the post and secure it to the post flange with two user-supplied screws. Refer to Figure 4-3 , item 2.
3	Repeat this procedure for the second rail.

Configure a Four-Post Thread

Step	Task
1	For this configuration, remove the flange ear castings from each end of the ReadyRails assemblies. To remove the two screws from each flange ear and remove each casting, use a Torx driver. Refer to Figure , item 1. Retain the castings for future rack requirements.
2	For each rail, attach the front and rear flanges to the post flanges with two user-supplied screws at each end. Refer to Figure , item 2.

Figure 4-4. Four-Post Threaded Configuration

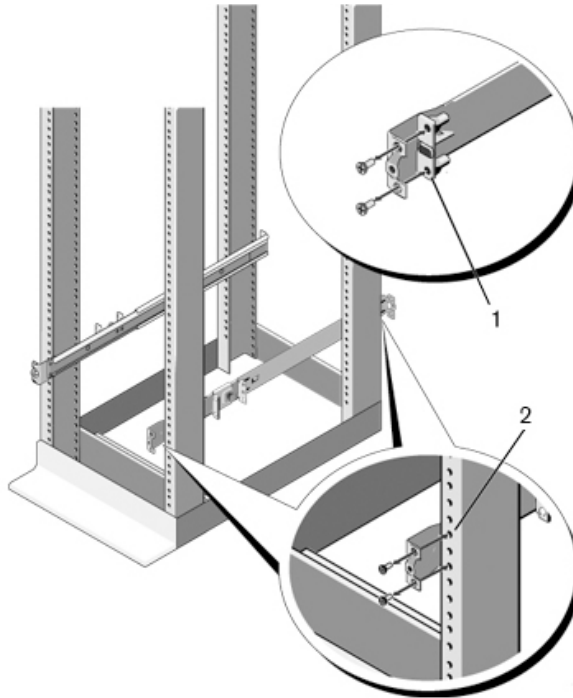

Installing the S6000-ON System


You can mount the system in the 1U front-rack or 1U two-post (flush and center) configurations. The following is an example of a front-rack configuration. For the 1U two-post (flush and center) configurations, slide the system into the rails in the same manner as the four-post configurations.

Installing a 1U Front-Rack

You must configure the rails that are attached to the system.


Step	Task
1	Attach the switch rails (inner chassis members) to the S6000-ON system. Figure 4-5 , item 3 shows the detail for the front standoff with the locking tab.

Figure 4-5. Attaching the Switch Rails

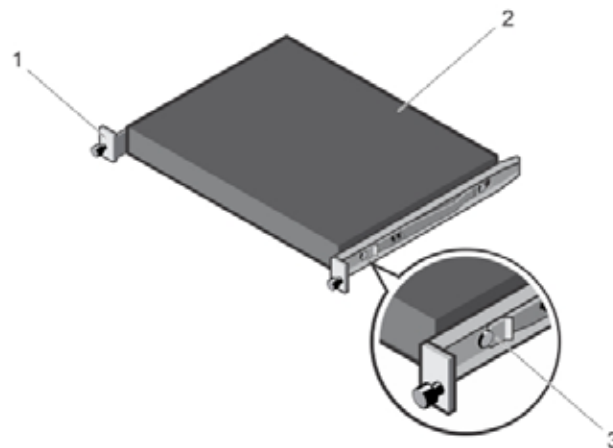

Step	Task
2	<p>After you have installed both switch rails, line them up on the previously mounted Ready-Rails and slide the switch in until it is flush with front of rack. About three inches prior to full insertion, the rail locking feature engages to keep the switch from inadvertently sliding out of the rack and falling.</p> <p>NOTE: Do not use the mounted Ready-Rails as a shelf or a workplace.</p>

Figure 4-6. Front Rack Installation

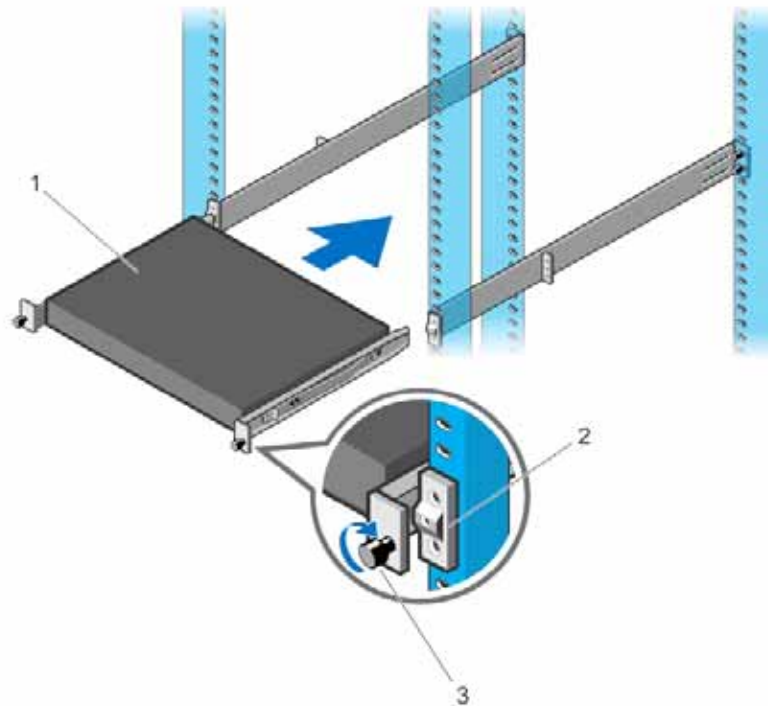

Attaching the Ground Cable (Optional)

To attach the ground cable to the chassis, use a single M4x0.7 screw. The cable itself is not included with the S6000-ON. To properly ground the chassis, Dell Networking recommends using a 6AWG one-hole lug, #10 hole size, 63" spacing (not included in shipping). The one-hole lug must be a UL recognized, crimp-type lug.

To connect the ground cable to the system, follow these steps:

- CAUTION:** Grounding conductors *must* be made of copper. Do not use aluminum conductors.
- NOTE:** The rack installation "ears" are not suitable for grounding.
- NOTE:** Coat the one-hole lug with an anti-oxidant compound prior to crimping. Also, bring any un-plated mating surfaces to a shiny finish and coat with an anti-oxidant prior to mating. Plated mating surfaces must be clean and free from contamination.

Step	Task
1	Take the one M4x0.7 screw from the package.
2	Cut the cable to the desired length. The cable length must facilitate proper operation of the fault interrupt circuits. Dell Networking recommends using of the shortest cable route allowable.
3	Attach the one-hole lug to the chassis using the supplied 10-32 screw with the captive internal tooth lock washer. Torque the screw to 20 in-lbs.
4	Attach the other end of the ground cable to a suitable ground point. The rack installation ears are not a suitable grounding point.

Installing an AC Power Supply

The S6000-ON supports two hot-swappable PSUs with integrated fans that provide cooling for the system. The S6000-ON supports AC power supplies with two air-flow directions (I/O to PSU or PSU to I/O). Two PSUs are required for full redundancy, but the system will operate with a single PSU.


NOTE: S6000-ON ships with two PSUs. However, it is possible to run the unit with a single PSU. If you use a single PSU, install a blank plate in the other PSU slot. Dell Networking recommends using power supply 2 (PSU2) as the blank plate slot.

The PSUs are field replaceable. When running with full redundancy (two power supplies installed and running), you can remove and replace one PSU while the other PSU is running without disrupting traffic.

WARNING: ESD damage can occur if components are mishandled. Always wear an ESD-preventive wrist or heel ground strap when handling the S6000-ON and its components.




CAUTION: To prevent electrical shock, ensure the S6000-ON is grounded properly (optional). If you ground your equipment incorrectly, excessive emissions may result. Use a qualified electrician to ensure the power cables meet your local electrical requirements.

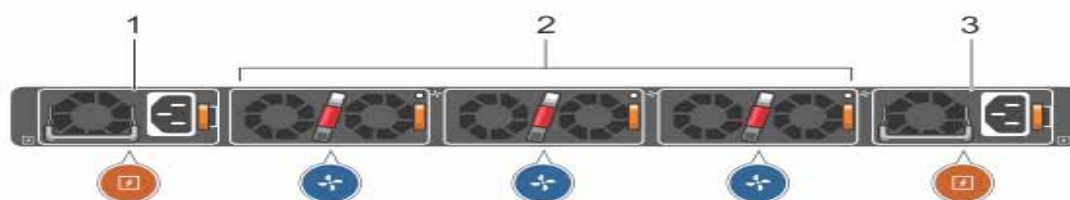Figure 4-7. S6000-ON Power Supply




1 - PSU 1

3 - PSU 2

-  **NOTE:** The PSU slides into the slot smoothly. Do not force a PSU into a slot as this may damage the PSU or the S6000-ON chassis.
-  **NOTE:** Ensure that the PSU is correctly installed. When the PSU is correctly installed, the power connector is on the right side of the PSU and the status LED is at the bottom of the PSU.
-  **NOTE:** S6000-ON ships with two PSUs. However, it is possible to run the unit with a single PSU. If you use a single PSU, install a blank plate in the other PSU slot. Dell Networking recommends using power supply 2 (PSU2) as the blank plate slot.

Step	Task
1	Remove the PSU slot cover from the S6000-ON (PSU side of switch), either of the two PSU slots may be selected.
2	Remove the PSU from the electrostatic bag.
3	Insert the PSU into the switch PSU slot (insert the PSU-exposed PCB edge connector first). The PSU slot is keyed such that the PSU can only be fully inserted in one orientation.

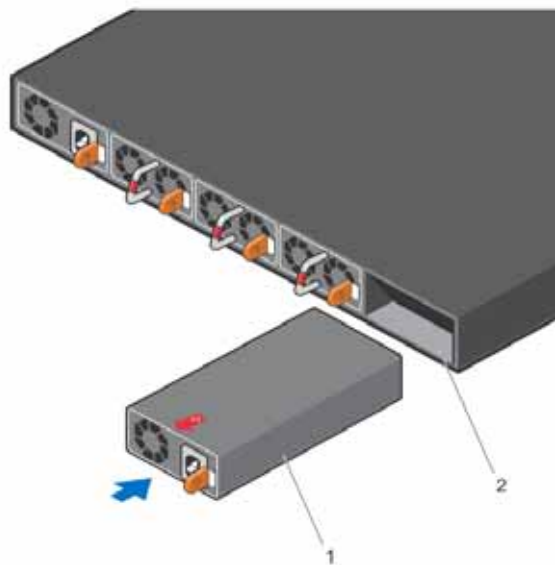


1 - PSU

2 - Slot


When you install the PSU correctly it should snap into place and be flush with the back of the switch.


4	Plug in the appropriate cord (AC three prong) from the switch PSU to the external power source (an AC wall outlet).
5	If you have a redundant PSU (2nd PSU), repeat steps 1 through 5 above using the 2nd PSU slot on the S6000-ON system.

-  **NOTE:** The system powers up as soon as the cables are connected between the power supply and the power source.

Installing QSFP+ Optics

The S6000-ON has thirty-two 40Gbps QSFP+ optical ports.


 **WARNING:** ESD damage can occur if components are mishandled. Always wear an ESD-preventive wrist or heel ground strap when handling the S6000-ON and its components.

 **WARNING:** When working with optical fibers, follow all warning labels and always wear eye protection. Never look directly into the end of a terminated or unterminated fiber or connector, which may cause eye damage.

To install QSFP+ optics into an open port, follow these steps:

- 1 Position the optic so it is in the correct position. The optic has a key that prevents it from being inserted incorrectly.
- 2 Insert the optic into the port until it gently snaps into place.

You can install LR4 optics only in the top-row front-end ports 1, 3, 5, 7, 9, 11, 13, 15, 17, 19, 21, 23, 25, 27, 29, and 31.

 **NOTE:** Both rows of QSFP+ ports require that you insert the 40G optics with the tabs facing up.

Removing QSFP+ Optics

Remove an optic by pushing the tab on the optic and sliding the optic from the port.

When removing optics with direct attach cables (DACs) from the port, pull the release tab firmly and steadily. Prior to pulling the release tab, you may need to gently push the optic into the port to ensure it is seated properly. Do not jerk or tug repeatedly on the tab.

Power Up the S6000-ON System

Supply power to the S6000-ON after it is mounted in a rack or cabinet.

Dell Networking recommends re-inspecting your system prior to powering up. Verify that the:

- equipment is properly secured to the rack and properly grounded (optional).
- equipment rack is properly mounted and grounded (optional).
- ambient temperature around the unit (which may be higher than the room temperature) is within the limits specified for the S6000-ON.
- airflow around the S6000-ON unit is sufficient.
- input circuits are correctly sized for the loads and that you are using sufficient over-current protection devices.
- protective covers on the S6000-ON are in place.
- blank panels are installed over all openings in the S6000-ON chassis that would have contained optional modules.

Power Up Sequence

When the system powers up, the fans immediately come on at high speed. The fan speed slows as the system continues to boot up.

Power Supplies

The S6000-ON supports two hot-swappable PSUs with integrated fans that provide cooling for the system. The S6000-ON supports AC power supplies with two air-flow directions (I/O to PSU and PSU to I/O). Two PSUs are required for full redundancy, but the system will operate with a single PSU.

NOTE: If you use a single PSU, install a blank plate in the other PSU slot. Dell Networking recommends using power supply 2 (PSU2) as the blank plate slot.

The PSUs are field replaceable. When running with full redundancy (two power supplies installed and running), you can remove and replace one PSU without disrupting traffic.

WARNING: ESD damage can occur if components are mishandled. Always wear an ESD-preventive wrist or heel ground strap when handling the S6000-ON and its components.

CAUTION: To prevent electrical shock, ensure the S6000-ON is grounded properly. If you ground your equipment incorrectly, excessive emissions may result. Use a qualified electrician to ensure the power cables meet your local electrical requirements.


Components

The following power supply options are available for the S6000-ON:

- AC power supply with integrated fan
- AC power supply with integrated reverse flow fan

Power supply 1 (PSU1) is on the left side of the chassis; power supply 2 (PSU2) is on the right side of the chassis.

Figure 5-1. S6000-ON with PSU

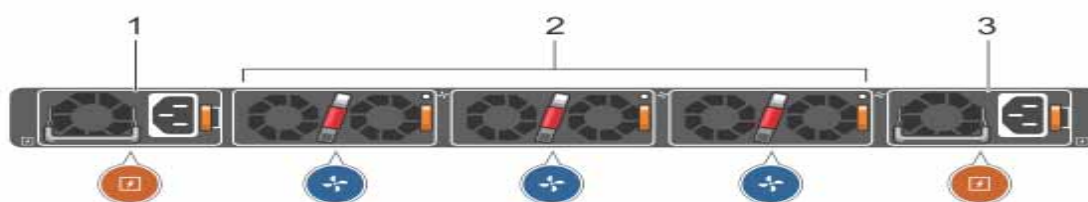

1 - PSU 1

2 - Fan Modules 1-3

3 - PSU 2

The PSUs are in a single piece with the PSU fans (see [Figure 5-1](#)). You can replace the fan trays individually, but you cannot replace the fans that are integrated in the PSUs—if the fans integrated in the PSU fail, you must replace the entire PSU. For fan tray replacement procedures, refer to [Fans](#).

- WARNING:** Prevent exposure and contact with hazardous voltages. Do not attempt to operate this system with the safety cover removed.
- CAUTION:** Remove the power cable from the PSU prior to removing the PSU. Also, do not connect the power cable before you insert the PSU in the chassis.
- NOTE:** To comply with the GR-1089 Lightning Criteria for Equipment Interfacing with AC Power Ports, use an external surge protector device (SPD) at the AC input of the router.

Installing an AC Power Supply

To install an AC power supply, follow these steps:

- NOTE:** The PSU slides into the slot smoothly. Do not force a PSU into a slot as this may damage the PSU or the S6000-ON chassis.
- NOTE:** Ensure that you correctly install the PSU. When you install the PSU correctly, the power connector is on the left side of the PSU and the status LED is at the bottom of the PSU.
- NOTE:** If you use a single PSU, install a blank plate in the other PSU slot. Dell Networking recommends using power supply 2 (PSU2) as the blank plate slot.

Step	Task
1	Remove the PSU slot cover from the S6000-ON (the PSU side of switch). You may select either of the two PSU slots.
2	Remove the PSU from the electro-static bag.
3	Insert the PSU into the switch PSU slot (insert the PSU exposed PCB edge connector first). The PSU slot is keyed such that the PSU can only be fully inserted in one orientation.



1 - PSU


2 - Slot


When you install the PSU correctly, it snaps into place and is flushed with the back of the switch.


4	Plug in the appropriate cord (AC three prong) from the switch PSU to the external power source (an AC wall outlet).
5	If you have a redundant PSU (a second PSU), repeat steps 1 through 4 above using the second PSU slot on the S6000-ON system.


- NOTE:** The S6000-ON powers up as soon as the cables are connected between the power supply and the power source.


Replacing an AC Power Supply

 **Caution:** Disconnect the power cord before removing the power supplies. Also, disconnect all power cords before servicing.

 **NOTE:** The PSU slides into the slot smoothly. Do not force a PSU into a slot as this may damage the PSU or the S6000-ON chassis.

 **NOTE:** If a PSU fails, you must replace the entire unit. There are no field servicable components in the PSU. To request a hardware replacement, refer to [Technical Support](#).

 **NOTE:** If you use a single PSU, install a blank plate in the other PSU slot. Dell Networking recommends using power supply 2 (PSU2) as the blank plate slot.

Step	Task
1	Disconnect the power cable from the PSU.
2	Use the grab handle to slide the PSU out of the power supply bay.
3	Use the grab handle on the replacement PSU to slide the PSU into the power supply bay.
4	Attach the power cord to the replacement PSU.
 WARNING: The S6000-ON powers up as soon as the cables are connected between the power supply and the power source.	

After Installing the S6000-ON

After you have securely installed and powered on the S6000-ON, refer to your ONIE-compatible third-party operating system documentation to configure your system.

Fans

The S6000-ON comes from the factory with two PSUs and three fan modules installed in the chassis (see [Figure 6-1](#)). The S6000-ON has SKUs that support the following configurations. Installation of the fans is done as part of the factory install based on SKU type.

- AC PSU with fan airflow from I/O to PSU
- AC PSU with fan airflow from PSU to I/O

All fans and PSUs in a configuration must be in the same airflow direction.

The S6000-ON supports three fan trays with airflow directions from the I/O to the utility or the utility to the I/O.


Environmental factors can decrease the amount of time required between fan replacements. Check the environmental factors regularly. An increase in temperature and/or particulate matter in the air might affect performance (for example, new equipment installation).

CAUTION: Check the fans at six-month intervals and replace them as necessary. Regularly monitor the speeds of the cooling fans in order to accurately determine replacement intervals.

Components

- S6000-ON Fan module
- S6000-ON Fan module - Reverse flow

Figure 6-1. S6000-ON Fan Modules and PSU

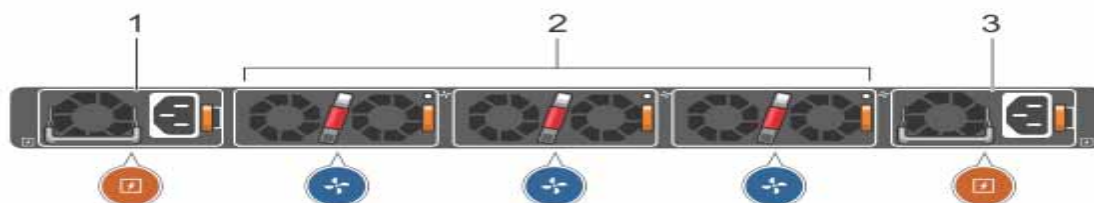

1 - PSU 1

2 - Fan Modules 1-3

3 - PSU 2

Installing a Fan Module




CAUTION: DO NOT mix airflow directions. All fans must use the same airflow direction (reverse or normal).

The fan modules in the S6000-ON are field replaceable. Module slot 0 is on the left side of the chassis; module slot 2 is on the right side of the chassis.

Step	Task
1	Take the fan module out of the shipping box.
2	Use the grab handle to slide the fan module into the bay.

Replacing a Fan Module

Step	Task
	 CAUTION: You must complete steps 1 and 2 within one minute or the system powers down.
1	Use the grab handle to slide the fan module out of the bay.
2	Use the grab handle on the replacement module to slide it into the bay.


Management Ports

Besides the 10Gigabit and 40Gigabit switch ports, the S6000-ON provides several ports for management and storage.

Accessing the RS-232 Console Port

- ✎ **NOTE:** Before starting this procedure, be sure that your PC has a 9-pin serial port and that you have a terminal emulation program already installed and running on the PC.
- ✎ **NOTE:** If your PC's serial port cannot accept a female DB-9 connector, acquire a DB-9 male-to-male adaptor. The RS-232 console port is located (and labeled) on the I/O-side of the S6000-ON chassis (see [Figure 7-1](#)).

Figure 7-1. Location of Console Port

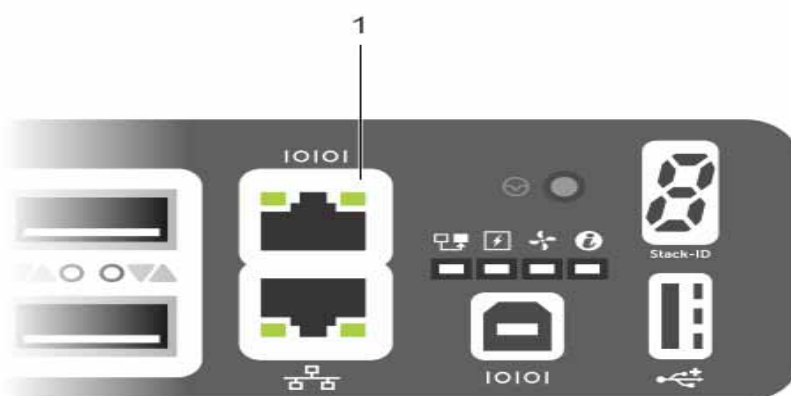

1 - RS-232 console port

Accessing the Console Port

Step	Task
1	Install the provided RJ-45 connector side of the provided copper cable into the S6000-ON console port.
2	Install the DB-9 female side of the provided copper cable into your PC's serial port (or into other DTE terminal server hardware that you intend to use).
3	Keep the default terminal settings on the S6000-ON console as follows: <ul style="list-style-type: none"> • 115200 baud rate • No parity • 8 data bits • 1 stop bit • No flow control


Accessing the USB-B Console Port

The terminal settings are the same for the USB-B port and the console port:

- 115200 baud rate
- No parity
- 8 data bits
- 1 stop bit
- No flow control


When you connect the USB-B port, it becomes the primary connection and, when the system is connected, it sends all messages to the USB-B port.

Figure 7-2. USB-B Console Port Connector

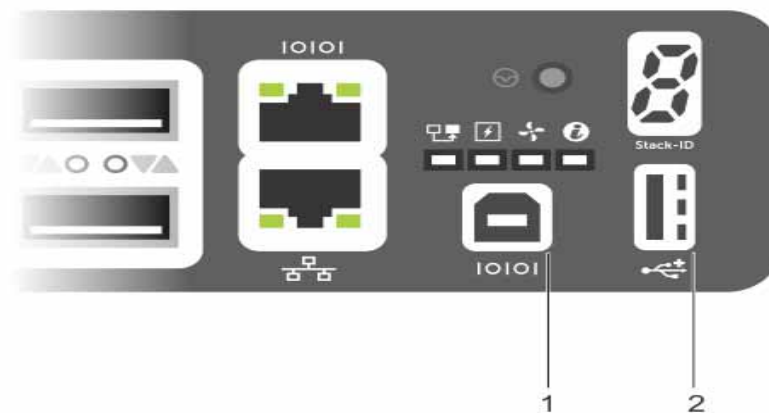

1 - USB-B port

2 - USB-A port


 **NOTE:** Before starting this procedure, be sure you have a terminal emulation program already installed on your PC. You will need to install the appropriate drivers to support the USB-B port. For assistance, contact Dell Networking Technical Support.


Step	Task
1	Power on the PC (Dell Networking recommends using the XP operating system).
2	Connect the USB-A end of cable into an available USB port on the PC.
3	Connect the USB-B end of cable into the USB-B console port on the S6000-ON.
4	Power on the S6000-ON.
5	Install the necessary USB device drivers (you will need an internet connection). For assistance, contact Dell Networking Technical Support.
6	Open your terminal software emulation program to access the S6000-ON.
7	Keep the default terminal settings on the S6000-ON console as follows: <ul style="list-style-type: none">• 115200 baud rate• No parity• 8 data bits• 1 stop bit• No flow control

Specifications

This chapter contains the following sections:

- [Chassis Physical Design](#)
- [Environmental Parameters](#)
- [Power Requirements](#)
- [IEEE Standards](#)
- [Agency Compliance](#)

 **Caution:** Operate the product at an ambient temperature not higher than 40°C.

 **Lithium Battery Caution:** There is a danger of explosion if the battery is incorrectly replaced. Replace only with same or equivalent type of battery. Dispose of the batteries according to the manufacturer's instructions.

Chassis Physical Design

Parameter	Specifications
Height	1.71 inches (43.5 mm)
Width	17.08 inches (434 mm)
Depth	18.11 inches (460 mm)
Weight	16.12 lbs (7.32 kg)

Environmental Parameters

Parameter	Specifications
Operating temperature	32° to 113°F (0° to 45°C)
Operating humidity	5 to 90% (RH), non-condensing
Storage temperature	–40° to 158°F (–40° to 70°C)
Storage humidity	5 to 95% (RH), non-condensing
Maximum thermal output	419.7 BTU/hr

Power Requirements

The following represents the PSU's capabilities and does not represent S6000-ON operation.

AC Input Specification

Parameter	Specifications
Power supply	100–240 VAC 50/60 Hz
Maximum current draw per system	2.9 A @ 280 watts/100vac 1.4 A @ 280 watts/200vac
Maximum power consumption	286 Watts
Reliability	MTBF 355,178 hours

IEEE Standards

The S6000-ON system complies with the following IEEE standards:

- 802.3ab Gigabit Ethernet (1000BASE-T)
- 802.3ae 10 Gigabit Ethernet (10GBASE-X)
- 802.3ba 40 Gigabit Ethernet (40GBase-SR4, 40GBase-CR4) on optical ports
- 802.3u Fast Ethernet (100BASE-TX)
- 802.3z Gigabit Ethernet (1000BASE-X)

Agency Compliance

USA Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designated to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance to the instructions, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures necessary to correct the interference at their own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Dell Networking is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications in the equipment. Unauthorized changes or modification could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canadian Department of Communication Statement

Industry Canada Class A emission compliance statement

This Class A digital apparatus complies with Canadian ICES-003.


Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

European Union EMC Directive Conformance Statement

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. Force 10 Networks can not accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of this product, including the fitting of non-Dell Networking option cards.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to CISPR 22/European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

 **WARNING:** This is a Class A product. In a domestic environment, this device may cause radio interference, in which case, you may be required to take adequate measures.

VORSICHT: Trennen Sie vor dem Entfernen des Netzteils das Netzstromkabel.

VORSICHT: Trennen Sie vor der Aufnahme von Wartungsarbeiten alle Stromkabel.

Anmerkung:

Das Gerät ist nicht für die Benutzung im unmittelbaren Gesichtsfeld am Bildschirmarbeitsplatz vorgesehen.


VORSICHT:

Gleit-/schienengeführte Geräte sollen nicht als Regal oder Arbeitsfläche verwendet werden.

Japan: VCCI Compliance for Class A Equipment

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

This is Class A product based on the standard of the Voluntary Control Council For Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.


 **WARNING:** Use the AC power cords with Dell Networking equipment only. Do not use Dell Networking AC power cords with any unauthorized hardware.

本製品に同梱いたしております電源コードセットは、本製品専用です。本電源コードセットは、本製品以外の製品ならびに他の用途でご使用いただくことは出来ません。製品本体には同梱された電源コードセットを使用し、他製品の電源コードセットを使用しないで下さい。

Korean Certification of Compliance

A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.
------------------------	---

Korean Package Label

	 [equipment type]
품명(Product Name)	Ethernet Switch
모델명(Model)	[model number]
신청인(Applicant)	Force10 Networks, Inc.
제조사(Manufacturer)	Delta Networks, (Dongguan) Ltd.
제조년월(Manufacturing Date)	[date]
제조국(Country of Origin)	China

Safety Standards and Compliance Agency Certifications

- CUS UL 60950-1, 2nd Edition
- CSA 60950-1-03, 2nd Edition
- EN 60950-1:2006 +A1:2010+A11:2009 +A12:2011/IEC 60950-1:2005 EN 62311:2008
- EN 60825-1, 1st Edition
- EN 60825-1 Safety of Laser Products—Part 1: Equipment Classification Requirements and User's Guide
- EN 60825-2 Safety of Laser Products—Part 2: Safety of Optical Fibre Communication Systems
- FDA Regulation 21CFR 1040.10 and 1040.11
- IEC 60950-1, 2nd Ed, including all National Deviations and Group Differences

Electromagnetic Compatibility (EMC)

Emissions

- International: CISPR 22: 2006, Class A
- Australia/New Zealand: AS/NZS CISPR 22:2009, Class A
- Canada: ICES-003, Issue-4, Class A
- Europe: EN55022 2006 (CISPR 22: 2006), Class A
- Japan: V3/2012.04 Class A
- USA: FCC CFR47 Part 15, Subpart B, Class A

Immunity

- EN300 386 V1.4.1:2008 EMC for Network Equipment
- EN 55022:2006 +A1:2007/CISPR 22:2009 (Class A)
- EN 55024:1998 +A1:2001 +A2:2003
- EN 61000-3-2:2006 +A2:2009
- EN 61000-3-3:2008
- EN 61000-4-2 ESD
- EN 61000-4-3 Radiated Immunity
- EN 61000-4-4 EFT
- EN 61000-4-5 Surge
- EN 61000-4-6 Low Frequency Conducted Immunity
- EN 300 386 V1.4.1:2008
- RoHS: Directive 2011/65/EU

Product Recycling and Disposal

Recycle or discard this system according to applicable local and national regulations. Dell Networking encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Dell Networking offers a variety of product return programs and services in several countries to assist equipment owners in recycling their IT products.

Waste Electrical and Electronic Equipment (WEEE) Directive for Recovery, Recycle and Reuse of IT and Telecommunications Products

Dell Networking switches are labeled in accordance with European Directive 2002/96/EC concerning waste electrical and electronic equipment (WEEE). The Directive determines the framework for the return and recycling of used appliances as applicable throughout the European Union. This label is applied to various products to indicate that the product is not to be thrown away, but rather reclaimed upon end of life per this Directive.

Figure 8-1. The European WEEE symbol



In accordance with the European WEEE Directive, electrical and electronic equipment (EEE) is to be collected separately and to be reused, recycled, or recovered at end of life. Users of EEE with the WEEE marking per Annex IV of the WEEE Directive, as shown above, must not dispose of end of life EEE as unsorted municipal waste, but use the collection framework available to customers for the return, recycling and recovery of WEEE. Customer participation is important to minimize any potential effects of EEE on the environment and human health due to the potential presence of hazardous substances in EEE.

Dell Networking products, which fall within the scope of the WEEE, are labeled with the crossed-out wheelie-bin symbol, as shown above, as required by WEEE.

For information on Dell Networking product recycling offerings, see the WEEE Recycling instructions on iSupport.

For more information, contact the Dell Networking Technical Assistance Center (TAC).

Technical Support

This chapter contains the following sections:

- [The iSupport Website](#)
- [Contacting the Technical Assistance Center](#)
- [Requesting a Hardware Replacement](#)

The iSupport Website

iSupport provides a range of documents and tools to assist you with effectively using Dell Networking equipment and mitigating the impact of network outages. Through iSupport you can obtain technical information regarding Dell Networking products, access to software upgrades and patches, and open and manage your technical assistance center (TAC) cases. Dell iSupport provides integrated, secure access to these services.

Accessing iSupport Services

The URL for iSupport is <http://www.dell.com/support/my-support>. You must have a userid and password to access iSupport services.

To request a userid and password, follow these steps:

Step	Task
1	On the Dell Networking Support page, click the Account Request link.
2	Fill out the User Account Request form and click Send . You will receive your userid and password by E-mail.
3	To access iSupport services, click the LOGIN link and enter your userid and password.

Contacting the Technical Assistance Center

How to Contact Dell Networking TAC	Log in to iSupport at http://www.dell.com/support/my-support and select the Service Request tab.
Information to Submit When Opening a Support Case	<ul style="list-style-type: none"> • Your name, company name, phone number, and E-mail address • Preferred method of contact • Model number • Software version number • Symptom description
Managing Your Case	Log in to iSupport and select the Service Request tab to view all open cases and Return Materials Authorizations (RMAs).
Downloading Software Updates	Log in to iSupport and select the Software Center tab.
Technical Documentation	Log in to iSupport and select the Documents tab. You can access this page without logging in using the Documentation link on the iSupport page.
Contact Information	Web: http://www.dell.com . Telephone: <ul style="list-style-type: none"> • US and Canada: 866.965.5800 • International: 408.965.5800

Requesting a Hardware Replacement

To request replacement hardware, follow these steps:

Step	Task
1	Determine the part number and serial number of the component. To list the numbers for all components installed in the chassis, use the show hardware command.
2	Request an RMA number from TAC by opening a support case. Open a support case by: <ul style="list-style-type: none"> • Using the Create Service Request form on the iSupport page. • Contacting Dell Networking directly by E-mail or by phone. • Provide the following information when using E-mail or phone: <ul style="list-style-type: none"> • Part number, description, and serial number of the component. • Your name, organization name, telephone number, fax number, and E-mail address. • Shipping address for the replacement component, including a contact name, phone number, and E-mail address.



Printed in the U.S.A.

www.dell.com | support.dell.com