

SMART\_AIRPLUS

SMART 30\_R

SMART 30\_S

# Vaporetto®

## MANUALE DI ISTRUZIONI

INSTRUCTION MANUAL

MANUAL DE INSTRUCCIONES

MANUEL D'INSTRUCTIONS

BEDIENUNGSANLEITUNG

MANUAL DE INSTRUÇÕES

**REGISTRA IL TUO PRODOTTO**  
**REGISTER YOUR PRODUCT**  
**ENREGISTREZ VOTRE PRODUIT**  
**REGISTRA TU PRODUCTO**  
**GERÄTREGISTRIERUNG**  
**REGISTE O SEU PRODUTO**  
[www.polti.com](http://www.polti.com)

 **POLTI®**  
NATURAL HOME FEELING

**VT SMART\_AIRPLUS****VT SMART 30\_R****VT SMART 30\_S****only SMART\_AIRPLUS**

**TUBO VAPORE CON DISPENSER**  
STEAM HOSE WITH DISPENSER  
TUBE VAPEUR AVEC DISTRIBUTEUR  
TUBO VAPOR CON DISPENSER  
DAMPFROHR MIT VERTEILER  
TUBO VAPOR COM DISTRIBUIDOR

**only SMART 30\_R  
only SMART 30\_S**

**TUBO FLESSIBILE VAPORE**  
FLEXIBLE STEAM HOSE  
FLESIBILE VAPEUR  
TUBO FLEXIBILE VAPOR  
ANSCHLUSSSCHLAUCH  
TUBO FLEXIBILE DE VAPOR

**SPAZZOLA PAVIMENTI**

BRUSH FOR FLOORS  
BROSSE SOLS  
CEPILLO DE SUELOS  
FUßBODENBÜRSTE  
ESCOVA PAVIMENTOS

**TUBI PROLUNGA**

EXTENSION TUBES  
TUBES RALLONGE  
TUBOS RÍGIDOS  
VERLÄNGERUNGSRÖHRE  
TUBOS EXTENSÃO

**SPAZZOLA PICCOLA**

SMALL BRUSH  
PETITE BROSSE  
CEPILLO PEQUEÑO  
KLEINE BÜRSTE  
ESCOVA PEQUENA

**INNESTO ACCESSORI**

ADAPTER  
RACCORD ACCESSOIRES  
CONEXION ACCESORIOS  
DAMPFDÜSENANSCHLUSS  
ENGATE ACCESORIOS

**LANCIA VAPORE**

LANCE  
LANCE  
LANZA  
DAMPFDÜSE  
LANÇA

**CONCENTRATORE VAPORE**

CURVED TIP FOR LANCE  
BEC COURBE POUR LANCE  
PUNTA CURVA PARA LANZA  
DAMPFDÜSE 120°  
BICO CURVO PARA LANÇA

**SPAZZOLINO TONDO PICCOLO CON SETOLE IN NYLON**

SMALL ROUND BRUSH WITH NYLON BRISTLES  
PETITE BROSSE RONDE AVEC SOIES EN LAITON  
CEPILLO REDONDO PEQUEÑO CON CERDAS DE NYLON  
KLEINE RUNDBÜRSTE MIT NYLONBORSTEN  
ESCOVA REDONDA PEQUENA COM CERDAS DE NYLON

**PANNO PER PAVIMENTI**

CLOTH FOR LARGE BRUSH  
BONNETTE POUR GRANDE BROSSE  
PAÑO PARA CEPILLO GRANDE  
TUCH FÜR GROßE BÜRSTE  
PANO PARA ESCOVA GRANDE

**SPAZZOLINO TONDO GRANDE CON SETOLE IN NYLON**

LARGE ROUND BRUSH WITH NYLON BRISTLES  
GRANDE BROSSE RONDE AVEC SOIES EN LAITON  
CEPILLO REDONDO GRANDE CON CERDAS DE NYLON  
GROßE RUNDBÜRSTE MIT NYLONBORSTEN  
ESCOVA REDONDA GRANDE COM CERDAS DE NYLON

**CUFFIA**

SOCKETTE  
BONNETTE  
PAÑO  
TUCH  
PANO

**IMBUTO**

FUNNEL  
ENTONNOIR  
EMBUDO  
TRICHTER  
FUNIL




**only SMART\_AIRPLUS**

**FLACONE FRESCOVAPORE**  
FRESCOVAPORE BOTTLE  
FLACON FRESCOVAPORE  
FRASCO FRESCOVAPORE  
FRESCOVAPORE-FLÄSCHCHEN  
FRASCO FRESCOVAPORE

**TELAIO LAVAVETRI PER SPAZZOLA PICCOLA**

WINDOW-CLEANING TOOL FOR SMALL BRUSH  
MONTURE LAVE VITRES POUR PETITE BROSSE  
BASTIDOR LIMPIACRISTALES PARA CEPILLO PEQUEÑO  
FENSTERAUFSATZ FÜR KLEINE BÜRSTE  
CAIXILHO LAVA-VIDROS PARA ESCOVA PEQUENA



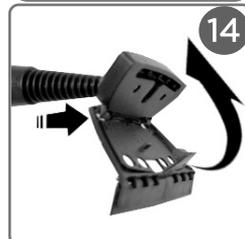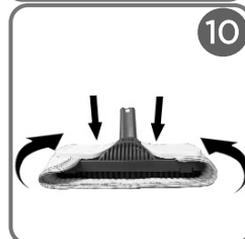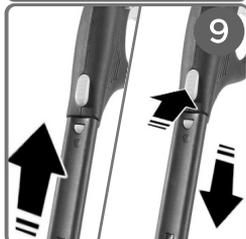

# OPTIONAL

PAEU0216



**N. 3 SPAZZOLINI TONDI PICCOLI CON SETOLE IN NYLON**  
 N. 3 SMALL ROUND BRUSH WITH NYLON BRISTLES  
 N. 3 PETITE BROsse RONDE AVEC SOIES EN LAITON  
 N. 3 CEPILLO REDONDO PEQUEÑO CON CERDAS DE NYLON  
 N. 3 KLEINE RUNDBÜRSTe MIT NYLONBORSTEN  
 N. 3 ESCOVA REDONDA PEQUENA COM CERDAS DE NYLON

PAEU0217



**N. 4 PANNI + N. 6 CUFFIE**  
 4 CLOTHS + 6 CAPS  
 4 LINGETTES + 6 BONNETTES  
 4 PAÑOS + 6 FUNDAS  
 4 TÛCHER + 6 HAUBEN  
 4 PANOS+ 6 PROTEÇÖES

PAEU0231



**N. 2 PANNI MICROFIBRA**  
 2 MICROFIBRE CLOTHS  
 2 CHIFFONS EN MICROFIBRE  
 2 PAÑOSDE MICROFIBRA  
 2 MIKROFASERTÛCHER  
 2 PANOS DE MICROFIBRA

only SMART\_AIRPLUS

PAEU0285



**FLACONE FRESCOVAPOR**  
 FRESCOVAPOR BOTTLE  
 FLACON FRESCOVAPOR  
 FRASCO FRESCOVAPOR  
 FRESCOVAPOR-FLÄSCHCHEN  
 FRASCO FRESCOVAPOR

PAEU0094

Gli accessori optional sono disponibili all'acquisto nei migliori negozi di elettrodomestici, nei Centri Assistenza autorizzati e sul sito [www.polti.com](http://www.polti.com).

The optional accessories are on sale at all the best domestic appliance retailers, an Authorised Polti Service Centre or online at [www.polti.com](http://www.polti.com).

Les accessoires en option sont disponibles dans les meilleurs magasins d'appareils électroménagers, un SAV agréé ou sur le site [www.polti.com](http://www.polti.com).

Los accesorios opcionales están en venta en las mejores tiendas de electrodomésticos, Centros de Asistencia Autorizadoo en la página web [www.polti.com](http://www.polti.com).

Die optionalen Zubehörteile sind in gut geführten Haushaltsgeschäften, bei den Autorisierten Kundendienstcenter oder auf [www.polti.com](http://www.polti.com) erhältlich.

Os acessórios opcionais estão disponíveis para compra nas melhores lojas de eletrodomésticos, um dos Centros de Assistência Autorizados ou no site [www.polti.com](http://www.polti.com).

# WELCOME TO THE WORLD OF VAPORETTO

THE CLEANING SYSTEM FOR ALL DOMESTIC SURFACES:  
ELIMINATE MITES, GERMS AND BACTERIA WITHOUT CHEMICAL DETERGENTS.



## ACCESSORIES FOR ALL NEEDS

On our web site [www.polti.com](http://www.polti.com) and in good appliance shops you will find a wide range of accessories to increase the performance and the practical applications of your appliances to make home cleaning even easier.

To check the compatibility of an accessory with your appliance, search the code PAEUXXXX listed next to each accessory on page 4.

If the accessory code you wish to buy is not listed in this manual, please contact our Customer Service team for more information.



## REGISTER YOUR PRODUCT

Visit our website [www.polti.com](http://www.polti.com) or call our Customer Services department to register your product.

You can benefit from a special welcome offer, in participating countries, and keep up to date on all the latest Polti news, as well as buy accessories and consumables.

To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the silver label, located on the box and underneath the appliance.

To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.



## OFFICIAL YOUTUBE CHANNEL

Want to know more? Visit our official channel:

[www.youtube.com/poltispa](http://www.youtube.com/poltispa). We will demonstrate the effectiveness of the natural and ecological power of steam both for ironing and cleaning, with many videos of the Vaporetto and all the other products from the world of Polti.

Sign up to the official channel to keep yourself updated about our video contents!

**ATTENTION:** The safety warnings are only indicated on this manual.

# SAFETY WARNINGS

## IMPORTANT PRECAUTIONS FOR USE



WARNING! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.



Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

Correct use of the product is only as detailed in this instruction manual.

Any use which does not comply with these instructions will invalidate the warranty.

## SAFETY SYMBOLS:



WARNING: High temperature. Risk of scalding!  
If shown on the product, do not touch as parts may be very hot.



WARNING: Steam.  
Risk of scalding!

This appliance reaches very high temperatures. Incorrect use of the device can cause scalding.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a fault or malfunction, do not try and repair the appliance yourself. In the event of a heavy knock, fall, damage or fall into water, the appliance may not longer be safe to use. Incorrect use or a lack of respect for the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.
- To carry out any maintenance or cleaning requiring access to the boiler, ensure that the appliance is switched off at the

power switch and disconnected from the mains for at least two hours.

- This appliance can be used by children over 8 years old, by people with reduced physical, sensory or mental abilities or by inexperienced persons only where they are instructed in advance on its safe use and only if informed of the dangers related to the product. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be done by children without the supervision of an adult. Keep the appliance and the power cable out of the reach of children under 8 years of age when the appliance is on or during the cooling phase.
- Keep all the parts of the packaging out of the reach of children; they are not toys. Keep the plastic bag out of the reach of children: danger of suffocation.
- This appliance is destined exclusively for indoor domestic use. **In order to reduce the risk of accidents, including: fires, electrocution, personal injury and scalding, both during use and during preparation, maintenance and storage, always take the fundamental precautions listed in this manual.**

## RISKS CONNECTED TO THE POWER SUPPLY - ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances. Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload the sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.

- Electrical extension leads that are unsuitable for the power rating or which are not compliant with law. They may overheat and possibly lead to short circuiting, fire, power outage or damage to the equipment. Only use extension leads which are certified, suitable for the power rating, supporting 16A and earthed.
- Always turn the appliance off at the ON/OFF switch before unplugging it.
- To remove the plug from the socket, do not pull the power cable, but hold the plug itself to avoid damage to the plug and the cable.
- Always unplug the appliance if it is not in use and before any preparation, maintenance or cleaning operation.
- The appliance must not be left unattended if plugged in to the mains.
- Fully unwind the cable from the cable winder before connecting the appliance to the mains and before use. Always use the product with the cable completely unwound
- Do not pull or jerk the cable or expose it to tensions (twisting, crushing or stretching). Keep the cable away from hot and/or sharp surfaces and elements. Avoid crushing the cables in doors and windows. Do not pull the cable tight around corners. Avoid treading on the cable. Do not pass over the cable with the appliance. Do not wind the power cable around the appliance, especially if the appliance is hot.
- Do not substitute the plug on the power cable.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid all possible hazards. Do not use the product if the power cable is damaged.
- Do not touch or use the appliance barefoot and/or with wet body or feet.
- Do not use the appliance near containers full of water, e.g. sinks, baths and swimming pools.
- Do not immerse the appliance, including the power cable and

plug, in water or other liquids.

- Steam must not be directed towards equipment containing electric or electronic components.

## RISKS DURING USE OF THE PRODUCT - INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not pour toxic substances, acids, solvents, detergents, corrosive substances and/or explosives or perfumes into the boiler.
- Only pour water or the water mix indicated in the Chapter “WHICH WATER TO USE” into the boiler.
- Do not direct the steam jet onto toxic substances, acids, solvents, detergents or corrosive substances. The handling and removal of dangerous substances must be carried out according to the indications of the manufacturers of these substances.
- Do not direct the steam jet onto explosive powders or liquids, hydrocarbons, open flames and or extremely hot objects.
- Do not position the product near sources of heat such as fireplaces, stoves and ovens.
- Do not obstruct the openings and grills on the product.
- Do not direct the steam jet on any part of the body of people or animals.
- Do not direct the steam jet on clothes while they are being worn.
- Cloths and rags and fabrics which have been subjected to a deep steam reach very high temperatures, above 100°C. Wait a few minutes and check that they have cooled before handling them. Therefore, avoid contact with the skin if they have just been steamed.
- The steam lock on the handle guarantees greater safety, as it prevents the accidental activation of steam delivery by children or people who are unaware of the function of the ap-

pliance. When steam is not being used, engage the steam lock. To continue steam delivery, return the switch to its original position.

- Always use the appliance with the safety cap supplied or an original replacement part. Using non-original Polti safety caps can lead to accidents.
- When accessing the pressurised boiler (removing the cap, filling up), ensure that the appliance has been switched off at the power switch and disconnected from the mains for at least two hour, allowing it to cool. There is a risk of accidents while the boiler is a switched on/hot and pressurised.
- Do not connect the appliance with the safety cap removed. Carefully tighten the safety cap before plugging in and turning on the appliance.
- Before turning on the appliance, check that there is nothing blocking the mouth of the boiler (filler bottle, funnel, or other objects), and that the safety cap is closed.
- Check that the safety cap is correctly tightened; if steam is escaping from the cap, switch off the boiler, unplug the power cable, wait for two hour for the appliance to cool, and then unscrew. Check the condition of the safety cap and seal. If the cap is in good condition, screw it back on completely. If steam continues to escape from the cap, take the appliance to the nearest authorised service centre.
- Periodically check the condition of the safety cap and seal. Impact and being dropped may compromise the safety of the cap. Replace with an original spare part or replace the seal.
- If the cap spins freely, this indicates that the boiler is still pressurised and therefore hot. Never force the cap open, whether the appliance is switched on or the boiler is switched off and the appliance is disconnected from the mains. Always wait for the boiler to cool, opening the cap without force.
- Do not use tools to unscrew the cap. If the cap cannot be removed, even once the appliance has cooled, go to your nearest authorised service centre.

- **WARNING**  Never fill the boiler as soon as the safety cap has been opened when the boiler is still hot, even if the appliance is unplugged from the mains. On contact with the hot, empty boiler, cold water will evaporate producing a spray of steam which can cause burns. Only fill the boiler when cold and always keep your face away from the boiler mouth when filling.
- The use of non-original Polti caps and disregard for the instructions in this manual constitutes improper use. Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance

## CORRECT USE OF THE PRODUCT

This appliance is intended for internal domestic use as a steam cleaner, in accordance with the descriptions and instructions contained in this manual. Please read these instructions carefully and keep them. If this manual is lost, it can be consulted and/or downloaded from the website [www.polti.com](http://www.polti.com).

Never leave the appliance exposed to weathering.

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

Before leaving our factory all our products are rigorously tested. This is the reason why your Vaporetto may contain some residual water in the boiler.

Correct use of the product is only as detailed in this instruction manual. Any other use may damage the appliance and invalidate the warranty.

## INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product  must be disposed of separately from other waste. Therefore, at the end of its life, the user must handover the appliance to an appropriate collection centre for electric and electronic waste. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health, and promotes recycling of the materials the product is made of. Unlawful disposal by the owner involves the application of the administrative sanctions envisaged by current legislation.

## WHICH WATER TO USE IN THE BOILER

This appliance has been designed to function with normal medium tap water between 8°F

and 20°F. If the tap water contains a lot of limescale use a mix composed of 50% tap water and 50% demineralised water which is widely available to purchase. Do not use pure demineralised water.

**Warning: check the hardness of the water at the technical office at your local council or the local water supplier.**

If you only use tap water, you can reduce the formation of limescale by using the special **Kalstop** limescale product, distributed by Polti, and available for sale at all major domestic-appliance stores or online at [www.polti.com](http://www.polti.com).

Never use distilled water, rain water or water containing additives (e.g. starch, perfumes), or water produced by other domestic appliances, by water softeners or filter jugs.

Do not use chemical substances or detergents.

## 1. PREPARING FOR USE

1.1 Remove the appliance from the packaging, checking that the product is whole and that all the parts are there.

1.2 Unscrew the safety cap (1) and fill the boiler with 1.6 l of water (if completely empty), making sure it does not overflow, using the special funnel (2). Carefully screw the safety cap back on, checking that it is completely closed.

1.3 Open the door of the one-piece socket and insert the moulded plug until a click is heard (3). Make sure that it is firmly connected before proceeding any further. To release the sheath, simply press the release keys and at the same time remove the moulded plug.

The steam gun has a safety switch that prevents the accidental starting of the steam delivery by children or people unfamiliar with how the appliance works (4)-(5).

1.4 **For the Smart\_Airplus model only**, the steam gun has a tank to be used exclusively with FrescoVapor, the natural deodorant that, besides leaving a pleasant fragrance, also captures bad smells. To use FrescoVapor, proceed as described in Chapter 16.

1.5 Connect the cable plug to an earthed power supply of the correct voltage (6).

Completely unwind the power cable before plugging it into the mains and before use, and always use the appliance with the power cable completely unwound.

1.6 Press the ON/OFF switch. The power indi-

cator light will come on.

1.7 Wait for the pressure indicator lamp to light up (about 10 minutes). Vaporetto is now ready for use.

**WARNING: if steam is escaping from the safety cap, switch the appliance off and unplug it from the mains. Wait for one two for the appliance to cool before unscrewing the cap and screwing it back on.**

**WARNING: Never leave the filling bottle or the funnel resting on the mouth of the boiler, with the product connected to the power supply, since this could cause burns.**

**WARNING: When first operating steam, there may be some drops of water mixed with the steam due to temperature imbalances. Direct the first jet of steam onto a rag.**

## 2. CONNECTION OF ACCESSORIES

Some accessories are contained in the accessory holder (15).

2.1 To connect the extension tubes to the grip, the large brush and the lance joint, simply join them to one another until the accessory locking button clicks into place (9). To release the accessories simply hold the button down and separate the components (9). Before using the accessories, make sure that they are firmly in place.

2.2 To connect the small brush, the steam concentrator, and the brush accessories to the flexible hose or the extension hoses, they must first be attached to the steam lance, so that the two arrows located on the two components line up (11)-(12). Then, connect the accessory adapter turning it until it is locked to accessory (13).

## 3. STEAM ADJUSTMENT

You can optimise the steam flow by means of the steam adjustment knob (8). You can increase the steam flow by turning the control in an anti-clockwise direction. Turning it in a clockwise direction reduces the steam flow. Here are some suggestions for the choice of steam flow level:

- **Strong steam:** for encrusted dirt, stains, sanitising, grease.
- **Normal steam:** for carpets, rugs, glass, tiles etc.
- **Delicate steam:** for vaporising plants and

cleaning delicate fabrics, upholstery, wallpaper, parquet, laminate, etc.

## 4. CLEANING FLOORS

Before using the appliance on delicate surfaces, ensure that the part in contact with the surface is free from foreign bodies that could cause scratches.

4.1 Make sure that Chapter 1 has been followed and connect the accessories as indicated in Chapter 2.

4.2 Connect the extension tubes to the steam hose and the floor brush to the extension tubes.

4.3 Attach the supplied cloth to the floor brush, locking it in place with the special lever hooks (10).

4.4 Adjust the intensity of the steam by turning the adjustment knob (8); for this type of surface we recommend **Medium level** steam.

4.5 Deactivate the steam lock (4)-(5) and continue with steam delivery, pressing the steam trigger on the handle of the steam hose.

4.6 Clean the floors by moving the brush.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool.

**WARNING: Do not use the appliance without the cloth.**

**WARNING: For additional safety, test steam delivery on a hidden part, leave the steamed part to dry to ensure that no changes in colour or deformations have occurred.**

## 5. CLEANING RUGS

**WARNING: Before cleaning fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.**

5.1 Make sure that Chapter 1 has been followed and connect the accessories as indicated in Chapter 2.

5.2 Connect the extension tubes to the steam hose and the floor brush to the extension tubes.

5.3 Adjust the intensity of the steam by turning the adjustment knob (8); for this type of

surface we recommend **Medium level** of steam.  
5.4 Deactivate the steam lock (4)-(5) and continue with steam delivery, pressing the steam trigger on the handle of the steam hose.

5.5 Pass the brush without cloth over the surface to bring dirt to the surface.

5.6 Attach the supplied cloth to the floor brush, locking it in place with the special lever hooks (10).

5.7 Go back over the surface to collect the dirt.

Before removing the cloth from the brush, wait a few minutes to allow the cloth to cool.

## 6. CLEANING CARPETS

**WARNING: Before cleaning fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.**

6.1 Make sure that Chapter 1 has been followed and connect the accessories as indicated in Chapter 2.

6.2 Connect the extension tubes to the steam hose and the floor brush to the extension tubes.

6.3 Adjust the intensity of the steam by turning the adjustment knob (8); for this type of surface we recommend **Medium level** of steam.

6.4 Ensure that the steam lock on the handle is deactivated (4)-(5).

6.5 Attach the supplied cloth to the floor brush, locking it in place with the special lever hooks (10). Proceed rapidly and without pressing over the carpet, running the brush forward, backward and sideways without pausing too long at the same point.

If the carpet is very dirty or saturated with cleaning products, do not insist too much. Results will be evident only after a few uses of Vaporetto.

## 7. CLEANING GLASS, WINDOWS AND TILES

**WARNING: To clean glass surfaces during cold weather, preheat the windows starting to vacuum from a distance of about 50 cm from the surface.**

7.1 Make sure that Chapter 1 has been followed and connect the accessories as indicated in Chapter 2.

7.2 Adjust the intensity of the steam by turning the adjustment knob (8); for this type of surface we recommend **Medium level** of steam.

7.3 Ensure that the steam lock on the handle is deactivated (5)-(6).

7.4 To clean windows and mirrors, steam the surface thoroughly to dissolve the dirt. Apply the window cleaner frame to the small brush (14) and go back over the surface to eliminate the dirt, without dispensing steam. The extension hoses can be connected to the handle to reach high surfaces.

7.5 To clean tiles, attach the cap to the small brush and pass over the surface, dispensing steam, in order to eliminate the dirt. The extension hoses can be connected to the handle to reach high surfaces.

## 8. CLEANING UPHOLSTERY (mattresses, sofas, car interiors, etc.)

**WARNING: Before cleaning leather or fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.**

8.1 Make sure that Chapter 1 has been followed and connect the accessories as indicated in Chapter 2.

8.2 Connect the small brush to the steam hose.

8.3 Attach the cap to the small brush.

8.4 Adjust the intensity of the steam by turning the adjustment knob (8); for this type of surface we recommend **Minimum level** of steam.

8.5 Ensure that the steam lock on the handle is deactivated (4)-(5).

8.6 Press and hold the steam trigger on the handle of the steam hose and pass over the surface.

## 9. CLEANING BATHROOM FIXTURES, GROUTING AND KITCHEN WORKTOPS

9.1 Make sure that Chapter 1 has been followed and connect the accessories as indicated in Chapter 2.

9.2 Adjust the intensity of the steam by turning the adjustment knob (8); for this type of surface we recommend **Maximum level** of steam.

9.3 Ensure that the steam lock on the handle is deactivated (4)-(5).

9.4 Press and hold the steam trigger on the handle and steam the surface thoroughly to dissolve the dirt. Use a dry cloth to remove the dirt dissolved by the steam. It is possible to connect the accessory adapter and one of the following accessories, recommended for removing encrusted dirt from very narrow surfaces, to the flexible handle: steam concentrator, small round brush, or large round brush.

The different coloured small round brushes allow for a different colour to be used for each surface or environment.

## 10. CLEANING FURNITURE AND DELICATE SURFACES

**WARNING: Before cleaning fabrics with steam, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material.**

10.1 Make sure that Chapter 1 has been followed and connect the accessories as indicated in Chapter 2.

10.2 Adjust the intensity of the steam by turning the adjustment knob (8); for this type of surface we recommend **Minimum level** of steam.

10.3 Press and hold the steam trigger on the handle and direct the jet onto a cloth.

**WARNING: Do not direct the steam jet directly onto surfaces.**

10.4 Use the cloth previously steamed to clean the surface, avoiding prolonged use on the same spot.

## 11. OTHER GENERAL USES

**WARNING: Before cleaning the surface, always do a test on a hidden part and see how it reacts to the application of steam.**

11.1 BRIGHTENING UP CURTAINS AND DRAPES

Mites and dust can be removed from curtains and drapes by steaming the fabric with just the handle. The steam is able to remove odours and brighten up colours, allowing the

fabric to be washed less frequently.  
For this surface, set the steam to **level minimum**.

## 11.2 REMOVING STAINS FROM CARPETS AND UPHOLSTERY



**WARNING: Steam.**  
Risk of scalding!

Connect the lance, direct the steam directly onto the stain with the greatest angle possible (never vertically with respect to the surface to be cleaned) and place a cloth beyond the stain to collect the dirt that has been “blown” away by the steam pressure.

For this surface, set the steam to **level minimum**.

## 11.3 TAKING CARE OF PLANTS AND HUMIDIFYING ROOMS

To care for your house plants, remove the dust from the leaves using the steam. Steam the surface directly from the handle, at a minimum distance of 50 cm, adjust the steam to the **minimum level**.

Plants breathe better and will be cleaner and brighter. Furthermore, you can also use the steam to refresh spaces, especially those frequented by smokers.

## 12. OUT OF WATER

When the product no longer dispenses steam, it means that there is no water in the boiler.

**WARNING: Never fill the boiler as soon as the safety cap is opened. The boiler is still hot, even if the appliance is unplugged. On contact with the hot, empty boiler, cold water will evaporate producing a spray of steam which could cause burns. Only fill the boiler when it is cold and always keep your face away from the boiler opening when filling.**



**WARNING: Steam.**  
Risk of scalding!

To continue with use, proceed as follows:

- **Unplug from the mains electricity.**
- Act on the steam request lever until steam flow ceases.
- Wait 10 minutes and remove the safety cap, unscrewing it without force.
- Leave the appliance to cool for at least 10

minutes.

- Filling the boiler as indicated on chapter 1.
- Carefully screw the safety cap back on, checking that it is completely closed.

**WARNING: If, during unscrewing, the cap spins freely or if steam is escaping, immediately stop the operation, ensuring that the boiler is switched off and the power cable is unplugged from the mains. Wait for the appliance to cool (two hour) and unscrew the cap before removal. TAKE CARE OF YOUR FACE !!!**

## 13. GENERAL MAINTENANCE

To clean the outside of the appliance, only use a damp cloth and tap water. All accessories can be cleaned using running water, ensuring they are completely dry before the next use. After using the brushes, we recommend letting the bristles cool down in their natural position, in order to avoid any deformation. Do not use detergents of any type. Every 2 months, rinse the boiler with tap water.

## 14. KALSTOP optional

Kalstop is the limescale product for appliances with boiler for ironing and steam cleaning. Regular use of Kalstop, every time the tank is filled with water:

- Extends the life of the appliance.
- Allows emission of a “drier” steam
- Prevents limescale build up.
- Protects the walls of the boiler.
- Contributes to saving energy.

## 15. STORAGE

15.1 Turn off the appliance and disconnect from the mains electricity.

15.2 The device can be put away with the brush, tubes and sheath housed in holsters (15 - 16).

15.3 The smaller accessories can be stored inside the accessories compartment (17 - 18).

**WARNING:** if pressing the steam lever when the appliance is still pressurised, even if off and disconnected from the mains, steam may in any case be released from the flexible hose. As such, before turning the appliance off and putting it away, please first press the lever until the steam flow ceases.

## 16. FRESCOVAPOR

only for model Smart\_Airplus

**WARNING:** Never put FrescoVapor in the boiler. Only use water in the boiler, following the instructions listed in the chapter 1.

FrescoVapor is a air freshener that contains natural substances. When mixed with steam it releases a fresh perfume in every space and, thanks to its special composition, it is able to eliminate bad odours.

To use FrescoVapor, proceed as follows:

- Unscrew the cap (19) of the deodorant reservoir of the steam gun and fill it with FrescoVapor (20).
- Screw on the cap.
- To adjust the quantity of deodorant, use the adjustment (21),  to reduce,  to increase. FrescoVapor can be used combined with the steam to clean all surfaces and with all the accessories, as described in the paragraph "Preparing for use".

By increasing the quantity of deodorant, the surface will be slightly damper, since FrescoVapor mixes with the steam being dispensed. To avoid dispensing FrescoVapor, turn the adjustment completely forward ( OFF). The adjustment only determines the quantity of deodorant that mixes with the steam. It does not regulate the quantity of steam. To adjust the quantity of steam, you must use the steam-adjustment dial (8).

Contents: 200 ml e

FrescoVapor is on sale at household appliance stores, at Polti authorised service centres or on the site [www.polti.com](http://www.polti.com).

**WARNING:**

- Keep out of the reach of children.
- IF SWALLOWED: Rinse mouth DO NOT induce vomiting. Immediately contact a POISON CENTRE or a doctor.
- Avoid contact with eyes, skin or clothing.
- Avoid releasing into the environment.
- Dispose of in conformity with local regulations.

**WARNING:** Before using FrescoVapor on upholstery, leather, special fabrics and wood surfaces, consult the manufacturer's instructions and always carry out a test on a hidden part or sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.

## 17. TROUBLESHOOTING

| PROBLEM  | CAUSE   | SOLUTION   |
|--|---|--|
| The appliance does not turn on.                          | No power.   | Check that the appliance has been disconnected from the mains, as indicated in Section 1.  |
| Does not dispense steam                                  | Out of water<br><br>Steam lock activated<br><br>The boiler is not yet pressurised.<br><br>Steam hose trapped or twisted | Add water to the boiler as described in Chapter 12.<br><br>Deactivate the steam lock on the handle<br><br>Wait until the steam indicator light comes on.<br><br>Check that the steam hose is not trapped or twisted. |
| Steam does not come out and the cap won't unscrew        | Steam button broken.  | Take the appliance to an Authorised Service Centre.  |
| The appliance is pressurized but little steam comes out. | Steam adjustment dial set to the <b>minimum</b> .   | Adjust the position of the dial for the desired increase.  |
| Accessories are difficult to assemble.                   | The seals produce friction.   | Lubricate the seals with silicone grease or Vaseline, or alternatively with a small amount of vegetable oil.   |

### ONLY FOR SMART\_AIRPLUS

| PROBLEM   | CAUSE  | SOLUTION   |
|---|--|--|
| FrescoVapor perfume is not released when using steam. | FrescoVapor knob regulation in OFF position<br><br>Please check the FrescoVapor level. | Turn the FrescoVapor regulation knob in min or max regulation.<br><br>Fill the Frescovapor tank. |
| Steam too damp using FrescoVapor.                     | The steam is mixing with FrescoVapor.  | Reduce the quantity of FrescoVapor as desired, to reduce the humidity of the steam.              |
| FrescoVapor has been inserted into the boiler.        | -----  | Take it to Authorized Service Centre   |

If problems persist or are not listed above, please contact a Polti Authorised Service Centre ([www.polti.com](http://www.polti.com) for the updated list) or contact Customer Services.

## WARRANTY

This appliance is for domestic use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over; the date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold with respect to the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

### WHAT THE WARRANTY COVERS

During the warranty, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the client is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To avail of the warranty, the customer should visit one of the Polti Authorised Service Centres with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relative date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty.

### WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect.
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract.
- Any defect resulting from *force majeure* (fires, short circuits) or caused by third parties (tampering).
- Damage caused by the use of non-original Polti parts, and repairs or modifications performed by staff or service centres not authorised by Polti.
- Damage caused by the customer.
- Parts (filter, brush, hose, etc.) damaged by use (consumable goods) or normal wear and tear.
- Any damage caused by limescale.
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions.
- Assembly of non-original Polti accessories or those that have been modified or which are not suitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti takes no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

**To see the up-to-date list of the Polti Authorised Service Centres, visit the website [www.polti.com](http://www.polti.com).**



**POLTI**<sup>®</sup>

NATURAL HOME FEELING

Vaporella<sup>®</sup>

Vaporetto<sup>®</sup>

LECOASPIRA

Vaporetto<sup>®</sup>

Forzaspira<sup>®</sup>

UNICO 

[www.politi.com](http://www.politi.com)



REGISTRA IL TUO PRODOTTO  
REGISTER YOUR PRODUCT  
ENREGISTREZ VOTRE PRODUIT  
REGISTRA TU PRODUCTO  
GERÄTREGISTRIERUNG  
REGISTRE O SEU PRODUTO

SN:



## CALL CENTER

|                             |                 |
|-----------------------------|-----------------|
| ITALIA SERVIZIO CLIENTI     | 848 800 806     |
| FRANCE SERVICE CLIENTS      | 04 786 642 12   |
| ESPAÑA SERVICIO AL CLIENTE  | 902 351 227     |
| PORTUGAL SERVIÇO AO CLIENTE | 707 780 274     |
| UK CUSTOMER CARE            | 0845 177 6584   |
| DEUTSCHLAND KUNDENDIENST    | 03222 109 472 9 |

OTHER COUNTRIES, PLEASE VISIT [WWW.POLTI.COM](http://WWW.POLTI.COM)



POLTI S.p.A, - Via Ferloni, 83  
22070 Bulgarogrosso (CO) - Italy  
[www.polti.com](http://www.polti.com)

Follow us:

