

DAILY REFERENCE GUIDE



THANK YOU FOR PURCHASING A WHIRLPOOL PRODUCT

To receive more comprehensive help and support, please register your product at www.whirlpool.eu/register



 
You can download the Safety Instructions and the Use and Care Guide by visiting our website www.whirlpool.eu and following the instructions on the back of this booklet.



Before using the appliance carefully read the Health and Safety guide.

PRODUCT DESCRIPTION

APPLIANCE

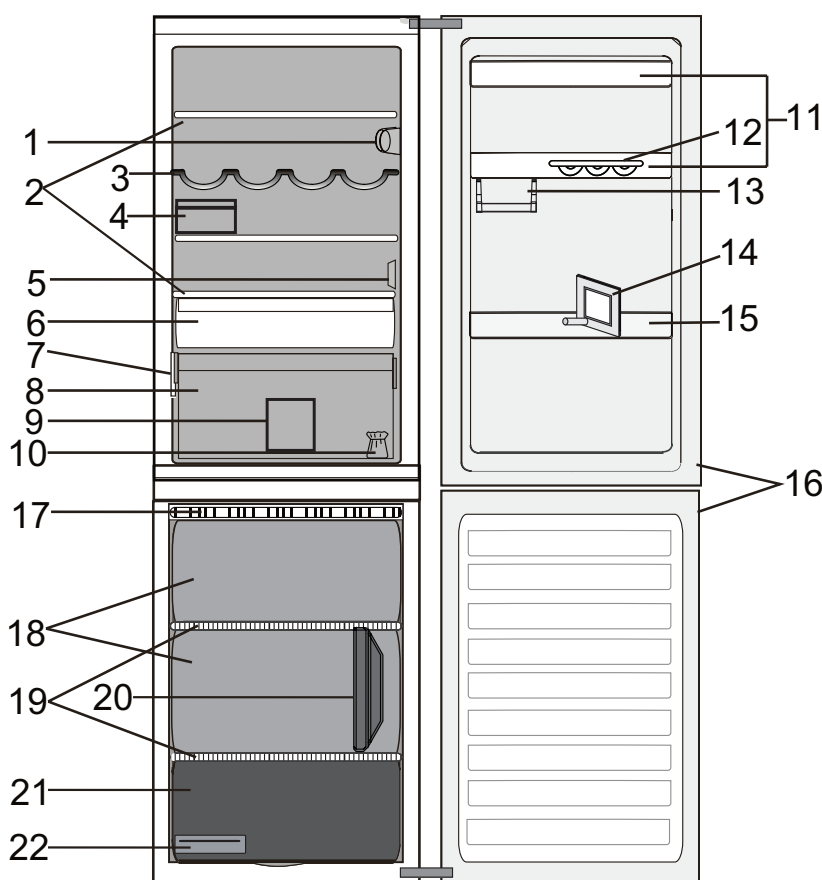


Refrigerator compartment

1. Electronic control panel / light unit
2. Shelves
3. Bottle rack
4. Cheese box + Lid
5. Sensor cover
6. Cooler compartment (best for meat and fish)
7. Rating plate with commercial name
8. Fruits and vegetables crisper
9. Fridge drawer divider
10. Door reversibility kit
11. Door trays
12. Egg tray
13. Small items half balcony
14. Bottle separator
15. Bottle balcony
16. Door seal

Freezer compartment

16. Door seals
17. Stop frost accessory
18. Freezer drawers
19. Shelves
20. Freezer drawer divider
21. Bottom drawer coolest zone best for freezing fresh food
22. Ice tray

 
CONTROL PANEL

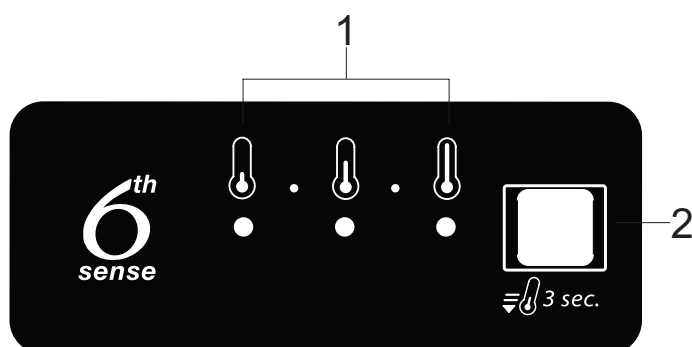


1. Indicator Leds (to display the current temperature setpoint or the Fast Cooling function)
2. Fast Cooling Button / Temperature Button

ACCESSORIES

 
EGG TRAY

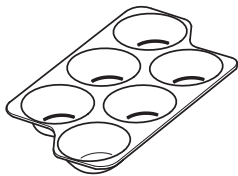


BOTTLE SEPARATOR

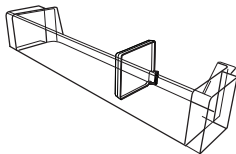 


ICE TRAY

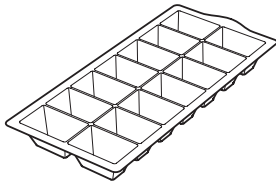 


STOP FROST ACCESSORY

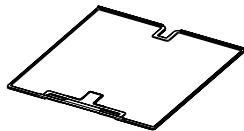 


CHEESE BOX

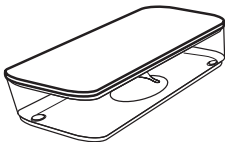 

FREEZER DRAWER DIVIDER

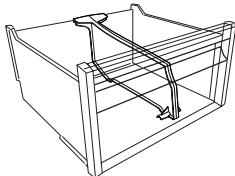 

FRIDGE DRAWER DIVIDER

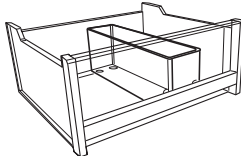 

FIRST TIME USE

HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically.
After starting the appliance, wait at least 4-6 hours before placing food into the fridge and into the freezer compartment.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

SOME OF THE FUNCTIONAL SOUNDS YOU MIGHT HEAR

A hissing sound when switching on the appliance for the first time or after a long pause.



A gurgling sound when refrigerant fluid enters into the pipes.



BRRR sound is from the compressor running.



Buzzing sound when water valve or fan start working.



A cracking sound when compressor starts.



The CLICK is from the thermostat which adjusts how often the compressor is running.



DAILY USE

See Use and Care Guide for more details on functions / see last page for information on how to obtain the Use and Care Guide

FUNCTIONS

TEMPERATURE SETTING

Press the Temperature button on the control panel to adjust the temperature from the warmest through the lower to the coldest level. Pressing the Temperature button, the temperature setting will change cyclically. At first plug-in of appliance temperature setpoint is present at medium position (factory setting). Following table shows temperature setpoints:

	HIGH TEMP.
	MED-HIGH TEMP.
	MEDIUM TEMP.
	MED-LOW TEMP.
	LOW TEMP.
	FAST COOLING
	
	

Note: Displayed set points correspond to the average temperature throughout the whole refrigerator.

6TH SENSE

This function automatically works to ensure the optimal conditions to preserve the stored food.

The "6th Sense" function is automatically activated when:

- a large amount of food is loaded into the refrigerator
- the refrigerator door is left open for a long time
- a prolonged power failure takes place, causing the internal temperature of the appliance to increase to values that cannot guarantee safe storage of food.

FAST COOLING

The use of the Fast Cooling function is recommended to increase the cooling capacity of the refrigerator compartment when placing a very high quantity of food within it.

To activate the Fast Cooling function, **press and hold for 3 seconds the Temperature button** on the control panel till all the 3 LEDs will turn on.

The function is automatically deactivated after 24 hours and return to previous selected set point.



The function can be manually deactivated by pressing and holding for 3 seconds the Temperature button on the control panel.

REFRIGERATOR LIGHT

The light system inside the refrigerator compartment uses LEDs light, allowing a better lighting as well as a very low energy consumption.


If the LED light system does not work, please contact the Service to replace it.

Important: The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more than 8 minutes the light will be automatically switched off.

ALARM TABLE

ALARM TYPE	SIGNAL	CAUSE	CURE
Door open alarm	Refrigerator Light blinks	The door has remained open for more than 5 minutes.	Close the door
Door open alarm	Refrigerator Light OFF	The door has remained open for more than 8 minutes.	Close the door
Malfunction	Any temperature indicators blinks	Product malfunction.	Contact the After-sales Service

 HOW TO STORE FOOD AND BEVERAGE

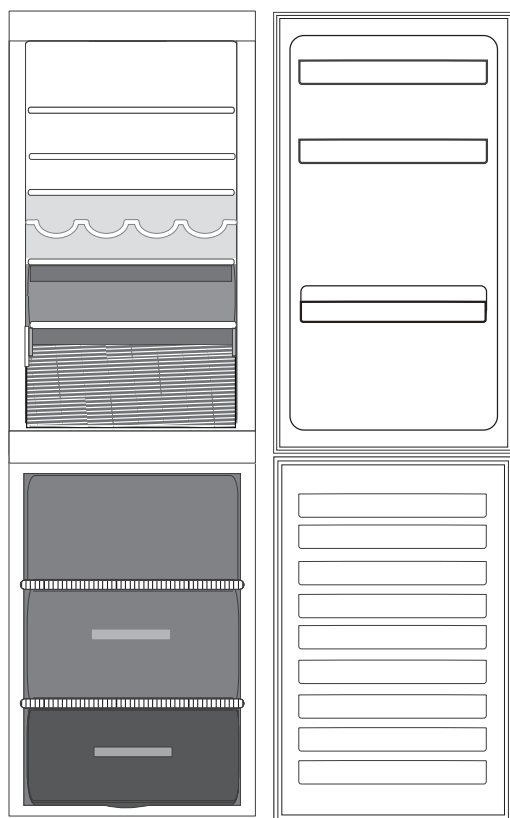


Legend



TEMPERATE ZONE

 Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam



COOL ZONE

Suggested for storage of cheese, milk, dairy food, delicatessen, yogurt.



COOLEST ZONE

Suggested for the storage of cold cuts, desserts.



FRUIT & VEGETABLE DRAWER



FREEZING ZONE DRAWER (MAX COOL ZONE)

Suggested to freeze fresh/cooked food.



FREEZER DRAWERS

Note

The Grey tone of the legend doesn't match with the color of drawers

FRIDGE COMPARTMENT

Use recyclable plastic, metal, aluminum and glass containers and cling film to wrap foods.

Always use closed containers for liquids and for food that may give off or be tainted by odor or flavor transfer or cover them.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment.

Foods which give off a large amount ethylene gas and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be separated or wrapped so as not to reduce the storage life; for example do not store tomatoes together with kiwi fruits or cabbage.

To avoid bottles falling over, you can use the bottle holder (available on selected models).

Do not store food too close together to enable sufficient air circulation.

FREEZER COMPARTMENT

The freezer is the ideal storage location for store frozen food, make ice cubes and freeze fresh food in the freezer compartment.

The maximum number of kilograms of fresh food that can be frozen within a 24-hour period is indicated on the rating plate (...kg/24h).

If you have a little quantity of food to store in the freezer, we recommend to use the coldest areas of your freezer compartment, corresponding to the bottom area.

PRODUCT FICHE

➡ www.whirlpool.eu The product sheet inclusive of energy data for this appliance can be downloaded from the website www.whirlpool.eu

HOW TO OBTAIN THE USE AND CARE GUIDE

> ➡ www.whirlpool.eu Download the Use and Care Guide from the website www.whirlpool.eu (it is possible to use this QR Code) indicating the product code.

> As an alternative, contact the After-Sales Service



CONTACTING OUR AFTER-SALES SERVICE

The contact information can be found in the warranty manual. When you contact the After-Sales Service, please supply the code found on the product's identification label.



400010872775

Printed in Italy