 
 
 


Trust

 
Multimedia Key Sheet

Trust Classicline Multimedia Keyboard

 
 
CN

-  静音
-  上一个
-  开始/暂停
-  下一个
-  音乐播放器

DE

-  Stummschaltung
-  Zurück
-  Abspielen/Pause
-  Weiter
-  Musik - Player

IT

-  Mute
-  Precedente
-  Riproduci / Pausa
-  Avanti
-  Lettore musicale

NL

-  Dempen
-  Vorige
-  Afspelen/Pauze
-  Volgende
-  Media speler

 
 
FI

-  Mykistys
-  Edellinen
-  Toisto/Tauko
-  Seuraava
-  Musiikkisoitin

 
SE

-  Tyst
-  Föregående
-  Spela upp/Paus
-  Nästa
-  Musikkspelaren

 
FR

-  Sourdine
-  Précédent
-  Lecture / Pause
-  Suivant
-  Lecteur de musique

 
 
ES

-  Silencio
-  Siguiente
-  Reproducción/Pausa
-  Anterior
-  Reproductor de música

 
 
RU

-  Без звука
-  Назад
-  Воспр. / Пауза
-  Вперед
-  Музыкальный проигрыватель

 
 
PL

-  Wyciszenie
-  Poprzednie
-  Odtwarzanie/pauza
-  Dalej
-  Odtwarzacz muzyki

 
 
CZ

-  Ztlumit
-  Předchozí
-  Přehrávat/Pozastavit
-  Další
-  Hudební přehrávač

BR

-  Modo silencioso
-  Anterior
-  Reproduzir/Pausar
-  Avançar
-  Music player

 
 
RO

-  Mute
-  înapoi
-  Play / Pause
-  înainte
-  Music player

 
 
 
HU

-  Elnémítás
-  Előző
-  Lejátszás/Szünet
-  Tovább
-  Zenelejátszó

 
BG

-  Изключване на звука
-  Предходен
-  Възпроизвеждане/ Пауза
-  Следващ
-  Музикалния плеър

 
EL

-  Αποκοπή
-  Προηγούμενο
-  Αναπαραγωγή/ Παύση
-  Επόμενο
-  Αναπαραγωγής μουσικής

PT

-  Sem som
-  Anterior
-  Reproduzir/Pausa
-  Seguinte
-  Música

 
 
 
NO

-  Demping
-  Forrige
-  Spill av / pause
-  Neste
-  Musikkavspiller

 
DA

-  Dæmp
-  Forrige
-  Afspil/pause
-  Næste
-  Musikafspiller

TR

-  Sessiz
-  Önceki
-  Yürüt / Duraklat
-  Next
-  Müzik çalar

 
SK

-  Stlmenie zvuku
-  Predchádzajúci
-  Prehrávanie/Pozastavenie
-  Ďalší
-  Hudobný prehrávač

 
SI

-  Nemo
-  Prejšnja
-  Predvajaj / Premor
-  Naslednja
-  Predvajalnik glasbe

 
 
HR

-  Prigušeno
-  Prethodno
-  Pokrenite / zaustavite
-  Sljedeće
-  Svirač glazbe

 
RS

-  Prigušeno
-  Prethodno
-  Reprodukcija / Pauza
-  Sledeće
-  Muzički plejer

UA

-  Надівати сурдинку
-  попередня
-  гра / пауза
-  Наступний
-  Музичний програвач

AR

-  الكتم
-  السابق
-  تشغيل / إيقاف مؤقت
-  التالي
-  مشغل الموسيقى