

Software Upgrade Guide

◆ Notice

1. Check correctly the Full model name of TV Set.
Ex) 42LB6900-TA : The Full model name must include national code.(ex. -TA)
2. Do not unplug the TV power cord during software upgrading.

1. Method to verify the Full model name of TV Set .

Method①. Check the label on the back of the TV set.



- 1) Check the “Model NO.” (EX. 42LB6900-TA)



Method ②. Check the Settings.

- 1) Press [Settings] key of remote control.
- 2) Move to the “General”

- 3) Select the “About This TV”
- 4) Check the “Model”

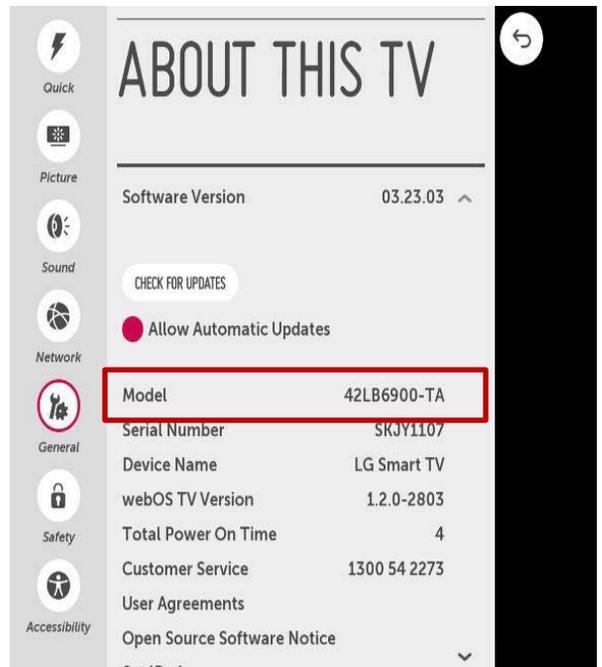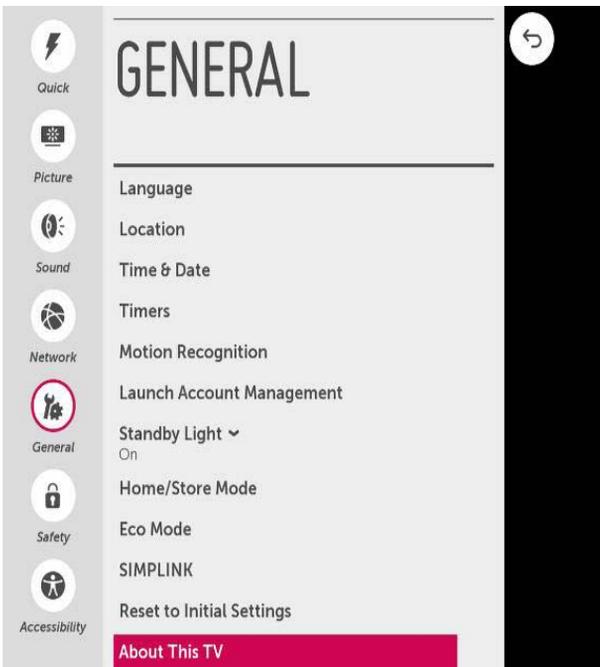

1 Searching the software.

① Select your country after connecting to www.lg.com.

Select Your Region

GLOBAL

NORTH AMERICA

SOUTH AMERICA

EUROPE

MIDDLE EAST & AFRICA

ASIA & PACIFIC

ASIA & PACIFIC

CIS

EUROPE

MIDDLE EAST & AFRICA

Afghanistan	English	Algeria	Francais	Angola	English	Armenia	English
Azerbaijan	English	Bahrain	English العربية	Cote d'Ivoire	English	Egypt	English العربية
Ethiopia	English	Georgia	English	Iran	العربية	Iraq	English العربية
Israel	Hebrew	Jordan	English العربية	Kenya	English	Kuwait	English العربية
Lebanon	عربية العربية	Morocco	Francais	Nigeria	English	Oman	English العربية
Pakistan	English	Palestine	العربية	Qatar	English العربية	Saudi Arabia	العربية
Senegal	English	South Africa	English	Sri Lanka	English العربية	Tunisia	English

② Move to the "Support" and click the "Download & Manuals"

LG Life's Good

PRESS RELEASES | ABOUT LG | MY SUPPORT | SIGN IN

SEARCH LG.COM

HOME ENTERTAINMENT MOBILE APPLIANCES BUILT IN APPLIANCES IT PRODUCTS COMMERCIAL AC LG LIVE **SUPPORT**

SUPPORT
Enhance your LG support experience

REGISTER A PRODUCT DOWNLOAD & MANUALS VIDEOS & TUTORIALS HELP LIBRARY

GET TO KNOW THE INS & OUTS OF YOUR LG PRODUCT

Discover
LG Answers
Contact Us
Announcement

SEARCH PRODUCT SUPPORT

Enter model number or name

DOWNLOADS, VIDEO TUTORIAL, FAQs AND MORE

HOME ENTERTAINMENT MOBILE APPLIANCES IT PRODUCTS

③ Fill in the your Model name.
(Ex. 42LB6700(Fill Model name except "-TA").)
④ Click the "Search".

LG Life's Good

PRESS RELEASES | ABOUT LG | MY SUPPORT | SIGN IN

SEARCH LG.COM

HOME ENTERTAINMENT MOBILE APPLIANCES BUILT IN APPLIANCES IT PRODUCTS COMMERCIAL AC LG LIVE **SUPPORT**

Home > Support > Download & Manuals

SUPPORT
My Support
Register a Product
Download & Manuals
Videos & Tutorials
Help Library
LG Answers
Contact Us
Announcement

Enter model number or name

FIND A PRODUCT

SEARCH BY KEYWORD

Start here if you know model number

42LB

42LB6300 TVs

42LB6520 TVs

42LB6700 TVs

3 of 3 results

SEARCH BY COMPONENT

STEP 1. CATEGORY GROUP

Click!

Contact your local LG Call Center at:
Azerbaijan: (+99412) 495 5454
Bahrain:

HOME ENTERTAINMENT MOBILE APPLIANCES IT PRODUCTS

⑤ Click the "Software update" and you can see the software file.

DOWNLOADS

MANUALS & DOCUMENTS **SOFTWARE UPDATE**

Software Upgrades include Device Drivers and Firmware Updates for specific Models only. Check the Owner's Manual for instructions as not all Models support downloadable software upgrades.

Operating Systems: All Available


Filename	Release Date	Size
Software_File\Version_03.23.03\vo1l.egg	06.02.2014	92,160K
Software_File\Version_03.23.03\vo2l.egg	06.02.2014	92,160K
Software_File\Version_03.23.03\vo3l.egg	06.02.2014	92,160K
Software_File\Version_03.23.03\vo4l.egg	06.02.2014	92,160K
Software_File\Version_03.23.03\vo5l.egg	06.02.2014	92,160K
Software_File\Version_03.23.03\vo6l.egg	06.02.2014	92,160K
Software_File\Version_03.23.03\vo7l.egg	06.02.2014	63,859K
Software_Upgrade_Guide\English\pdf	06.02.2014	671K

[Operating System(s)]
LG Firm

View More

2 Downloading the software file to the USB Memory device.

① Click to all of file to download it from the website to your PC.

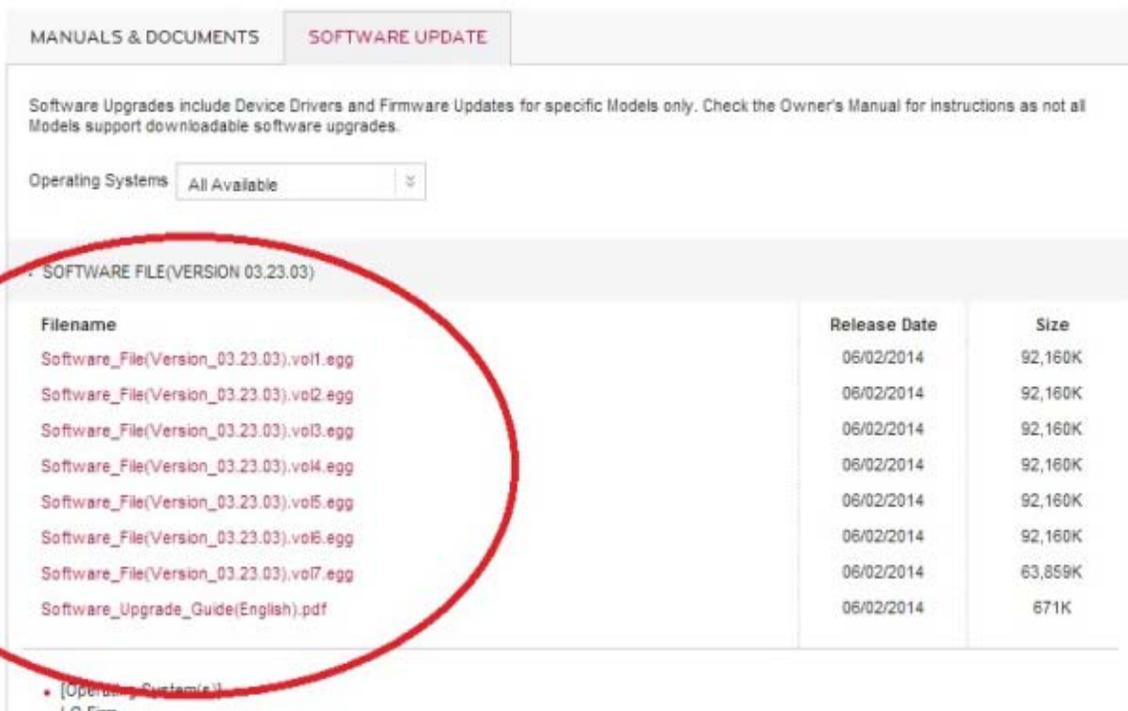


② Unzip the first "...vol1" software file.

③ Insert the USB memory device into USB Port of the PC.


④ Make a folder in USB Memory device. **Folder name must be "LG_DTV"**.

⑤ Save the software file to "LG_DTV" folder of USB Memory device.

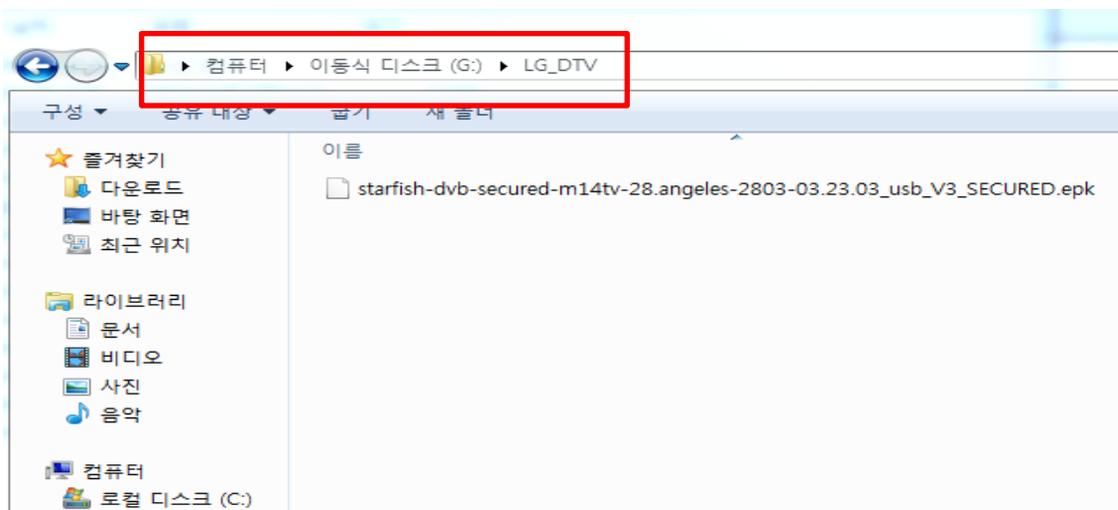

3 Insert the USB memory device into USB port of the TV.

■ Position of USB port : Side or Rear

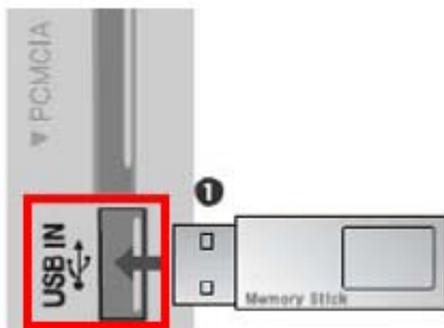


or




4 Running the software Upgrade.

① If below message appear on TV, please select “STAY”.

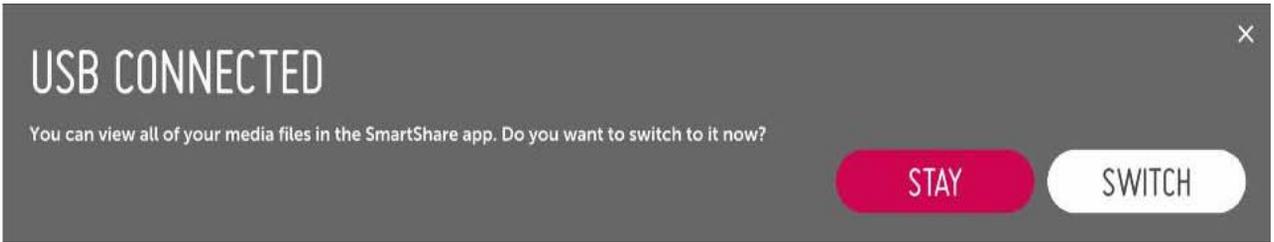

② If below message will appear on TV, please select “INSTALL”

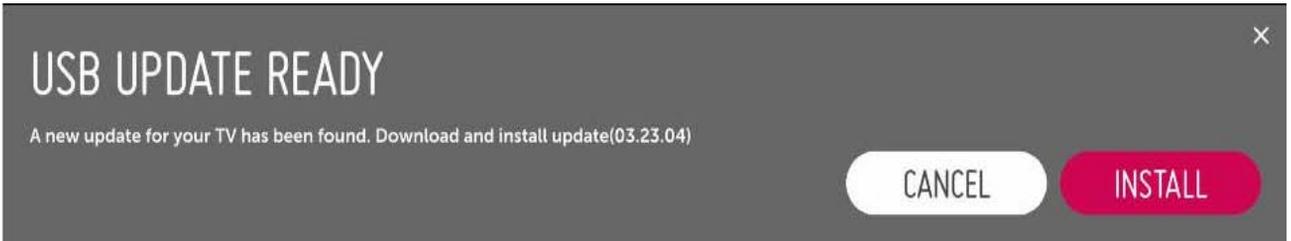

- ※ If there are the same or lower software version in the USB memory device than software version in your TV, doesn't appear message.
- ※ A few USB memory device may not be compatible with the TV, in that case you use another USB device.

1) Copying the new version software file from USB Memory device to the TV system memory.

- ※ **Don't remove the USB Memory device while this message is displayed.**
- ※ **Do not unplug the TV power cord while this message is displayed.**

2) Running the software upgrade.

- ※ **Do not unplug the TV power cord while this message is displayed.**

3) Go to “MENU”, then choose “General”, then “About this TV” to see your update progress bar. If the upgrade is completed, TV will restart automatically in 5 seconds.

